



OPERATIONS, SERVICE AND PARTS MANUAL



LEEBOY MODEL 8510D CONVEYOR PAVER

Manual No. 1015240-01

This manual applies
to serial number and
above: 135218

SAFETY

1

INFORMATION AND SPECIFICATIONS

2

COMPONENT LOCATION

3

OPERATION

4

MAINTENANCE

5

SCHEMATICS

6

ILLUSTRATED PARTS LIST

7

Disclaimer

All information, illustrations and specifications in this manual are based on the latest information available at the time of publishing. The illustrations used in this manual are intended as representative reference views only. Moreover, because of our continuous product improvement policy, we may modify information, illustrations and/or specifications to explain and/or exemplify a product, service or maintenance improvement. We reserve the right to make any change at any time without notice. VT LeeBoy, Inc., VT LeeBoy, LeeBoy, and Rosco are all the same entity and are used interchangeably.

Title 40, Code of Federal Regulations (CFR) 1068

This product meets certified-emission requirements set by the EPA (Environmental Protection Agency), governed by Title 40 CFR 1068, which specifies actions that are prohibited by law and lists civil penalties for noncompliance. As part of those regulations, modification or rendering inoperative any emission-related component can subject you to government penalties (and void your warranty). Tampering with emission controls is in violation of federal law, and can result in civil penalties of up to \$3,750 each day an engine or piece of equipment is operated in violation.

Please be aware that you are responsible for maintaining the machine and the certified emission engine installation. Failure to comply to comply could result in penalties as listed above and void the warranty on this engine and this machine.

For more information, visit: <https://www.epa.gov/laws-regulations/regulations>

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals and other related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and other reproductive harm. Wash hands after handling.

©2016 VT LeeBoy, Inc.

LeeBoy reserves all copyright and other rights in this manual and the manual's content. No part of this manual may be reproduced or used in any way without the written permission of VT LeeBoy, Inc., except as necessary to operate LeeBoy equipment.



TABLE OF CONTENTS

	Page
Table Of Contents	.v
Safety Precautions.	1-4
Machine Precautions.	1-7
Hot Material Precautions.	1-7
Hydraulic Systems Precautions	1-7
Refueling Precautions	1-8
Battery Precautions	1-8
Starting and Stopping Precautions.	1-8
Parking Precautions	1-8
Operating Precautions.	1-8
Poor Visibility	1-9
Storage Precautions.	1-9
Maintenance Precautions	1-9
Safety Decals	1-10
Safety Decals Care	1-11
Decal Installation (Sticker Type)	1-11
Decal Installation (Top Protected)	1-11
Limited Warranty Policy	2-2
Contact Information	2-3
Specification Charts	2-4
Torque Specifications	2-7
Standard Inch Fasteners.	2-7
Metric Fasteners.	2-8
Hydraulic Fittings	2-8
Determining Proper Torque	2-9

Component Location	3-1
Components Overview	3-3
Torque Hubs.	3-3
Hydraulic System	3-3
Hopper and Conveyors	3-3
Augers.	3-4
Operator Platform	3-4
Electrical System	3-4
Screed	3-4
Standard Equipment/Options	3-4
Machine Overview	3-5
Operator Control Panel	3-6
Steering and Speed Control Box	3-8
Right Hydraulic Controls	3-9
Left Hydraulic Controls	3-10
High-Deck Lower Controls (Option)	3-11
Screed Operation Controls.	3-12
Burner Controls	3-13
Propane Tank Controls	3-13
Steering Wheel (Option)	3-14
Electric Heat (Option)	3-15
Operation	4-1
General Information	4-3
Receiving the Machine	4-3
Initial and Daily Inspection	4-3
Start-Up Procedure	4-4
Stopping the Engine	4-4
DPF Regeneration (REGEN)	4-4
PV480 Powerview Display	4-5
Gauge Screen	4-5
Set Points and Throttle Speed	4-5
Soft Keys (Buttons)	4-6
Status Icons	4-7
Main Menu.	4-8
Gauges	4-8
Diagnostics	4-9

System Info	4-10
User Settings	4-12
Regeneration Messages.	4-14
Messages, Cautions, Warnings	4-17
Driving the Paver	4-18
Operator Control Station.	4-18
Steering and Speed Control	4-18
Paver Operation	4-19
Spray Down	4-19
Heating the Screed	4-20
Electric Screed Heat (Option)	4-21
Hopper Wings	4-22
Conveyors.	4-23
Hydraulic Cut-Off Gates	4-23
Electric Flight Screw	4-24
Set the Screed, Flight Screw and Endgate	4-24
Sonic Auger (Option).	4-26
Starting to Pave	4-27
Basic Paving.	4-27
Setting the Crown	4-28
Mat Texture Adjustment	4-29
Unloading And Loading.	4-30
Unloading	4-30
Loading	4-30
Tie-Down Procedure.	4-31
Optional Components	4-31
Auger Extensions Option.	4-31
Truck Hitch Attachment	4-32
High Deck Option	4-32
Umbrella Option	4-32
Roll-Up Curb Attachments	4-32
Rubber or Steel Track Options.	4-32
Steering Wheel	4-32
Electric Screed Options	4-33
Topcon® Sonic and Dual Grade	4-33
815HD (Heavy Duty) Electric Screed	4-34

Maintenance	5-1
Maintenance Schedule.	5-3
Routine Maintenance.	5-5
Preparing Paver for Maintenance	5-5
Every 10 Hours or Daily Routine Maintenance	5-5
Every 50 Hours or Weekly Routine Maintenance	5-5
Every 100 Hour or Monthly Maintenance	5-6
Every 250 Hours or Quarterly Routine Maintenance	5-6
Every 500 Hours or Semi-Annual Routine Maintenance	5-6
Every 1000 Hours or Annual Routine Maintenance	5-6
Torque Hub Lubrication	5-6
Lubrication Points	5-7
Maintenance Adjustments	5-8
Conveyor Flight Chain	5-8
Conveyor Drive Chain	5-8
Auger Drive Chain Adjustment	5-9
Screed Extension Top Guide Adjustment.	5-9
High Gear Adjustment	5-10
Conveyor Switch Adjustment.	5-10
Track Tension Pressure Relief	5-11
Torque Hub Hydraulic Motor Gear Adjustments	5-12
Engine Maintenance	5-12
Check Engine Lubrication Oil	5-12
Change Engine Oil and Filter	5-13
Change Air Filter	5-13
Fuel System	5-14
Fuel Tank	5-14
Change Fuel Filter	5-14
Water Separator	5-15
Hydraulic System	5-15
Check Hydraulic Oil	5-15
Change Hydraulic Oil and Filter	5-16
Electrical System.	5-17
Battery Servicing.	5-17

Alternator	5-18
Screed Electric Heat (Option)	5-18
Screed Electric Heat Elements.	5-18
Element Resistance Testing	5-19
Heating Elements	5-20
Generator Voltage Testing	5-20
Generator Capacitor.	5-21
Replacement Procedures	5-22
Front Idler	5-22
Track Tension Cylinder	5-22
Track Rollers	5-23
Track Sprocket (Steel or Poly)	5-23
Rubber Track (Option)	5-23
Rear Conveyor Shaft, Bearings and Sprockets	5-24
Conveyor Drive Motors.	5-25
Auger and Inner Bearings	5-25
Auger Motors	5-26
Main Screed Wear Plate	5-27
Screed Extension Wear Plate	5-28
Torque Hub	5-29
Two-Speed Hydraulic Motors	5-30
Conveyor Switch Replacement.	5-31
Weldment	5-31
Troubleshooting	5-32
Test Ports	5-32
Plus One.	5-32
Troubleshooting Chart	5-34
PV480 Diagnostic Trouble Code (DTC) Chart.	5-37
Schematics	6-1
Generator Control to Bulkhead Harness	6-3
Bulkhead to Generator Harness	6-5
Electric Steering Cord, 4 Feet	6-7
Plus One Harness	6-9
Harness, Lights	6-11
Ultrasonic Power Harness	6-13
Manual Steering Control Box (1 of 2)	6-15

Manual Steering Control Box (2 of 2)	6-17
Steering Wheel Box (Option)	6-19
Electrical System (1 of 2)	6-21
Electrical System (2 of 2)	6-23
Control Box Assembly (1 of 2)	6-25
Control Box Assembly (2 of 2)	6-27
Electric Heat Control, No Timer	6-29
Main Harness (1 of 2)	6-31
Main Harness (2 of 2)	6-33
Hydraulic System (1 of 2)	6-35
Hydraulic System (2 of 2)	6-37
Illustrated Parts List	7-1
Quick Reference	7-5
Sprocket Drive Track System - 4 Roller Undercarriage	7-6
Sprocket Drive Track System - 4 Roller Undercarriage	7-8
Rubber Track Undercarriage - 5 Roller Undercarriage	7-10
Conveyor Drive Assembly (1 of 2)	7-12
Conveyor Drive Assembly (2 of 2)	7-14
Hopper Components (1 of 2)	7-16
Hopper Components (2 of 2)	7-18
Auger Assembly	7-20
Conveyor Drive Cutoff / Screed Lift Cylinders	7-22
Hydraulic Components / (Left) Side Fuel Tank	7-24
Hydraulic Test Port Assembly	7-26
H1 Pump & Controls	7-28
Kubota T4F Engine Assembly (1 of 3)	7-30
Kubota T4F Engine Assembly (2 of 3)	7-32
Kubota T4F Engine Assembly (3 of 3)	7-34
Spray Down	7-36
Screed Arm Assembly With Toe Point	7-38
Propane Heaters	7-40
Sheet Metal Covers - High Deck (1 of 2)	7-42
Sheet Metal Covers - High Deck (2 of 2)	7-44
Sheet Metal Covers - Low Deck (1 of 2)	7-46
Sheet Metal Covers - Low Deck (2 of 2)	7-48
Controls - High Deck (Right)	7-50

Controls - Low Deck (Right)	7-52
Controls - Left Side.	7-54
Main Valve Manifold Detail	7-56
Instrument Panel - Dash (1 of 2).	7-58
Instrument Panel - Dash (2 of 2)	7-60
Screed Non-Sloping Overview	7-62
Screed Frame Non-Sloping - Propane	7-64
Extension Single Adjust Assembly - Propane (Left)	7-66
Extension Single Adjust Assembly - Propane (Right)	7-68
Extension Double Adjust Assembly - Propane (Left).	7-70
Extension Double Adjust Assembly - Propane (Right)	7-72
Screed Frame Non-Sloping - Electric.	7-74
Extension Single Adjust Assembly - Electric (Left).	7-76
Extension Single Adjust Assembly - Electric (Right)	7-78
Extension Double Adjust Assembly - Electric (Left)	7-80
Extension Double Adjust Assembly - Electric (Right)	7-82
Endgate Assembly (Left)	7-84
Endgate Assembly (Right)	7-86
Screed Pull Arm Assembly (Left)	7-88
Screed Pull Arm Assembly (Right)	7-90
Citrus Tank & Heat Control Box.	7-92
Vibrator Assembly (Left)	7-94
Walk Board Assembly	7-96
Slide Plate Assembly.	7-98
Screed Miscellaneous Components	7-100
Generator	7-102
Power Crown (Option)	7-104
Strike Offs And Extensions (Option)	7-106
Paver Leveling Control TOPCON P-32 (Option).	7-108
Truck Hitch Assembly (Option)	7-110
815HD Series Screed 8515 Non-Sloping Overview	7-112
815HD Series Screed Frame Non-Sloping	7-114
815HD Series Vibrator Assembly	7-116
815HD Series Walk Board Assembly	7-118
815HD Series Slide Plate Assembly	7-120
815HD Series Extension Assembly (Left)	7-122

815HD Series Extension Assembly (Right)	.7-124
815HD Series Endgate Assembly (Left).	.7-126
815HD Series Endgate Assembly (Right)	.7-128
815HD Series Screed Pull Arm Assembly (Left)	.7-130
815HD Series Screed Pull Arm Assembly (Right)	.7-132
815HD Series Citrus Tank & Heat Control Box	.7-134
815HD Series Screed Optional Components	.7-136
HD Heated Endgate Assembly - Option (1 of 3)	.7-138
HD Heated Endgate Assembly - Option (2 of 3).	.7-140
HD Heated Endgate Assembly - Option (3 of 3).	.7-142
HD Heated LeeBoy Edge Endgate Assembly - Option (1 of 3)	.7-144
HD Heated LeeBoy Edge Endgate Assembly - Option (2 of 3).	.7-146
HD Heated LeeBoy Edge Endgate Assembly - Option (3 of 3).	.7-148
HD Heated Endgate Assembly - Option.	.7-150
Alphabetical Parts Index	7-152
Alphabetical Parts Index	.7-152

Thank you for purchasing the LeeBoy Model 8510D Conveyor Paver. We wish you many years of safe and efficient operation of your LeeBoy product.

READ THIS MANUAL PRIOR TO OPERATING the machine. It is an important part of the machine and should be kept with in the dedicated storage container provided at all times. Though you may be familiar with similar equipment, you **MUST** read and understand this manual before operating the machine to help prevent injury or damage.

This manual is intended as a guide for the safe and efficient use of your machine, including procedures for proper operation and maintenance. Use it with all related supplemental books, engine, transmission manuals, and any other manuals supplied by other manufacturers. Related Service Bulletins should also be reviewed to provide information regarding some of the recent changes. If any questions arise concerning this publication or to order a replacement manual, contact your authorized LeeBoy dealer.

This manual contains information that was available at the time of printing and is subject to change without notice.

Section 1 - Safety: Contains general and specific safety guidelines for product and safety label locations.

Section 2 - Information and Specifications: Contains warranty, contact information, machine specification tables, and machine dimensions.

Section 3 - Component Location: Contains overview of major component locations and functions.

Section 4 - Operation: Contains instructions for safe operation and information for optional equipment.

Section 5 - Maintenance: Contains routine maintenance procedures, mechanical adjustments, component replacement and troubleshooting charts for common problems and corrections. (For specific engine maintenance procedures, refer to the engine manufacturer manual.)

Section 6 - Schematics: Contains electrical and hydraulic schematics for product functionality.

Section 7 - Illustrated Parts List (IPL): Contains parts numbers and illustrations for serviceable components.



VT LeeBoy, Inc. is proud to be ISO 9001 certified. The International Standards Organization (ISO) establishes guidelines to ensure that products and services are safe, reliable and of good quality. ISO certifies companies who demonstrate compliance with all aspects of product safety, customer satisfaction, efficiency, environmental stewardship and social responsibility. Our teams work hard to deliver quality industrial machines that exceed customer expectations and we strive for continuous improvement in everything we do. The VT LeeBoy family of companies is committed to total quality management with a strong focus on meeting customer needs.



VT LeeBoy, Inc., is also proud to be an accredited ANAB manufacturer, which is a certification process comprised of quality standards established by the American National Standards Institute (ANSI) and the American Society for Quality (ASQ). The ANSI-ASQ National Accreditation Board plays an important role in ensuring the safety and quality of goods and services, along with protecting the environment.

NOTES



Section 1

SAFETY

	Page
Safety Precautions	1-4
Machine Precautions.	1-7
Hot Material Precautions.	1-7
Hydraulic Systems Precautions	1-7
Refueling Precautions	1-8
Battery Precautions	1-8
Starting and Stopping Precautions.	1-8
Parking Precautions	1-8
Operating Precautions.	1-8
Poor Visibility	1-9
Storage Precautions.	1-9
Maintenance Precautions	1-9
Safety Decals	1-10
Safety Decals Care	1-11
Decal Installation (Sticker Type)	1-11
Decal Installation (Top Protected)	1-11

NOTES

This manual provides important information to familiarize you with safe operating and maintenance procedures. Even though you may be familiar with similar equipment, you **MUST** read and understand this manual before operating the LeeBoy Model 8510D Conveyor Paver and follow its instructions when operating the machine.

Safety is everyone's business and our top concern. Knowing the guidelines covered in this section will help ensure your safety, the safety of those around you, as well as proper paver operation.

Keep safety labels in good condition. If safety labels become missing or damaged, replace them with new matching labels. Replacement safety labels are available from your LeeBoy authorized dealer (see **Safety Labels on Section 2**).

You can find more information about occupational health and safety in the paving industry on the internet. A few resources are listed below:

www.osha.gov

cdc.gov

www.asphaltpavement.org

www.safety.fhwa.dot.gov/

LOOK FOR THESE SYMBOLS THROUGHOUT THIS MANUAL. THESE ITEMS ARE EXTREMELY IMPORTANT FOR THE SAFETY OF YOU AND YOUR COWORKERS. READ AND UNDERSTAND THOROUGHLY. HEED THE WARNINGS AND FOLLOW THE INSTRUCTIONS.

 **DANGER** Indicates a hazardous situation which, if not avoided, *will* result in death or serious injury.

 **WARNING** Indicates a hazardous situation which, if not avoided, *could* result in death or serious injury.

 **CAUTION** Indicates a hazardous situation which, if not avoided, *could* result in minor or moderate injury.

 **NOTICE** Indicates a situation which can cause damage to the equipment, personal property and/or the environment, or cause the machine to operate improperly.

NOTE: Indicates a procedure, practice or condition that should be followed in order for the machine or component to function in the manner intended.

SAFETY PRECAUTIONS

CAUTION

The safety messages that follow have CAUTION level hazards.



Pre-Operation Hazard

Read and understand this Operation Manual before operating or servicing the engine to ensure that safe operating practices and maintenance procedures are followed.

- Never permit anyone to service or operate the machine without proper training.
- Safety signs and labels are additional reminders for safe operating and maintenance techniques.
- Contact LeeBoy or an authorized LeeBoy dealer for additional training.
- Make sure you are aware of all laws and regulations that are in effect for the location in which the paver is operated.
- Make sure you have all necessary licenses to operate the paver.

DANGER

The safety messages that follow have DANGER level hazards.



Power Lines Hazard

If your machine comes into contact with electric power lines, observe the following:

- Stay in the operators seat.
- Warn other workers to stay away and do not touch any control or any part of the machine.
- If contact can be broken, drive the machine away from the danger zone.
- If contact cannot be broken, stay in the operators seat until told that power is off.
- Failure to observe these directions could result in electrocution or death.

Electrocution Hazard

Disconnect the battery before welding anywhere on the machine.

Suffocation Hazard



Carbon monoxide poisoning is a serious condition that occurs as a result of improper ventilation.

- Never operate the internal combustion engine on this machine in an enclosed area with poor ventilation. Ensure proper ventilation to reduce risk of carbon monoxide poisoning or death.

Exhaust Hazard



All internal combustion engines create carbon monoxide gas during operation and special precautions are required to avoid carbon monoxide poisoning:

- Never block windows, vents or other means of ventilation.
- Always ensure that all connections are tightened to specifications after repair is made to the exhaust system.

WARNING

The safety messages that follow have WARNING level hazards.

Crush Hazard

Keep bystanders away from work area before and during operation.

Modification Hazard

Never modify the LeeBoy machine without the written consent of LeeBoy. Any modification can affect the safe operation of the paver and may cause personal injury or death.

Exposure Hazard



Operators of the paver must be aware of their work environment and the equipment needed to work safely.

- Always wear personal protective equipment, including appropriate clothing, gloves, work shoes, and protection for eyes and ears, as required by the task at hand.

Explosion Hazard



While the engine is running or the battery is charging, hydrogen gas is being produced and can be easily ignited. Keep the area around the battery well-ventilated and keep sparks, open flame, and any other form of ignition out of the area.

- Always disconnect the negative (-) battery cable before servicing the paver.
- Do not start the engine by shorting the starter circuit or any other starting method not stated in this manual. Only use the starting procedure as described in this manual to start the engine.
- Never charge a frozen battery. Always slowly warm the battery to room temperature before charging.

Fire and Explosion Hazard

- Diesel fuel is flammable and explosive under certain conditions.
- Never use a shop rag to catch fuel.
- Wipe up all spills immediately.
- Never refuel with the engine running.
- Store any containers containing fuel in a well-ventilated area, away from any combustibles or sources of ignition.

Fire Hazard



When operating machinery there is a risk for fire. Always have appropriate safety equipment available.

- Keep a charged fire extinguisher within reach when working in an environment where a fire may occur.
- Have all fire extinguishers checked periodically for proper operation and/or readiness.
- Always read and follow safety-related precautions found on containers of hazardous substances like parts cleaners, primers, sealants and sealant removers.
- Undersized wiring systems can cause electrical fires.

Entanglement/Sever Hazard



Verify there are no people, obstacles or other equipment near the machine before starting the engine. Sound the horn as a warning before starting the engine.



If the engine must be serviced while it is operating, remove all jewelry and tie back long hair before operating or servicing the machine.

- Keep hands, other body parts, and clothing away from moving/rotating parts.
- Always stop the engine before beginning service. Before maintenance, remove negative battery cable from battery post to ensure vehicle is not operated during maintenance.
- Verify that all guards and covers are properly attached before starting the engine. Do not start the engine if any guards or covers are not properly installed on the paver.
- If you must run the engine during maintenance procedures, make sure you have a helper to keep bystanders clear of the paver and make observations of moving parts as requested by the operator.
- Always turn the start switch to the OFF position after operation is complete and remove the key from the switch. Keep the key in your possession when the paver is not operating.
- Attach a "Do Not Operate" tag near the key switch while performing maintenance on the equipment.

- Never operate the engine while wearing a headset to listen to a radio or music because it will be difficult to hear the warning signals.
- Always start the engine and operate the controls while seated in the operators seat.

Alcohol and Drug Hazard



Never operate the machine while under the influence of alcohol, drugs, or when ill.

Piercing Hazard



High-pressure hydraulic fluid or fuel can penetrate your skin and result in serious injury. Avoid skin contact with high-pressure hydraulic fluid or diesel fuel spray caused by a hydraulic or fuel system leak such as a broken hydraulic hose or fuel injection line.

- If you are exposed to high-pressure hydraulic fluid or fuel spray, obtain prompt medical treatment.
- Never check for a hydraulic fluid or fuel leak with your hands. Always use a piece of wood or cardboard. Have your authorized LeeBoy dealer or distributor repair the damaged parts.

Flying Object Hazard



Always wear eye protection when cleaning the machine with compressed air or high-pressure water.

Dust, flying debris, compressed air, pressurized water or steam may cause eye injury.

Coolant Hazard



Coolant must be handled properly to ensure operator safety.

- Wear eye protection and rubber gloves when handling engine coolant.
- If contact with the eyes occurs, flush eyes with clean water for 15 minutes.
- If contact with skin occurs, wash immediately with soap and clean water.

Burn Hazard



Some of the machine's surfaces become very hot during operation and shortly after shutdown.

- Keep hands and other body parts away from hot machine surfaces.
- Handle hot components with heat-resistant gloves.

CAUTION

The safety messages that follow have CAUTION level hazards.

Poor Lighting Hazard

The work area must be well lit to ensure safe and proper operation.

- Ensure that the work area is adequately illuminated.
- Always install wire cages on portable safety lights.

Tool Hazard

Always use tools appropriate for the task at hand and use the correct size tool for loosening or tightening LeeBoy machine parts.

NOTICE

The safety messages that follow have NOTICE level hazards.

Any part that is found defective as a result of inspection or any part whose measured value does not satisfy the standard or limit must be replaced.

Always tighten components to the specified torque. Loose parts can cause damage to the LeeBoy 8510D Conveyor Paver or cause it to operate improperly.

Only use replacement parts approved by LeeBoy. Other replacement parts may affect warranty coverage.



Follow the guidelines of the EPA or other governmental agencies for the proper disposal of hazardous materials such as engine oil, diesel fuel, and engine coolant. Consult the local authorities or reclamation facility.

Dispose of hazardous materials in accordance with all applicable laws and regulations. Never dispose of hazardous materials by dumping them into a sewer, on the ground, or into groundwater or waterways.

Clean all accumulated dirt and debris away from the body of the paver and its components before you inspect the paver or perform preventive maintenance procedures or repairs. Operating a paver with accumulated dirt and debris will cause premature wear of paver components. Accumulated dirt and debris also hinders effective paver inspection.

Retrieve any tools or parts that may have dropped inside of the paver to avoid improper paver operation.

If any alert indicator illuminates during paver operation, stop the engine immediately. Determine the cause and repair the problem before continuing to operate the paver.

MACHINE PRECAUTIONS

Hot Material Precautions

- Wear protective gear for face, hands, feet, and body when operating the paver.
- Allow machine to cool before repairing or maintaining working components.
- If hot asphalt touches skin, flush area immediately with cold water. DO NOT apply ice to the affected area. DO NOT ATTEMPT TO REMOVE ASPHALT CEMENT with products containing solvents or ammonia. Natural separation will occur in about 48 to 72 hours. Get medical attention as soon as possible.
- DO NOT remove radiator cap, drain plugs, service grease fittings, or pressure taps while engine is hot. Add coolant to the radiator and perform other services only when the engine is stopped and fully cooled.

Hydraulic Systems Precautions

- Ensure all components are in good working condition. Replace any worn, cut, abraded, flattened or crimped hoses and metal lines.
- DO NOT attempt makeshift repairs using tape, clamps or cements. The hydraulic system operates under extremely high pressure and such repairs could cause serious injury.
- Wear proper hand and eye protection when checking for a high pressure leak. Use a piece of wood or cardboard as a back stop to isolate and identify leaks.

⚠ WARNING Hydraulic oil under pressure can cause serious personal injury. Check for oil leaks with a piece of cardboard. DO NOT expose hands to possible high-pressure oil. Turn off engine before attempting to tighten oil lines and fittings.

- Escaping pressurized hydraulic fluid has force sufficient to penetrate the skin, which could cause serious personal injury. Ensure all pressure is relieved before disconnecting line, hoses or valves.
- If injury from concentrated high pressure steam or hydraulic fluid occurs, seek medical attention immediately. Injuries resulting from hydraulic fluid penetrating the skin's surface can result in serious infections or toxic reactions.

Refueling Precautions

- Do NOT overfill the fuel tank as overflow creates a fire hazard when spilled on hot components.
- DO NOT smoke when refueling and never refuel when the engine is running. Fuel is highly flammable and should be handled with care. Death or serious injury can occur due to explosion and/or fire.
- DO NOT fill tank to capacity. Allow room for expansion to reduce the risk of fuel expanding and spilling from the tank.
- Tighten fuel cap securely. Should fuel cap be lost, replace it with an original manufacturer's approved cap. Pressurization of the tank may result from use of non-approved cap.
- Prevent fires by keeping the machine clean of accumulated debris, grease, and spilled fuel.
- Use ultra-low sulfur diesel fuel (ULSD) only.

Battery Precautions

- Keep all sparks and flames away from batteries, as gas given off by electrolytes is explosive.
- Acid propelled by an explosion can cause blindness if it comes in contact with eyes. Always wear safety glasses when working near batteries.
- If you come in contact with battery electrolyte solution, wash off immediately. Chemicals can cause burns.
- Always disconnect the battery ground cable before working on the electrical system to avoid injury from spark or short circuit. Electrical shock and burns can occur.
- To avoid electrolyte loss, DO NOT tip batteries more than 45 degrees.

Starting and Stopping Precautions

- Check all around the paver to make sure there are no people working on the machine or in the path of the machine before starting. DO NOT start until area is clear. Death or serious injury can occur to bystanders from being crushed under a moving machine.

- Check brakes, steering and other control devices in accordance with instructions before starting. Be sure both steering levers (joysticks) are in neutral.
- DO NOT bypass the paver neutral-start system.

⚠ WARNING DO NOT operate the engine in an enclosed area without proper ventilation. Exhaust gasses are odorless and deadly.

Parking Precautions

- Park paver on level ground whenever possible, set steering levers in neutral and lock. Apply the parking brake. Park the paver securely blocked on grades.
- Before leaving operator's station:
 1. Place joysticks in neutral and lock in place.
 2. Turn off all accessories.
 3. Throttle back to idle.
 4. Lower screed to ground.
 5. Shut off engine.
- Remove ignition key when leaving paver parked or unattended.

Operating Precautions

- Always comply with local regulations regarding moving equipment on public roads and highways.
- Know and use the hand signals required for a particular job. Know who has the responsibility for signaling.
- Make sure that all lights and reflectors comply with state and local regulations. Make sure that they are clean, in good working order, and can be seen clearly by all traffic.
- DO NOT stand between the equipment and the truck while the truck is being backed to the paver. Death or serious injury can result from being crushed between the two machines.
- DO NOT ride on attachments.
- Check all gauges and warning instruments for proper operation. If malfunctions are found, shut down the machine and report the problem for resolution. If the failure causes loss of steering control, loss of brake control, or loss of engine power, stop paver motion as quickly as possible. Apply parking brake. Keep the machine securely parked until the failure is corrected or the machine can be safely towed.

- Drive the machine with care. Make sure speed is compatible with conditions. Use caution on rough ground, slopes, and while turning.
- Be alert for hazards and obstructions such as ditches, trees, cliffs, overhead power lines, and areas where there is danger of a slide.
- Be aware of and understand the job site traffic flow patterns.
- Obey flagmen, road signs, and signals.
- Watch for bystanders. Never allow anyone to be under the machine during operation. Never allow anyone to reach into the machine during use.
- Operator must know how to use signaling devices when operating paver in traffic conditions. Operator must also understand which circumstances require use of each signal. Use tail lights, slow-moving vehicle signs, and warning beacon as needed when traveling on public roads. It is recommended that you provide an escort on the road.
- DO NOT tow the paver, except to remove from road or to load on trailer.

Poor Visibility

Increasingly, asphalt maintenance equipment is used during less than ideal lighting conditions such as fog and smog or at night. These conditions present safety hazards for workers, bystanders and passing traffic.

⚠ WARNING When operating under restricted light conditions, equip the machine with special lighting to prevent serious injury.

While the machine is equipped with a beacon and a work light, contact your authorized LeeBoy dealer for additional lighting packages if working under these conditions.

Use reflective tape on the sides of machines when working at night. Ensure all workers wear reflective safety vests. Use impact barriers (movable or stationary) to protect workers and direct the traffic flow safely away from the work site.

Storage Precautions

- Store paver in an area away from human activity.
- DO NOT permit children to play on or around the stored machine. Serious injury or death can occur from improper/unauthorized use of the machine.
- Make sure the unit is stored on a surface that is firm, level, and free of debris.
- Store the machine inside a building or cover securely with a weatherproof tarpaulin.

Maintenance Precautions

- DO NOT attempt repairs unless trained to do so. Refer to manuals and experienced repair personnel for help.
- Before working on the machine, securely block the machine and any components that may fall. Block any working components to prevent unexpected movement while repairs are being made.
- Always wear safety glasses and other required safety equipment when servicing or making repairs.
- Disconnect battery before working on the electrical system.
- Avoid lubrication or mechanical adjustments while the paver is in motion or while engine is operating.
- If lubrication or mechanical adjustment is necessary, use extreme caution and complete the following steps:
 1. Place Forward/Reverse control in neutral.
 2. Apply neutral lock.
 3. Lower screed to ground.
 4. Shut off engine.
 5. Place equipment in a safe position.
 6. Securely block wheels and tracks.
- Never make repairs on pressurized components such as fluid lines, the gas system, or mechanical items until the pressure has been relieved.
- When servicing or replacing hardened pins, use a brass drift or other suitable material between the hammer and pin.
- Keep brake and steering systems in good operating condition.

Safety Decals Care

1. Keep safety decals and signs clean and legible at all times.
2. Become familiar with the content and the position of each safety decal. Decals include important information.
3. Replace decals and signs that are missing or become impossible to read.
4. When replacing parts that display a safety decal, ensure that the new part is fitted with a decal as well.
5. Obtain replacement safety decals or signs from your authorized LeeBoy dealer.

Decal Installation (Sticker Type)

1. Be sure that the installation area is clean and dry. Use hot, soapy water to clean the surface where the decal will be applied.
2. Thoroughly dry the surface.
3. Measure and fit decal before removing the paper backing.
4. For decals with no top protection paper, remove the smallest split-backed paper.
5. Align decal over the specified area and carefully press exposed portion into place.
6. Slowly remove the remaining backing and carefully smooth the remaining portion of the decal into place.
7. Small air pockets can be pierced with a pin and smoothed using a piece of the decal backing.

Decal Installation (Top Protected)

1. If the decal has a protective top paper, use hot soapy water on the surface where the decal will be applied. Leave wet.
2. Determine the proper location, remove protective back paper and soak decal in clean soapy water before application. This will help to alleviate air bubbles in the applied decal.
3. Smooth decal into place with a squeegee and check for air bubbles.
4. Small air pockets can be pierced with a pin and smoothed out using a piece of the decal backing.
5. When decal is completely smoothed, carefully remove top paper.

NOTES



Section 2

INFORMATION AND SPECIFICATIONS

	Page
Limited Warranty Policy	2-2
Contact Information	2-3
Specifications Charts.	2-4
Torque Specifications	2-7
Standard Inch Fasteners.	2-7
Metric Fasteners.	2-8
Hydraulic Fittings	2-8
Determining Proper Torque	2-9

LIMITED WARRANTY POLICY

Warranty

Subject to the limitations, exclusions, and claims procedures set forth herein, VT LeeBoy, Inc. warrants [to the first retail purchaser] that this product will be free from substantial defects in materials and workmanship during the warranty period.

If a defect in material or workmanship is found, your authorized LeeBoy Dealer is to be notified during the warranty period. LeeBoy and its authorized Dealer will repair or replace any part or component of the unit or part that fails to conform to the warranty during the warranty period.

The warranty period will begin on the initial start-up, training and delivery of the unit by the Dealer to the customer, and will expire after twelve (12) months following the delivery of the product to the first retail purchaser. (See Dealer for additional warranty.)

Manufacturers' Warranties: Engines are warranted by their manufacturers and may have warranty coverage that differs from that of LeeBoy. LeeBoy does not warrant any engine.

Replacement parts furnished by LeeBoy are covered for the remainder of the warranty period applicable to the unit or component in which such parts are installed.

LeeBoy has the right to repair any component or part before replacing it with a new one.

All new replacement parts purchased by a LeeBoy Dealer will carry a six-month warranty.

This Limited Warranty is governed by the laws of the State of North Carolina.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED, STATUTORY AND IMPLIED WARRANTIES APPLICABLE TO UNITS, ENGINES, OR PARTS INCLUDING WITHOUT LIMITATION, ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE OR PURPOSE OR AGAINST INFRINGEMENT.

Items Not Covered

LeeBoy is not responsible for the following:

All used units or used parts of any kind.

Repairs due to normal wear and tear or brought about by abuse or lack of maintenance of the machine.

Attachments not manufactured or installed by LeeBoy.

Liability for incidental or consequential damages of any type including, but not limited to, lost profits or expenses of acquiring replacement equipment.

Limitations

VT LeeBoy, Inc. has no obligation for:

Any defects caused by misuse, misapplication, negligence, accident, or failure to maintain or use in accordance with the most current operating instructions.

Unauthorized alterations.

Defects or failures caused by any replacement parts or attachments not manufactured by or approved by LeeBoy.

Failure to conduct normal maintenance and operating service including, without limitation, providing lubricants, coolant, fuel, tune-ups, inspections, or adjustments.

Unreasonable delay, as established by LeeBoy, in making the applicable units or parts available upon notification of a service notice ordered by same.

Warranty Responsibility: The warranty responsibility on all engines rests with the manufacturer of the engine.

Warranty and Parts Support: LeeBoy may have support agreements with some engine manufacturers for warranty and parts support. However, LeeBoy does not warrant the engine.

This Limited Warranty sets forth your sole remedy in connection with the sale or use of the LeeBoy product covered by this Limited Warranty.

This Limited Warranty extends only to the first retail purchaser, and is not transferable.

In the event any portion of this Limited Warranty shall be determined to be invalid under any applicable law, such provision shall be deemed null and void and the remainder of the Limited Warranty shall continue in full force and effect.

Other Limitations

IN NO EVENT, WHETHER AS A RESULT OF BREACH OF CONTRACT OR WARRANTY OR ALLEGED NEGLIGENCE OR LIABILITY WITHOUT FAULT, SHALL LEEBOY BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, LOSS OF PROFIT OR REVENUE, COST OF CAPITAL, COST OF SUBSTITUTED EQUIPMENT, FACILITIES OR SERVICES, DOWNTIME COSTS, LABOR COSTS OR CLAIMS OF CUSTOMERS, PURCHASERS OR LESSEES FOR SUCH DAMAGES. IN NO EVENT WILL WARRANTY COMPENSATION, OR OTHER DAMAGES AVAILABLE FROM LEEBOY EXCEED THE PURCHASE PRICE OF THE PRODUCT.

CONTACT INFORMATION

For information regarding parts and repairs about your LeeBoy product, contact your authorized LeeBoy dealer. If your dealer is unable to resolve the problem, contact LeeBoy directly.

Record dealer information in the space provided. For additional information about LeeBoy, please visit: www.leeboy.com.

Sales Representative: _____
 Dealership Name: _____
 Dealership Address: _____
 Dealership Phone: _____

Record of Ownership

Please complete the following information for use if you need to contact LeeBoy for service, parts or literature.

Machine Model Number: _____
 Product Serial Number: _____
 Date of Purchase: _____

Nameplate

The nameplate contains the model and serial numbers used to identify the machine and its components for parts or service information. Refer to the Engine Operator's Manual for the location of the engine nameplate.

LeeBoy	
Lincolnton, NC 28092	
Year	_____
Model	_____
Serial No.	_____
Motor No.	_____



Figure 2-1. Nameplate Location

SPECIFICATION CHARTS

The specifications provided in this section include screed weights, dimensions, performance, and torque values for both metric and standard inch fastener.

CAUTION Replace original equipment only with components approved by your LeeBoy dealer.

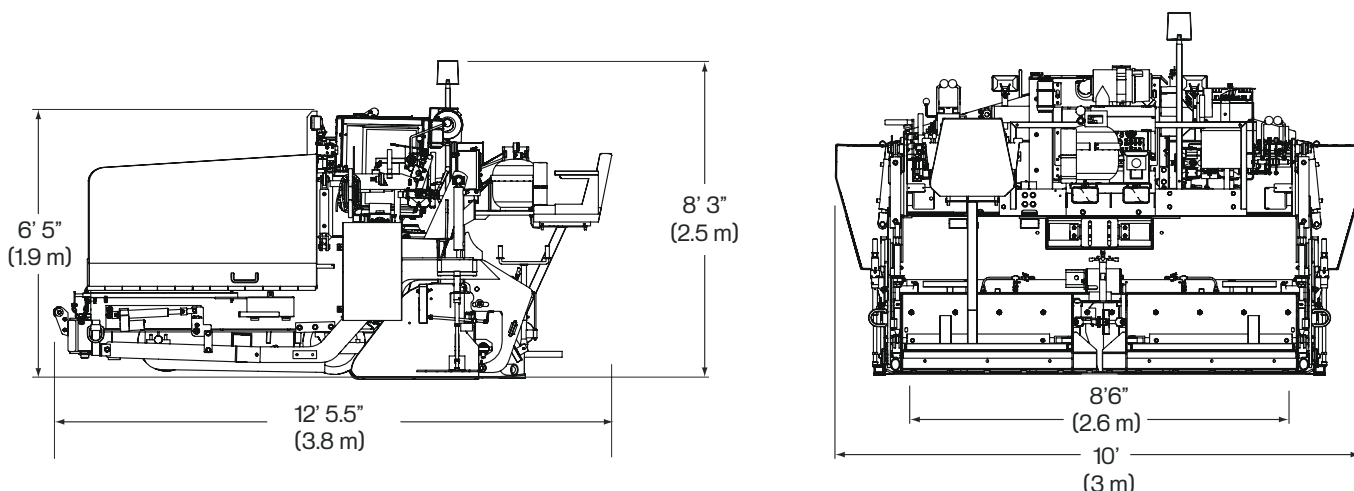


Table 2-1. Machine Dimensions

ITEM	SPECIFICATION
Overall Length	12 ft 5.5 in (3.8 m)
Overall Height	8 ft 3 in (2.5 m)
Overall Width (Hopper Wings In)	8 ft 6 in (2.6 m)
Overall Width (Hopper Wings Out)	10 ft (3 m)
Overall Weight	17,380 lb (7847 kg)
Paving Width	8 - 15 ft (2.4 - 4.6 m)
Extensions Length	3 ft 6 in (30 cm)
Travel Speed	0 - 230 feet/min (FPM) [0 - 3.9 meters/min (MPM)]
Paving Speed	0 - 140 FPM [0 - 2.4 MPM]

Table 2-2. Engine Specifications

ITEM	SPECIFICATION
Manufacturer and Model	Kubota, V3800-CR-TE4, Tier 4 (Final)
Engine Type	Vertical Liquid Cooled Diesel, 4-Cylinder
Bore, Stroke and Displacement	3.9 in (100 mm); 4.72 in (120 mm); 230 cu in (3.8 L)
Power Rating	74 HP (55.2 kW)
Intake and Combustion Systems	Turbo-Charged, Direct-Injection
Maximum Speed	2200 RPMs

Table 2-3. Electrical Specifications

ITEM	SPECIFICATION
Battery	12 Vdc Maintenance Free, 12 Volts
Cold Cranking Amps (CCA)	1125 CCA
Alternator	12-Volt, Negative-Ground, 100 Amps
Alternator Fan Belt Tension	Manual belt tension mechanism keeps serpentine belt under tension at all times.
Starter Voltage and Type	12-Volt, Negative-Ground

Table 2-4. Lubricant Specifications

ITEM	SPECIFICATION
Engine Oil	15W-40, API, CH-4, CI-4
Hydraulic Oil	All-Weather 68
Torque Hub	50 WT Gear Oil
Grease	Shell Avania EP Grease or Equivalent

Table 2-5. Machine System Capacity Specifications

ITEM	SPECIFICATION
Engine Lubrication Oil (Refill Capacity)	15 qts (14.2 L)
Hydraulic Oil Tank	40 gal (151.4 L)
Torque Hubs	32 oz (.35 L) each
Diesel Fuel	18 gal (68.1 L)
Propane	One (1) 20-lb Tank
Antifreeze	Glycol-Based, Extended Life; 306 gal (13.8 L)

Table 2-6. Hydraulic Pressures Specifications

ITEM	SPECIFICATION
Drive	3625 psi (249.9 Bar)
Conveyors	2400 - 2600 psi (165 Bar)
Augers and Cylinders	2000 - 2200 psi (165 Bar)
Charge Pressure	350 - 400 psi (24 - 27.6 Bar)
Track Tension Relief	1500 psi (103.4 Bar)

Table 2-7. Hopper Specifications

ITEM	SPECIFICATION
Size	7.5 Tons (6804 kg)
Height	23 in (584 mm)
Wings	3/8 in (10 mm)

Figure 2-8. Screed Specifications

ITEM	SPECIFICATION	
	Standard Screed	815HD (Option)
Screed Weight	2900 lbs (1315 kg)	3300 lbs (1497 kg)
Extensions	Two (2) 44-inch Hydraulically-Operated	
Vibration	Two (2) hydraulic vibrators producing 3400 vpm.	
Crown/Valley	Adjustable, 2-inch crown, 1-1/2 inch of valley	
Propane Heat	Two (2) 54,000 BTU propane burners on main screed. One (1) 45,000 BTU propane burner on each extension.	
Electric Heat (Option)	Two (2) 3412 BTU/hr electric heat elements on main screed. One (1) 3412 BTU/hr electric heat element on each extension.	

Table 2-9. Generator Specifications

ITEM	SPECIFICATION
Power	6.5 kW
Voltage	220 Volts
Frequency	60 Hz

TORQUE SPECIFICATIONS

The following tables list torque values for standard hardware. This is a guide for average application involving typical stresses and machined surfaces. Values are based upon physical limitations of clean, plated and lubricated hardware. Under more extreme conditions, individual torque value should be followed. Conversion formulas are provided below:

NOTICE Never substitute fasteners of any kind that are not equal in size and grade to the original equipment.

Conversion	Formula
ft-lb to N•m	$[\text{ft-lb}] \times 1.3558 = [\text{N}\cdot\text{m}]$
ft-lb to in-lb	$[\text{ft-lb}] \times 12 = [\text{in-lb}]$
N•m to in-lb	$[\text{N}\cdot\text{m}] \times 8.8508 = [\text{in-lb}]$

Standard Inch Fasteners

Table 2-10. Torque Specifications For Standard Inch Fasteners

SIZE	THREAD	CAPSCREWS: SAE GRADE 5				CAPSCREWS: SAE GRADE 8			
		TORQUE (ft lb)		TORQUE N•m		TORQUE (ft lb)		TORQUE N•m	
		Dry	Lubed	Dry	Lubed	Dry	Lubed	Dry	Lubed
1/4	20 UNC	8	6	11	8	12	9	16	12
	28 UNF	10	7	14	9	14	10	19	14
5/16	18 UNC	17	13	23	18	25	18	34	24
	24 UNF	19	15	26	20	27	20	37	27
3/8	16 UNC	31	23	42	31	44	33	60	45
	24 UNF	35	26	47	35	49	37	66	50
7/16	14 UNC	49	37	66	50	70	52	95	71
	20 UNF	55	41	75	56	78	58	106	79
1/2	13 UNC	75	57	102	77	106	80	144	108
	20 UNF	85	64	115	87	120	90	163	122
9/16	12 UNC	109	82	148	111	154	115	209	156
	18 UNF	121	91	164	123	171	128	232	174
5/8	11 UNC	150	113	203	153	212	159	287	216
	18 UNF	170	127	230	172	240	180	325	244
3/4	10 UNC	267	200	362	271	376	282	510	382
	16 UNF	297	223	403	302	420	315	569	427
7/8	9 UNC	429	322	582	437	606	455	822	617
	14 UNF	474	355	643	481	669	502	907	681
1	8 UNC	644	483	873	655	909	681	1232	923
	14 UNF	722	542	979	735	1020	765	1383	1037
1-1/4	7 UNC	1121	840	1520	1139	1817	1363	2464	1848
	12 UNF	1241	930	1683	1261	2012	1509	2728	2046
1-1/2	6 UNC	1950	1462	2644	1982	3162	2371	4287	3215
	12 UNF	2194	1645	2975	2230	3557	2668	4823	3617

Metric Fasteners

Table 2-11. Torque Specifications for Metric Fasteners

NOMINAL SIZE AND PITCH	CLASS 8.8 [GRADE 5 EQUIVALENT]				CLASS 10.9 [GRADE 8 EQUIVALENT]			
	TORQUE (ft lb)		TORQUE N•m		TORQUE (ft lb)		TORQUE N•m	
	Dry	Lubed	Dry	Lubed	Dry	Lubed	Dry	Lubed
M4 x 0.7	2	2	3	2	3	2	4	3
M5 x 0.8	5	3	7	4	7	5	9	7
M6 x 1	8	6	11	8	11	8	15	11
M8 x 1.25	19	14	26	19	27	20	37	27
M10 x 1.5	37	28	50	38	53	40	72	54
M12 x 1.75	65	49	88	66	93	70	126	95
M14 x 2	104	78	141	106	148	111	201	150
M16 x 2	161	121	218	164	230	173	312	235
M18 x 2.5	222	167	301	226	318	239	431	324
M20 x 2.5	314	236	426	320	449	337	609	457
M22 x 2.5	428	321	580	435	613	460	831	624
M24 x 3	543	407	736	552	777	582	1053	789
M27 x 3	796	597	1079	809	1139	854	1544	1158
M30 x 3.5	1079	809	1463	1097	1544	1158	2093	1570

Hydraulic Fittings

Tightening Flare-Type Tube Fittings

1. Check the flare and flare seat for defects that might cause leakage.
2. Align tube with fitting before tightening.
3. Lubricate connection.
4. Hand tighten swivel nut until snug.
5. To prevent twisting the tube(s), use two wrenches. Place one wrench on the connector body and tighten the swivel nut with the second to the torque shown in the following table:

NOTE: The torque values shown are based upon lubricated connections.

Table 2-12. Torque Specifications for Steel Flare Type Tube Fittings

TUBE SIZE OUTER DIAMETER	NUT SIZE ACROSS FLATS	TORQUE VALUE	
(IN)	(IN)	(LB FT)	(N•m)
3/16	7/16	8	11
1/4	9/16	12	16
5/16	5/8	16	22
3/8	11/16	23	31
1/2	7/8	38	52
5/8	1	54	73
3/4	1 1/4	75	102
7/8	1 3/8	83	113

Determining Proper Torque

The only reliable method of creating a consistently leak-free and long-lasting connection is to ensure the coupling is brought to the proper torque. Using a torque wrench with crowfoot is the best method, but the flats method can be used if a torque wrench is not available.

The most straightforward method of determining the correct torque setting is to multiply the desired torque by the length of the wrench from the center of the handle to the center of the drive (L); divided by the length of the wrench from the center of the handle to the crowfoot center (LA) as shown below:

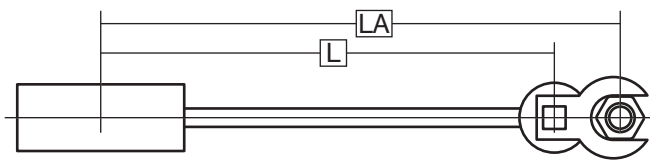


Figure 2-13. Torque Wrench - Crowfoot

NOTICE

The minimum torque values are adequate for sealing most applications. Maximum torque values should never be exceeded.

There are several methods of determining the correct setting on the torque wrench when using a crowfoot. All of the methods involve making the setting proportional to the effective change in length of the wrench multiplied by the desired final torque. The equations and illustration below describe proper measurements. (Use **LEGEND** under Figure 2-4)

Equations

- Torque setting if the crowfoot is placed in line with respect to the wrench:

$$TS = TD * L / LA$$

OR

$$TS = TD * L / (L+E)$$

- Torque setting if the crowfoot is placed at 90° with respect to the wrench

$$TS = TD * L / LH$$

OR

$$TS = TD * L / \sqrt{(L^2 + E^2)}$$

- To estimate the crowfoot size (E)

$$E = \text{Drive Size} * 0.5 + \text{Distance between Drive and Open End} + \text{Wrench Size} * 0.5774$$

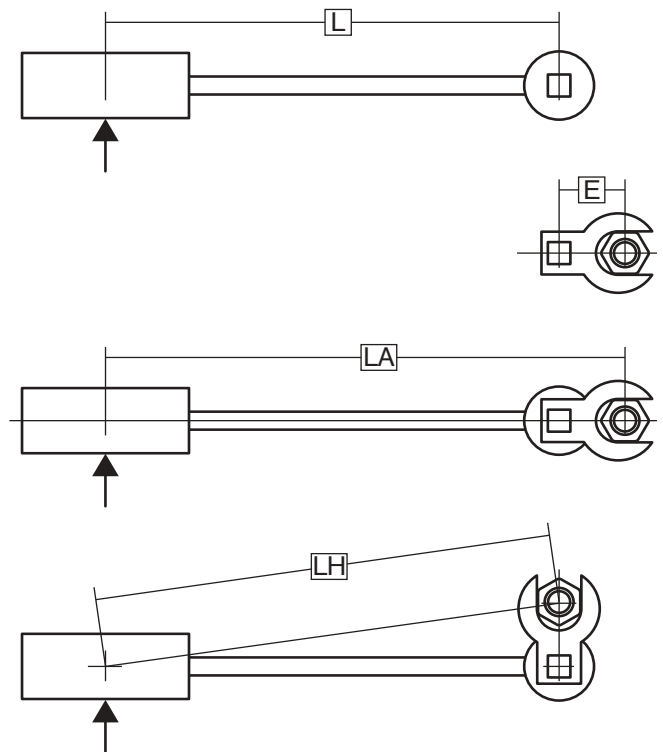


Figure 2-14. Measurements Needed

LEGEND

L = Distance from center of torque wrench handle to the center of socket drive

E = Distance from center of socket drive to the center of crowfoot

LA = Distance from center of torque wrench handle to the center of crowfoot

LH = Distance from center of torque wrench handle to the center of crowfoot, when mounted at 90°

TD = Desired torque at the fitting

TS = Torque setting indicated on wrench

Coupling Installation

Use the following steps for proper coupling installation:

1. Determine the correct torque value for your coupling.

NOTE: Only use the torque values specified from the manufacturer. DO NOT use SAE torque recommendations.

2. Ensure the seal face and threads are clean and in good condition. O-Rings should be lubricated with light oil, but threads should be completely dry unless making pipe thread connections (interference seal).

NOTE: Attach the male end of the hose onto the equipment first since it may be necessary to rotate the entire hose assembly to tighten the male threads. Then route the hose into position while avoiding twisting the hose.

3. Tighten the connection (by hand), bringing the seal face into contact and rotating the nut until it stops.
4. Mark a line across the coupling nut and backup hex for the flats method verification of coupling torque (12).
5. Apply a wrench to the backup hex to prevent the coupling and hose from moving while tightening the nut with a torque wrench.

NOTICE Failure to retain the backup hex during installation will also result in additional clamp load force that could cause damage to the seal face.

NOTE: The coupling nut must be in motion for an accurate torque reading. If the nut is stopped before final torque value is achieved, it must be loosened and retightened until the torque is attained while the nut is in motion.

If a torque wrench cannot fit into the coupling area or if it is unavailable, the flats method may be used to ensure that the coupling is properly tightened, as shown in the following tables.

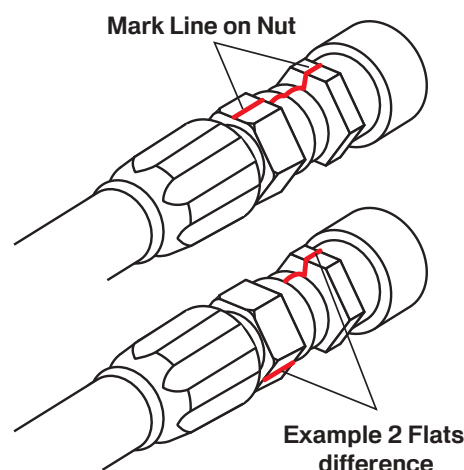


Figure 2-15. Flats Method Tightening

NOTE: The mark placed on the nut and backup hex after tightening by hand should rotate during final tightening according to the table below. The nut and backup hex can then be marked to indicate if the coupling loosens over time.

Table 2-16. Flats Method Values for Selected Terminations

FLATS METHOD VALUES		
Termination Type	Dash Size	Flats
JIC	-4	1.5 - 1.75
JIC	-6	1.0 - 1.5
JIC	-8	1.5 - 1.75
JIC	-10	1.0 - 1.5
JIC	-12	1.0 - 1.5
JIC	-16	.75 - 1.0
JIC	-20	.75 - 1.0
JIC	-24	.75 - 1.0
JIC	-32	.75 - 1.0
JIS	-4	.5 - 1.5
1. Seal faces must be in contact with the fitting fully tightened by hand before marking flats. 2. The flats method is most accurate for the first assembly cycle. For multiple disassembly and assembly cycles, torque values are more reliable. 3. Tightening two (2) flats or more may damage seal faces.		

Table 2-17. Torque Specifications For US Style Coupling Terminations

JIC, SAE 45°, ORFS, O-RING BOSS, GATES ADAPTERLESS AND MEGASEAL										
DASH SIZE	JIC 37°, SAE 45° & Mega-Seal (Steel)		JIC 37°, SAE 45° & Mega-Seal (Brass)		Flat Face O-Ring Seal (Steel)		SAE O-Ring Boss (Steel) & Gates Adapterless ≤ 4000 PSI		SAE O-Ring Boss (Steel) & Gates Adapterless > 4000 PSI	
	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max
-3									8	10
-4	10	11	5	6	10	12	14	16	14	16
-5	13	15	7	9					18	20
-6	17	19	12	15	18	20	24	26	24	26
-8	34	38	20	24	32	40	37	44	50	60
-10	50	56	34	40	46	56	50	60	72	80
-12	70	78	53	60	65	80	75	83	125	135
-14					65	80			160	180
-16	94	104	74	82	92	105	111	125	200	220
-20	124	138	75	83	125	140	133	152	210	280
-24	156	173	79	87	150	180	156	184	270	360
-32	219	243	158	175						

Table 2-18. Torque Specifications for DIN 24, DIN 60, and Inverted Cone Style Coupling Terminations

DIN 24, DIN 60, AND INVERTED CONE			
Size (mm)		Torque (lb ft)	
Light Series Tube OD	Heavy Series Tube OD	Min	Max
6		7	15
8		15	26
10	8	18	30
12	10	22	33
14	12	26	37
15	14	30	52
	16	30	52
18	20	44	74
22	25	59	89
28	30	74	111
	38	74	162
35		133	184
42		148	221

Table 2-19. Torque Specifications for 4-Bolt Flange Connections

4-BOLT FLANGES		
Dash Size	Bolt Size (in)	Torque (lb ft)
-8	0.31	17
-12	0.38	26
-16	0.44	43
-20	0.50	65
-24	0.63	130
-32	0.75	220

- Align faces and tighten bolts (by hand) before applying final torque in a pattern. The seal faces must be parallel with an even bolt tension to seal properly.
- Torque values apply to bolts that are plated or coated in light engine oil.
- Before assembly, lubricate O-Ring with light oil (SAE 10W or 20W).

Table 2-20. Torque Specifications for NPTF Dry Seal Pipe Threads

NPTF	
Dash Size	Max Torque (ft-lb)
-2	20
-4	25
-6	35
-8	45
-12	55
-16	65
-20	80
-24	95
-32	120
1. The torque values obtained from tightening pipe threads can vary considerably depending upon thread condition. Adequate sealing can occur at values much lower than the maximum values listed above. Only enough torque to achieve adequate sealing should be used. 2. When using a male tapered pipe thread with a female straight or parallel pipe thread, maximum values are 50% of those listed in the table above. 3. If thread sealant is used, maximum values shown should be decreased by 25%.	

Table 2-21. Torque Specifications for BSP 30° Inverted Cone and JIS Coupling Terminations

BSP 30° INVERTED CONE AND JIS		
Dash Size	Torque (ft-lb)	
	Min	Max
-2	7	9
-4	11	18
-6	19	28
-8	30	36
-10	37	44
-12	50	60
-16	79	95
-20	127	152
-24	167	190
-32	262	314



Section 3

COMPONENT LOCATION

	Page
Component Location	3-1
Components Overview	3-3
Torque Hubs.	3-3
Hydraulic System	3-3
Hopper and Conveyors	3-3
Augers.	3-4
Operator Platform	3-4
Electrical System	3-4
Screed	3-4
Standard Equipment/Options	3-4
Machine Overview	3-5
Operator Control Panel	3-6
Steering and Speed Control Box	3-8
Right Hydraulic Controls	3-9
Left Hydraulic Controls	3-10
High-Deck Lower Controls (Option)	3-11
Screed Operation Controls.	3-12
Burner Controls	3-13
Propane Tank Controls	3-13
Steering Wheel (Option)	3-14
Electric Heat (Option)	3-15

NOTES

COMPONENTS OVERVIEW

This section describes the major components for the LeeBoy 8510D Conveyor Paver. Become familiar with these components before operating the machine.



Engine

The LeeBoy Model 8510D Conveyor Paver is equipped with a Kubota, 74 hp (55.2 kW) diesel engine, which is mounted near the center of the paver and accessible through several access doors on the engine cover.

A fuel lift pump mounted to the right side of the engine draws diesel fuel from the fuel tank, which is also mounted on the right side of the engine compartment.

The air cleaner is mounted at the back of the hood, which removes fine particles such as dust, sand, chaff and lint from the air. As air is taken into the air cleaner assembly, the cyclone action deposits some of the fine particles in the evacuator that is mounted on the bottom of the air cleaner housing. The evacuator is held closed during engine operation by suction. When the engine is shut off, the weight of the debris opens rubber flaps, allowing the debris to fall out. These flaps can also be squeezed open for cleaning.

The fuel filter removes contaminants from diesel fuel before it flows into the injection pump where it is injected into the engine combustion chamber.

The radiator mounted in front of the engine cools the engine. As coolant flows through the radiator, airflow from the engine-driven fan removes heat.

Refer to the Engine Operator's Manual accompanying your paver for additional engine information.

Torque Hubs

The paver drive system contains two torque hubs that provide power to propel the tracks.

Hydraulic System

The hydraulic system includes hydraulic pumps, motor and cylinders that work together for optimum machine component control. Valves regulate the directional, pressure and fluid flow throughout the hydraulic system.

The LeeBoy 8510D Conveyor Paver now features a hydraulic test ports for ease and convenience in checking pressure for its five main functions.

Hopper and Conveyors

The hopper wings are hydraulically controlled to raise and lower the hopper. When fully open, the hopper can hold a payload up to nine tons.

Material in the hopper is moved toward the back of the paver to the screed by conveyors. The conveyor is activated at the operator platform. Its wide, automatic conveyors with a wide hopper design delivers asphalt more evenly and efficiently to produce a smooth asphalt mat.

The hopper's conveyor bed can be lifted hydraulically, allowing easy access to the paver undercarriage and tracks for service and cleaning.



Augers

Right and left augers rotate counterclockwise to move material from the conveyors to the screed. The auger can be manually controlled at the operator platform or by a screed operator on the screed.



The auger can also be controlled automatically when the optional auger/conveyor sonic sensor system is installed and active. The sensor is mounted on the screed endgates and used to monitor and control the pile height of material at the discharge end of the augers.

Operator Platform

The operator platform allows easy and convenient access for controls of most paver functions. The paver can be operated from the left or right side depending upon which control panel side is active and best suited to the working conditions. Controls can also be lowered to operate as a lowdeck or by standing on the screed walkboard.



Electrical System

The electrical system is powered by one 12-volt battery mounted in the engine compartment next to the generator. Each battery produces 12 volts DC and maintains 1,125 cold cranking amperes (CCA). An engine-mounted alternator with a minimum of 60 amperes charging capacity keeps the battery charged during normal operation. The battery charge rate can be monitored using the voltmeter on the center operator control panel.

Screed

The screed is the last part of the paver that contacts the paving material. A screed operator usually operates the screed while the operator drives the machine. Paving material is fed from the hopper and conveyor to the augers to the front of the screed. The screed has hydraulically-controlled extensions that move in and out to allow a paving base from 8 - 15 feet. Screed heating is accomplished by electric heating elements mounted directly to the wear plates. The hydraulically-driven vibrators mounted on the main screed frame can be used to increase paving material compaction.

Standard Equipment/Options

Component	
8 - 15 feet (2.44 - 4.57 m) Propane Screed	❖
Electronic Gauge Package	❖
Two-Speed Hydrostatic Drive	❖
Under Auger Cut-Off Gates	❖
Light and Safety Beacon Package	❖
12-inch (30.5 cm) Augers w/Sonic Control	❖
Citrus Tank	❖
Anti-Vandalism Package	❖
Legend Electric Screed	Option
Legend 815HD Electric Screed	Option
Dual Grade Control	Option
Dual Grade and Slope Control	Option
Truck Hitch	Option
Steering Wheel	Option
Roll-Up Curb Attachment	Option
Heated End Gates	Option
Screed Generator	Option

MACHINE OVERVIEW



3

Figure 3-1. Machine Overview

ITEM NO.	CONTROL NAME	FUNCTION
1	Crown and Valley	Adjusts crown and valley while paving.
2	Main Screed Depth Screw	Controls depth of the asphalt.
3	Electric Heat (Option)	Optional electric heat element for screed and screed extensions.
4	Auger Dial	Part of optional sonic auger system (located on each side). Turning dial increases or decreases pile height.
5	Left Hydraulic Controls	Controls for numerous hydraulic functions.
6	Operator Control Console	Machine and operator controls.
7	Joysticks	Controls travel direction and speed (on each side of machine).
8	Right Hydraulic Controls	Controls for numerous hydraulic functions.
9	Hopper	Hopper wings fold out to hold asphalt material.
10	Sonic Auger Sensor	Sensors automatically gauge and regulate material flow to screed extensions.
11	Screed Extension	Extends for a paving width from 8 - 15 feet.

OPERATOR CONTROL PANEL



Figure 3-2. Operator Control Console

ITEM NO.	CONTROL NAME	FUNCTION
1	PV480 Digital Display	Displays paver setup and calibration information, engine operating information, and engine and paver system fault information.
2	Horn	Sounds horn.
3	Spray Down Switch	Turns spray down system on and off.
4	Right Auger Switch	Selects manual or automatic operation of the right auger. For automatic operation, set switch to AUTO, then move the right Auger IN/OUT lever on the Left Hydraulic Controls down to the OUT position (Pages 3-10 and 3-11) to engage automatic auger operation.
5	Left Auger Switch	Selects ON or OFF for automatic operation of left auger. For automatic operation, set switch to AUTO, then move the right Auger IN/OUT lever on the Left Hydraulic Controls down to the OUT position (Pages 3-10 and 3-11) to engage automatic auger operation.
6	Left Conveyor Switch	Selects automatic or manual mode for left conveyor. MANUAL position provides override.
7	Right Conveyor Switch	Selects automatic or manual mode for right conveyor. MANUAL position provides override.
8	Plus One Light	Illuminates when fault is detected.
9	High/Low Gear Light	Illuminates when the paver is in high gear.
10	High/Low Gear Switch	Used to change machine speed. Place switch in HIGH position for travel (blue High/Low Gear light will illuminate). Pave only in LOW speed. NEVER pave in high speed as serious injury can result.
11	Grade Control Switch	When this switch is in the GRADE position, the power is ON regardless of the joystick position.
12	Work Light Switch	Turns work light on and off.
13	Ignition Switch	Starts and stops engine.
14	Wait to Start	Illuminates for a few seconds during starting procedure. Starter will not engage until this light turns off.
15	E-Stop Button	Immediately stops the paver engine and all electronic functions. Turn clockwise to release E-Stop button.

STEERING AND SPEED CONTROL BOX



Figure 3-3. Steering and Speed Control Box

ITEM NO.	CONTROL NAME	FUNCTION
1	Left Steer Joystick	Joystick controls speed and direction forward or reverse. Pushing forward moves machine forward. The farther forward, the faster the speed. Pulling backward moves machine backward. The farther backward, the faster the speed. Both joysticks must be in neutral to start the paver.
2	Right Steer Joystick	Joystick controls speed and direction forward or reverse. Pushing forward moves machine forward. The farther forward, the faster the speed. Pulling backward moves machine backward. The farther backward, the faster the speed. Both joysticks must be in neutral to start the paver.
3	Run/Stop Switch	Controls stopping and activating/deactivating operator control station. When set to STOP, control station is deactivated, parking brake applied, and machine will not move. When set to RUN, control station is activated, parking brake is released, and machine resumes previously set speed. NOTE: Only one operator control station can be active at a time. NOTE: If the joystick(s) position has not changed since moving this switch to the STOP position, the paver will resume travel at the same speed when moving the switch to the RUN position. If the joystick(s) position has changed since moving this switch to the STOP position, paver travel will be temporarily disabled when turning switch to RUN until moving the joysticks to the neutral position as an additional safety feature.
4	Neutral Lock	Locks the joysticks in neutral.

RIGHT HYDRAULIC CONTROLS

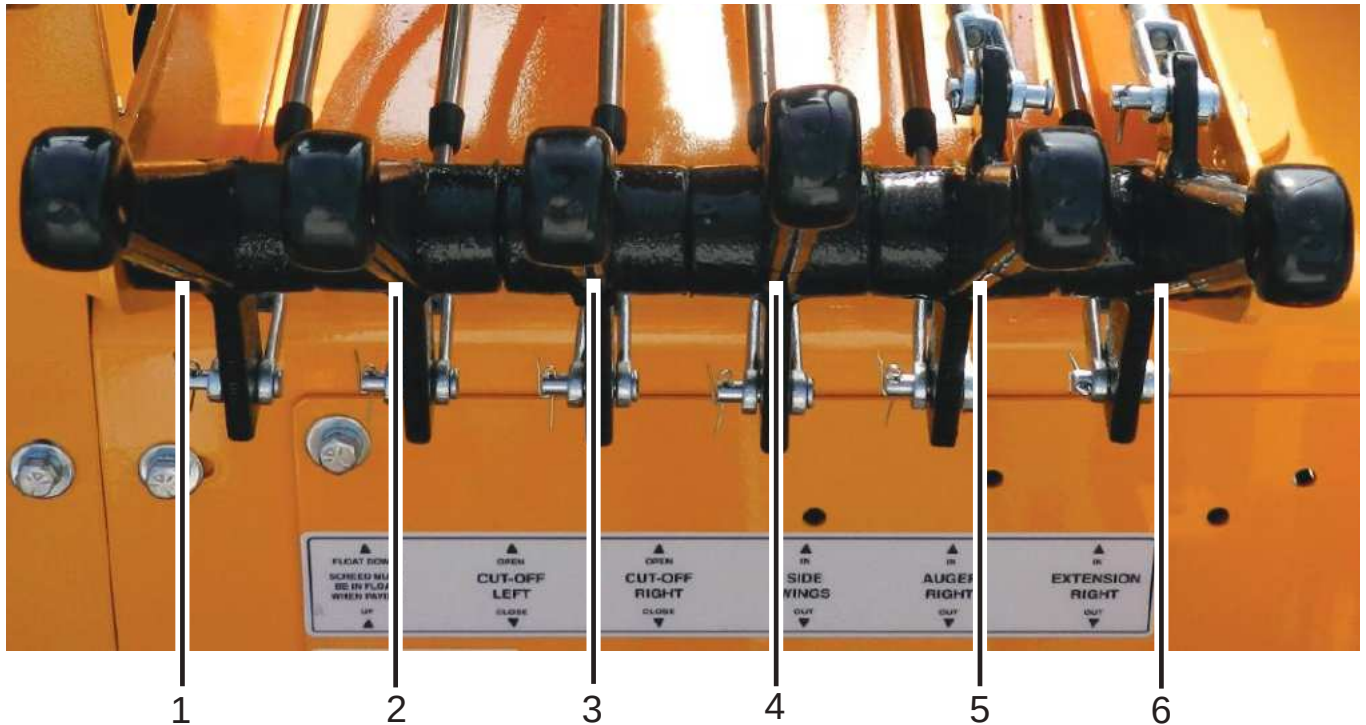


Figure 3-4. Right Hydraulic Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Screed Float Lever	Raises or floats the screed. Push lever up to lower screed into the float position (locks into float). Push the lever up again to raise the screed. NOTE: Screed must be in the FLOAT position when paving.
2	Left Cut-Off Lever	Opens (push up) and closes (push down) left cut-off gate.
3	Right Cut-Off Lever	Opens (push up) and closes (push down) right cut-off gate.
4	Side Wings Lever	Opens and closes hopper wings. Push the lever to fold in hopper wings. Push the lever down to open hopper wings.
5	Right Auger Lever	Turns right auger on (push lever down) and off (push lever up).
6	Right Extension Lever	Retracts and extends the right screed extension. Push lever down to extend screed extension. Push lever up to retract screed extension.

LEFT HYDRAULIC CONTROLS

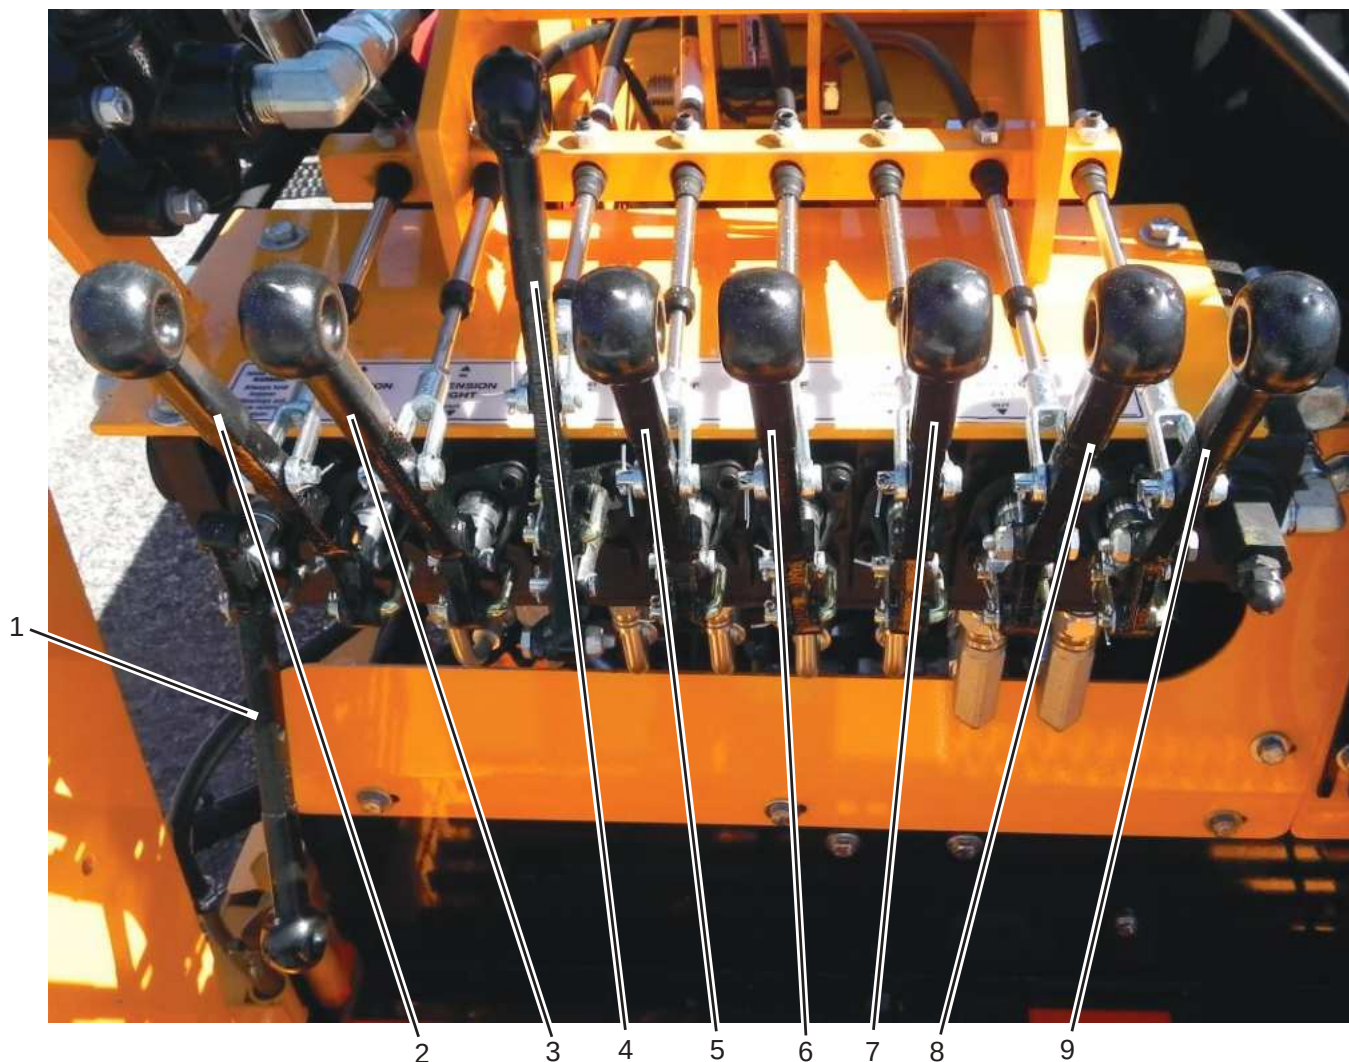


Figure 3-5. Left Hydraulic Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Conveyor Raise/Lower	Raises and lowers conveyor. Push lever UP to raise conveyor (see WARNING below). Pull lever DOWN to lower conveyor. ⚠ WARNING Always close the hopper wings before raising conveyor. Immediately insert the safety prop as an additional safety measure. NOTE: Lever also controls the optional truck hitch if equipped.
2	Left Screed Extension	Moves left screed extension in or out. Push lever UP to move left extension in. Pull lever DOWN to move left extension out.
3	Right Screed Extension	Moves right screed extension in or out. Push lever UP to move right extension in. Pull lever DOWN to move right extension out.

ITEM NO.	CONTROL NAME	FUNCTION
4	Screed Float	Raises or floats screed. Push lever UP to lower screed in FLOAT position. Once pushed UP, lever locks in FLOAT position. Pull back out of FLOAT and push lever UP again to raise screed. NOTE: Screed must be in FLOAT position when paving.
5	Left Cut-Off Gate	Opens and closes left cut-off. Push lever UP to open left cut-off. Pull lever DOWN to close left cut-off.
6	Right Cut-Off Gate	Opens and closes right cut-off. Push lever UP to open right cut-off. Pull lever DOWN to close right cut-off.
7	Hopper Wings In/Out	Moves hopper wings in or out. Push lever up to the OUT position to open hopper wings. Pull lever down to the IN position to close hopper wings in. NOTE: Hopper wings will not close unless the hopper is in lowest position. NOTICE Never close the hopper wings when hopper is full of asphalt.
8	Left Auger In/Out	Moves left auger in or out. Push lever UP to move left auger in. Pull lever DOWN to move left auger out.
9	Right Auger In/Out	Moves right auger in or out. Push lever UP to move right auger in. Pull lever DOWN to move right auger out.

HIGH-DECK LOWER CONTROLS (OPTION)

If equipped with high-deck option, you can use the lower controls on either side of the paver to extend/retract the screed and turn the auger on and off at ground level.



Figure 3-6. Lower Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Extension In/Out Lever	Moves screed extension in or out. Push lever UP to move left extension in. Pull lever DOWN to move left extension out.
2	Auger In/Out Lever	Moves auger in or out. Push lever UP to move left auger in. Pull lever DOWN to move left auger out.

SCREED OPERATION CONTROLS

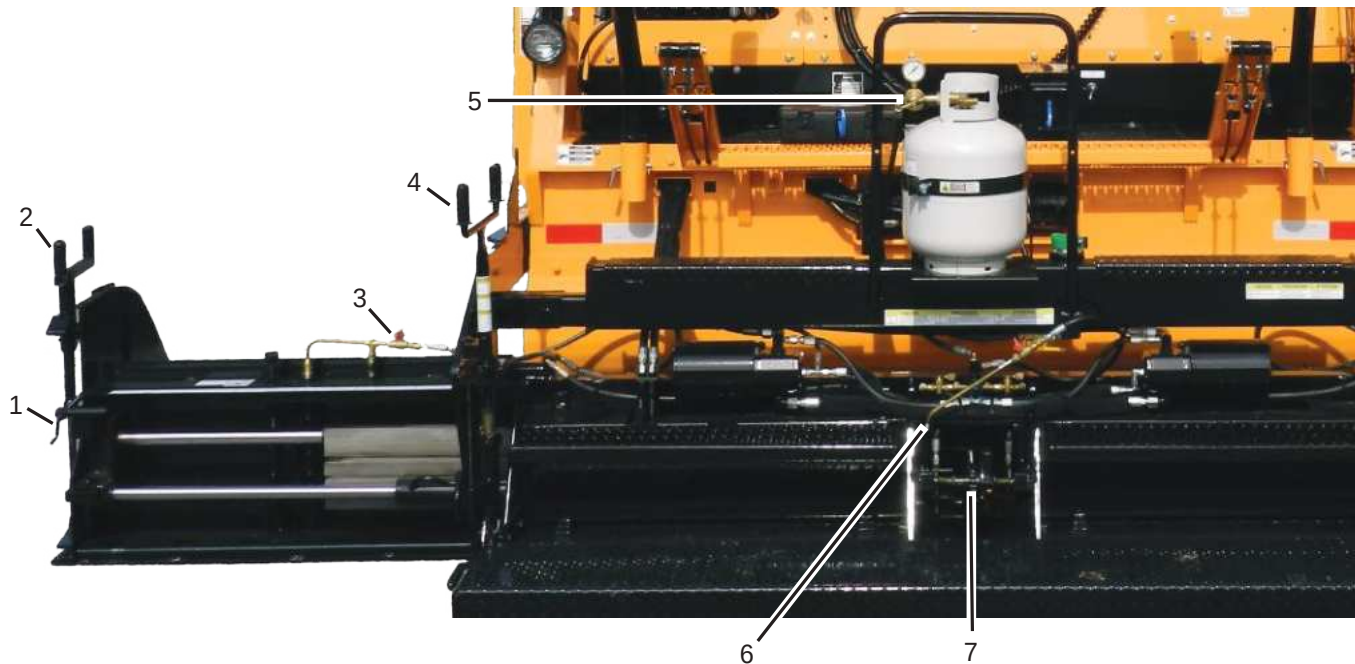


Figure 3-7. Screed Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Tilt Screw	Adjusts the tilt of the end gate.
2	Endgate Depth Screw	Controls the depth of the end gate.
3	Screed Propane Heat Ignitor	Ignites the screed extension heat.
4	Flight Screw	Controls the depth of the asphalt.
5	Propane Tank Controls and Pressure Gauge	Controls for the propane gas tank and gas pressure gauge.
6	Main Screed Propane Heat Ignitor	Ignites the main screed heat.
7	Crown and Valley	Adjusts for positive crown or negative valley in wear plate. NOTE: Powered adjustment option available.

BURNER CONTROLS

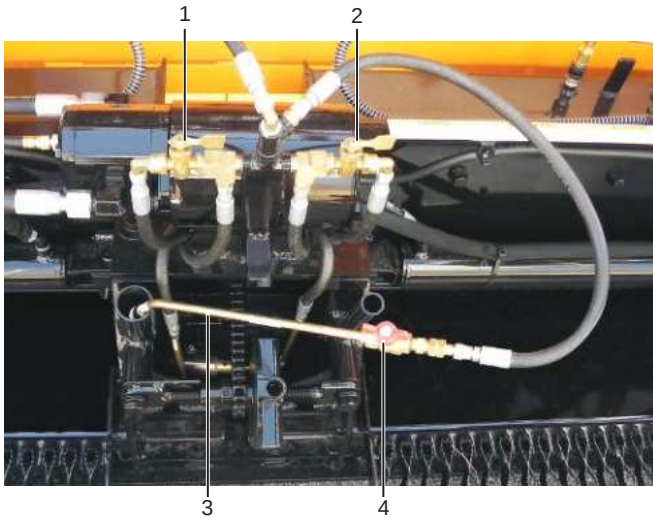


Figure 3-8. Main Screed Burner Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Left Burner Valve	Controls flow of propane to left screed burner.
2	Right Burner Valve	Controls flow of propane to right screed burner.
3	Burner Ignitor	Used to light burners.
4	Burner Ignitor Valve	Controls flow of propane to ignitor.

Propane Tank Controls



Figure 3-9. Propane Tank Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Propane Pressure Regulator Valve	Regulates propane line pressure.
2	Propane Pressure Regulator Gauge	Indicates propane line pressure.
3	Propane Tank Open/Close Valve	Opens and closes propane pressure.

STEERING WHEEL (OPTION)



Figure 3-10. Steering Wheel Option

ITEM NO.	CONTROL NAME	FUNCTION
1	Forward/Reverse Joystick	Controls the speed of travel forward and reverse. The farther moved in either direction, the faster the speed. When joystick is centered, the machine is in neutral and the brake is engaged.
2	Steering Wheel	Controls the direction of travel right or left.
3	Neutral Lock	Locks the Forward/Reverse joystick in neutral.
4	Run/Stop Switch	Controls stopping the machine and activating or deactivating the operator controls station. Operator control station is deactivated when the switch is set to the STOP position, parking brake is applied and the machine will not move. When setting the switch to RUN, the operator control station is activated, parking brake is released and the machine resumes to the previously set speed. NOTE: Only one operator control station can be active at a time. NOTE: If the joystick position has not changed since moving this switch to the STOP position, the paver will resume travel at the same speed when moving the switch to the RUN position. If the joystick(s) position has changed since moving this switch to the STOP position, paver travel will be temporarily disabled when turning switch to RUN until moving the joysticks to the neutral position as an additional safety feature.

ELECTRIC HEAT (OPTION)



Figure 3-11. Electric Heat Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Heat On Light	Illuminates and stays on as long as the element is heating the screed plates (approximately 20 minutes).
2	Start Heat Button	After turning on the power, press the Start Heat button. Once the heating function has been enabled, the distribution/control box will apply electrical power to the heating elements and the heating cycle will begin. The heating cycle is timed to optimize the heat generated at the screed plates. Press the button again to reheat the screed if needed.
3	Power Switch	Turns the electric heat system on and off.

NOTES



Section 4

OPERATION

	Page
Operation	4-1
General Information	4-3
Receiving the Machine	4-3
Initial and Daily Inspection	4-3
Start-Up Procedure	4-4
Stopping the Engine	4-4
DPF Regeneration (REGEN)	4-4
PV480 Powerview Display	4-5
Gauge Screen	4-5
Set Points and Throttle Speed	4-5
Soft Keys (Buttons)	4-6
Status Icons	4-7
Main Menu.	4-8
Gauges	4-8
Diagnostics	4-9
System Info	4-10
User Settings	4-12
Regeneration Messages.	4-14
Messages, Cautions, Warnings	4-17
Driving the Paver	4-18
Operator Control Station.	4-18
Steering and Speed Control	4-18
Paver Operation	4-19
Spray Down	4-19
Heating the Screed	4-20
Electric Screed Heat (Option)	4-21

Hopper Wings	4-22
Conveyors	4-23
Hydraulic Cut-Off Gates	4-23
Electric Flight Screw	4-24
Set the Screed, Flight Screw and Endgate	4-24
Sonic Auger (Option).	4-26
Starting to Pave	4-27
Basic Paving.	4-27
Setting the Crown	4-28
Mat Texture Adjustment	4-29
Unloading And Loading.	4-30
Unloading	4-30
Loading	4-30
Tie-Down Procedure.	4-31
Optional Components	4-31
Auger Extensions Option.	4-31
Truck Hitch Attachment	4-32
High Deck Option	4-32
Umbrella Option	4-32
Roll-Up Curb Attachments	4-32
Rubber or Steel Track Options.	4-32
Steering Wheel	4-32
Electric Screed Options	4-33
Topcon® Sonic and Dual Grade	4-33
815HD (Heavy Duty) Electric Screed	4-34

GENERAL INFORMATION

The LeeBoy Model 8510D Conveyor Paver is equipped with hydrostatic-driven tracks that propel the paver using friction-controlled joysticks. The two joysticks control the speed and direction of the paver in conjunction with the machine speed setting. Ramping for acceleration and deceleration are proportional to the movement of the joysticks. **(Page 3-8)**

The propel system utilizes a dual path proportional system to control the tracks. In low speed, the inside track counter-rotates.

Steering the tracks is controlled by a hydraulic proportional pump. The amount of steering is controlled by the amount of joystick movement and the speed of the paver. As the paver speed increases, steering will be reduced.

Engine RPM is set manually by using the throttle up and throttle down buttons located on the PV480 digital display unit on the operator control panel. Always set throttle before starting to pave.

⚠ DANGER Only authorized personnel who are properly trained should operate the LeeBoy Model 8510D Conveyor Paver.

RECEIVING THE MACHINE

Although the machine has been checked thoroughly by the manufacturer, road hazards or other factors during transport may result in damage. Be sure to check the machine thoroughly before operating it:

1. Check engine oil. **(Page 5-11)**
2. Check hydraulic fluid level. **(Page 5-14)**
3. Check machine hoses for any damage or leaks.
4. Inspect machine for any damage during transport. Contact your authorized dealer immediately if any damage has occurred.

Hopper Lock Pins

This machine is provided with hopper lock pins (one on each side). **(Figure 4-1)** Extend the pins to prevent the hopper wing from inadvertently leaking down during transport. Retract the pin and lock down the thumb screw during operation.



Figure 4-1. Hopper Lock Pin

Initial and Daily Inspection

The following inspection is essential and should be performed before the initial start-up. Visually inspect the unit to check its general condition and for familiarization. Continue with a check of the systems and components shown in **Table 4-1** below:

Table 4-1. Initial Inspection

INSPECT	PROCEDURE
Engine Oil Level	Maintain oil level between ADD and FULL marks on dipstick.
Fuel Tank	Check for adequate fuel supply. Fill if needed. Always fill tank at end of the day to prevent condensation in the tank.
Hydraulic Tank	Check the tank for oil level and leaks.
Radiator	Check coolant level.
Battery	Ensure all cables are tight and clean. Check for corrosion on the battery terminals.
Air Cleaner	Check the air filter element and hose connections. Air cleaner has both a primary and secondary filter.
Drain Plugs	Make sure plugs are inserted and tight.
Engine Belt	Check for proper belt tension.
Grease Fittings	Ensure fittings are greased and in good working order.

START-UP PROCEDURE

⚠ DANGER DO NOT leave the operator station unattended while the paver is in gear or in motion. Operator must return joysticks to the neutral position and turn the RUN/STOP switch to the STOP position before leaving the operator platform.

⚠ CAUTION Verify there are no people, obstacles or other equipment in the machine's path before starting the engine.

1. Clear auger and conveyors before starting engine.
2. Position joysticks to NEUTRAL (center).
3. Insert key into the ignition and turn clockwise to the START position.

NOTICE DO NOT hold the starter longer than 10 - 15 seconds. If the engine does not start, allow the starter to cool two or three minutes.

NOTICE Using starting additives, such as ether, is not recommended as severe engine damage can occur.

4. Allow engine to warm up a few minutes before moving paver for more efficient operation. In cold weather let hydraulic oil warm to 60° (16°C) before moving.
5. Set engine RPM using the throttle up and down buttons on the PV480 digital display Engine Screen. **(Page 4-5)** Set throttle at 2000 RPMs or higher. This runs the engine hot enough for clean operation and allows regeneration (see next section).

Stopping the Engine

1. Move joysticks to the NEUTRAL position.
2. Reduce engine to 1300 RPMs
3. Turn ignition key on instrument panel counterclockwise to the OFF position and remove key.

NOTE: If for any reason the engine does not shut down when key is turned off, push in the E-Stop button.

DPF REGENERATION (REGEN)

When starting the engine, a sequence of screens will display on the PV480 digital display unit on the operator console. **(Page 4-5)** First you will see "booting" notated in the upper left corner, followed by a logo display, then the gauge screen is displayed. The lit status icons at the top of the screen will disappear momentarily.

This digital unit displays operational information, diagnostics and other controls for the machine. It is particularly important that the operator understand DPF regeneration.

DPF regeneration is the term given to the cleaning process where the exhaust temperature is raised in an attempt to safely burn off any soot and undesired combustion gas captured in the Diesel Particulate Filter (DPF) in the exhaust system. When the DPF filter reaches a soot saturation level between 25 - 45 percent, the onboard engine ECU (Engine Control Unit) will activate a regeneration cycle.

NOTICE To reduce the amount of particulate matter and maximize efficiency, use API-CJ4 (or ACEA-E9 European equivalent) engine oil.

During normal operation, the DPF is cleaned automatically. Under certain conditions, the operator may have to instruct the control system to perform the cleaning process.

The DPF icon indicates the level of soot build-up on a scale of Level 0 - 5 and changes color. Regeneration will occur automatically at Level 1 - 2.

It is important to perform a parked, manual regeneration BEFORE the engine reaches as high as Level 4. If the DPF reaches Level 4 - 5, non-warranty factory assistance from the engine manufacturer is required.

The engine speed will increase during regeneration and there may be a noticeable sound difference. Once regeneration is complete, the engine will return to normal idle speed.

Once the DPF cycle has been activated, it is important not to shut off the engine as the regeneration cycle will fail and could possibly damage the engine. If the regeneration cycle fails, the ECU may attempt a second regeneration depending upon how blocked the filter has become. If the system does not allow a second regeneration, this means the filter is blocked more than 80 percent and needs to be cleaned or replaced.

PV480 POWERVIEW DISPLAY

Gauge Screen

The gauge screen (**Figure 4-2**) displays five (5) dial gauges and three (3) digital gauge options.



Figure 4-2. Gauge Screen

The gauge screen (**Figure 4-1**) displays five (5) dial gauges and three (3) digital gauge options:

- 1 - Engine Speed/RPM
- 2 - Engine Coolant Temperature
- 3 - After Treatment DPF Outlet Gas Temperature
- 4 - Electrical Potential Voltage
- 5 - Actual Engine Torque Percentage
- 6 - Oil Pressure - Lamp Only
- 7 - Fuel Level
- 8 - Engine Total Hours of Operation

Set Points and Throttle Speed

Used to select preset engine throttle speeds.

Use the first button to select set points while not in the menu. Select desired default throttle speed using buttons. The default speeds are: 1300 RPM, 1500 RPM, 1800 RPM, 2000 RPM and 2200 RPM, as shown in **Figure 4-3**.



Figure 4-3. Engine Throttle Speeds Screen

Use the second button to switch between DPF commands and Speed/Throttle to change functions of buttons 4 and 5 (manually adjusts engine throttle).

NOTE: LeeBoy sets the generator for optimum performance at the 2200 RPMs. It is recommended that you use the 2200 RPM preset. The generator will perform at other lower RPM levels, but not at peak levels.

DPF Commands


With "DPF commands" use button 5 to inhibit a Parked Regen Request.

WARNING Parked Regen should be carried out as soon as possible after a Parked Regen Request has been given. Failure to do so may result in damage to the engine.

Soft Keys (Buttons)

Your Soft Key choices (**Table 4-2**) are associated with the throttle source. Some throttle sources may not be present on your model.

 Table 4-2. Soft Key Choices

Status Icon	Description
	Set Points — Displays the engine-requested RPM/speed quick set points
	DPF Commands — Displays the Diesel Particulate Filter (DPF) command to access the Un-inhibit Regen and Inhibit Regen
	Request Regen — Sends message to Engine Control Unit (ECU) to start regenerating the DPF when prompted by engine ECU
	Stop Regen — Sends message to ECU to stop regenerating the DPF (should not be used unless necessary)
	Freeze Frame — Requests the freeze frame data from the ECU when faults are present
	Main Menu — Two full pages that list 5 action items to choose from: Gauges, Diagnostics, System Info, Lamp Info, User settings
	Down — Navigates the curser (>) downward through a list
	Up — Navigates the curser (>) upward through a list
	Select — Enters the action item next to the cursor in a list. Also used with the Main Menu soft key to get back to the Main Menu from any screen
	Deselect — Closes pop up messages
	Plus — Increase the engine requested speed
	Minus — Decrease the engine requested speed
	Speed/Throttle — Opens the speed/throttle adjustment command and enables the Plus and Minus soft keys (+/-)

Status Icons

The Status Icons (**Table 4-3**) are color-coded and light up when communicating to the operator. Pay close attention to any Status Icon and its color.

Table 4-3. Status Icons

Status Icon	Description
	Check Engine – When this lamp is illuminated, a fault exists within the control system. The engine may continue to operate, however, it is unable to perform DPF cleaning either automatically or manually. ⚠ WARNING Take action immediately to correct the fault.
	Parking Break Switch – The park icon displays when the parking brake is applied. NOTE: To perform a Parked REGEN, the “P” and “N” lamps must be illuminated.
	Transmission Neutral – The neutral icon displays when the transmission is in neutral. NOTE: To perform a Parked REGEN, the “P” and “N” lamps must be illuminated.
	Engine Exhaust High Temperature Lamp – This lamp illuminates during the REGEN cycle to warn of high exhaust temperatures. This lamp will turn off when normal operating temperatures are reached after the REGEN cycle. ⚠ WARNING Be sure engine exhaust is away from any potentially combustible materials when this is illuminated.
	Diesel Particulate Filter Lamp – A Solid Lamp is the initial warning that soot levels are rising in the DPF. A Flashing Lamp indicates a DPF REGEN is needed (on some systems, the lamp will become RED when flashing). The lamp will turn solid again when a REGEN is initiated. Any time the lamp begins flashing, the operator should increase the loading on the engine so that regeneration is possible. ⚠ WARNING If increased load does not cause an automatic REGEN to occur, the operator should immediately perform a Parked, Manual REGEN (see reverse side for instructions).
	DPF Regeneration set to Inhibit – The user may choose to inhibit the REGEN if conditions are too hazardous for high exhaust temperatures. When this lamp is illuminated, a REGEN cannot be performed and soot levels will continue to rise. ⚠ WARNING Unless hazardous conditions exist, the REGEN Inhibit switch and this lamp should remain off.

Glossary of Terms and Acronyms

CAN - Controller Area Network

DM1 - Diagnostic Message 1, Active Diagnostic Trouble Codes

DM2 - Diagnostic Message 2, Previously Active Diagnostic Trouble Codes

DM3 - Diagnostic Message 3, Diagnostic Data Clear/Reset for Previously Active DTCs

DM4 - Freeze Frame Parameters

DPF - Diesel Particulate Filter

DTC - Diagnostic Trouble Code

ECU - Engine Control Unit

FMI - Failure Mode Identifier

PGN - Parameter Group Number

SPN - Suspect Parameter Number

Main Menu

Press the Main Menu () soft key to view the menu action items. **(Figure 4-4)** Scroll through the Main Menu list using the UP/DOWN soft keys to maneuver the cursor (>) to the action item.

- Gauges (Main Menu default screen)
- Diagnostics
- System Info
- Lamp Info
- User Settings



Figure 4-4. Main Menu Screen

Gauges

The Gauge Screen **(Figure 4-5)** is the Main Menu default screen (home). Open it from any screen by pressing the Main Menu () soft key and then the Select () soft key.



Figure 4-5. Gauge Screen

Diagnostics

Scroll through the Main Menu list using the UP/DOWN soft keys and stop the cursor (>) next to the action item Diagnostics. Press the Select () soft key. The screen (Figure 4-6) displays the following items:

- Active Diagnostics
- Logged Diagnostics



Figure 4-6. Diagnostics Screen

Active Diagnostics

Use the UP/DOWN soft keys and stop the cursor (>) next to the action item Active Diagnostics. (Figure 4-7) Press the select () soft key. The screen displays active warnings or faults from the ECU. Each diagnostic is shown with the appropriate Suspect Parameter Number (SPN) and Failure Mode Indicator (FMI), Text Description (if available), and the ID/Name of the device that transmitted the DM1 message. Press the UP/DOWN soft keys to reach the next diagnostic in the list.



Figure 4-7. Active Diagnostics Screen

4

Logged Diagnostics

Use the UP/DOWN soft keys and stop the cursor (>) next to the action item Logged Diagnostics. **(Figure 4-8)** Press the select () soft key. The screen displays the controller requests DM2 (stored trouble codes, not active), warning or faults from the ECU. Each diagnostic is shown with the appropriate information:

- Suspect Parameter Number (SPN)
- Failure Mode Indicator (FMI)
- Text Description (if available)
- ID/Name of the device that transmitted the DM1 message



Figure 4-8. Logged Diagnostics Screen

NOTE: Select the Freeze Frame Button to request the freeze frame data from the ECU when faults are present.

System Info

Scroll through the Menu list using the UP/DOWN soft keys and stop the cursor (>) next to the action item System Info. Press the select () soft key. **(Figure 4-9)** The screen displays the following items:

- Engine Model
- Engine Serial Number
- ECU Software ID
- Fuel Rate
- Time since last active regen



Figure 4-9. System Info Screen

Press the UP/DOWN soft keys to display a screen with application and configuration information. **(Figure 4-10)**



Figure 4-10. Application and Configuration Information Screen

Lamp Info

Scroll through the Menu list using the UP/DOWN soft keys and stop the cursor (>) next to the action item Lamp Info. Press the select () soft key.

This screen shows the Diesel Particulate Filter (DPF) Lamp symbols and provides a description and cautionary information for each symbol. Use the UP/DOWN soft keys to scroll to each symbol. (Figures 4-11 to 4-14)



Figure 4-11. High Exhaust Temperature Due to DPF Regeneration Symbol Screen



Figure 4-12. Needs Regenerating Screen



Figure 4-13. Machine Inhibiting DPF Regeneration Screen



Figure 4-14. Parked Regeneration Overview Screen

User Settings

Scroll through the Menu list using the UP/DOWN soft keys and stop the cursor (>) next to the action item User Settings. Press the select () soft key. The screen displays the following action items:

- Colors
- Brightness
- Language
- Units
- Date
- Time

Screen Color

Use the UP/DOWN soft keys and stop the cursor (>) next to the action item Colors. **(Figure 4-15 and 4-16)** Set your preference for day or night vision by using the +/- soft keys.



Figure 4-15. Set Night Vision Color Preferences Screen



Figure 4-16. Set Day Vision Color Preferences Screen

Screen Brightness

Use the UP/DOWN soft keys and stop the cursor (>) next to the action item Brightness. **(Figure 4-17)** Set the brightness of the backlight by using the +/- soft keys.



Figure 4-17. Set Brightness Of Backlight Screen

Language

Use the UP/DOWN soft keys and stop the cursor (.) next to the action item Language. **(Figure 4-18)** Set your language preference using the +/- soft keys.

- English
- French
- German
- Spanish
- Italian
- Japanese



Figure 4-18. Set Language Preferences Screen

Units

Use the UP/DOWN soft keys and stop the cursor (>) next to the action item Units. **(Figure 4-19)** Set your unit preference using the +/- soft keys.

- USA Standard
- Metric kPa
- Metric Bar



Figure 4-19. Set Unit Preferences Screen

4

Date and Time Setting

Use the UP/DOWN soft keys and stop the cursor (>) next to the action item Date or Time. **(Figure 4-20)** Press the select (O) soft key to initiate change to the month value. Use the (+/-) soft keys to increment or decrement the number. Use the DOWN arrow to reach the day value and year value and the +/- soft keys to make changes.

NOTE: A reboot is required for changes to the Date Setting to take effect.



Figure 4-20. Time Setting Screen

Regeneration Messages

Parked Ready Regen

Machine is in an operating condition such that the DPF can regenerate. (A complete listing of Fault Codes is shown on **Page 5-36.**)

Table 4-4. Parked Ready Regen

Action	Description
Cancel Regen	Communicates with the engine that Regen is not wanted or is unsafe to regenerate at this time.
Regen Mode Inhibit	Communicates with the engine that Regen is not wanted or is unsafe to regenerate at this time.
Request Regen	Communicates with the engine that Regen is safe to regenerate at this time.

Regen Screens and Messages

The operator may experience a Regen Caution message on the controller screen **(Figures 4-21 to 4-28)**. The message requires an active response by the operator, so it is important that the operator reads the entire message as it may display instructions.



Figure 4-21. Regen Caution Message Popup Screen Example

Some messages require using the UP/DOWN soft keys to maneuver through the entire message (**Figures 4-22 and 4-23**).



Figure 4-22. Regen Caution Message Popup Screen
Example Requiring Use of UP/DOWN Soft Keys



Figure 4-23. Parked Regeneration Instructions Screen

If the operator does not wish to complete a Parked Regeneration, click the **X** soft key. This action cancels Regen, removes the pop-up message, and takes the operator back to the Gauge Screen.

NOTE: The machine must be in park and neutral with a DPF level of 2 or higher to preform Parked Regeneration.

CAUTION EXHAUST TEMPERATURES WILL BE EXTREMELY HIGH. BE SURE EXHAUST WILL NOT COME IN CONTACT WITH ANY COMBUSTIBLE MATERIALS.

If you want to perform regen:

- Ensure the machine is in neutral and parking brake applied. The coolant temperature must be in operating range (typically 155° -160 F°). Set the engine to low idle.
- Once these conditions are met, a blue screen message will appear. (**Figures 4-24 to 4-26**).
- Using the Up/Down Arrow, scroll down through the entire message and press the Request Regen Button.

4



Figure 4-24. Parked Regeneration Blue Screen

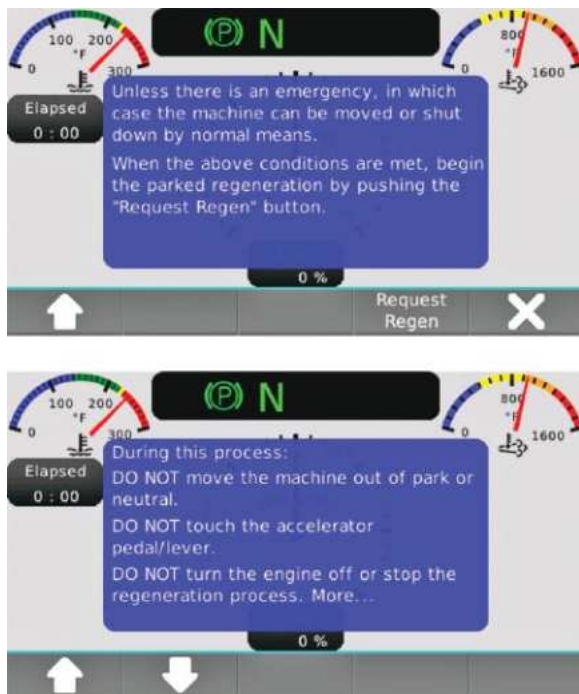


Figure 4-25. Parked Regeneration Message Screens

CAUTION DO NOT ATTEMPT TO OPERATE THE UNIT, CHANGE ENGINE RPM OR MOVE FROM PARK/NEUTRAL WHILE REGEN IS OCCURRING. This will abort the Regeneration process and require you to start the process over.

During the regeneration, the Engine Speed will increase and there may be a noticeable sound difference. The HEST Lamp will appear during the process.



Figure 4-26. Stop Regen Screen

CAUTION Continue to monitor surrounding areas during the process. If unsafe conditions develop, shut the unit off immediately.

4. Parked Regeneration is complete when the controller screen shows the following green popup message. (Figure 4-27) Click on the **X** soft key to remove the popup message. Once the Parked Regeneration process is complete the engine will automatically return to normal idle speed. The machine can return to normal usage.

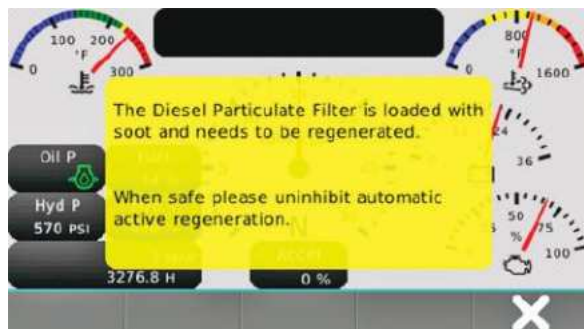


Figure 4-27. Parked Regeneration Green Popup Message Screen

Messages, Cautions, Warnings

Please pay attention to all messages (shown below) on the controller for the safety of personnel and to prevent engine and property damage if DPF regeneration is needed.



Regen Level 1





Regen Level 3




Regen Level 2

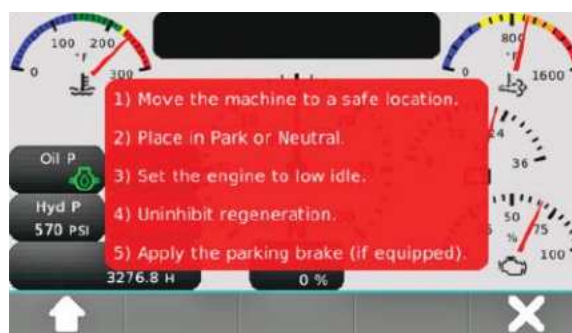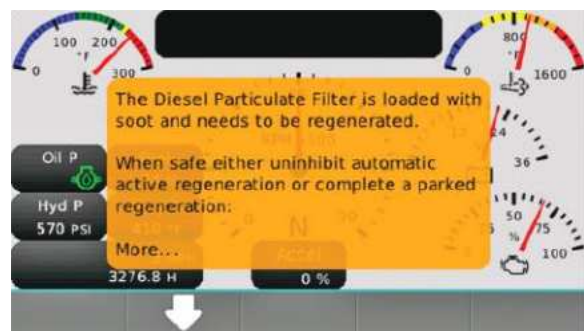

Regen Level 4

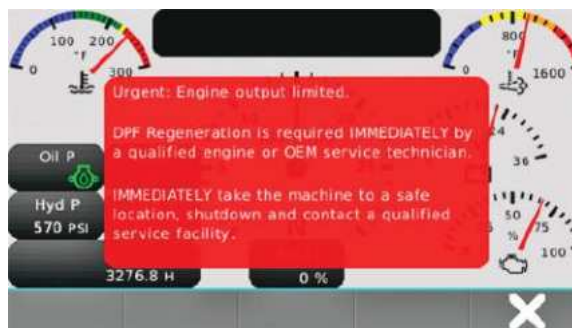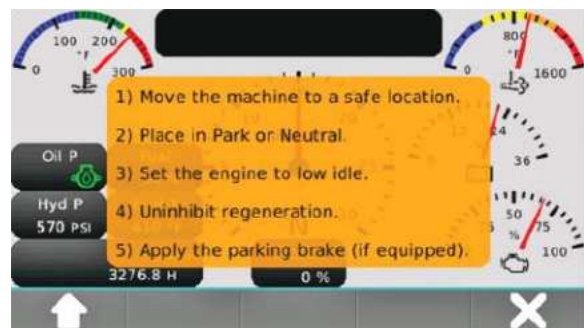

Regen Complete

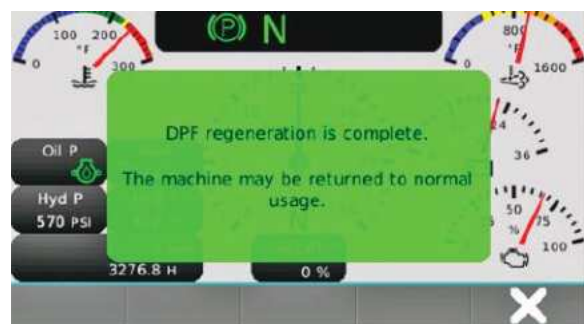

Regen Level 5

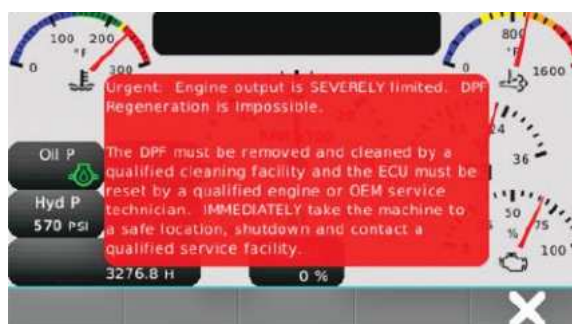


Figure 4-28. Controller Messages, Cautions and Warnings

DRIVING THE PAVER

The operator can operate the paver from either side of the operator platform. Multiple switches and dials allow the operators to control all paving functions. (Pages 3-6 and 3-7)

NOTE: The Emergency Stop button on the main operator console is used to shut down the engine and all paver functions in the event of an emergency.

DANGER DO NOT leave the operator station unattended while the paver is in gear or in motion. Operator must return joysticks to the neutral position and turn the RUN/STOP switch to the STOP position before leaving the operator platform.

Operator Control Station

The paver is typically operated from the left side of the operator platform, but it can also be operated from the right side for your convenience.

A steering and speed control box with dual joysticks are located on each side of the platform. (See Page 4-32 for optional steering wheel drive controls.)



Figure 4-29. Operator Control Station

The paver can only operate using one station at a time. The operator must activate the side being used and deactivate the other using the following procedure:

- Place both joysticks in the neutral position on the side being deactivated. (Figure 4-30)

- Move the RUN/STOP switch to the STOP position.
- Operator can then move to the other operator station to activate that side by simply flipping the RUN/STOP switch to the RUN position.
- Follow the start-up procedure. (Page 4-4)

NOTE: Material from the opposite side cannot be augered to the working side, however, the operator can leave both cut-offs shut and open the end gates on the screed for patching potholes and other small road repairs.

WARNING Ensure there are no people, obstacles or other equipment in the path of the paver before moving in either direction.

Steering and Speed Control

After activating the desired control station, you are ready to drive the paver using the dual joysticks for steering and speed control. (Figure 4-30) It is important to move the joysticks SLOWLY. The RUN/STOP switch applies parking brake when set to the STOP position.

DANGER Rapid counter-rotation in either direction can result in the operator being thrown from the machine and suffer personal injury or death. Counter-rotation occurs if one joystick is in the extreme forward position and the other is in the extreme rear position while the machine is in gear and moving. Make only slow adjustments to joysticks or steering wheel to turn machine.



Figure 4-30. Steering and Speed Control Box

1 - Dual Joysticks

2 - RUN/STOP Switch

NOTE: To slow the paver, move joysticks closer to the neutral position.

NOTE: To stop the paver, pull joysticks back to the neutral position.

- To drive the paver forward, lift up on the joysticks and push forward to reach the desired speed.
- To move in reverse, lift up on the joysticks and move backwards to reach desired speed.
- Return joysticks to the neutral position to stop paver.
- To steer the unit to the left, SLOWLY push the right joystick farther forward than the left joystick. The farther the joystick is pushed, the more the paver turns. Slow and easy adjustments are required for safe operation.
- To steer the unit to the right, SLOWLY push the left joystick farther forward than the right joystick. The farther the joystick is pushed, the more the paver turns. Slow and easy adjustments are required for safe operation.

Stopping the Engine

1. Throttle back to idle using settings on the digital display screen.
2. Turn ignition key on instrument panel counterclockwise to the OFF position and remove key.

NOTE: If the engine does not shut down when key is turned to OFF, press the E-Stop button on the control panel to terminate power.

NOTICE Before leaving the operator platform, the operator must return joysticks to the neutral position and switch the Run/Stop (on the Steering and Speed Control Box) to the STOP position.

PAVER OPERATION

Spray Down

Always spray down the LeeBoy Model 8510D Conveyor Paver before and after paving. Spray clean with solvent or release agent on any part of the paver that comes into contact with asphalt to prevent buildup that will damage the machine over time.

There is a spray down system on both sides of the Leeboy 8510D paver for your convenience. The wand is conveniently located on each side of the operator's station. **(Figure 4-31)** The hose reel is located on the side of the paver.

1. Extend hose from the reel.
2. Squeeze the wand handle and spray area. Release the wand handle when finished.
3. Rewind hose back onto the reel.

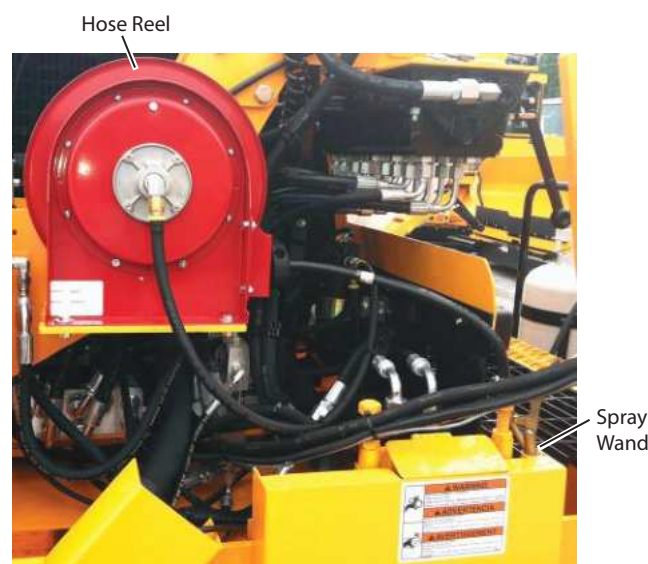


Figure 4-31. Spray Down Wand

WARNING Never spray cleaning solvent or release agent near the screed heating element or near open flame. These agents are highly flammable and can ignite, causing serious personal injury.

NOTICE When using, consider the environment and DO NOT allow cleaning solvent to run onto the ground.

Heating the Screed

Heating the screed helps prevent hot mix from sticking to the cold screed plate and produces a smooth, tight mat surface. This should be performed before paving and if the paver is idle long enough for the screed to cool between loads.

Allow the screed (and screed extension) to heat 15 minutes before beginning to pave.

NOTE: Lower the screed two inches off the ground while heating to prevent cold air and wind from affecting the heating process.

NOTE: You can set the screed directly onto a fresh mat of hot asphalt while running the heating system, allowing the heat of the asphalt to help heat the screed plate.

NOTICE Overheating the screed can warp the screed plate and possibly cause damage. If screed extensions lock, allow the machine to cool before attempting to extend or retract. Replace a warped screed plate immediately.

The LeeBoy Model 8510D Conveyor Paver is equipped with two propane burners on the main screed and one burner on each screed extension. An electric heat option is also available. (Page 4-21)

Propane Burner Ignition

IT IS IMPORTANT TO OPEN PROPANE VALVES IN THE ORDER SHOWN BELOW. (Figures 4-32 and 4-34)

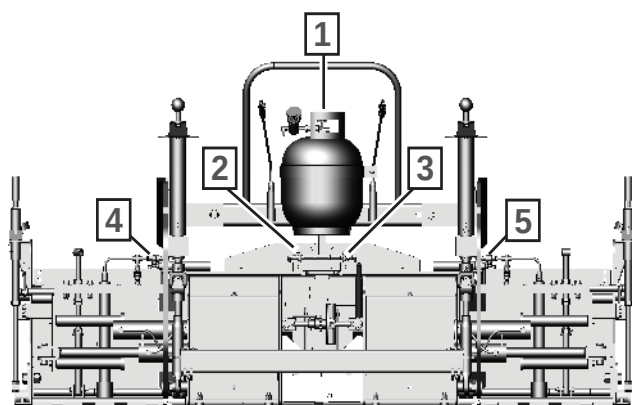


Figure 4-32. Propane Valve Order

WARNING Never open a valve to a burner unless flame is present. A buildup of unburned gas could result in a gas explosion.

WARNING Propane gas used to heat the screed is volatile and combustible. Use extreme care to prevent burns or other injury.

To light the burners:

1. Ensure ALL propane heat valves are closed by turning valves clockwise (propane tank, main burner valves, main ignitor valve, extension ignitor valves). (Figures 4-32 and 4-34)
2. Turn the propane tank Open/Close valve counterclockwise to open the propane gas flow. (Figure 4-33)



Figure 4-33. Propane Tank With Regulator

- 1 - Pressure Regulator Valve
- 2 - Pressure Regulator Gauge
- 3 - Open/Close Valve

3. Remove the main ignitor wand from its cradle and turn its valve counterclockwise to the OPEN position, then light the ignitor end using a torch striker. (Figure 4-34)

DANGER NEVER use a match or other source of flame to light the ignitor for the burner.

4. Holding the lit ignitor wand in one hand beside the burner you are going to light, turn on the main burner valve and light the that burner just below the valve, then repeat with the other side. (Figure 4-34)

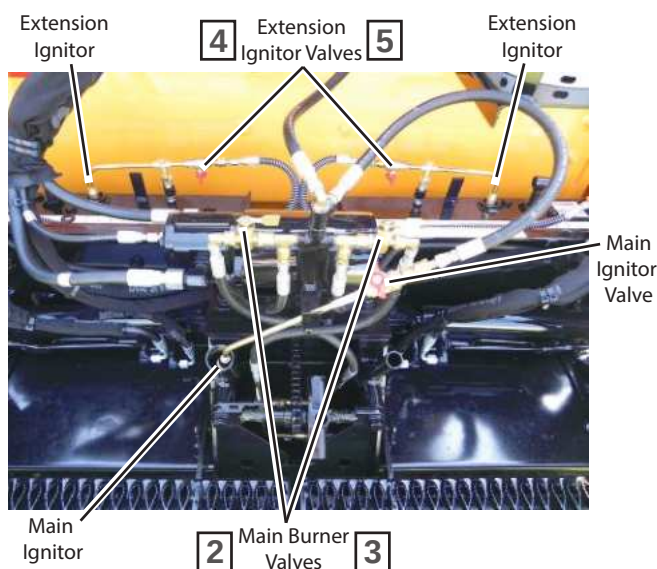


Figure 4-34. Screenshot Burner Valves

When using the screed extension(s), light the screed extension(s) after the main screed burner has been lit following these additional steps (**Figure 4-35**):

5. Lift up on the burner coupler to release ignitor.
6. Lift ignitor wand, turn valve counterclockwise to the OPEN position and light the ignitor end with the torch striker.
7. Replace the lit ignitor wand into the burner cradle.
8. Push down on burner coupler back into place.

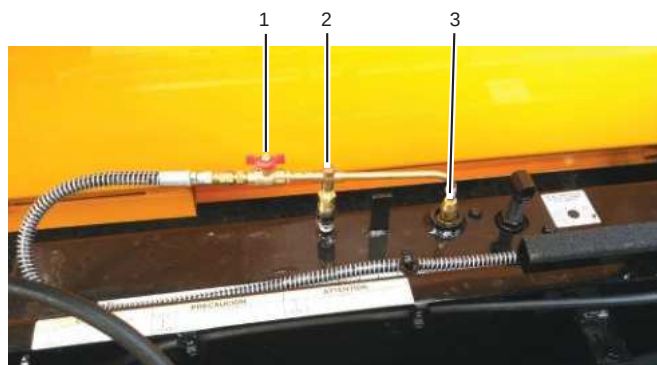


Figure 4-35. Extension Burner

1 - Extension Ignitor Wand Valve

2 - Burner Coupler

3 - Burner

NOTE: Adjust the pressure regulator valve IN or OUT until the propane pressure regulator gauge reads 15 pounds.

NOTE: It may be necessary to maintain low heat on the screed if paving on a cool, windy day. Reduce pressure on the propane pressure regulator gauge to two pounds (.14 bar) in these conditions. **DO NOT** attempt to regulate the burner with the burner valve.

After the main screed (and screed extension) has heated for 15 minutes:

1. Turn the propane tank valve clockwise to the CLOSE position to allow the propane system to burn off all the gas. (**Figure 4-33**)
2. When the flames extinguish, TURN OFF ALL burner valves clockwise to the OFF position. (**Figures 4-32 through 4-34**)

Electric Screed Heat (Option)

The LeeBoy 8510D Conveyor Paver offers an optional Electric Heat system to heat the screed, including the screed extensions, in lieu of the propane burner system. A hydraulically-driven generator powers the electric heat control box mounted in the center on the rear side of the machine. This control box is where you will select the heating function before you begin to pave. (**Figure 4-36**)

Once the heating function has been enabled, the distribution/control box will apply electrical power to the heating elements and the heating cycle will begin. The heating cycle is timed to optimize the heat generated at the screed plates.

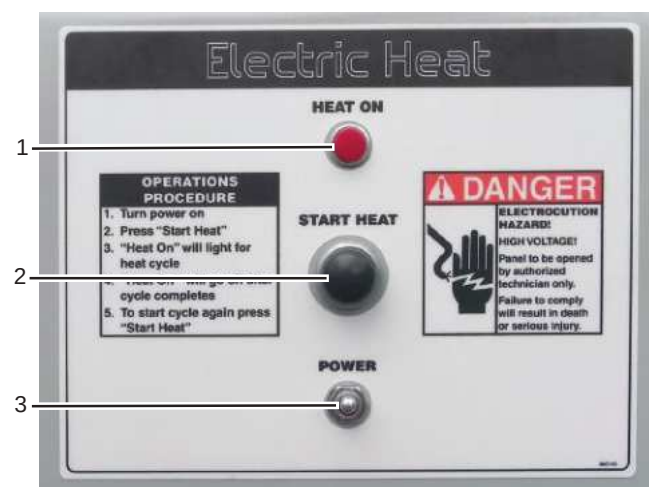


Figure 4-36. Electric Heat Control Box

1 - Heat On Light

2 - Start Button

3 - Power Switch

To operate the screed heating system:

1. Start the paver and idle until the engine reaches normal operating temperature.
2. Raise the screed plate one or two inches off the ground.
3. Turn the electric heat control box power ON by flipping the power switch up. **(Figure 4-36)**
4. Press the Start Heat button.
5. The HEAT ON indicator light will illuminate and stay on as long as the element is heating the screed plates (approximately 20 minutes).
6. If the heat cycle has completed but the screed plates still require heating, restart the cycle by repeating Step 4.

Once the heating function has been enabled, the distribution/control box will apply electrical power to the heating elements and the heating cycle will begin. The heating cycle is timed to optimize the heat generated at the screed plates.

NOTE: You can set the screed directly onto a fresh mat of hot asphalt while running the heating system, allowing the heat of the asphalt to help heat the screed plate.

Hopper Wings

The hopper wings are hydraulically opened so the hopper can be filled with paving material. **(Figure 4-37)** Conveyor paddles in the bottom move the asphalt back to the auger, where the mix flows through the cut-off gates to the screed.

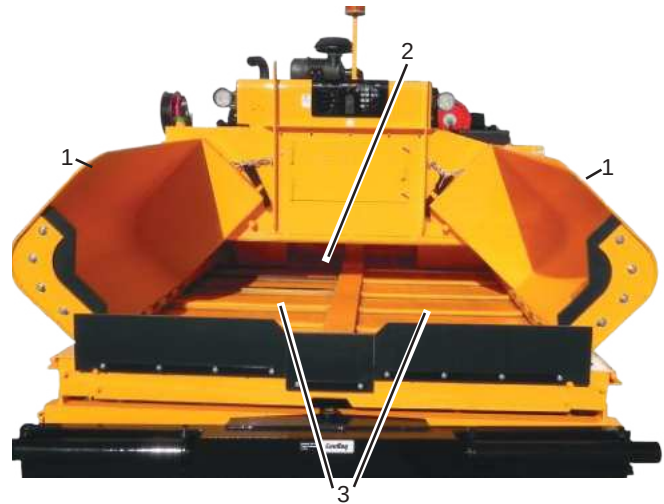


Figure 4-37. Hopper

1 - Hopper Wings

2 - Auger

3 - Conveyors

To operate the hopper wings:

1. Push the hopper wings lever to OUT on the manifold to fold out hopper wings. **(Pages 3-6 and 3-7)**
2. Be sure the hopper wings are completely extended before receiving paving material from the truck.
3. Push the hopper wings lever to IN to close the hopper wings.

WARNING DO NOT fold in the hopper wings when the hopper is full of asphalt. DO NOT fold in the hopper until the material truck has moved completely away from the paver.

Conveyors

The LeeBoy Model 8510D Conveyor Paver is equipped with two automatic conveyors that deliver asphalt evenly to produce a smooth asphalt mat. **(Figure 4-38)**

The conveyor is a very important part of the paver that moves material from the hopper back to the auger and out of the cut-off gates to the screed. Pay close attention to integrating its operation into the total operation of the paver.

When operating the conveyor:

- Spray down the conveyor drive chains with cleaning solvent or release agent several times during the work day for optimum performance.
- Select AUTO or MANUAL mode for the left or right (or both) conveyor switch(es) on the control panel. **(Pages 3-6 and 3-7)**
- If the conveyors are running while the cut-off gates are closed, there will be spillage, which is normal. To help prevent this spillage, work conveyors manually when loading hopper and not paving.
- Irregular movement of the conveyor indicates that the conveyor chains need adjustment.
- **NOTE: Check conveyor chain adjustment every 100 hours. (Section 5, Pages 5-8)**

CAUTION Never leave the paver unattended while the conveyor is operating. Asphalt in the conveyors can fill tracks and cause damage to the machine.

NOTICE To prevent flight chains from sticking inside the conveyor pans, lubricate them daily for maximum operational efficiency.

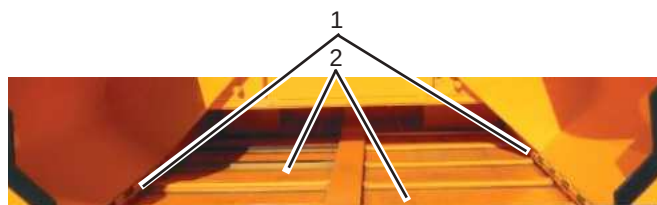


Figure 4-38. Conveyor Chains and Paddles

1 - Conveyor Chains

2 - Conveyor Paddles

Hydraulic Cut-Off Gates

The cut-off gates are another important function of the paver. The cut-off gates are used primarily to control the flow of asphalt to the screed and hydraulic screed extensions. Cut-off gates enable varying paving widths as narrow as one inch (30.5 cm) and as wide as 15 feet (4.6 m), depending upon the screed option.

Cut-offs can be used to limit material flow when making narrow passes at the beginning and ending of each pass or pull. Proper use of the cut-off gates minimizes clean-up at the end of pulls. **(Figure 4-39)**

- The right and left cut-off levers on the hydraulic controls open and close the cut-off gates. **(Pages 3-10 and 3-11)**
- Holding the lever in the OPEN positions increases asphalt flow to the screed. Holding the lever in the CLOSED position decreases asphalt flow to the screed.

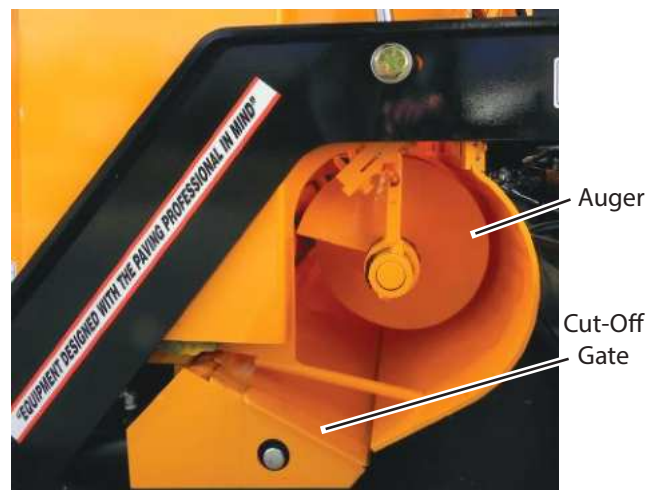


Figure 4-39. Cut-Off Gate

CAUTION NEVER backup with the cut-off gates open. The cut-off gates are designed to break away from cylinders when hitting a manhole or other object when moving forward, but not in reverse.

Electric Flight Screw

The electric flight screw is an added convenience to the operator. **(Figure 4-40)** A screed height gauge is located on both sides of the paver to provide the operator with a quick reference to the location of the electric screw.



Figure 4-40. Electric Flight Screw

1. Before paving, center the electric flight screws according to the screed elevation gauge on each side of the paver. Raise or lower until rod end of cable is flush with "0" on decal.
2. While paving, refer to both gauges and make minor adjustment to the screed by using the electric flight screw.

Set the Screed, Flight Screw and Endgate

Use the screed extensions when paving widths exceeding eight (8) feet. The screed extensions should be heated before making any adjustments. Use the wrench provided to make adjustments. When adjusted correctly, pressure on the rear edge of the extended screed is the same as the rear edge of the main screed, resulting in a smooth mat the length of the screed.

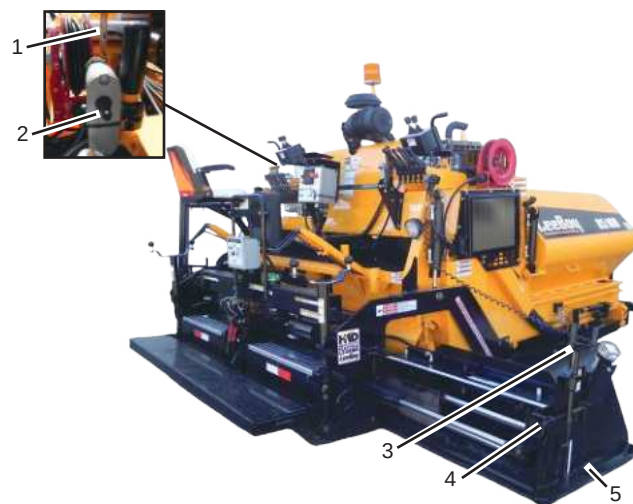


Figure 4-41. Screed, Flight Screw and Endgate

- 1 - Elevation Gauge**
- 2 - Electric Flight Screw**
- 3 - Endgate Depth Screw**
- 4 - Endgate Tilt Screw**
- 5 - Endgate**

You can extend or retract the screed extension using the extension levers on the hydraulic controls. **(Pages 3-10 and 3-11)** Adjust the screed extension while paving using the following procedures:

1. Move paver to the starting position for paving.
2. Extend the screed to the desired width.
3. To set the depth, you can place a small starter block under the screed while you make adjustments. **(Figure 4-42)**

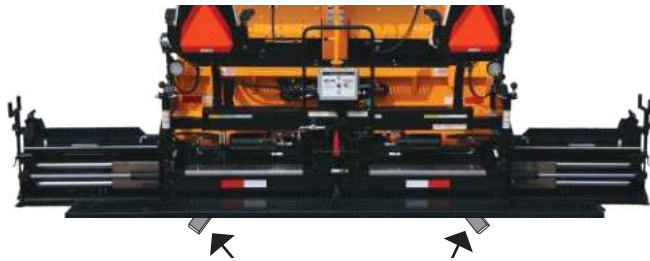


Figure 4-42. Starter Blocks Location

4. Level the screed using the electric flight screw (Figures 4-40 and 4-41):

- Refer to the elevation gauge (one on each side of the paver for your convenience). Raise or lower until the rod end of the cable is flush with "0" on the gauge.

NOTE: Both joysticks must be in the forward position to operate the electric flight screw on the left side, but will work at any time in the MANUAL position.

- While paving, refer to both gauges and make minor adjustments if needed.
5. On the first pass, turn the endgate depth screw to lower the endgate until it is about 1/4-inch (6.35 mm) below the screed. (Figure 4-41)
 6. Turn the tilt screw so the front of the endgate tilts down slightly when the screed is lifted. This will allow the endgate to set itself to the grade. (Figure 4-43)

NOTE: Never allow the endgate to carry the weight of the screed to prevent uneven compaction.

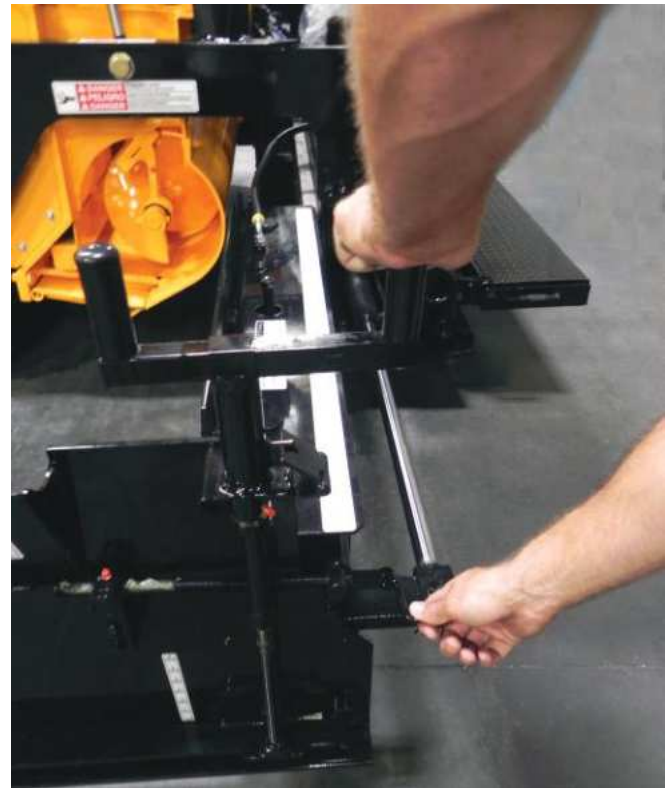


Figure 4-43. Endgate Tilt Screw Adjustment

7. If the endgate digs into the asphalt at the front, adjust the tilt screw until the endgate tilts back more.
8. When making a hot joint, the endgate must be set to where it fits flush with bottom of screed.
9. On the first pass, leave approximately six to eight inches (15 - 20 cm) of unrolled asphalt where the joint will be made.
10. When making a joint, the endgate must be set to where it fits flush with bottom of screed.

NOTE: Keep runners clean. When making a joint, spray solvent on the runners.

11. If the joint looks too high or too low, adjust the flight screw on the screed one turn at a time and allow four to five feet (1.2 - 1.4 m) of travel to correct itself.

NOTE: Too much adjustment up or down may cause uneven pavement.

12. If making a cold joint, set the endgate down about 1/4 inch (6.35 mm) for a nice, even edge.

Sonic Auger

The sonic auger controls the amount of material flowing to the endgates, gauging the amount of paving material in the extensions. **(Figure 4-44)**

A sonic auger sensor connects from the paver to the screed. It detects the material height and controls the auger height by automatically turning the auger on and off.

The sonic auger sensors are most often used when paving widths of nine to 15 feet (2.7 - 4.6 meters).

NOTE: The augers are not needed when paving under eight-feet wide (2.4 m).



Figure 4-44. Sonic Auger Sensor Option

To operate the sonic auger sensor:

1. Pull the auger lever down. **(Pages 3-10 and 3-11)**
2. Set the left and right auger switches on the left side of the control panel to AUTO. **(Pages 3-6 to 3-9)**
3. Adjust material height at the endgate using the auger dial beside the steering control box. **(Figure 4-45)**
 - The right and left auger dials controls material height. Turning the dial clockwise increases material height while turning counterclockwise decreases material height.
 - When the material height moves into the sonic range, the auger will automatically turn off. It will turn back on when the material level drops.

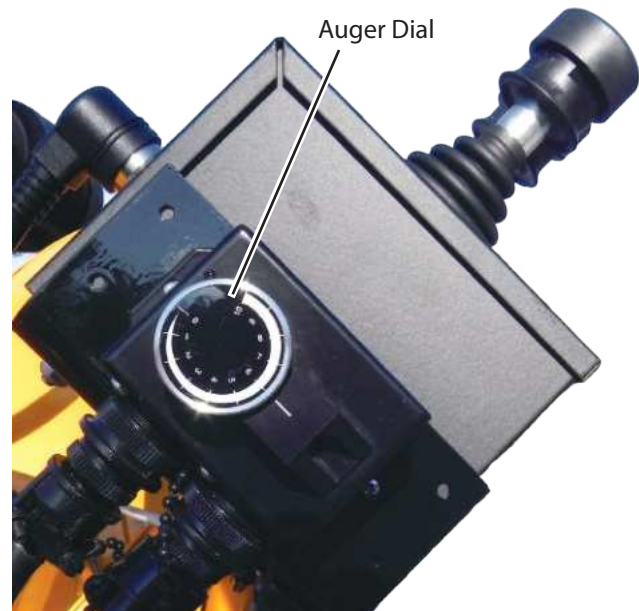


Figure 4-45. Auger Dials

STARTING TO PAVE

The LeeBoy 8510D Conveyor Paver provides superior paving for driveways, small to large parking lots, and secondary roads. It has a production rate of approximately 250 tons per hour.



This paver is capable of placing a mat thickness of six inches (20 centimeters) for:

- Bituminous base.
- Binder or surface course.
- Lime or Portland cement-stabilized sub-base.
- Graded aggregate materials.

Operators should be trained to operate the various machine components along with proper paving techniques before operating the machine.

Before starting to pave, keep these items in mind:

- Plan the project so you pave the most narrow passes first (the width of the paver), leaving the widest passes until last.
- Always pave in low range.
- It is the operator's job to guide the material truck back to the hopper and signal the driver when to stop dumping the asphalt into the hopper.
- Use a reference guide such as a curb, gutter, adjacent mat or string line.
- It is very important that the first pass be straight as it will serve as your guideline for the following passes.

- Extend the lower guide bar gauge to further assist you in paving a straight line from the operator's station. **(Page 4-46)**



Figure 4-46. Lower Guide Bar Gauge

CAUTION Avoid low limbs, power lines, and other objects that can endanger crew or paver.

Components operate in both automatic and manual mode.

The paver can operate using one side only. Material from the opposite side cannot be augered to the working side. It is possible to leave both cut-off gates shut and open the endgates on the screed for paving potholes and patching.

Basic Paving

1. Follow the start-up procedure. **(Page 4-4)**
2. Position paver at the starting point for the mat.
3. Adjust screed as needed. **(Page 4-24)**
4. Open cut-off gates under auger. **(Page 4-23)**
5. Open hopper wings. **(Page 4-22)**

NOTE: Allow only a partial load of asphalt to enter the hopper when first starting to pave.

6. Turn the left and right conveyor sonic paddle switches to the AUTO position.

NOTE: When in the AUTO mode, the conveyors will operate at the selected speed but will turn on and off when using the sonic auger.

7. Turn the left and right auger switches AUTO, using the dials to control the material height at the endgate.
8. When the material starts moving into the sonic range, the auger speed will slow proportionately and turn off, then turn back on when the material level drops.

NOTE: The material height must be set to the highest point when the endgates are closed. When the endgates are open, the material height will lower to prevent material from pushing in front of the endgates.

9. When the material begins to discharge from under the screed, set the screed lift lever to the FLOAT position.
10. Begin paving, moving slowly at first to adjust the screed if needed.
11. Make a paving pass until the asphalt level in the hopper is low.

CAUTION Never back up with cut-off gates open.

NOTE: To prevent excessive handwork, set the left and right conveyor switches to the OFF position and set both cut-off levers to the CLOSE position about three feet from the end of the pull to prevent excessive handwork.

12. Return paver back to starting position to begin the next pull.
13. Position and set the screed endgate on the joint side back to "0" feet, or flush with bottom of the screed.
14. Repeat these steps as you continue to pave.

Setting the Crown

The screed can also be set to control the pavement slope, or crown. A pavement crown is the elevation of the middle in relation to the edges, and insures proper drainage of the pavement.

To adjust the crown:

1. Loosen the lock-down bolts in slotted bars (on the right side of paver) and the center plate before adjusting crown and valley mechanism. **(Figure 4-47)**

NOTE: The locking bolt on the optional 815HD screed is located beside the crown adjustment mechanism. **(Figure 4-47)**



Figure 4-47. Loosen Lock-Down Bolts

2. Remove the crown handle and insert into adjuster. **(Figure 4-48)**
3. For increased positive crown push down on adjuster.
4. For increased negative crown pull up on adjuster.
5. Use the gauge at the center of the screed above the standing platform. If the needle is above the zero, you will have positive crown. If the needle is below the zero, you will have negative crown.
6. To get exact crown or valley, measure the distance between a flat level surface to the center bottom portion of screed. Make adjustments with crown and valley control.

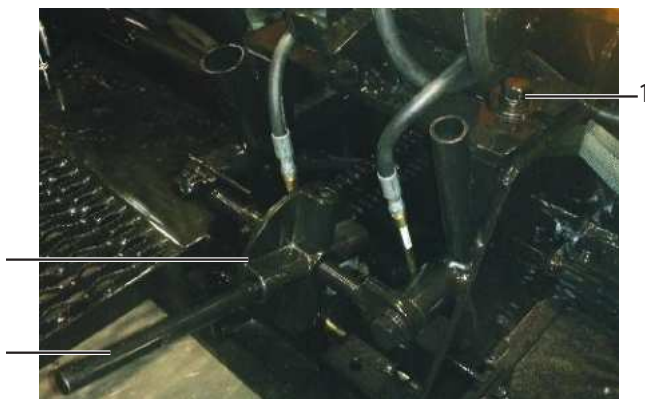


Figure 4-48. Crown Adjustment

- 1 - Adjuster
- 2 - Crown Handle
- 3 - Locking Bolt (815HD Screed)

NOTE: Maximum crown is two inches.

- Positive crown is when the middle of the mat is raised to permit water to drain to each side.
- Negative crown is the lower in the center of the screed plate, often used in an alley where drainage is necessary.

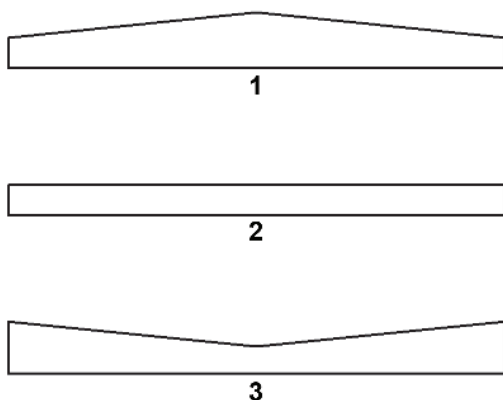


Figure 4-49. Crown Settings

- 1 - Positive (+)
- 2 - Zero (0)
- 3 - Negative (-)

NOTE: Crown may be placed in the leading edge and/or the trailing edge of the screed plate. Crown in the leading edge aids material flow under the screed plate only. Trailing edge crown puts a crown in the mat.

Example: The trailing edge crown is 0 and the leading edge crown is 1/8 inch. There will not be any crown in the mat, but the material flow under the screed plate will be improved.

Mat Texture Adjustment

The screed extension can be adjusted for a smoother or coarser mat texture by using the Angle of Attack (AOA) adjustment screw. (Figure 4-50)

There are three adjusters in each extension. The two adjusters at each end of the screed extensions are preset by the dealer and should not need adjustment. You can adjust the mat texture using the AOA adjustment screw in the center. To make the AOA adjustment:

1. Spray down the screed.
2. Turn on the screed heat.
3. Turn the screw in the direction for desired result:
 - Turning the AOA adjuster counterclockwise will increase the pressure on the back of the extension, which gives a smoother, slicker finish.
 - Turning the adjusters clockwise will decrease the pressure on the back of the extension, resulting in a coarser finish.

NOTE: Too much pressure on the back of the screed extension will take the weight off the screed wearplate and cause poor material compacting, resulting in a poor finish.

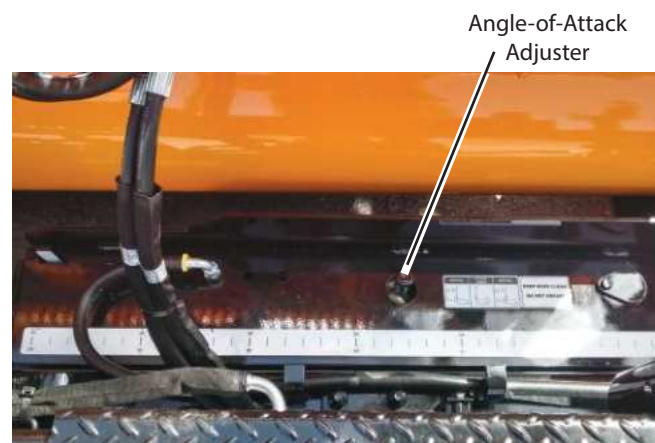


Figure 4-50. AOA Adjustment

UNLOADING AND LOADING

Ensure the transport trailer has the capacity to carry the paver's weight. Park the trailer in a clear, level area when loading or unloading the machine.

CAUTION ALWAYS position an assistant to be a ground guide when loading and unloading the paver.

CAUTION Work slowly and carefully to avoid accidents. Keep the loading area clear.

Unloading

1. Remove tie-down equipment.
2. Start and warm up engine.
3. Set throttle at half the operating RPMs, but enough to ensure the hydraulic pump is providing sufficient flow to operate all functions properly.
4. Set steering control lever so paver moves very slowly.
5. BEFORE moving the machine, ensure:
 - The screed position is UP.
 - Auger extensions are removed.
 - The extendible screed is IN.
 - The cut-off gates below the augers are CLOSED.
6. Move paver forward down the ramp as shown on **Figure 4-51**.

NOTICE Never move the paver in reverse while the cut-off gates are open.

CAUTION DO NOT allow the screed to strike the ramp as this can damage bearings on the thickness control screws or welds on the leveling arms. A longer ramp to reduce the loading angle may be needed.

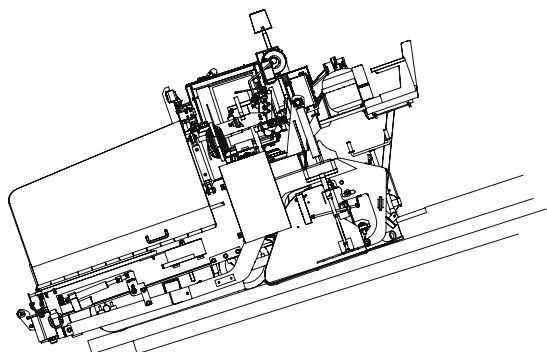


Figure 4-51. Correct Unloading Position

Loading

CAUTION To prevent damage to the undercarriage and throughout the paver, reduce traveling speed before the paver tracks come into contact with loading ramps or any abrupt change in the surface. The track drive sprocket or other components can be damaged by excessive shock.

CAUTION The paver must be loaded screed-end first to prevent damage.

1. Move paver to base of ramp. Line up tracks with the ramp.
2. BEFORE moving the machine, ensure:
 - The screed position is UP.
 - Auger extensions are removed.
 - The extendible screed is IN.
 - The cut-off gates below the augers are CLOSED.
3. Load the paver screed-end first. Set throttle at half the operating RPMs.
4. Set steering control lever so paver moves very slowly onto the ramp.
5. Using the steering control joysticks, SLOWLY guide paver up the ramp.
6. Position paver in center of trailer.
7. Lower the screed.
8. Shut down the engine.
9. Secure paver to transport using the following tie-down procedures.

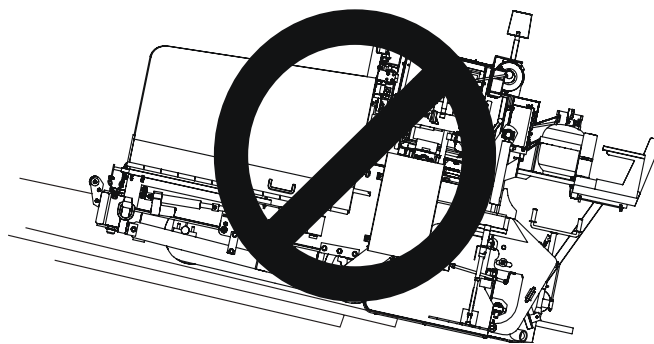


Figure 4-52. Incorrect Loading Position

Tie-Down Procedure

1. Position paver in center of the trailer. (Figure 4-53)

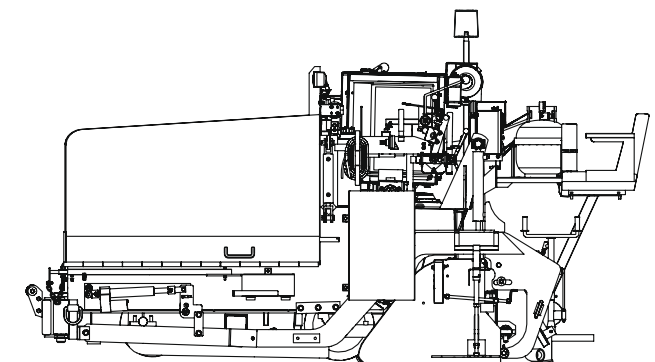


Figure 4-53. Paver on Transport

2. Attach tie-down chains to the front weight block and the D-Rings in front of the torque hubs. (Figure 4-54).
3. Place chocks at wheels or tracks.
4. Ensure that all chains are tightly secured before transporting the paver.

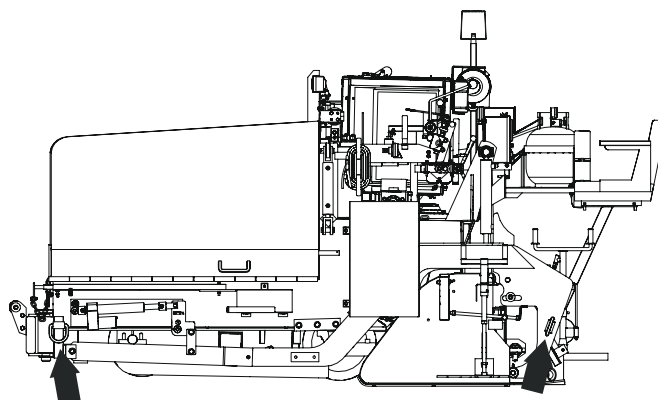


Figure 4-54. Tie-Down D-Ring Locations

OPTIONAL COMPONENTS

Auger Extensions Option

The auger extensions should be attached to the main auger to increase the flow of asphalt to the endgates and screed extensions when paving at widths wider than 15 feet (4.6 m). This makes it possible to lay asphalt at a higher rate. Auger extension options are 12-inch extensions for each side or 24-inch extensions with shields for each side.

NOTICE

Left and right auger extension covers or shields must be installed on the correct side of the machine.

To attach the auger extensions proceed as follows:

1. Identify the right and left auger extensions by observing the left or right on the end of the auger extension shaft.
2. After identifying the right and left auger extensions, extend the screed extension fully as follows:
 - Set the left and right auger switches to the OFF position.
 - Set the left and right extension levers to the OUT position and extend fully.
3. Shut off engine.



WARNING

Serious injury can result when attaching extensions if the engine is running.

4. Remove bolt, nut cap on end of main auger.
5. Attach the correct side auger extension to the main auger with hardware just removed.
6. Secure end of extension auger to main auger.
7. Install guard. Make sure extension auger is running flat.
8. Repeat this procedure for opposite side.

Truck Hitch Attachment

The truck hitch is an optional attachment that prevents excessive and uneven braking from the paving material truck. **(Figure 4-55)**

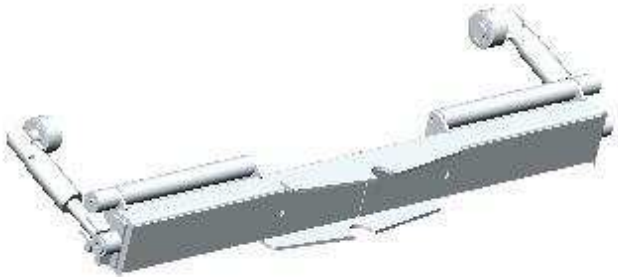


Figure 4-55. Truck Hitch Attachment Option

To engage the hitch with the rear wheels of the asphalt truck:

1. Extend the arm extensions of the truck hitch by pushing and holding the Truck Hitch lever in the OUT position.
2. The paving material truck then SLOWLY backs up to the paver until the hitch makes contact with the rear tires of the truck.
3. Retract the arm extension by pushing and holding the Truck Hitch lever in the IN position until both guide rollers are fully locked onto the truck wheel rims.
4. It may be necessary to adjust the roller guides to the inside of the wheel rims.

High Deck Option

The LeBoy 8510D paver offers a high-deck configuration option. The high-deck configuration requires a two-man operational crew. Paving functions are operated from either side with lower controls to accommodate ease of operation.

Umbrella Option

The umbrella kit option provides shelter from sun and other weather conditions for the operator. The umbrella kit assembly includes the mounting bracket and umbrella frame assembly that can be mounted on either side of the operator platform.

Roll-Up Curb Attachments

Roll-up curb attachments are also available options for one or both sides of the paver. Roll-up curb attachments are available in length of 12 or 24 inches.

Rubber or Steel Track Options

The LeeBoy 8510D paver is equipped with poly-pad tracks. However, steel or rubber track options are available in lieu of the poly-pad tracks.

Steering Wheel

A steering wheel option is also available in lieu of joystick steering and direction/speed controls. **(Figure 4-56)** The Run/Stop switch on the steering panel controls stopping the machine and activating or deactivating the operator control stations.

NOTE: If equipped with the optional steering wheel control box: If the steering function is not being used, the Run/Stop switch must be in the OFF position.



Figure 4-56. Steering Wheel Option

- 1 - Forward/Reverse
- 2 - Steering Wheel
- 3 - Run/Stop Switch

Electric Screed Options

The Legend Propane Screed is standard on the 8510D paver, complete with propane burners on the main screed and one burner on each screed extension.

Electric screed options are also available and include an electric heat control box powered by a hydraulically-driven generator. The Electric Legend Plus Screed features electrically-heated main and screed extensions and dual vibrators, and is equipped with replaceable wear shoes.

The Legend 815HD Electric Screed option offers numerous features for paving professionals. The main screed and screed extensions are electrically heated by six (6) 1000-watt blade elements (four on the main screed and one on each screed extension) and is equipped with replaceable, heavy-duty wear plates. Dual vibrators, heavy-duty flight screws, heavy-duty crown and valley mechanism, and a 3-Adjuster screed system featuring AOA and vertical height adjustment add even more screed control. Other options available for this screed include heated endgates.

Topcon® Sonic and Dual Grade



Topcon® sonic grade control, dual grade control and slope options offer paving professionals screed control for improving smoothness along with assuring accurate slope and material thickness. These controllers send signals to the screed to precisely maintain mat thickness and slope as you pave.

Sonic trackers continuously measure the elevation over the surface, automatically averaging and adjusting the tow point cylinder on the paver. The LCD digital display is easy to see regardless of light conditions.

Choose from one of three options: Sonic Grade Control (one side); Dual Grade Control or Dual Grade Control and Slope (both Topcon P-32 systems). The dual grade controls automatically maintain a set depth on both ends of the screed. The Dual Grade and Slope controls maintain a set depth on one end of the screed and as it slope to the other end.

Most states require this technology for state road paving jobs to ensure smoothness and continuity on roadways.

815HD (Heavy Duty) Electric Screed

The optional 815 HD screed is sturdier, heavier and easier to rebuild. The sonic auger mount has adjustable positions. The 815 HD screed offers two options within this option for even more robust screed operation: Heated Endgates and Heated Edge Endgates.

Heated Endgates

The heated endgate also heats the edge of the endgate, producing a smoother joint as you pave. **(Figure 4-57)** (When the heated endgate is turned on, the leading heating element turns off on the side you're heating.)

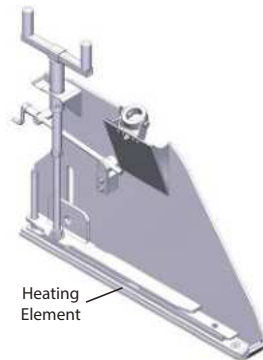


Figure 4-57. Heated Endgate

To operate the heated endgates:

1. Start the paver and idle until the engine reaches normal operating temperature.
2. Raise the screed plate one or two inches off the ground.
3. Turn the electric heat control box power ON by turning the power switch up. **(Figure 4-58)**
4. Press the Start Heat button. The HEAT ON indicator light will illuminate and stay on as long as the element is heating (approximately 20 minutes).
5. Turn the left or right endgate switch up to the ON position.
6. You can restart the cycle by repeating Step 4 if needed.



Figure 4-58. Electric Heat Controls with Endgate Switches

- 1 - Heat On Indicator Light
- 2 - Left Endgate Heat Switch
- 3 - Start Heat Button
- 4 - Power Switch
- 5 - Right Endgate Heat Switch



Section 5

MAINTENANCE

	Page
Maintenance	5-1
Maintenance Schedule.	5-3
Routine Maintenance.	5-5
Preparing Paver for Maintenance	5-5
Every 10 Hours or Daily Routine Maintenance	5-5
Every 50 Hours or Weekly Routine Maintenance	5-5
Every 100 Hour or Monthly Maintenance	5-6
Every 250 Hours or Quarterly Routine Maintenance	5-6
Every 500 Hours or Semi-Annual Routine Maintenance	5-6
Every 1000 Hours or Annual Routine Maintenance	5-6
Torque Hub Lubrication	5-6
Lubrication Points	5-7
Maintenance Adjustments	5-8
Conveyor Flight Chain	5-8
Conveyor Drive Chain	5-8
Auger Drive Chain Adjustment	5-9
Screed Extension Top Guide Adjustment.	5-9
Torque Hub Hydraulic Motor Gear Adjustments	5-10
Conveyor Switch Adjustment.	5-10
Track Tension Pressure Relief.	5-11
Engine Maintenance	5-12
Check Engine Lubrication Oil	5-12
Change Engine Oil and Filter.	5-12
Change Air Filter	5-13
Fuel System	5-13
Fuel Tank	5-13
Change Fuel Filter	5-14
Water Separator.	5-15

Hydraulic System	5-15
Check Hydraulic Oil	5-15
Change Hydraulic Oil and Filter	5-16
Electrical System.	5-17
Battery Servicing.	5-17
Alternator	5-18
Screed Electric Heat (Option)	5-18
Screed Electric Heat Elements.	5-18
Element Resistance Testing	5-19
Heating Elements	5-20
Generator Voltage Testing	5-20
Generator Capacitor.	5-21
Replacement Procedures	5-22
Front Idler	5-22
Track Tension Cylinder	5-22
Track Rollers	5-23
Track Sprocket (Steel or Poly)	5-23
Rubber Track (Option)	5-23
Rear Conveyor Shaft, Bearings and Sprockets	5-24
Conveyor Drive Motors.	5-25
Auger and Inner Bearings	5-25
Auger Motors	5-26
Main Screed Wear Plate	5-27
Screed Extension Wear Plate	5-28
Torque Hub	5-29
Two-Speed Hydraulic Motors	5-30
Conveyor Switch Replacement.	5-31
Weldment	5-31
Troubleshooting	5-32
Test Ports	5-32
Plus One.	5-32
PV480 Digital Display	5-33
Troubleshooting Chart.	5-35
PV480 Diagnostic Trouble Code (DTC) Chart.	5-38

MAINTENANCE SCHEDULE

Before performing any maintenance procedures on the LeeBoy Model 8510D Conveyor Paver, review the safety information in **Section 1**.



WARNING Always use the appropriate and correct-sized tools for the task at hand to prevent damage or possible injury.



WARNING Always wear heat-resistant gloves when handling hot components.

Following the maintenance schedules and procedures will maintain the paver in top operating condition and provide years of trouble-free operation. Refer to the

Engine Operator's Manual accompanying your paver for more detailed engine service information.

When performing any routine maintenance, always include the previous routine maintenance hours in the higher hourly schedule.

NOTE: For convenience there is an oil drain hose located inside of the right-hand door on the paver.



NOTICE Changing oil and cleaning the paver should only be done in a designated area where the oil and chemicals can be contained. These by-products should be discarded in accordance with environmental regulations.

Table 5-1. Periodic Maintenance Schedule

SYSTEM	ITEM	Every 10 Hours Daily	Every 50 Hours Weekly	Every 100 Hours Monthly	Every 250 Hours Quarterly	Every 500 Hours Semi-Annually	Every 1000 Hours Annually
Paver	Lubricate paver.	X					
Engine	Check oil level.	X					
	Check coolant level.	X					
	Replace coolant.					X	
	Check air filter.		X				
	Change air filters.				X		
	Replace fuel filter.				X		
	Change oil and oil filter. (Initial 50 Hours)				X		
	Check main engine belt.			X			
Hydraulic	Check hydraulic oil level.	X					
	Change hydraulic oil.						X
	Change hydraulic filter.				X		
	Check torque hub oil.		X				
	Change torque hub oil.					X	
	Drain hydraulic tank. Replace strainer.						X
Mechanical	Adjust conveyor drive chains.			X			
	Adjust conveyor flight chains.			X			
	Adjust auger chains.			X			
	Adjust screed extension top guide.			X			

RAISING AND LOWERING CONVEYOR

The conveyor bed can be hydraulically lifted for easy access to the undercarriage and tracks for cleaning, maintenance and adjustments.



Figure 5-1. Hydraulic Conveyor Bed

NOTE: Engine must be running to raise the hydraulic conveyor bed, but can be turned off while unbolting the side wings.

Use the following procedures to raise and lower the conveyor:

1. Fold in the side wings by pushing the Side Wings In/Out lever to the IN position.
2. Remove bolts on side wings using the wrench provided with your machine. **(Figure 5-2)**



Figure 5-2. Remove Side Wing Bolts

3. Grasp top of the side wing with one hand and the handle with the other, and carefully pull out five to six inches (13-15 cm). Then pull bottom handle out until the side wing folds out from the bottom hinge. **(Figure 5-3)** Repeat for the other side.



Figure 5-3. Fold Out Side Wings

4. Raise conveyor by pushing the Conveyor Raise/Lower lever up to the RAISE position and hold until conveyor is fully raised.
5. Immediately after raising the hopper, place the safety prop in position. **(Figure 5-4)**



Figure 5-4. Safety Prop in Position



WARNING Crush Hazard! Safety prop must be placed in position. Use extreme care when working under conveyors. Clear the area of untrained personnel.

Lowering Conveyor

CAUTION Remove all tools or foreign objects before lowering and clear the area of untrained personnel.

1. Before lowering the conveyor, make sure that the area under the conveyor is clear of tools or foreign objects.
2. Turn engine ON and raise conveyor off safety prop.
3. Release safety prop carefully.
4. Lower the conveyor by flipping the Conveyor Raise/Lower switch to the LOWER position and hold until conveyor is fully lowered.

ROUTINE MAINTENANCE

Preparing Paver for Maintenance

WARNING If any maintenance must be performed while the engine is running, DO NOT leave paver unattended.

1. Park the paver on a flat surface.
2. Lower all attachments to ground level.
3. Place joysticks in neutral.
4. Run engine at 1/2 speed (RPMs) without load for three to five minutes., then reduce to slow idle.
5. Place ignition switch in the OFF position.
6. Follow the previous instructions for raising and lowering the conveyor bed for procedures requiring access to the undercarriage and tracks.

Every 10 Hours or Daily Routine Maintenance

1. Clean off paving material and spray cleaning solvent or release agent on the wearplate, extensions, and any other area that has been in contact with the paving material. Cleaning should be performed while the paver is hot.

NOTICE If asphalt material is allowed to remain on the paver overnight, possible damage and increased maintenance costs can result upon start-up the next day. Poor housekeeping will increase maintenance costs.

2. Raise conveyors and place safety prop into position. **(Figure 5-4)** Clean any asphalt material off all flat surfaces. Remove any debris from screed and check for leaks.
3. Lubricate the required parts. **(Page 5-7)**
4. Check light bulbs and replace if needed.
5. Check battery cables and connections.
6. Check coolant level. Fill if needed.
7. Check for loose, worn or damaged hoses, tubes clamps. Tighten, repair or replace promptly.
8. Keep the fuel tank full to prevent condensation. Always fill at the end of the day.
9. Check engine oil level. **(Page 5-12)**
10. Check hydraulic oil level. **(Page 5-15)**
11. Perform any other engine preventive maintenance described in the Engine Operator's Manual.

NOTE: In cold weather, keep conveyor flight chains properly oiled with cleaning solvent or release agent. This will prevent conveyor bars from sticking. Neglect could result in conveyor bar damage or drive chain failure.

Every 50 Hours or Weekly Routine Maintenance

1. Check air filter. **(Page 5-13)**
2. The FIRST 50 HOURS, change engine oil and filters, then every 250 hours thereafter. **(Page 5-12)**
3. Check all battery connections and remove any corrosion present.
4. Drain water separator (if needed). **(Page 5-15)**
5. Check torque hub oil level. Refill if needed. **(Page 5-6)**
6. Lubricate grease fittings on the flight screw on both sides of the screed, the fitting on the depth screw, and the fittings on the flange bearings located on top of the extension screed. Grease nuts on extension screws. **(Page 5-7)**
7. Perform previous routine maintenance and any other engine preventive maintenance described in the Engine Operator's Manual.

Every 100 Hour or Monthly Maintenance

1. Check main engine belt. Adjust or replace if needed.
2. Check and adjust conveyor drive chains. **(Page 5-8)**
3. Check and adjust conveyor flight chains. **(Page 5-8)**
4. Check auger drive chains, lubricate and adjust. **(Page 5-9)**
5. Check and adjust screed extension top guide. **(Page 5-9)**
6. Perform previous routine maintenance and any other engine preventive maintenance described in the Engine Operator's Manual.

Every 250 Hours or Quarterly Routine Maintenance

1. Clean air filter.
2. Perform previous routine maintenance and any other engine preventive maintenance described in the Engine Operator's Manual.

Every 500 Hours or Semi-Annual Routine Maintenance

1. Replace coolant.
2. Change engine oil and filter. **(Page 5-12)**
3. Change air filter and replace if needed. **(Page 5-13)**
4. Change torque hub oil.
5. Replace fuel filter. **(Page 5-14)**
6. Clean water separator. **(Page 5-15)**
7. Change the hydraulic oil and filter. **(Page 5-16)**
8. Perform previous routine maintenance and any other engine preventive maintenance described in the Engine Operator's Manual.

Every 1000 Hours or Annual Routine Maintenance

1. Drain hydraulic tank and replace strainer.
2. Replace air filter. **(Page 5-13)**
3. Perform previous routine maintenance and any other engine preventive maintenance described in the Engine Operator's Manual.

LUBRICATION

Torque Hub Lubrication

1. Remove the plug in the 3 o'clock position. **(Figure 5-5)**
2. If oil comes out, no oil is needed. Reinsert the plug and tighten.
3. If oil does not come out, remove the top plug and fill with SAE 90 WT gear oil until oil starts to appear at the 3 o'clock plug.
4. Replace both plugs and repeat process on the other torque hub.

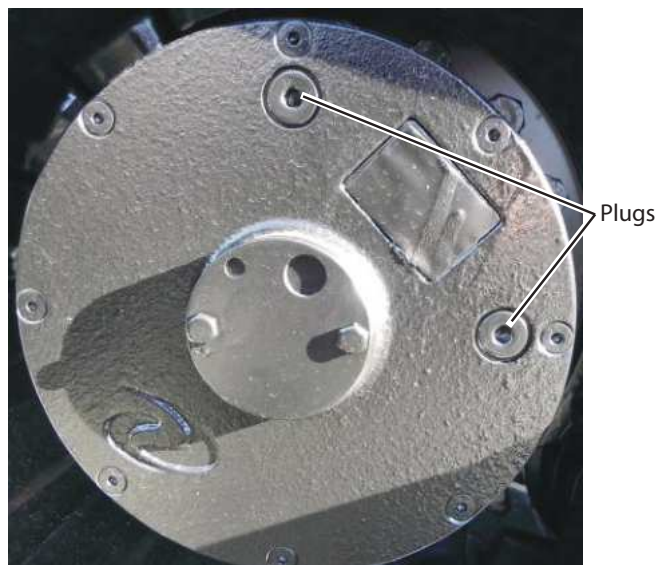


Figure 5-5. Torque Hub Plugs

NOTICE

Changing oil and cleaning the paver should only be done in a designated area where the oil and chemicals can be contained. Discard these by-products in accordance with environmental regulations.

Lubrication Points

Proper lubrication is necessary to maintain the LeeBoy Model 8510D Conveyor Paver at top efficiency. Refer to the lubrication information below:

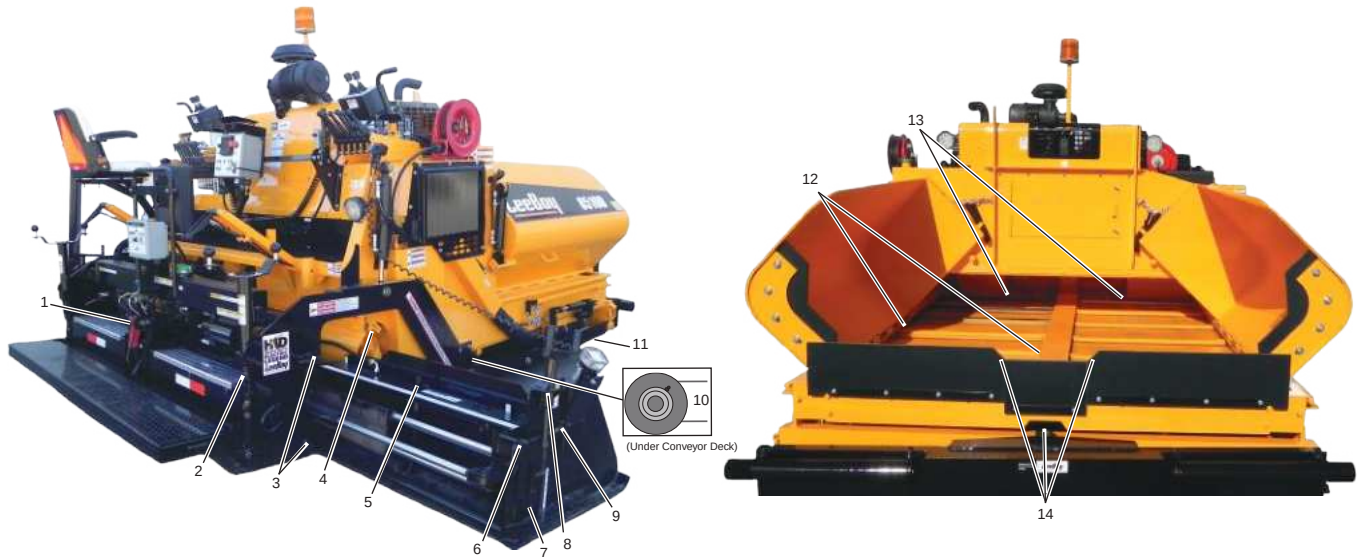


Table 5-5. Lubrication Points Schedule

ITEM NO.	TYPE LUBE	DESCRIPTION AND LOCATION	INTERVAL
	A	Grease With Shell Avania EP Grease 2 or Equivalent	
	B	Spray with Release or Chain Lube Agent	
1	B	Screed crown on chain.	Weekly
2	A	Slope cylinder pivot.	Weekly
3	A	Flange bearing and fitting on flight screw and flange bearing on T-handle of extensions (both sides).	Weekly
4	A	Auger. Grease fitting on end mount daily for efficient operation (both sides).	Daily
5	A	Tilt screws (both sides).	Weekly
6	A	Depth screw (both sides). Grease first in locked position, unlock, and turn 180° to grease.	Weekly
7	A	Screed pivot.	Weekly
8	A	Main flight screws ball socket and nut.	Weekly
9	A	All screws and bearings on screed extensions (both sides).	Weekly
10	A	Conveyor pivot (under conveyor deck) on front of screed (both sides).	Monthly
11	B	Grease tracks between track pads daily for efficient operation.	Daily
12	B	Conveyor chains.	Daily
13	B	Auger (and auger chains).	Daily
14	B	Spray all parts of paver that come into contact with asphalt.	Daily

MAINTENANCE ADJUSTMENTS

Certain components of the paver need adjustments for optimum performance, operation and general maintenance.

WARNING Entanglement hazard! DO NOT run the engine while checking and servicing conveyor components. NEVER perform any adjustments while the engine is running.

Conveyor Flight Chain

The conveyor flight chains must be adjusted every 100 hours. If irregular movement of the conveyor occurs, an adjustment is needed regardless of the time interval.



Figure 5-6 Conveyor Flight Chain Adjustment

1 - Adjustment Bolt

2 - Locking Nut

3 - Hold-Down Nut

There are four (4) adjustment bolts, two (2) for each conveyor. Use the following procedure to make this adjustment on both sides of the conveyor:

1. Raise conveyor bed and insert safety prop. (Page 5-4)
2. Loosen the hold-down nuts (one on each side of each adjustment bolt). (Figure 5-6)
3. Loosen each locking nut beside the adjustment bolt.
4. Turn each adjustment bolt alternately the same amount. For example, turn one bolt one half turn, then the other bolt one half turn, etc.
5. Continue alternating tightening until the flight chains are tight. (The pressure on the chain will be noticeable as the bolts are tightened.)

6. After the conveyor chain tension is set, retighten locknuts and bolts holding the flight chain assembly.

NOTE: If the adjustment bolt has reached its maximum adjustment level, remove two links in the conveyor chain and add a half link. This repair should bring the adjustment bolts back to full travel.

NOTICE Keep conveyor flight chain properly oiled with cleaning solvent or release agent during cold weather to keep conveyors functioning smoothly.

Conveyor Drive Chain

Keep chains clean, lubricated and properly adjusted. Inspect both drive chains at the rear track. If the chains are loose, adjustment is necessary.

1. Shut off paver.
2. Open engine access door on the side adjusting to locate the conveyor drive chain bolts. (Figure 5-7)
3. Loosen the jam nuts on the chain adjuster.
4. Turn the chain adjuster to loosen or tighten the chain, leaving approximately 1/4-inch of slack. DO NOT overtighten.
5. Retighten jam nuts.
6. Repeat steps on the opposite conveyor drive chain.

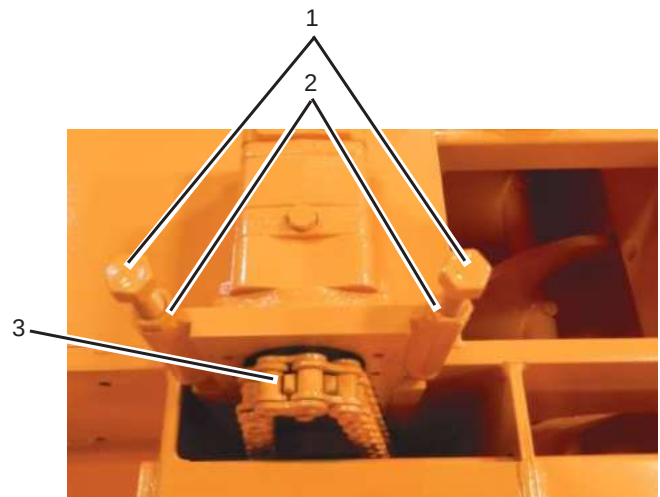


Figure 5-7. Conveyor Drive Chain Bolts

1 - Chain Adjuster

2 - Jam Nuts

3 - Conveyor Drive Chain

Auger Drive Chain Adjustment

The auger chains should be snug, not loose. If the chains need to be tightened, follow this procedure:

1. Loosen the motor bolts on the right and left auger chains. **(Figure 5-8)**
2. Loosen jam nuts and turn the tension adjusters counterclockwise to tighten chains.
3. Once adjusted, retighten motor bolts and jam nuts.

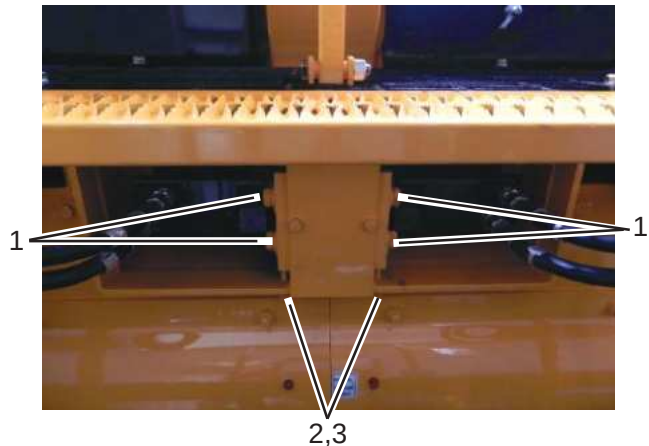


Figure 5-8. Conveyor Drive Chain Bolts

- 1 - Motor Bolts**
- 2 - Jam Nuts**
- 3 - Tension Adjuster**

Screed Extension Top Guide Adjustment

1. Retract both screed extensions completely using the left and right extensions switches on the control panel. **(Pages 3-6 to 3-7)**
2. Loosen the top guide and hold-down bolts. **(Figure 5-9)**
3. Push guide down against the slide rail and tighten allen screws until snug, starting from the outside and working toward the center on each side of the slide rail.
4. Using a jack, raise extension up until it fits the bottom guide level.
5. Adjust top guide to allow for .008-inch clearance across top guide.
6. Grease slide with multipurpose grease.
7. Retighten the hold-down bolts, securing guides to specification.
8. Adjust allen screws until proper setting is achieved.
9. Tighten hold-down bolts to 90 ft. lbs.
10. Check operation and adjust if needed.

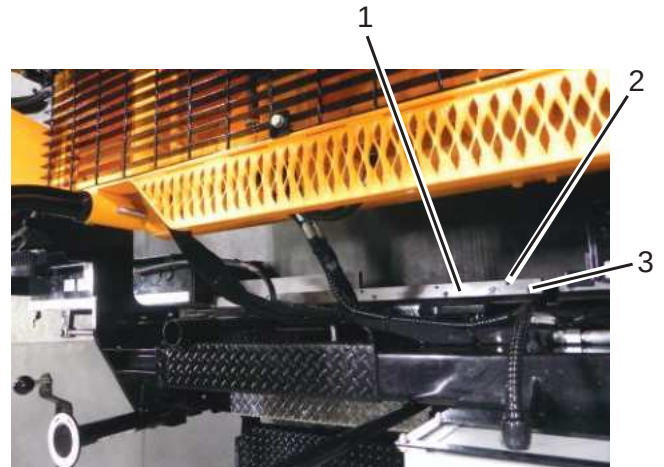


Figure 5-9. Screed Extension Top Guide Adjustment

- 1 - Screed Extension Top Guide**
- 2 - Allen Screws**
- 3 - Hold-Down Bolts**

Torque Hub Hydraulic Motor Gear Adjustments

NOTICE Torque hub hydraulic motors are calibrated and set at the factory. These adjustment should only be performed by an authorized LeeBoy dealer. Work not performed by an authorized dealer can damage machine and void the warranty.

The low gear adjustment must be made to the slow side drive motor only. The low gear adjustment screw is located on the bottom of the drive motor. Make only small adjustments at a time.

Your authorized LeeBoy dealer will perform the tracking adjustment on the high side gear by adjusting the screw on the top of the hydraulic motor. This adjustment on the motor for the fast track must be screwed in to equalize track speed.

Your LeeBoy dealer will perform the following procedure to adjust either gear:

1. With paver running, push the 2-Speed switch:
 - Set switch to the LOW position if adjusting low gear. (The blue 2-Speed light should not illuminate.)
 - Set the 2-Speed switch to the HIGH position if adjusting high gear. (The blue 2-Speed light will illuminate.)
2. Adjust screw (on bottom of the hydraulic motor for low gear; on top for high gear) until you feel back pressure on the adjustment screw. This indicates the correct adjustment is close.
3. Finalize adjustment by making a one-quarter (1/4) turn at a time until the correct adjustment is accomplished. Recheck tracking.

NOTE: If hydraulic motor has not been previously set, ten revolutions of the adjustment screw may be required before noticing any difference in travel.

Conveyor Switch Adjustment

Small adjustments may be necessary to conveyor switch for optimum conveyor performance. (Figure 5-10)

There are two positions of the conveyor flap: One upper, shutting the conveyor OFF; and one lower, turning the conveyor ON.

Check Adjustment

1. Remove the upper walkboard grate.
2. Raise the conveyor flap 6-1/2 to 7 inches (16.5 to 17.8 cm) from the bottom of the tank mount support and insert the safety prop.

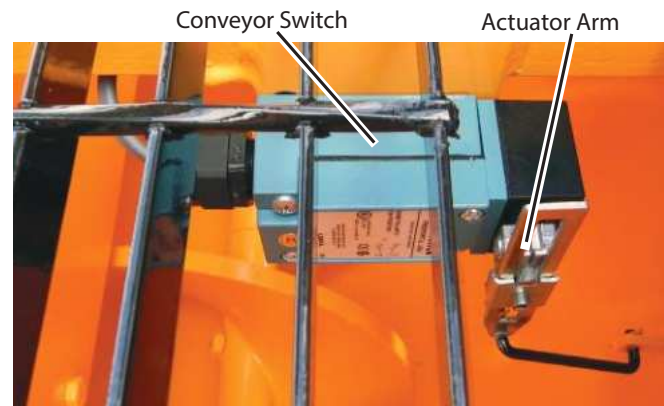


Figure 5-10. Conveyor Switch Location

3. Secure conveyor flap so it remains in this position.
4. Check the conveyor switch.
5. If the switch clicked OFF, no further adjustment is required to the upper flap.

Adjust Conveyor Switches

If the conveyor switch did not click OFF, adjustment is needed:

1. Remove the linkage attaching the actuator arm to the eyelet on the flap pivot housing.
2. Loosen Setscrew A on the actuator arm. (Figure 5-11)
3. Reposition this arm by either rotating it clockwise or counterclockwise, depending upon where the conveyor switch clicked OFF during the conveyor flap upward travel.

4. When the switch clicks OFF, tighten setscrew and reconnect linkage.
5. Repeat procedure for the lower flap.

If the lower flap switch did not click OFF:

1. Loosen Setscrew B. **(Figure 5-11)**
2. Slide the actuator arm IN or OUT to bring the travel limits into tolerance.
3. This may require several adjustments before the correct position is obtained.
4. When the actuator arm is in the correct position, tighten Setscrew B.

NOTE: The factory setting is one inch (2.54 cm) from the center of Setscrew B to the eyelet on the actuator arm.

NOTE: The setting from the factory is 1 in. (2.54 cm) from the center of the setscrew "B" to the eyelet on the actuator arm.

5. To bring the travel limits into tolerance, slide the actuator arm in the direction desired. This may require several adjustments before the correct position is obtained. When the actuator arm is in the correct position, tighten setscrew "B". No further adjustment is necessary.

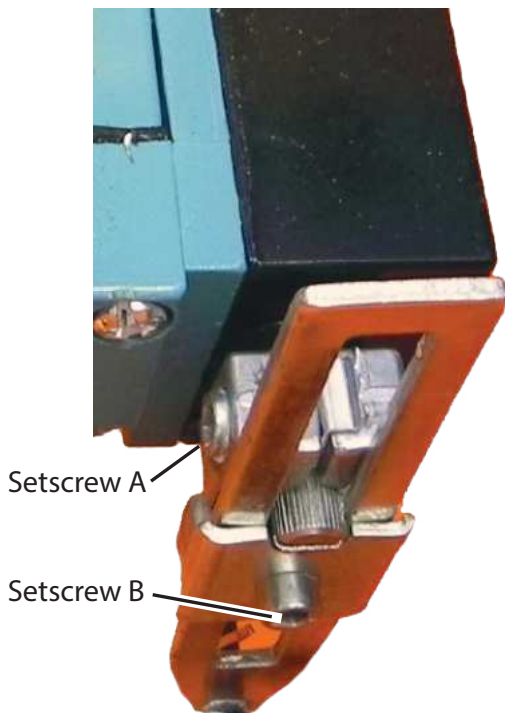


Figure 5-11. Actuator Arm - Setscrew A and B

Track Tension Pressure Relief

The hydraulic adjustment cylinders are automatic and provide even tension on the tracks to prevent excessive wear to the paver's undercarriage. The track tension main manifold is mounted on the back side of the lower hydraulic tank in the conveyor bed.

The track hydraulic pressure is set at 1500 PSI at the track tension main manifold.

To check pressure, locate the track tension main manifold in the conveyor bed and perform the following procedures:

1. Raise conveyor bed. **(Page 5-4)**
2. Connect a 2000 PSI gauge inline with either Port A or Port B on the track tension main manifold. **(Figure 5-12)**
3. Place a Porta Power between the front idler and frame to release pressure on the idler.
4. Increase the Porta Power pressure until the front idler cylinder compresses.
5. Pressure should read 1500 PSI.
6. If the pressure is not correct, remove cap on the relief cartridge valve. Using an allen wrench, adjust the relief cartridge valve IN for more pressure or OUT for less pressure until the PSI gauge reads 1500 PSI.
7. When the pressure gauge reads 1500 PSI, disconnect Porta Power and gauge.

NOTICE Do not tamper with the adjustment part of the relief cartridge valve.

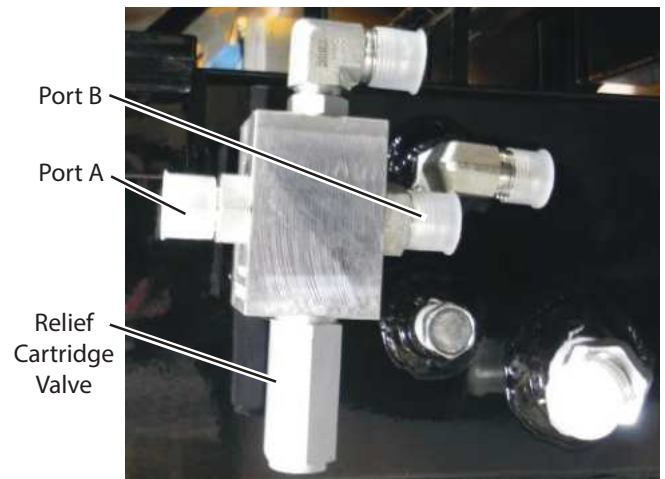


Figure 5-12. Track Tension Main Manifold

ENGINE MAINTENANCE

These general maintenance procedures are most often required for the engine. Refer to the Engine Operator's Manual for more specific maintenance information and procedures.

Check Engine Lubrication Oil

The engine lubrication oil must be kept at a level above the ADD mark, but not above the FULL mark, on the engine lubrication oil dipstick.

WARNING DO NOT check the oil while the engine running. Hot oil can spew and cause serious personal injury.

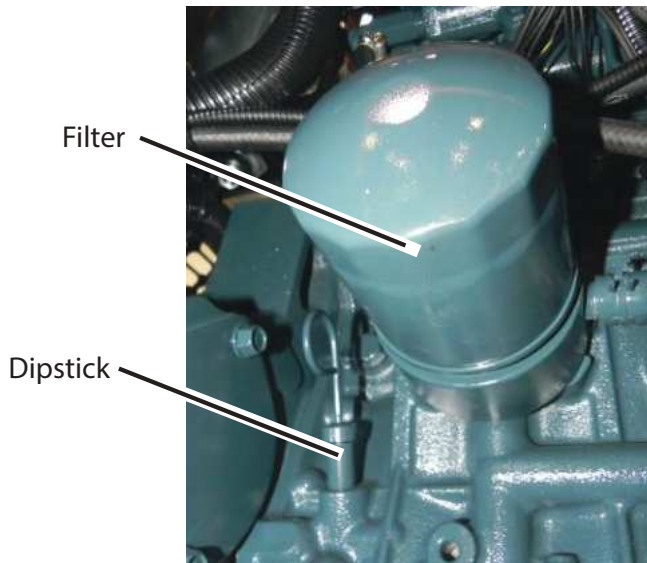


Figure 5-13. Engine Oil Dipstick and Oil Filter

To check the engine lubrication oil level:

1. Park the machine on a level surface and turn off the engine.
2. Wait five minutes to allow the oil to return to the oil pan so you can obtain an accurate measurement of the engine oil level.
3. Clean the area around the engine oil dipstick before removing it from the engine. **(Figure 5-13)**
4. Remove the dipstick from the engine and checking the oil level. The oil level should be above the ADD mark--but not above the FULL mark--on the dipstick.
5. Add oil if needed.

Change Engine Oil and Filter

The engine lubrication oil and oil filter must be changed at the same time.

To change the engine lubrication oil:

1. Park the paver on a level surface and turn off the engine.

WARNING Change the engine lubrication oil while the engine is WARM, not hot. Hot oil can cause serious personal injury.

2. If needed, wait until the engine lubrication oil has cooled a little. Oil should be warm, not hot.
3. Locate oil drain hose on right side of the paver.
4. Place a container large enough to hold 14 quarts (13.24 liters) of oil underneath the drain hose.
5. Remove cap on end of the hose and drain all engine oil into the container.
6. Reinstall cap back onto the hose and reinsert hose back into place.
7. Fill the engine with 15 quarts (14.2 liters) of oil at the oil fill cap.
8. Check oil level using the oil dipstick.
9. Dispose of used oil in accordance with local and federal environmental laws.

NOTICE DO NOT change the engine lubrication oil filter while the engine is running. Serious engine damage will occur.

Use the following procedures to change the oil filter:

1. Wipe the area around the oil filter and its mounting base with a clean cloth.
2. Place the empty container under the filter element.
3. Use a filter removal wrench to remove the filter, turning counterclockwise.
4. Drain and discard the oil filter in accordance with Step 9 above..

NOTE: Discard the used rubber gasket with the filter element.

5. Wipe inside the oil filter head using a clean, lint-free cloth.
6. Rub a little oil on the rubber gasket area of the new filter element.
7. Fill the new filter with fresh oil.
8. Install the new filter element onto the filter head. Carefully tighten the filter (by hand only).

Change Air Filter

NOTICE Never operate the engine without an air filter installed. Severe damage to the machine will occur.



Figure 5-14. Air Filter Cover

To change the air filter elements:

1. Unclamp and remove air filter cover. **(Figure 5-14)**
2. Remove the primary and secondary air filter elements. Discard.
3. Clean the inside of the air cleaner body with a clean cloth.
4. Install new air filter elements inside the canister.
5. Reclamp cap onto the air filter cover.
6. Check clamps to ensure filter elements are tight and filter elements are making proper contact.
7. Start engine. If engine does not run smoothly, recheck filter element contact.
8. Install new air filter elements inside the canister.
9. Reclamp cap onto the air filter cover.
10. Check clamps to ensure filter elements are tight and filter elements are making proper contact.
11. Start engine. If engine does not run smoothly, recheck filter element contact.

FUEL SYSTEM

Fuel Tank

The fuel level is indicated on the digital display fuel gauge. Use only ultra low sulfur diesel fuel and always fill the fuel tank at the end of the work day to prevent condensation. The green fuel cap is located on the right side of the paver in front of the spraydown hose reel. **(Figure 5-15)**

NOTICE Fill up with low-sulfur diesel fuel at the end of the day to reduce condensation in the tank.

WARNING Diesel fuel is highly **FLAMMABLE**. **DO NOT** smoke while filling the fuel tank. Fill the fuel tank in a designated area that provides proper ventilation with a fire extinguisher available.

WARNING Explosion Hazard! Never fill the fuel tank near an open flame, or near equipment that can create sparks. Never check fuel level or fuel system components near an open flame.



Figure 5-15. Fuel Cap

To fill the fuel tank:

1. Stop engine.
2. Remove fuel cap from fuel tank.
3. Fill with diesel fuel until full.
4. Replace fuel cap.

Change Fuel Filter

The fuel filter, water separator and fuel pump with bowl filter are conveniently located together on the engine access door in the hopper. **(Figure 5-16)**



Figure 5-16. Fuel Filters

1 - Fuel Filter

2 - Fuel/Water Separator

3 - Fuel Pump w/Bowl Filter

NOTICE Tighten the fuel filter as directed on by the filter manufacturer. **DO NOT** overtighten the fuel filter element onto the filter head.

Replace the fuel filter using the following general procedure.

1. Stop the engine and allow it to cool.
2. Put a container under the filter before removing it.
3. Wipe the area around the fuel filter and mounting head using a clean, lint-free cloth.

4. Use a filter removal wrench to loosen and remove the filter by turning it clockwise. **(Figure 5-16)**
5. Drain and discard the removed filter in compliance with local and federal environmental laws..
6. Wipe inside the filter head with a clean, lint-free cloth.
7. Fill the new fuel filter element with the diesel fuel.
8. Wipe a little fuel on the rubber gasket.
9. Install the new fuel filter element onto the filter head, carefully tightening the element by hand.
10. Start the engine and check for any fuel leaks.

WARNING Explosion Hazard! Stop the engine immediately if any fuel leakage is noted. **DO NOT** start the engine until the leak has been corrected.

Water Separator

Water and dirt that gets into fuel settles into the water separator. **(Figure 5-17)** As it collects, a red float rises. When the float reaches the line on the separator, an error code will appear on the PV480 digital display. It is important to drain it immediately.

NOTICE If you run out of fuel, it is important to pump the water separator to prime fuel injection lines. Failure to do so can adversely affect performance.

To drain the water separator:

1. Pull retainer clip from plug to disconnect the harness.
2. Unplug the harness, then unscrew the plug.
3. Drain and reinsert components.



Figure 5-17. Water Separator

- 1 - Pump
- 2 - Filter Body
- 3 - Plug
- 4 - Clip

To clean the water separator:

1. Follow the previous steps for draining the water separator.
2. Loosen and remove the filter body and clean it with light oil.
3. Reinsert and tighten.

HYDRAULIC SYSTEM

Check Hydraulic Oil

The hydraulic motors and hydraulic cylinders use the same hydraulic oil reservoir and hydraulic oil supply.

NOTICE Take care when working with the hydraulic system to ensure it is completely clean.

NOTICE Never allow the hydraulic oil level to fall too low. Pump damage will occur.

Check the hydraulic reservoir oil level daily using the sight gauge on the left side of the paver. **(Figure 5-18)**

Check the hydraulic oil level when the hydraulic oil is at normal operating temperature for an accurate reading.

If the hydraulic oil level falls below the black line, add more hydraulic oil.



Figure 5-18. Hydraulic Oil Cap and Sight Gauge

WARNING DO NOT loosen or remove the hydraulic oil fill cap when the hydraulic oil is hot. Always loosen the cap slowly to relieve any pressure in the hydraulic oil reservoir.

- Slowly unscrew the hydraulic oil fill cap and add hydraulic oil. **(Figure 5-18)**
- DO NOT use unfiltered hydraulic oil.
- Check the hydraulic oil level using the sight gauge.
- Keep the hydraulic oil filled to the correct level.

NOTICE DO NOT overfill the hydraulic oil reservoir.

NOTICE Leeboy uses a lead-detection dye that may turn the hydraulic oil a slight yellow tint.

Change Hydraulic Oil and Filter

Changing the hydraulic oil removes the accumulation of dirt, water and mechanical wear particles from the hydraulic oil system. Clean, filtered oil is critical to optimize hydraulic system operation. The hydraulic oil system holds approximately 40 gallons (151.4 liters).

NOTICE Contaminated hydraulic oil can shorten the expected service life of components in the hydraulic system.

WARNING DO NOT drain the hydraulic oil when it is hot. Hot hydraulic oil can cause serious personal injury.

WARNING Protect your eyes by wearing safety glasses when working on hydraulic system components.

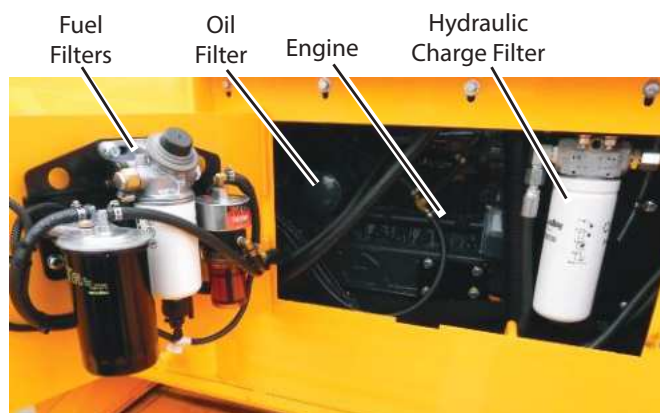


Figure 5-19. Hydraulic Charge Filter

Use the following procedures to change the hydraulic oil and charge filter:

1. Stop the engine.
2. Allow the hydraulic oil to cool until it is at a warm temperature.
3. Slowly remove the hydraulic oil strainer fill cap. Do not remove the strainer portion under the cap.
4. Place a clean, lint-free cloth over the reservoir fill tube opening and secure in place with tape.
5. Carefully remove the plug from the bottom of the hydraulic tank.
6. Allow all the hydraulic oil to drain from the hydraulic tank.
7. Reinstall the hydraulic oil drain plug and tighten securely. Close valve.

8. Change the hydraulic charge filter by turning filter counterclockwise, then replace with new filter turning clockwise until snug (by hand only). **(Figure 5-19)**

9. Carefully remove the cloth from the hydraulic oil reservoir fill tube opening.

10. Remove the strainer. Replace if necessary.

NOTICE DO NOT fill the hydraulic oil reservoir with new hydraulic oil until the strainer inside the fill cap has been serviced.

11. Fill the hydraulic oil tank with filtered hydraulic oil. The cold oil level should be about 1/2-inch below the fill level black line on the sight gauge. **(Figure 5-19)**
12. Reinstall the hydraulic oil strainer filler cap and tighten the three wingnuts securely.
13. Start the engine and check the hydraulic system for possible leaks.

WARNING DO NOT use your hands on any hydraulic hoses, fittings or system component when checking for leaks. Serious personal injury can result from an oil leak under high pressure. Oil can be injected under the skin by high pressure. Protect the eyes by wearing safety glasses.

CAUTION Stop the engine immediately if any hydraulic leak is noted. DO NOT start the engine until any problem noted has been corrected.

ELECTRICAL SYSTEM

The electrical system is a 12-volt negative ground system. Connect the positive (+) cable to the positive (+) post of the battery. Connect the ground cable to the negative (-) post of the battery. It is advisable to disconnect the negative (-) cable first and connect it last. Reversed polarity can damage the electrical system.

⚠ WARNING Fire and Explosion Hazard! Always observe battery polarity when connecting a battery charger or jumper cables to the battery: negative (-) to negative (-), positive (+) to positive (+). Failure to do so can produce sparks.

When connecting a booster battery, connect one end of the first jumper cable to the positive (+) terminal of the dead battery and the other end to the positive (+) terminal of the booster battery. Connect one end of the second jumper cable to the negative (-) terminal of the booster battery and the other end to the frame of the paver with the dead battery.

⚠ WARNING Fire and Explosion Hazard! Be sure that the battery charger is in the OFF position before connecting it to the battery.

Be sure to keep the battery fully charged during cold weather to keep it from freezing. Freezing weather has little effect on a fully-charged battery. (Figure 5-20)

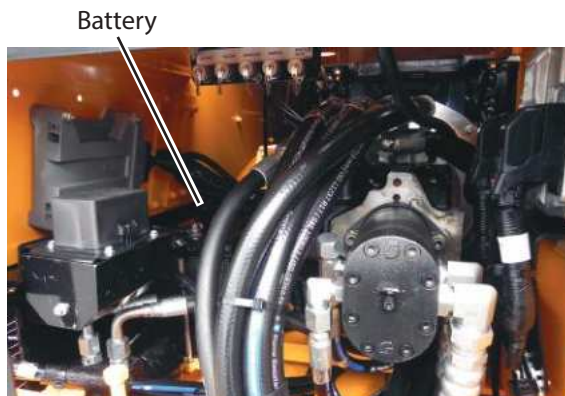


Figure 5-20. Battery Location

NOTICE ALWAYS turn the master battery switch off when working on the electrical system or welding anywhere on the machine. Damage to electrical components could result.

Battery Servicing

⚠ WARNING Batteries contain sulfuric acid. ALWAYS wear safety goggles and protective clothing when servicing the battery.

⚠ WARNING NEVER allow battery fluid to come into contact with clothing, skin or eyes. If battery fluid contacts the eyes or skin, immediately flush with clean water and obtain prompt medical treatment.

⚠ WARNING Keep sparks and flames away from the batteries as electrolyte gas is highly flammable.

1. Open cover on right side of the paver to access battery.

NOTE: When replacing the battery, discard the old battery properly.

2. Before connecting the batteries, turn off the master switch, located under the operator control panel. (Figure 5-21)



Figure 5-21. Battery Master Switch

3. Be certain that battery terminals and posts are clean and that the battery cable terminals are tight.

NOTICE Dirty or loose battery connections can create high electrical resistance and permit arcing.

4. If corrosion is present around terminal connections, remove and wash with ammonia or a solution of 1/4-pound (.11 kg) baking soda added to one quart of warm water. Ensure the vent caps are tight to prevent solution from entering the cells.
5. Pour clean water over the battery and surrounding area to rinse away the solution.
6. Check vent cap breather openings to ensure they are clear.

Alternator

The alternator supplies electrical power to electronic controls and charges the battery. Its built-in regulator controls voltage output. **(Figure 5-22)**



Figure 5-22. Alternator

Use the following precautions to prevent damage to the alternator or regulator:

- Never polarize the alternator.
- Never ground any alternator terminals or circuits.
- Always disconnect the battery before disconnecting or connecting the alternator.
- Never disconnect the alternator while machine is operating.
- Ensure wiring is properly connected before connecting the battery.
- Always connect a booster battery in the proper polarity: negative (-) to negative (-) and positive (+) to positive (+).

SCREED ELECTRIC HEAT (OPTION)

Screed Electric Heat Elements

The electric heat control box contains the element breakers and main outputs for the screed heating system. Powered by 220VAC and 240VAC, each element has two breakers. **(Figure 5-23)**

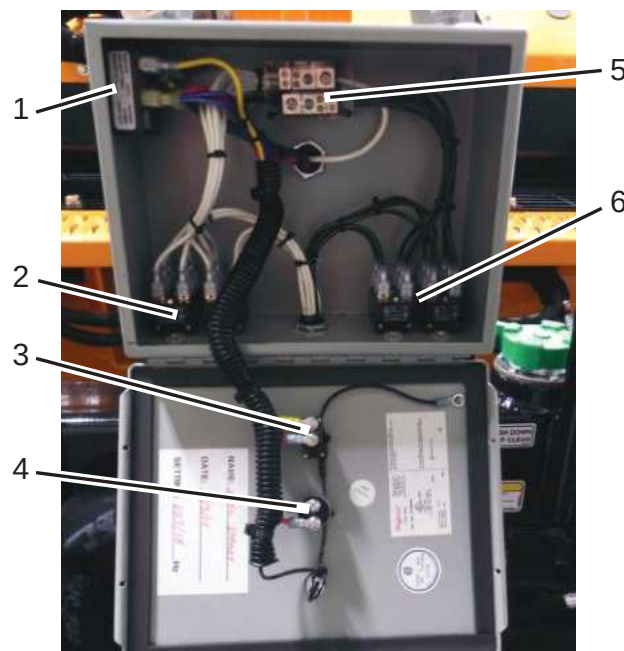


Figure 5-23. Electric Heat Elements

- 1 - Timer**
- 2 - L-1 Circuit Breakers**
- 3 - Power On Toggle**
- 4 - Heat On Button**
- 5 - Wire Junction Block**
- 6 - L-2 Circuit Breaker**

The control box consists of three major types of components:

- The system timer is located in the upper left hand corner of the box.
- The element breakers are located in the lower surface of the box.

The other block in the center is used as a wire junction block only. Refer to the wiring schematic at the end of this manual, and you will note how the following connections are made.

NOTE: Control boxes are manufactured to fit all screed and paver combinations. If not all plugs are connected to wires, it may be normal. Be sure to keep open plugs with the plug terminator(s).

Any element lead can be plugged into any supply plug under the heating control/distribution box. All six plugs are equally rated.

- Each element output consists of two wires--one connects to the L-1 circuit and the other to the L-2 circuit. **(Figure 5-23)**
- Each breaker has two terminals--one is connected to the main input and the other terminal to an element output wire.
- The L-1 circuit is the left bank of element breakers.
- The L-2 circuit is the right bank of element breakers and wired slightly different. Each leg goes from the main L-2 power lead through a breaker, then through one of the six contacts on the element relays.

It is these relays that “make” or “break” the circuit to each element to start or stop the heating cycles.

When the HEAT ON button is depressed, 12VDC is momentarily applied to this terminal to start the timer cycle. During the timer cycle, power will not be applied to this terminal unless the HEAT ON button is depressed again.

There are six terminals on the timer:

- The top two left terminals are the main 12VDC input terminals.
- The ground is on the left.
- The power is on the right.
- The top right terminal is the common terminal to the internal timer relay that controls the heat system. When power is applied to the input terminal, it is also jumped to the common (or COM) terminal on the timer.
- The lower right two terminals on the timer are the outputs of the internal timer relay.

Element Resistance Testing

The breakers are wired into each leg of each element. If an element has a fault, either in the wiring, or in the element itself, the breaker will trip and power will no longer be applied to that leg of the element.

When a breaker in the control box has “tripped,” there may be a problem in the wiring or an element in the circuit.

The breakers can be manually reset by depressing the trip button back into place when they are extended. If the breaker still does not reset, you need to test or possibly replace an element.

If the element is functioning correctly, you should read a resistance between 25 and 35 ohms when testing. A faulty element will read “open” or show little resistance (less than one ohm), indicating a shortage through the element.

To test the element:

1. Disconnect elements one at a time from the connection point on the lower side of the control box.
2. Using an ohm meter, test the resistance through the element between the two pins in the plug. **(Figure 5-24)**

NOTE: You do not have to test the plug attached to the lower side of the control box.

3. Before replugging the element, check each wire pin with an ohm meter test lead, placing the lead on a steel section of the screed frame. If there is any continuity through the element to the frame, the element must be replaced.

⚠ WARNING DO NOT operate an element with a known shortage. Replace faulty elements and wiring immediately.



Figure 5-24. Plug

Heating Elements

Each element is sized to fit properly and provide sufficient power to heat your screed plate to a temperature that prevents mix from sticking to the lower surface of the screed plate.

An element assembly consists of four main components:

- The element.
- The wire protector adapter.
- The wire protector.
- The two-pin wire plug at the end of the element protector.

Each element is covered by a thin strip of insulation to keep heat from escaping. A support bar and shield protects the element assembly.

Each element is clamped onto the screed plate to provide a positive and efficient connection. Enough pressure should be applied to the element assembly to sufficiently hold it securely against the screed plate surface.

To remove an element:

1. Remove top cover from the extension screed plate.
2. Loosen all the clamping studs over the element.
3. Remove and replace element.
4. After tightening the clamping stud, lock the clamp by tightening the stud jam nut.

Generator Voltage Testing

The generator is hydraulically-driven. When the paver engine is at 2200 RPMs and the hydraulic system is at normal operating temperature, the generator should produce between 220 VAC and 240 VAC.

The generator voltage depends upon speed (RPMs), increasing voltage as RPMs increase and decreasing voltage as RPMs decrease. The voltage will decrease significantly if the generator speed is slower than 3600 RPMs.

NOTE: When testing the generator voltage ensure the paver engine is at 2200 RPMs and the hydraulic temperature is at normal operating levels.

To test the generator voltage:

1. Use volt meter to measure between the two main input wires L-1 (black wire) and L-2 (white wire). (**Figure 5-25**)

2. If you measure from L-1 to the frame of the paver, or ground, the voltage will be half the rated output of the generator. The voltage should be the same as measured at the control box.

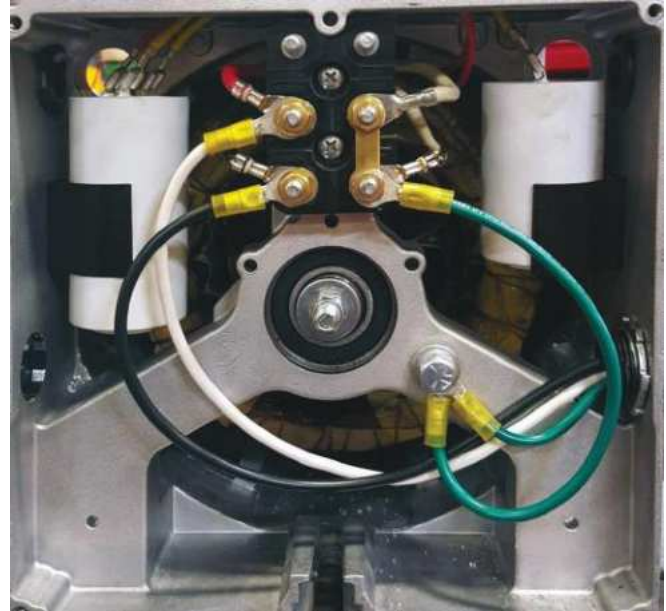


Figure 5-25. Generator

If the voltage is lower, make certain the generator is turning the correct speed by testing with a Hz meter or photo tachometer.

Generator Speed Tuning

NOTICE This adjustment should only be performed by an authorized LeeBoy dealer. Work not performed by an authorized dealer can damage machine and void the warranty.

A voltmeter set to read frequency (Hz) can be used to test generator speed. When the engine is running at 2200 RPMs, the generator should operate at 58 to 62 Hz, or a speed of 3480 to 3720 RPMs. If the generator speed drops below 3480 RPMs, the voltage output and performance of the heating system will decrease significantly. When testing the generator speed, make certain that the paver engine is at 2200 RPMs and the hydraulic temperature is at normal operating levels.

NOTICE The generator should never be operated at a speed of 3800 RPMs or greater. Generator damage will occur and void your warranty.

Your authorized LeeBoy dealer will perform the following procedure:

1. Raise the conveyor bed and insert safety prop.
2. Set voltmeter to read frequency (Hz), to measure between the two main input wires L1 and L2. **(Figure 5-25)** A photo tachometer may also be used to check the speed of the generator at the motor coupling by removing the motor coupling shield.
3. Note that 60 Hz is exactly 3600 RPMs. For every Hz above 60, an increase of 60 RPMs can be added to 3600 RPMs. For every Hz below 60, a decrease of 60 RPMs can be subtracted from 3600 RPMs.

Example: 60 Hz is 3600 RPMs. A reading of 62 Hz would be 3720 RPMs. A reading of 58 Hz would be 3480 RPMs.

CAUTION Always replace shields and panels when finished testing.

CAUTION Improper adjusting can cause damage to the generator.

NOTE: The integrated flow-control manifold is pre-set and will maintain the generator at it's proper speed if the correct amount of oil is supplied to the set. If the temperature of the hydraulic system rises above 160°F, some slippage may occur through the gear set of the generator motor, and the generator may slow slightly.



Figure 5-26. Generator Flow Control Adjuster

1 - Gauge Port

2 - Fine Tune Speed Adjuster

Adjusting the flow-control adjuster on the front of the manifold controls speed of the generator. **(Figure 5-26)**

To perform this adjustment:

- Locate the Flow Control Adjuster and turn to increase or decrease the speed as needed.
- Turning clockwise will decrease the generator speed. Turning counterclockwise will increase the generator speed.

If the generator will not operate at the correct speed, test the hydraulic flow from the pump or check the generator motor for excessive case drain flow. The case drain should not leak more than one gallon per minute. Replace the generator motor or paver pump if either are operating incorrectly.

Generator Capacitor

There are no other voltage adjustments that can be made to the generator. The capacitor controls and regulates voltage while the machine operates. If the capacitor fails, the voltage will drop below or no output at all.

If experiencing a drop in voltage, replacing the capacitor will help determine if the capacitor is at fault.

To perform this procedure:

1. Shut down the machine.
2. Detach the wires on top of the capacitor.
3. Remove the capacitor and replace with new one.
4. Reattach wires.

REPLACEMENT PROCEDURES

Front Idler

Follow this procedure for replacing the front idler (Figure 5-27):

1. Raise conveyor and insert safety prop. (Page 5-6)

NOTE: Perform this additional step for poly or steel tracks only: Locate track tensions manifold and back the relief cartridge out of the aluminum block about three turns until you hear the tension pressure release.

2. Rotate the track so the master pin is at the rear bottom of the front idler.
3. Jack up the paver at least two feet (61 cm) off the ground for enough clearance under the undercarriage to perform this procedure.

⚠ DANGER Crush hazard! Always use safety blocks in addition to jack when working under the paver to prevent serious injury or even death.

4. Remove the clip pin from the cylinder rod and idler bracket. Idler will slide out.
5. Remove the idler bracket and bolt to the new idler.
6. Install idler, ensuring cylinder and clip pin are aligned properly.
7. Lower sprocket back down toward the track chain, ensuring the sprocket is about one (1) inch (2.54 cm) from the chain.

Perform these additional steps for poly or steel tracks only:

- Check that the track chain is full seated with the drive sprocket and rollers are aligned with chain center.
- Tighten the tension relief.
- Lower paver to ground, remove jack and start machine. Track tensions will automatically adjust when the machine is started.
- Ensure the track chain remains fully seated with the drive sprocket and rollers still aligned with the chain center.

Track Tension Cylinder

1. Follow Steps 1-4 in the previous section. The track tension cylinder is located behind the front idler. (Figure 5-27)
2. Pull the track tension cylinder toward the front to remove the hose from the bottom of the cylinder.
3. Repack the seal kit or replace cylinder if worn, and reinstall.
4. Install idler, ensuring cylinder and clip pin are aligned properly.
5. Lower sprocket back down toward the track chain, ensuring the sprocket is about one (1) inch (2.54 cm) from the chain.

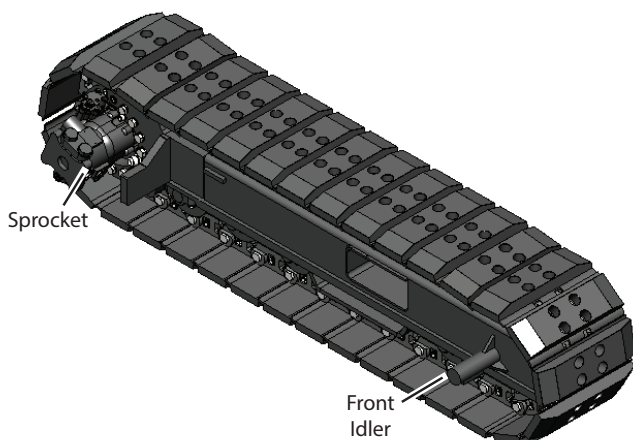


Figure 5-27. Front Idler

Track Rollers

1. Raise conveyor and insert safety prop. **(Page 5-6)**
2. Turn the track tension relief valve three (3) turns (or until you hear the pressure release).
3. Jack up the paver at least two feet (61 cm) off the ground for enough clearance under the undercarriage to perform this procedure.

⚠ DANGER **Crush hazard! Always use safety blocks in addition to jack when working under the paver to prevent serious injury or even death.**

4. Remove the faulty rollers and replace with new ones.
5. Torque bolts to 90 ft lbs (122 N•m).
6. Ensure the track chain is fully seated with the drive sprocket and rollers are aligned with chain center.
7. Retighten tension relief.
8. Lower paver to the ground and start machine. Track tension will automatically adjust when machine is started.
9. Ensure the track chain remains fully seated with drive sprocket and rollers aligned with the chain center.

Track Sprocket (Steel or Poly)

1. Raise conveyor and insert safety prop. **(Page 5-6)**
2. Rotate the track master pin to the bottom of the sprocket.
3. Release track tension by screwing the relief cartridge out of the manifold (about three turns).
4. Remove track master pin at bottom rear of sprocket. Drive paver forward to disconnect track from the top of the sprocket.
5. Jack up the paver until the sprocket clears the track.

⚠ DANGER **Crush hazard! Always use safety blocks in addition to jack when working under the paver to prevent serious injury or even death.**

6. Remove bolts holding sprocket. **(Figure 5-27)**
7. Remove rear track roller.
8. Slide sprocket off and replace.
9. Slide sprocket back in place.

10. Place thread-locking adhesive on bolts and install bolts holding sprocket.
11. Lower paver so that sprocket goes back into track chain. Drive paver forward to rotate track onto top of the sprocket.
12. Place master pin back in track and place thread-locking adhesive on bolts.
13. Tighten relief cartridge in the manifold.

Rubber Track (Option)

1. Raise conveyor and insert safety prop. **(Page 5-6)**
2. Jack up the paver at least two feet (61 cm) off the ground for enough clearance under the undercarriage to perform this procedure.

⚠ DANGER **Crush hazard! Always use safety blocks in addition to jack when working under the paver to prevent serious injury or even death.**

3. Loosen the track tension cartridge at the manifold located at rear of the bottom hydraulic tank.
4. Label and disconnect the track tensions hoses from undercarriage at track tension manifold.
5. Cap and plug all hoses.

NOTE: Remove generator cord at generator if removing left undercarriage (electric heat screed only).

6. Remove the two (2) bolts holding the drive motor to the torque hub. **(Figure 5-27)** Support the undercarriage with a forklift or jack before lowering to the ground.
7. Unbolt the two (2) trunnions on the front of track undercarriage and stops at each side of the rear of the undercarriage.
8. Lower the track assembly.
9. Remove rubber track by prying from the idler end first.
10. If needed, replace idler, torque hub, sprocket, rollers and/or cylinder. Lower the undercarriage for replacing above components, except rollers.

Rear Conveyor Shaft, Bearings and Sprockets

1. Drive paver onto a ramp to access undercarriage.
2. Disconnect the main conveyor chains. **(Figure 5-28)**
3. Disconnect any link.
4. Rotate chains away from the assembly.
5. Remove chain from drive motor to the conveyor sprocket.
6. Remove bolt and washers holding the sprocket.
7. Remove the sprocket and bearing from the frame.
8. Remove bolts on the inner sprocket.
9. Slide out shaft and outer conveyor sprocket through frame side.

NOTE: Rear tube can be removed for changing the inner bearings.

NOTE: Remove the inner seals from replaced bearings in the tubes to allow grease to enter into the bearing area.

10. Place conveyor shaft into the inner conveyor sprocket.

11. Insert bolt into shaft.

NOTE: The outer conveyor sprocket must be aligned with the inner sprocket.

12. Rotate the outer sprocket on the shaft until properly aligned.
13. Reinstall the outer bearing and outer sprocket.
14. Place thread-locking adhesive on the bolt and torque to 180 ft. lbs. (244 N.m).
15. Reinstall the conveyor and drive chains and adjust.
16. Grease bearings in the tubes by using grease blocks on each side below the hopper wing.

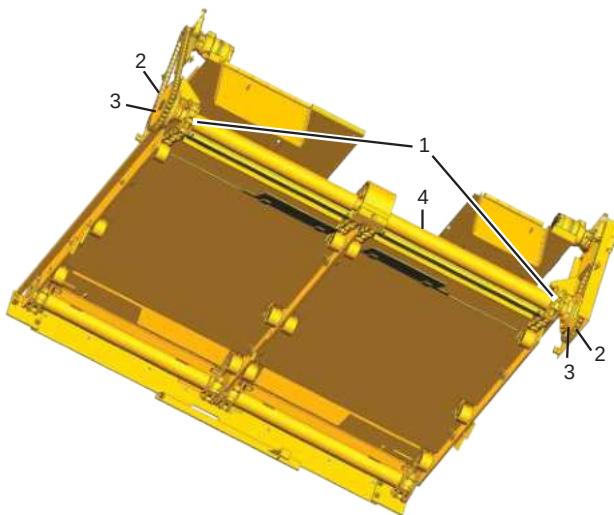


Figure 5-28. Rear Conveyor Shaft

- 1 - Main Conveyor Chains
- 2 - Auger Chains
- 3 - Conveyor Sprockets
- 4 - Conveyor Shaft

Conveyor Drive Motors

1. Remove hydraulic hoses from motor.
2. Remove four bolts holding hydraulic motor to slide mount. **(Figure 5-29)**
3. Slide drive motor out of slide mount.
4. Slide new or repaired drive motor into slide mount.
5. Secure with four bolts.
6. Reconnect hydraulic hoses to motor.
7. Check for leaks.

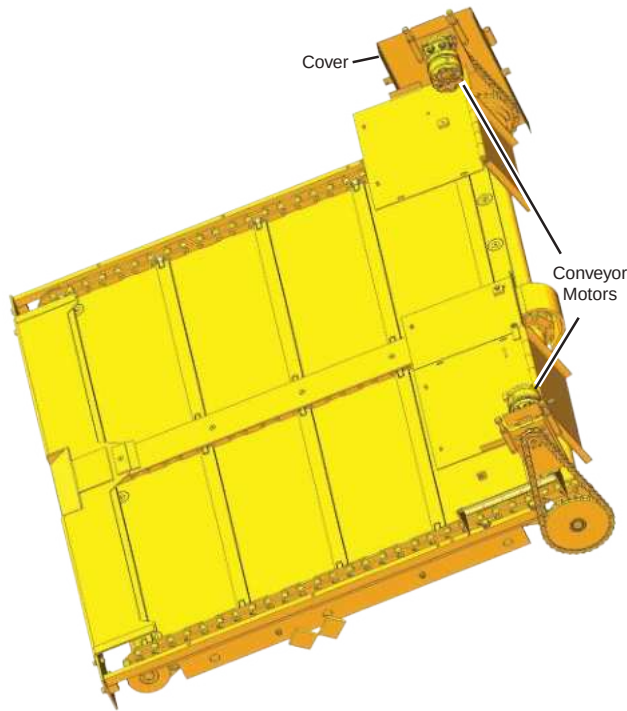


Figure 5-29. Conveyor Motors

Auger and Inner Bearings

1. Remove rear grating over auger assembly.
 2. Extend the screed completely.
 3. Remove two (2) nuts holding top cover on and pry cover apart.
 4. Clean asphalt build up from around cover.
- NOTE: Heating asphalt may be required.**
5. Remove bottom portion of cover.
 6. Rotate auger chains so that master link is centered at front.
 7. Loosen auger chains by sliding auger motors down from backside after loosening the two (2) bolts securing mounting brackets.
 8. Remove bottom clamps that hold auger bearings in.

NOTE: Roll pin is used to line up bearing grease hole with the grease fitting hole. If installed improperly, no grease will get to bearing.

9. Remove auger end mounts so that augers can be removed through opening in sides.
10. Remove augers and lay augers on the ground in the same position as removed. This will help insure proper installation of the new augers.
11. Check inner auger bearings and replace if faulty. **(Figure 5-30)**

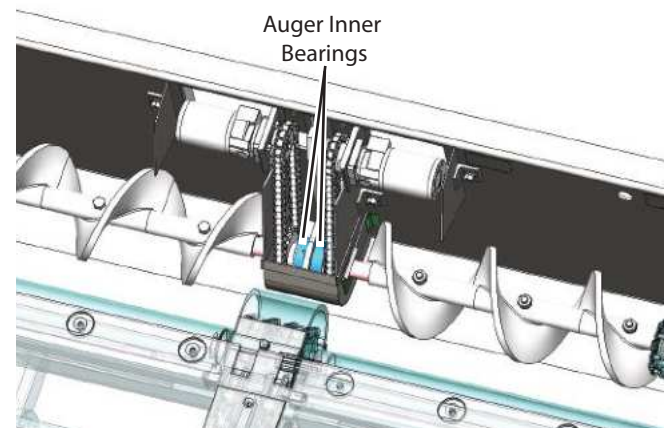


Figure 5-30. Auger Inner Bearings

NOTE: When installing the new augers, be sure to align augers the same as the removed augers. It is very easy to install augers backwards.

NOTE: When installing auger, make sure roll pin is aligning grease fitting hole with grease fitting before tightening clamps on inner auger bearings.

12. Install new augers making sure that they are on correct side to auger material outward.
13. Tighten bearing setscrew to help hold auger shaft from moving outward.
14. Slide auger collar on end of auger shaft and bolt end mount back on. Torque mounting bolts to 78 ft. lbs. (106 N•m)
15. Push collar all the way in against end mount and attach with two (2) setscrews, one (1) on outside and one (1) on inside.
16. Replace bronze bushing in the end mounts.
17. Place auger chains back on and adjust auger motors up to tighten chains. Use adjusting bolt to tighten motor, then snug bottom motor mount bolts (make sure chains have approximately 1/4" of slack).
18. Make sure the motor bolts at top and bottom are tight and torque to 150 ft. lbs. (155 N•m). Do the same for the other side.
19. Lubricate chains.
20. Place grating back on over auger.
21. Run augers and make sure everything is correct.

NOTE: Auger chains can be lubricated each day by spraying oil or chain lube in through slots where auger motor is adjusted.

Auger Motors

1. Extend screed extension completely.
2. Remove floor grating.
3. Clean asphalt buildup around cover.
4. Disconnect and label the hydraulic hoses. Plug fittings.
5. Remove the two nuts on the cover and pry the cover apart. **(Figure 5-31)**

NOTE: Heating asphalt may be required.

6. Loosen auger tension adjusters.
7. Loosen the two bolts securing the auger motor mounting brackets.
8. Loosen the auger chains by sliding the auger motors out from backside.

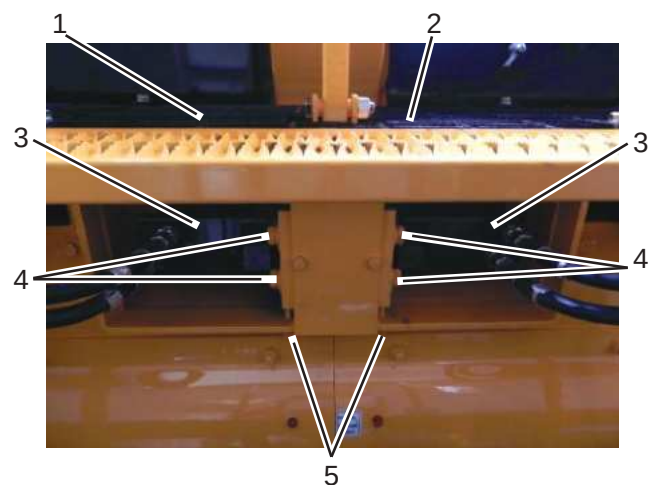


Figure 5-31. Auger Motors

- 1 - Floor Grating**
- 2 - Front Auger Cover**
- 3 - Auger Motors**
- 4 - Auger Mounting Bolts**
- 5 - Auger Tension Adjusters**

9. Slide the long screw through the bolt side of the chain to prevent it from falling down into the cover. Once chain is secure, remove the bolt holding the sprocket.
10. Hold the sprocket at the chain as you slide out the motor.
11. Remove the sprocket from the chain.
12. Slide off the sprocket and remove the auger motor mount.
13. Place the new auger motor onto the mount.
14. Reinsert the sprocket back onto the chain.
15. Reinsert the motor.
16. Cover bolts with thread-locking adhesive, reinsert and tighten.
17. Adjust the chain for 1/4 inches of slack.
18. Lubricate with chain lube.
19. Reconnect the hydraulic hoses and check for leaks.

Main Screed Wear Plate

1. Retract screed extension completely.
2. Remove the cylinder covers on the walkboards, then the screed lids.

NOTE: If equipped with electric screed heat, remove all wiring and heating elements.

3. Remove all the bolts holding the wear plate to the screed frame on each side. **(Figure 5-32)**

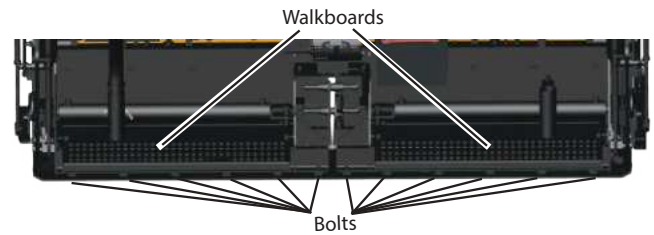


Figure 5-32. Wear Plate Mounting Bolts

4. Clamp the center portion of the screed frame to hold the frame in place when lifting it from the worn wear plate.
5. Raise the screed up and remove the worn wear plate.
6. Clean all material buildup on the screed frame.
7. Set new wear plate level on three blocks, placing one block in the center and one at each end. Ensure the extensions are completely raised to prevent misalignment.
8. Lower the screed frame down onto the new wear plate.

NOTE: DO NOT tighten the bolts in the next step until are bolts are installed.

9. Install five bolts in one side at the front to hold the wear plate in place.
10. Loosen the vibrator on the slotted side and adjust the crown. This will move the screed frame in and out on the wear plate to help align the bolts on the opposite side.
11. Install the remainder of the front bolts, then install the rear bolts, ensuring the screed frame and wear plate are flat.
12. Torque bolts to 55 ft lbs (74 N•m) starting inside, then moving outward by rotating from the left to the right side to keep the screed relaxed.

NOTE: Install all wiring and elements if equipped with electric screed heat option.

13. Reinstall the screed lids, walkboard and cylinder covers.

Screed Extension Wear Plate

1. Extend the screed completely.
2. Remove the endgate by removing the tilt screw and nut on each side of the tilt screw. The endgate will tilt forward and slide off the bolt.
3. Disconnect the extension AOA adjuster (**Figure 5-33**) on top of the wear plate by removing locknut, washer and shoulder bolt.
4. Remove the three bolts holding the front extension hinge shield.

NOTE: If equipped with electric screed heat option, remove all wiring and heating elements.

5. Carefully slide the hinge pin out. The wear plate will disconnect and fall to the ground.
6. Hold the new wear plate in place and slide the hinge pin back into place.
7. Fasten the AOA adjuster back to the wear plate with locknut, washer and shoulder bolt.

NOTE: Reinstall all wiring and heating elements if equipped with electric screed heat option.

8. Reinstall the front hinge shield.
9. Reinstall the endgate and tilt screw.

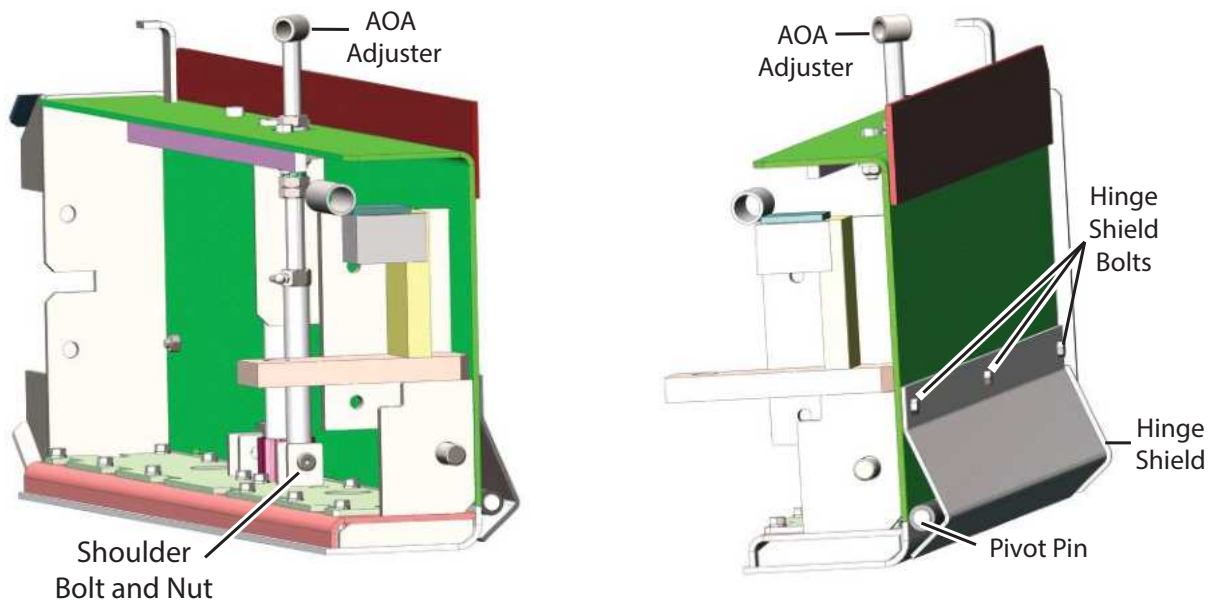


Figure 5-33 Wear Plate Replacement

Torque Hub

If the torque hub has been damaged or worn, use to following procedures for replacement:

1. Raise conveyor and insert safety prop. **(Page 5-6)**
2. Loosen the track tension valve on the track tension manifold to release pressure.
3. Remove master pin in the track chain behind the front idler (bottom side).
4. Back paver up until track lays flat on the ground.
5. Jack up the paver at least two feet (61 cm) off the ground for enough clearance under the undercarriage to perform this procedure.
6. Remove the two cap screws and lock washers attaching the drive motor to the torque hub drive.

NOTE: DO NOT disconnect hoses from the hydraulic drive motor. Hoses are long enough to slide the motor out. Clean hoses before reinstalling.

NOTE: Mark location of torque hub to frame before removing to ensure the drive motor is reinstalled in the same position.

NOTE: Sprocket can be removed before the torque hub by removing the rear track roller and bolts in the sprocket.

7. Remove bolts holding torque hub to track undercarriage. **(Figure 5-34)**

NOTE: Before completely removing all bolts from the torque hub, place a jack or other support underneath to safely lower it to the ground.

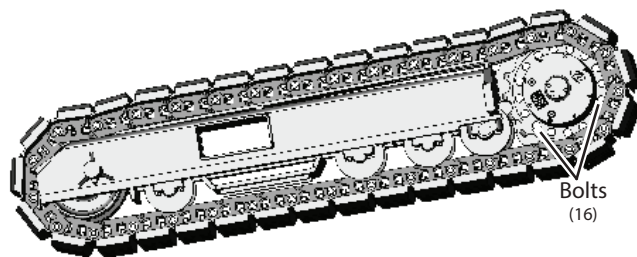


Figure 5-34. Torque Hub

8. Install torque hub in proper position to align with the drive motor.
9. Place thread-locking adhesive on torque hub bolts and torque bolts (see Torque Specifications in **Section 2**).
10. Check O-Ring on the drive motor and replace if worn.
11. Place thread-locking adhesive on sprocket bolts and torque bolts. (See Torque Specifications in **Section 2**)
12. Reinstall rear track roller if previously removed.
13. Fill torque hub with oil. **(Page 5-7)**
14. Lower paver to ground and reconnect track.
15. Retighten track tension valve.
16. Lower conveyor and bolt hopper wings.
17. Start paver and check for any leaks with engine running.

NOTICE DO NOT use your bare hands when checking for hydraulic leaks as serious injury can result from an oil leak under high pressure. Always wear safety glasses and protective clothing.

WARNING Stop the engine immediately if any hydraulic leak is noted. DO NOT start the engine until the leak has been repaired.

Tandem Gear Pump

Hydraulic fluid is transmitted throughout the machine to motors and cylinders, becoming pressurized according to the resistance present. The fluid is controlled by valves and distributed through hoses and tubes. The tandem gear pump plays a significant role in producing hydraulic power as it supplies hydraulic fluid to system components. It is located directly in front of the hydraulic test ports on the right side of the machine.

(Figure 5-35)



Figure 5-35. Tandem Gear Pump

To replace the tandem gear pump:

1. Remove the right side cover, right side access door cover and top right side cover to access the pump.
2. Label and disconnect the hoses to the tandem gear pump, plugging and capping the fitting on the pump.
3. Label, plug and cap the hoses.
4. Remove the two screws attaching the auxiliary pump to the pump plate cover.
5. Lift the auxiliary pump assembly out of the machine and place on a flat surface.
6. Remove the O-ring between the two pumps.
7. Put a small amount of hydraulic oil on the O-Ring and reinstall between the pumps.
8. Align the mounting holes in the auxiliary pump with the mounting on the pump.
9. Attach the pumps with the two mounting screws and torque to 89 ft. lbs. (12 N•).
10. Remove plugs and caps to reconnect hydraulic hoses to pumps as previously labeled.
11. Check hydraulic oil level. Add more if needed.
12. Reinstall covers.
13. Start the paver and check to be sure there are no hydraulic oil leaks.
14. Let machine idle approximately 10 minutes to allow the pump and motor cases to fill with hydraulic oil and ensure pumps are not damaged.

Two-Speed Hydraulic Motors

1. Move paver onto a ramp where you can access the undercarriage.
2. Disconnect, label and plug fittings on hydraulic hoses to the hydraulic motors. (Figure 5-36)

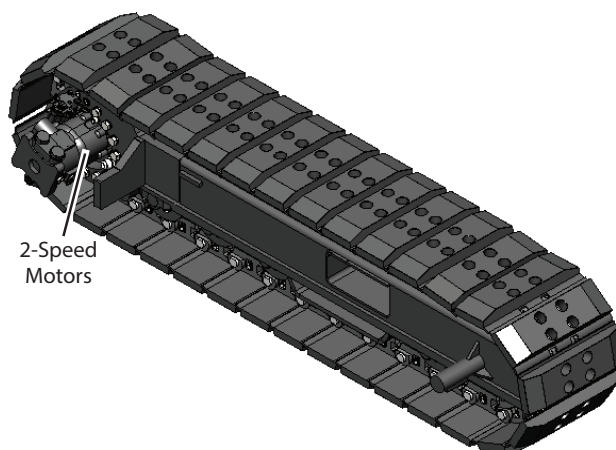


Figure 5-36. Two-Speed Hydraulic Motors

3. Place blocks sufficient to support the hydraulic motors underneath them.
4. Remove the two screws and lock washers attaching the hydraulic motor to the torque hub and carefully separate motor from the torque hub.
5. Remove the O-Ring and drain hydraulic oil from the motor. Discard or repair the motor as appropriate.
6. Lubricate a new O-ring with hydraulic oil and install onto the torque hub.
7. Reattach new or rebuilt hydraulic motor to torque hub and torque screws to 120 ft. lbs. (163 N•)
8. Reconnect hydraulic hoses.
9. Start the engine and let machine run for 10 minutes to work air out of the system.
10. Check for any leaks.

Conveyor Switch Replacement

If you need to replace the conveyor switches, follow these instructions, using the color codes for wiring (**Figure 5-37**) to ensure the conveyor switches on the conveyor flap are wired correctly:

1. Raise the conveyor flap 6-1/2 to 7 inches (16.5 to 17.8 cm) from the bottom of the tank mount support.
2. With the switch installed and the conveyor paddle hanging down:
 - Using a multimeter, measure the ohms across the black and white wires.
 - Using a multimeter, measure the ohms across the red and green wires.

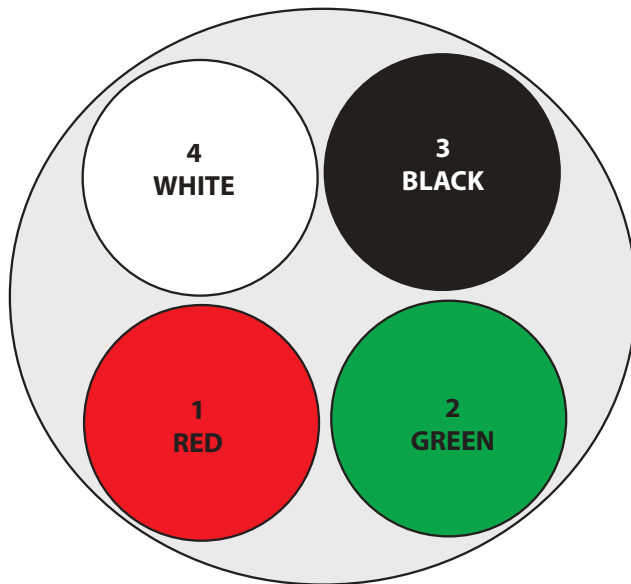


Figure 5-37. Conveyor Switch Wiring

3. Wire the switch using the wires that show continuity.
4. Repeat Steps 2 - 3 for the second switch.

NOTE: The switches are sealed and potted, therefore, they are not serviceable.

WELDMENT



Figure 5-38. Welding

If the machine has been damaged or metal parts worn due to extensive use, minor welding may be necessary for repair. Welding is very dangerous. Only individuals who are properly trained should weld in a dedicated area away from others as even looking at ultraviolet light from the flame can cause serious eye injury.

Welding hazards include toxic fumes, harmful dust, light radiation, burns, combustion from sparks and the potential for extensive damage to the eye. There is also a danger of electric shock. If combustible or flammable materials are nearby, the heat and sparks produced by welding can cause fires or explosions.

TURN THE BATTERY SWITCH OFF AND DISCONNECT BATTERY TERMINALS BEFORE WELDING ON THE MACHINE.

Electrical current can ignite fire or cause an explosion, therefore it is critical to turn off power to the machine. It is also important to grind off the paint to ensure proper ground on the area being welded.

DO NOT MAKE MODIFICATIONS TO THE MACHINE. ONLY weld if needed for repair purposes. Weldment modifications to the machine can void your warranty.

TROUBLESHOOTING

Test Ports

The hydraulic test ports provide an easy and convenient means of checking pressure for the five main functions of the paver: Forward drive (left and right sides), conveyor, charge pressure and the main manifold valve. The test ports are located together just under the hose reel on the right side of the paver. **(Figure 5-39)**

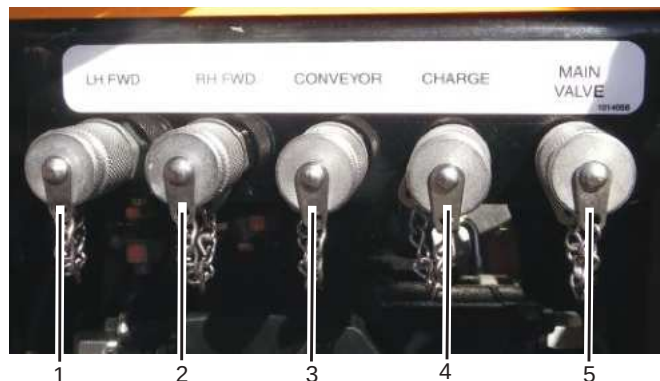


Figure 5-39. Test Port

Item No.	Function	PSI Relief / Gauge
1	Left Forward	Relief set at 3625 PSI. Use 4000 PSI gauge.
2	Right Forward	Relief set at 3625 PSI. Use 4000 PSI gauge.
3	Conveyor	Relief set at 2200 PSI. Use
4	Charge	Relief set at Use 600 PSI gauge.
5	Main Valve	Relief set at 2600 PSI. Use 3000 PSI gauge.

To check pressure:

1. Using the table above, connect the appropriate gauge to the port being tested.
2. Start the engine, then check gauge for the proper pressure reading.
3. If adjustment is needed, locate the pressure-reducing valve on left side of main manifold.
4. Remove valve cap with an allen wrench.
5. Adjust the pressure-reducing valve clockwise for more tension or counterclockwise for less tension.

Plus One

The Plus One is a 50-pin controller that monitors paver control systems and alerts the operator in the event of a fault. The Plus One status light on the control panel **(Figure 5-40)** illuminates red and blinks continuously or blinks, then pauses, then blinks again according to the blink code numbers listed in **Table 5-5**. For example, code 29 will show two blinks, then a pause, then nine blinks.



Figure 5-40. Plus One

When the key is turned on, the status light will illuminate red for approximately three seconds while the Plus One controller powers up, then turn off when the machine is ready to start. The light will stay on and the Plus One will not allow the engine to start if any joystick is out of neutral or more than one Run/Stop switch is in the RUN position.

If the machine is in neutral with the Run/Stop switch in the RUN position, the Plus One will disable the control box after a set period of time. This is a safety measure in the event the operator leaves the station with the control box still active and the joysticks accidentally moved. The operator must then toggle the Run/Stop switch from RUN to STOP and back to RUN again to regain control.

These faults will also prevent machine movement:

- Steering control box not detected.
- Joysticks not optimized.
- Pump control coil fault.
- Brake valve/pump neutral bypass coil fault.
- There is only one steering control box present.
- The fault happens in the steering control box that has control (Run/Stop switch in the RUN position).
- The fault occurs when neither steering control box is in control.

Table 5-6. Plus One Fault Codes

Blink Sequence	Fault / Corrective Action
Continuous at Start-Up.	Joysticks not in neutral. Must be placed in neutral at start-up.
Continuous while running.	Joysticks out of neutral. Return joysticks on both control boxes to neutral.
Continuous while in neutral.	Joysticks in neutral too long with Run/Stop switch in RUN position. Toggle Run/Stop switch from RUN to STOP, then back to RUN.
Continuous rapid blink.	Calibration Mode. Open control panel and unplug the Optimize/Calibrate plug from the Calibrate receptacle.
Continuous slow blink.	Optimize Mode. Open control panel and unplug the Optimize/Calibrate plug from the Optimize receptacle.
21	Left steering control box not optimized.
22 or 27	Left joystick fault. Check wires to left joystick.
23 or 28	Right joystick or steering. Check wires to right joystick or steering wheel fault.
24	Right steering control box not optimized.
25 or 37	Left joystick fault. Check wires to left joystick.
26 or 38	Right joystick or steering wheel fault. Check wires to right joystick or steering wheel.
29	Controller has not received an updated J1939 CAN message. Check J1939 connection and ECM is intact.
31	Brake release/pump neutral bypass valve coil. Output is open or short-circuited. Check the coil and wires.
32	Right pump FWD or REV output fault. Output is open or short-circuited. Check coil and wires.
33	Left pump FWD or REV output fault. Output is open or short-circuited. Check coil and wires.
35	Sensor power fault. Check sensor wiring for power and ground.
36	Vibrator/electric actuator relay fault. Output open or short-circuited. Check relay and wires.

PV480 Digital Display

Under certain conditions, the PV480 digital display can become inoperable. If the display screen is completely black, it must be replaced. If the gauges on the screen become gray (**Figure 5-42**), the display panel is not receiving communication over the CANbus. If this occurs, check the connector. If the gauges are still gray, check the ECU powering up.



Figure 5-41. Gauges Grayed on Screens

Check PV480 Connector

1. Ensure the ignition switch is in the OFF position before starting the machine.
2. Remove the main connector from the rear of the PV480 digital display controller.
3. Inspect the terminals in positions 14 (green) and 26 (yellow) for the CANbus communication.
4. If terminals are properly seated, carefully “unlock” the red retaining clip and slide away from the wires. (**Figure 5-43**)



Figure 5-42. PV480 Main Connector

5. Ensure all the other terminals are locked into the connector shell.
6. Push the red retaining clip back into the locked position and ensure terminals are flush with the red retaining clip.



Figure 5-43. Terminal Seat

7. Reinstall connector on to the PV480 panel, making sure the connector shell locks into its mate on the display panel.

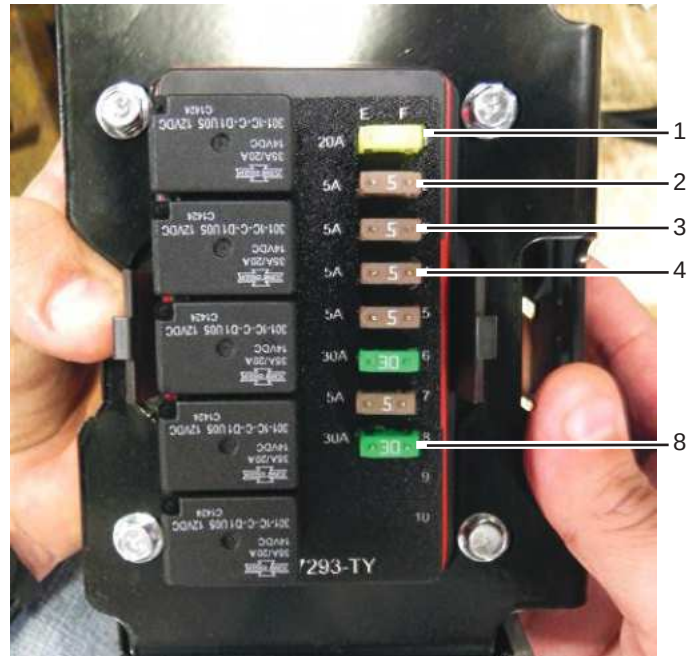


Figure 5-44. Power Distribution Box (PDB)

Check ECU Powering Up

Each engine has a power distribution block (PDB) on the main engine harness that provides power to the ECU through the ECU control relay; main relay; and fuses in Positions 1, 2, 3, 4 and 8. **(Figure 5-45)**

To check the ECU powering up:

1. Locate the PDB on the right side of the paver inside the engine access door.
2. Fuses can be checked by removing the fuse and using a continuity tester OR checking for +12VDC on each pin on the back of the fuse.
3. Confirm operation of ECU and main relays:
 - If the ECU relay is not energizing, starter will not operate.
 - If the main relay is not energizing, the fuel pump will not operate.

If none of these procedures correct the problem, contact your authorized LeeBoy dealer for assistance.

Troubleshooting Chart

The troubleshooting chart below identifies the most common symptoms of mechanical problems. Fault codes are also shown on the PV480 Digital Display unit on the Operator Control Panel.

Contact your authorized LeeBoy dealer for assistance, service or repair.

Table 5-1. Paver Troubleshooting

SYMPTOM	CAUSE	REMEDY
Engine does not start.	Defective battery or low battery charge.	Replace or charge battery as applicable
	Master switch is not set at the ON position.	Set switch to the ON position
	Insufficient fuel supply.	Fill fuel tank
	Safety switch is faulty.	Replace
	Solenoid doesn't function properly.	Ensure wires are tight. Clean solenoid plunger. Replace solenoid coil. Replace or rebuild starter or solenoid.
	Switch box unplugged.	Replug switch box.
	Neutral switch defective.	Replace.
	Engine starter relay faulty.	Replace.
	E-Stop engaged.	Disengage E-Stop.
Engine turns over but does not start.	Low fuel.	Add fuel to fuel tank.
Low battery.	Faulty alternator.	Replace or rebuild
	Indicator light, bad bulb	Replace
Machine will not move.	RUN/STOP switch faulty	Check RUN/STOP switch
Machine does not steer straight.	One of the hydraulic drive motors needs adjustment.	Readjust motor(s).
	Steering control is not centered.	Center steering control.
	Travel pump defective.	Replace or rebuild travel pump.
Machine does not change speed when the 2-Speed switch is engaged.	Defective relay.	Replace relay.
	Defective solenoid.	Replace solenoid.
	Defective drive motor.	Replace drive motor.
Conveyor does not function on one or both sides.	Defective Automatic/Manual switch.	Replace switch.
	Solenoid defective.	Replace.
	Feeder drive chain broken.	Repair or replace chain.
	Defective conveyor motor.	Replace.
	Rear conveyor shaft broken.	Replace.

SYMPTOM	CAUSE	REMEDY
Tracks don't operate smoothly.	Tracks too loose.	Tighten track pad bolts.
	Engine RPM is too low to hold track tension.	Rev engine to 1400 RPMs then throttle back to 700 RPMs.
	Track rollers worn.	Replace.
	Track tension pressure.	Check tension pressure and relieve or adjust.
Machine will not pull on one or both sides.	Faulty hydraulic motor.	Replace.
	Pump pressure too low.	Check pump pressure and relieve or adjust.
	Faulty torque hub.	Rebuild or replace.
Engine runs but there is no hydraulic pressure.	Pump drive coupling faulty.	Replace.
	Defective pump.	Replace.
Auger not turning properly.	Drive chain is too loose.	Adjust.
	Drive chain broken.	Replace.
	Faulty motor.	Replace.
	Solenoid valve defective.	Replace solenoid.
	Asphalt buildup.	Clean thoroughly and grease.
	Overload of material to augers.	Set conveyor to proper speed in AUTO or use paddles in MANUAL position.
Screed extensions binding.	Asphalt buildup.	Keep clean and greased.
Screed extension loose.	Out of adjustment.	Adjust hold-downs on extensions.
Screed leaving streak down center of pavement.	No lead crown in screed	Crown leading edge of screed.
	Screed worn out or damaged.	Replace.
	Extensions set too low.	Adjust extension. Always begin operation with extensions extended up with no down pressure.
	Screed not heated properly.	Check elements and heat control box.
Screed leaving ripples in pavement.	Extension set too low.	Readjust extensions.
	Extensions work up and down.	Adjust top guide.
	Extension rod bushings worn.	Replace bushings.
Flight screw locking up.	Twisting screed too far.	Give screed time to react.
	Screw seized.	Replace screw.
Flight screw bearing damage.	Twisting screed too far.	Give screed time to react.
	Loading and unloading.	Check ramps for easy access.
Hydraulic oil leaking from breather cap.	Hydraulic oil tank overfilled.	Drain to proper fill level.
	Oil overheated.	Slow paver down.
		Check oil cooler and thermostat.
Hydraulic pump cavitation or lost power.	Low level in hydraulic tank.	Refill to proper level.
	Clogged filters.	Replace filters.
	Suction hose loose.	Retighten.
	Charge pump worn.	Rebuild or replace charge pump.

SYMPTOM	CAUSE	REMEDY
Feeder does not work on one or both sides.	Defective switch	Replace switch.
	Solenoid defective	Replace solenoid.
	Feeder drive chain broken	Adjust or repair chain.
	Defective conveyor motor	Replace motor.
	Rear conveyor shaft broken	Replace conveyor shaft.
Feeder flight bars don't function properly.	Flight chains too loose	Adjust.
	Feeder drive chain too loose	Adjust.
Loss of power to drives.	Relief out of adjustment.	Check pressure and adjust if needed.
	Piston groups worn.	Replace.
	No charge pressure.	Check that charge pressure is 320 PSI.
Electric screed heating system will not operate.	Control box power switch not in ON position	Ensure that the screed operator control box Power switch is ON.
	Breakers are in a "tripped position."	Ensure all element breakers are in the proper set position.
	Generator malfunction.	Ensure generator is "spinning." Check voltage and frequency. Rebuild or replace if needed.
Only part of the electric screed heats.	Screed section not plugged into bottom of the control box..	Replug.
	Element breakers for screed section in a "tripped" condition.	Ensure the element breakers for that screed section are not "tripped."
Electric screed heat system doesn't start, or starts and doesn't run very long.	Heating system timed out.	Check timing relay. Adjust or replace.
Electric Screed is heating, but never gets hot enough to pave.	Elements improperly clamped.	Ensure elements are clamped properly.
	Generator malfunction.	Ensure generator is "spinning." Check voltage and frequency. Rebuild or replace if needed.
Electric heating system functions but the HEAT ON light isn't illuminated.	Indicator light bulb.	Replace the HEAT ON indicator light bulb.
Elements have been tested, but the breaker still trips.	Faulty element wiring.	Inspect and test element wiring.

PV480 DIAGNOSTIC TROUBLE CODE (DTC) CHART

LEGEND

SPN: Suspect Parameter Number

EGR: Exhaust Gas Recirculation

NE-G: Negative Ground

SCV: Selective Control Valve

DC: Direct Current

PLV: Pressure Limiting Valve

DDC: Direct Digital Control

ETC: Electronic Throttle Control

MPROP: Manifold Pressure Rail Operating Pressure

EEPROM: Electrically Erasable Programmable Read-Only Memory

DPF: Diesel Particulate Filter

ECU: Engine Control Unit

NE: Neutral

MAF: Mass Air Flow

IC: Integrated Circuit

CAN: Controller Area Network

SW: Switch

CCVS: Current Controlled Voltage Source

FMI: Failure Mode Identifier

CPU: Central Processing Unit

G: Ground

PM: Particulate Matter

EBC: Electronic Brake Control

CM: Control Module

TSC: Torque Speed Control

SPN	FMI	DTC	SYMPTOM/CAUSE	RECOVERY FROM ERROR
29	3	Accelerator position sensor 2: High	Battery short circuit out of sensor/harness. Voltage of accelerator position sensor 2 is 4.8V or less.	Forced idle. (Accelerator = 0%) Diagnostic counter = zero
29	4	Accelerator position sensor 2: Low	Ground short circuit or open circuit of sensor/harness. Voltage of accelerator position sensor 2 is 0.3V or less.	Forced idle. (Accelerator = 0%) Diagnostic counter = zero
91	2	Accelerator position sensor correlation error	Deviation from designed correlation in two sensors. Voltage of accelerator position sensor 1 is 4.8V or less.	Forced idle. (Accelerator = 0%) Diagnostic counter = zero
91	3	Accelerator position sensor 1: High	Battery short circuit or open circuit of sensor/harness. Voltage of accelerator position sensor 1 is 4.8V or less.	Forced idle. (Accelerator = 0%) Diagnostic counter = zero
91	4	Accelerator position sensor 1: Low	Ground short circuit or open circuit of sensor/harness. Voltage of accelerator position sensor 1 is 0.3 or less.	Forced idle. (Accelerator = 0%) Diagnostic counter = zero
100	1	Oil pressure error.	Engine oil pressure.	Key switch turn OFF.
102	3	Boost pressure sensor: High	Failure of sensor. Voltage of boost pressure sensor is 4.9V or above.	Key switch turn OFF. (Default value is set in consideration with high altitude usage. Engine power drops.)
102	4	Boost pressure sensor: Low	Failure of sensor. Voltage of boost pressure sensor is 0.2V or below.	Key switch turn OFF. (Default value is set in consideration with high altitude usage. Engine power drops.)
108	3	Barometric pressure sensor error: High	Barometric voltage 4.4V or more.	Diagnostic counter = zero (Default value is set in consideration with high altitude usage. Engine power drops.)

SPN	FMI	DTC	SYMPTOM/CAUSE	RECOVERY FROM ERROR
108	4	Barometric pressure sensor error: Low	Barometric voltage 1.6V or less.	Diagnostic counter = zero (Default value is set in consideration with high altitude usage. Engine power drops.)
110	0	Engine overheat.	Overheat of engine temperature greater than 248° F (120° C)	Diagnostic counter = zero Output limitation: approximately 75% of normal condition. EGR stop. Intake throttle 100% open.
110	3	Coolant temperature sensor: High	Open circuit or +B short circuit of sensor/harness. Voltage of coolant temperature sensor is 4.9V or above.	Key switch turn OFF. (White smoke increases at low temperature.)
110	4	Coolant temperature sensor: Low	Ground short circuit of sensor/harness. Voltage of coolant temperature sensor is 0.1V or less.	Key switch turn OFF. (White smoke increases at low temperature.)
132	1	Intake air volume: Low	Engine inlet air mass flow rate tacking. (Disconnect turbo blower intake hose.)	Key switch turn OFF.
132	3	MAF sensor: High	Engine inlet air mass flow rate less than half of target value. MAF sensor voltage: 4.9V or more at normal operating condition.	Key switch turn OFF. Engine is not forcibly stopped by ECU. STRONGLY recommend operator stop engine promptly.
132	4	MAF sensor: Low	Open circuit or ground short circuit of sensor/harness. MAF sensor voltage: 0.1V or less.	Key switch turn OFF. Engine is not forcibly stopped by ECU. STRONGLY recommend operator stop engine promptly.
132	15	Boost pressure: Low	Boost pressure sensor output is below target level in high air flow operating conditions.	Key switch turn OFF. EGR stop. Engine power is restricted by boost pressure signal accordingly.
157	0	High rail pressure.	Actual pressure exceeds the command pressure. Actual pressure $\geq$ 197MPa (28600 psi or 2010 kgf/cm ²)	Diagnostic counter = zero EGR stop.
157	3	Rail pressure sensor: High	Open circuit or +B short circuit of sensor/harness. Failure of sensor. Voltage or rail pressure sensor is 4.9V or above.	Key switch turn OFF. Engine running noise and white smoke increases. Engine forcibly stopped.
157	4	Rail pressure sensor: Low	Ground short circuit of sensor/harness. Failure of sensor. Voltage of rail pressure sensor is 0.7V or less.	Key switch turn OFF. Engine running noise and white smoke increases. Engine forcibly stopped.
168	3	Battery voltage: High	Open circuit, short circuit or damage to harness. Failure of battery. ECU recognition of battery voltage is above 16V in 12V system. Faulty starting.	Key switch turn OFF. EGR stop.
168	4	Battery voltage: Low	Open circuit, short circuit or damage to harness. Failure of battery. ECU recognition of battery voltage is below 8V in 12V system. Faulty starting or engine may stop completely. (Not monitored during cranking.)	Diagnostic counter = zero EGR stop.

SPN	FMI	DTC	SYMPTOM/CAUSE	RECOVERY FROM ERROR
171	3	Intake air temperature built-in MAF sensor: High	Open circuit or +B short circuit of sensor/harness. Intake air temperature built-in MAF sensor voltage: 4.9V or more.	Diagnostic counter = zero
171	4	Intake air temperature built-in MAF sensor: Low	Ground short circuit of sensor/harness. Intake air temperature built-in MAF sensor voltage: 0.1V or less.	Diagnostic counter = zero
172	0	Intake air temperature: High	Intake air temperature higher than 140° F (60° C).	Key switch turn OFF.
172	3	Intake air temperature error: High	Open circuit or +B short circuit of sensor/harness. Intake air temperature sensor is 4.9V or above.	Diagnostic counter = zero (White smoke increases at low temperature.)
172	4	Intake air temperature error: Low	Ground short circuit of sensor/harness. Intake air temperature sensor is 0.05V or less.	Diagnostic counter = zero (White smoke increases at low temperature.)
174	0	Fuel temperature high.	Fuel temperature higher than 194° F (90° C).	Diagnostic counter = zero
174	3	Fuel temperature sensor: High	Open circuit or +B short circuit of sensor/harness. Voltage of temperature sensor in supply pump is 4.9V or above.	Diagnostic counter = zero
174	4	Fuel temperature sensor: Low	Ground short circuit of sensor/harness. Voltage of temperature sensor in supply pump is 0.1V or less.	Diagnostic counter = zero
190	0	Engine speed.	Engine speed exceeds threshold speed. Engine speed $\geq$ 3500 min-1 (rpm).	Diagnostic counter = zero
628	2	Program memory.	Check-Sum error.	Key switch turn OFF. Engine stopped without delay.
633	7	Pressure limiter emergency open.	Combination of fuel leak and one of conditions below: 1. Rail pressure exceeds 191MPa (27700 psi or 1950 kgf/cm ²). 2. Within one second after the rail pressure goes below temperature in #1, it increases above.	Key switch turn OFF. EGR stop. (Engine speed may go down due to lack of fuel pressure.)
636	2	Crank position sensor pulse number error.	Open circuit or short circuit of sensor/harness. Failure of sensor. Pulse rotation is not 56 teeth. Faulty starting. Engine vibration increases slightly.	Diagnostic counter = zero
636	7	NE-G phase shift. NE: Crankshaft position sensor. G: Camshaft position sensor.	Large phase shift between NE and G pulses within +/- 15 degrees. Engine hesitates at start-up.	Diagnostic counter = zero
636	8	No input of NE sensor pulse.	Open circuit or short circuit of sensor/harness. Failure of sensor. No recognition of NE sensor pulse. Faulty starting. Engine vibration increases slightly.	Diagnostic counter = zero

SPN	FMI	DTC	SYMPTOM/CAUSE	RECOVERY FROM ERROR
651	3	Open circuit of harness/coil in 1st cylinder injector.	Open circuit of harness or injector coil. Engine vibration increases. Injectors that have no error are operated.	Key switch turn OFF.
652	3	Open circuit of harness/coil in 2nd cylinder injector.	Open circuit of harness or injector coil. Engine vibration increases. Injectors that have no error are operated.	Key switch turn OFF.
653	3	Open circuit of harness/coil in 3rd cylinder injector.	Open circuit of harness or injector coil. Engine vibration increases. Injectors that have no error are operated.	Key switch turn OFF.
654	3	Open circuit of harness/coil in 4th cylinder injector.	Open circuit of harness or injector coil. Engine vibration increases. Injectors that have no error are operated.	Key switch turn OFF.
676	0	Glow heater relay driving circuit overheat.	Glow relay coil resistance or load is too high. Faulty starting. White smoke increases.	Key switch turn OFF.
676	5	Open circuit of glow relay driving circuit.	Open circuit of harness or relay coil. Faulty starting. White smoke increases.	Key switch turn OFF.
679	7	Pressure limiter not open.	Rail pressure value is sticking or not enough engine power to open PLV forcibly.	Key switch turn OFF.
723	2	G sensor pulse number error.	After fault opening PLV, rail pressure is above 160 MPa.	Diagnostic counter = zero Engine stops.
723	8	No input of G sensor pulse.	Open circuit or short circuit of sensor/harness. Failure of sensor. No recognition of G sensor pulse. Engine hesitates at start-up.	Diagnostic counter = zero
1077	2	Failure of CPU.	CPU fatal error. Engine stops.	Key switch turn OFF.
1239	1	Fuel leak in high-pressured fuel system.	Fuel consumption is calculated from the difference of fuel pressure of, before and after the injection. Error is detected when excess fuel consumption is found. Engine could stop.	Key switch turn OFF.
1347	3	+B short circuit of SCV.	EGR stops.	Key switch turn OFF.
1347	4	SVC drive system error.	Open circuit or ground short circuit of SCV.	Key switch turn OFF. EGR stops, engine forcibly stops later.
1347	5	Open circuit of SCV (MPROP)	Open circuit short of SVC.	Key switch turn OFF. EGR stops, engine forcibly stops later.
1347	7	SCV stuck in open position.	Actual rail pressure continuously exceeds the command rail pressure. Discharge request of supply pump goes below 0 mm ³ /st and the actual rail pressure is 10 MPa for 26 seconds or more. engine may stop.	Key switch turn OFF.
1485	2	Main relay locked in closed position.	Failure of main relay. Stays active longer than one second without command. Battery goes dead.	Diagnostic counter = zero

SPN	FMI	DTC	SYMPTOM/CAUSE	RECOVERY FROM ERROR
3242	0	Emergency exhaust gas temperature sensor 1: High	DPF inlet temperature higher than 1319° F (715° C). Engine stops. Inhibit starter relay activation until exhaust temperatures reduces down to 572° F (300° C).	Under 572° F (300° C) and key switch turn OFF.
3242	3	Exhaust gas temperature sensor 1: High	Open circuit or +B short circuit of sensor/harness. DPF inlet temperature sensor voltage 4.92V or more.	Key switch turn OFF.
3242	4	Exhaust gas temperature sensor 1: Low	Ground short circuit of sensor/harness. DPF inlet temperature sensor voltage 0.08V or less.	Key switch turn OFF.
3246	0	Emergency exhaust gas temperature sensor 2: High	DPF outlet temperature 1508° F (820° C) or more.	Under 572° F (300° C) and key switch turn OFF. Inhibit starter relay activation until exhaust temperature reduces down to 572° F (300° C).
3246	3	Exhaust gas temperature sensor 2: High	Open circuit or +B short circuit of sensor/harness. DPF outlet temperature sensor voltage 4.92V or more.	Key switch turn OFF.
3246	4	Exhaust gas temperature sensor 2: Low	Ground short circuit of sensor/harness. DPF outlet temperature sensor voltage 0.08V or less.	Key switch turn OFF.
3251	3	Differential pressure sensor 1: High	Open circuit or +B short circuit of sensor/harness. DPF differential pressure sensor voltage 4.7V or more.	Key switch turn OFF.
3251	4	Differential pressure sensor 1: Low	Ground short circuit of sensor/harness. DPF differential pressure sensor voltage 0.21V or less.	Key switch turn OFF.
3252	0	Emission deterioration.	DOC is heated due to unburned fuel. Output and accelerator limitation 50%. EGR stops.	Key switch turn OFF to minimize emission to DPF.
3509	3	Sensor supply voltage 1: High	Voltage to sensor is above 5.625V. EGR stops. Faulty starting. Engine may stop. Emission related.	Key switch turn OFF.
3509	4	Sensor supply voltage 1: Low	Voltage to sensor is below 4.375V. EGR stops. Faulty starting. Engine may stop. Emission related.	Key switch turn OFF.
3510	3	Sensor supply voltage 2: High	Voltage to sensor is above 5.625V. Faulty starting. Emission related.	Key switch turn OFF.
3510	4	Sensor supply voltage 2: Low	Voltage to sensor is below 4.375V. Faulty starting. Emission related.	Key switch turn OFF.
3511	3	Sensor supply voltage 3: High	Voltage to sensor is above 5.25V. Faulty starting.	Key switch turn OFF.
3511	4	Sensor supply voltage 3: Low	Voltage to sensor is below 4.75V. Faulty starting.	Key switch turn OFF.

SPN	FMI	DTC	SYMPTOM/CAUSE	RECOVERY FROM ERROR
3701	0	Excessive PM 5.	PM accumulation more than trigger level. Regeneration Level = 5.	Key switch turn OFF. Engine not forcibly stopped by ECU. STRONGLY recommend operator to stop engine promptly. Must be reset by Kubota service tool.
3701	15	Excessive PM 3.	PM accumulation more than trigger level. Regeneration Level = 3.	Diagnostic counter = 0
3701	16	Excessive PM 4.	PM accumulation more than trigger level. Regeneration Level = 4.	Diagnostic counter = 0
4765	0	Emergency exhaust gas temperature sensor 0: High	DOC inlet temperature 1292° F (700° C) or more. Engine stops.	Key switch turn OFF. Inhibit starter relay activation until exhaust temperature reduces down to 527° F (300° C).
4765	3	Exhaust gas temperature sensor 0: High	Open circuit or +B short circuit of sensor/harness. DOC inlet temperature sensor voltage 4.92V or more.	Key switch turn OFF.
4765	4	Exhaust gas temperature sensor 0: Low	Open circuit or +B short circuit of sensor/harness. DOC inlet temperature sensor voltage 0.08V or less.	Key switch turn OFF.
523523	2	Injector drive circuit open in Nos. 1 & 4 cylinder simultaneously.	Wiring harness open circuit. Injectors that have no DTC are operated. Engine vibration increases and may stop.	Key switch turn OFF.
523523	3	Nos. 1 & 4 cylinder injector short to +B at power supply side, or all cylinder injectors short to +B.	Wiring harness short to +B. Injectors that have no DTC are operated. Engine vibration increases and may stop.	Key switch turn OFF.
523523	4	Nos. 1 & 4 cylinder injector short to ground at power supply side, or all cylinder injectors short to ground.	Wiring harness short to ground. Injectors that have no DTC are operated. Engine vibration increases and may stop.	Key switch turn OFF.
523524	2	Injector drive circuit open in Nos. 2 & 3 cylinder simultaneously.	Wiring harness open circuit. Injectors that have no DTC are operated. Engine vibration increases and may stop.	Key switch turn OFF.
523524	3	Nos. 2 & 3 cylinder injector short to +B at power supply side, or all cylinder injectors short to +B.	Wiring harness short to +B. Injectors that have no DTC are operated. Engine vibration increases and may stop.	Key switch turn OFF.
523524	4	Nos. 2 & 3 cylinder injector short to ground at power supply side, or all cylinder injectors short to ground.	Wiring harness short to ground. Injectors that have no DTC are operated. Engine vibration increases and may stop.	Key switch turn OFF.
523525	1	Injector charge voltage low.	Injector charge voltage low. Failure of charge circuit of ECU. Engine may stop.	Key switch turn OFF.

SPN	FMI	DTC	SYMPTOM/CAUSE	RECOVERY FROM ERROR
523527	2	ECU monitoring error.	Failure of monitoring IC of CPU. Engine stops.	Key switch turn OFF.
523535	0	Injector charge voltage: High	EGR stops. Engine forcibly stops 60 seconds later.	Key switch turn OFF.
523536	2	EGR feedback error.	DC motor feedback control error. During wrong duty feedback, activation of restoration will repeat 30 times. If the restoration was not successfully completed, it will be judged as a feedback error. EGR stops.	Diagnostic counter = zero
523537	2	EGR DC motor temperature error.	Estimated temperature is 113° F (45° C) or above. EGR stops.	Diagnostic counter = zero
523538	2	QR data error.	QR data read error from EEPROM. Nozzle correction is not executed.	Key switch turn OFF.
523539	2	Pump seizing 1.	Rail pressure of 230 MPa (33400 psi or 2350 kgf/cm ²) or more continues one second under the condition of above 800 min-1 (rpm). Under 800 min-1 (rpm) condition, rail pressure of 220 MPa (31900 psi or 2250 kgf/cm ²) or more continues one second under the condition of below 800 min-1 (rpm). [Threshold changes depending upon the engine speed. 700 min-1 (rpm) should be used as a reference.	Key switch turn OFF to minimize PM emission to DPF and avoid extremely high pressure in injection system.
523540	2	Pump seizing 2.	Rail pressure of 197MPa (28600 psi or 2010 kgf/cm ²) or more continues one second under the condition of above 800 min-1 (rpm). Under 800 min-1 (rpm) condition, rail pressure of 220 MPa (31900 psi or 2250 kgf/cm ²) or more continues one second under the condition of below 800 min-1 (rpm). [Threshold changes depending upon the engine speed. 700 min-1 (rpm) should be used as a reference.	Key switch turn OFF.
523541	3	EGR lift sensor: High	+B short circuit of sensor/harness. Failure of sensor. Voltage of ECR lift sensor is 4.5V or above. EGR stops.	Key switch turn OFF.
523541	4	EGR lift sensor: Low	Open circuit or short circuit of sensor/harness. Failure of sensor. Voltage of ECR lift sensor is 0.3V or less. EGR stops.	Key switch turn OFF.
523543	2	Accelerator position sensor error (CAN).	Accelerator position sensor signal error (sensor/harness open circuit, ground short circuit, etc.).	Diagnostic counter = zero. CAN signal recovers.
523544	3	+B short of air heater relay driving circuit.	+B short circuit of harness. Faulty starting. White smoke increases.	Key switch turn OFF.

SPN	FMI	DTC	SYMPTOM/CAUSE	RECOVERY FROM ERROR
523544	4	Ground short of air heater relay driving circuit.	Ground short or open circuit of harness.	Key switch turn OFF.
523547	2	CAN2 bus off.	CAN2 bus off.	Key switch turn OFF.
523548	2	CAN-KBT frame error.	CAN-KBT frame open circuit error.	Key switch turn OFF.
523572	4	EGR position sensor failure.	EGR position sensor error signal received via CAN. EGR stops.	Key switch turn OFF.
523574	3	EGR actuator open circuit.	EGR actuator open error signal received via CAN. EGR stops.	Key switch turn OFF.
523575	7	EGR actuator valve stuck.	EGR actuator valve stuck error received via CAN. EGR stops.	Key switch turn OFF.
523576	2	EGR (DC motor) overheat.	EGR (DC motor) temperature error signal received via CAN (exceeds 257° F or 125° C). EGR stops.	Key switch turn OFF.
523577	2	EGR (DC motor) temperature sensor failure.	EGR (DC motor) temperature sensor error signal received via CAN. EGR stops.	Key switch turn OFF.
523578	2	No communication with EGR.	Interruption of CAN. EGR stops.	Key switch turn OFF.
523580	2	Intake throttle feedback error.	Deviation of throttle position is not corrected in 20 times of duty error recovery action.	Key switch turn OFF.
523582	3	Intake throttle lift sensor: High	Intake throttle lift sensor voltage 4.89V or more.	Key switch turn OFF.
523582	4	Intake throttle lift sensor: Low	Intake throttle lift sensor voltage 0.1V or less.	Key switch turn OFF.
523589	17	Low coolant temperature in parked regeneration.	During regeneration mode, engine warm-up condition is not satisfied because coolant temperature is too low (below 149° F or 65° C).	Diagnostic counter = zero Leaving from Parked active regeneration status.
523590	16	Parked regeneration timed out.	Regeneration incomplete due to low temperature of DPF.	Diagnostic counter = zero Leaving from Parked active regeneration status.
523591	2	CAN CCVS (parking and vehicle speed) frame error.	CAN CCVS frame time-out error. Parking SW = off. Vehicle speed = 0	Key switch turn OFF.
523592	2	CAN CM1 (Regen SW) frame error.	CAN CM1 frame time-out error. Regeneration inhibit = on. Parked regeneration SW = off.	Key switch turn OFF.
523593	2	CAN DDC1 (transmission) frame error.	CAN DDC1 frame time-out error.	Key switch turn OFF.
523594	2	CAN ETC2 (neutral SW) frame error.	CAN ETC2 frame time-out error	Key switch turn OFF.
523595	2	CAN ETC5 (neutral SW) frame error.	CAN ETC5 frame time-out error.	Key switch turn OFF.
523596	2	CAN TSC1 frame error.	No request to "TSC1 buffer" continues three times after over-ride control request (other than 0x00).	Diagnostic counter = zero

NOTES




Section 6

SCHEMATICS

	Page
Schematics	6-1
Electrical Schematic (1 of 6)	6-3
Electrical Schematic (2 of 6)	6-5
Electrical Schematic (3 of 6)	6-7
Electrical Schematic (4 of 6)	6-9
Electrical Schematic (5 of 6)	6-11
Electrical Schematic (6 of 6)	6-13
Bulkhead to Generator Harness	6-15
Electric Steering Cord, 4 Feet	6-17
Plus One Harness	6-19
Ultrasonic Power Harness	6-21
Manual Steering Control Box (1 of 2)	6-23
Manual Steering Control Box (2 of 2)	6-25
Steering Wheel Box (Option)	6-27
Control Box Assembly (1 of 2).	6-29
Control Box Assembly (2 of 2)	6-31
Electric Heat Control	6-33
Main Harness (1 of 2)	6-35
Main Harness (2 of 2).	6-37
Hydraulic System (1 of 4)	6-39
Hydraulic System (2 of 4).	6-41
Hydraulic System (3 of 4).	6-43
Hydraulic System (4 of 4).	6-45

NOTES

Schematic # 1014863

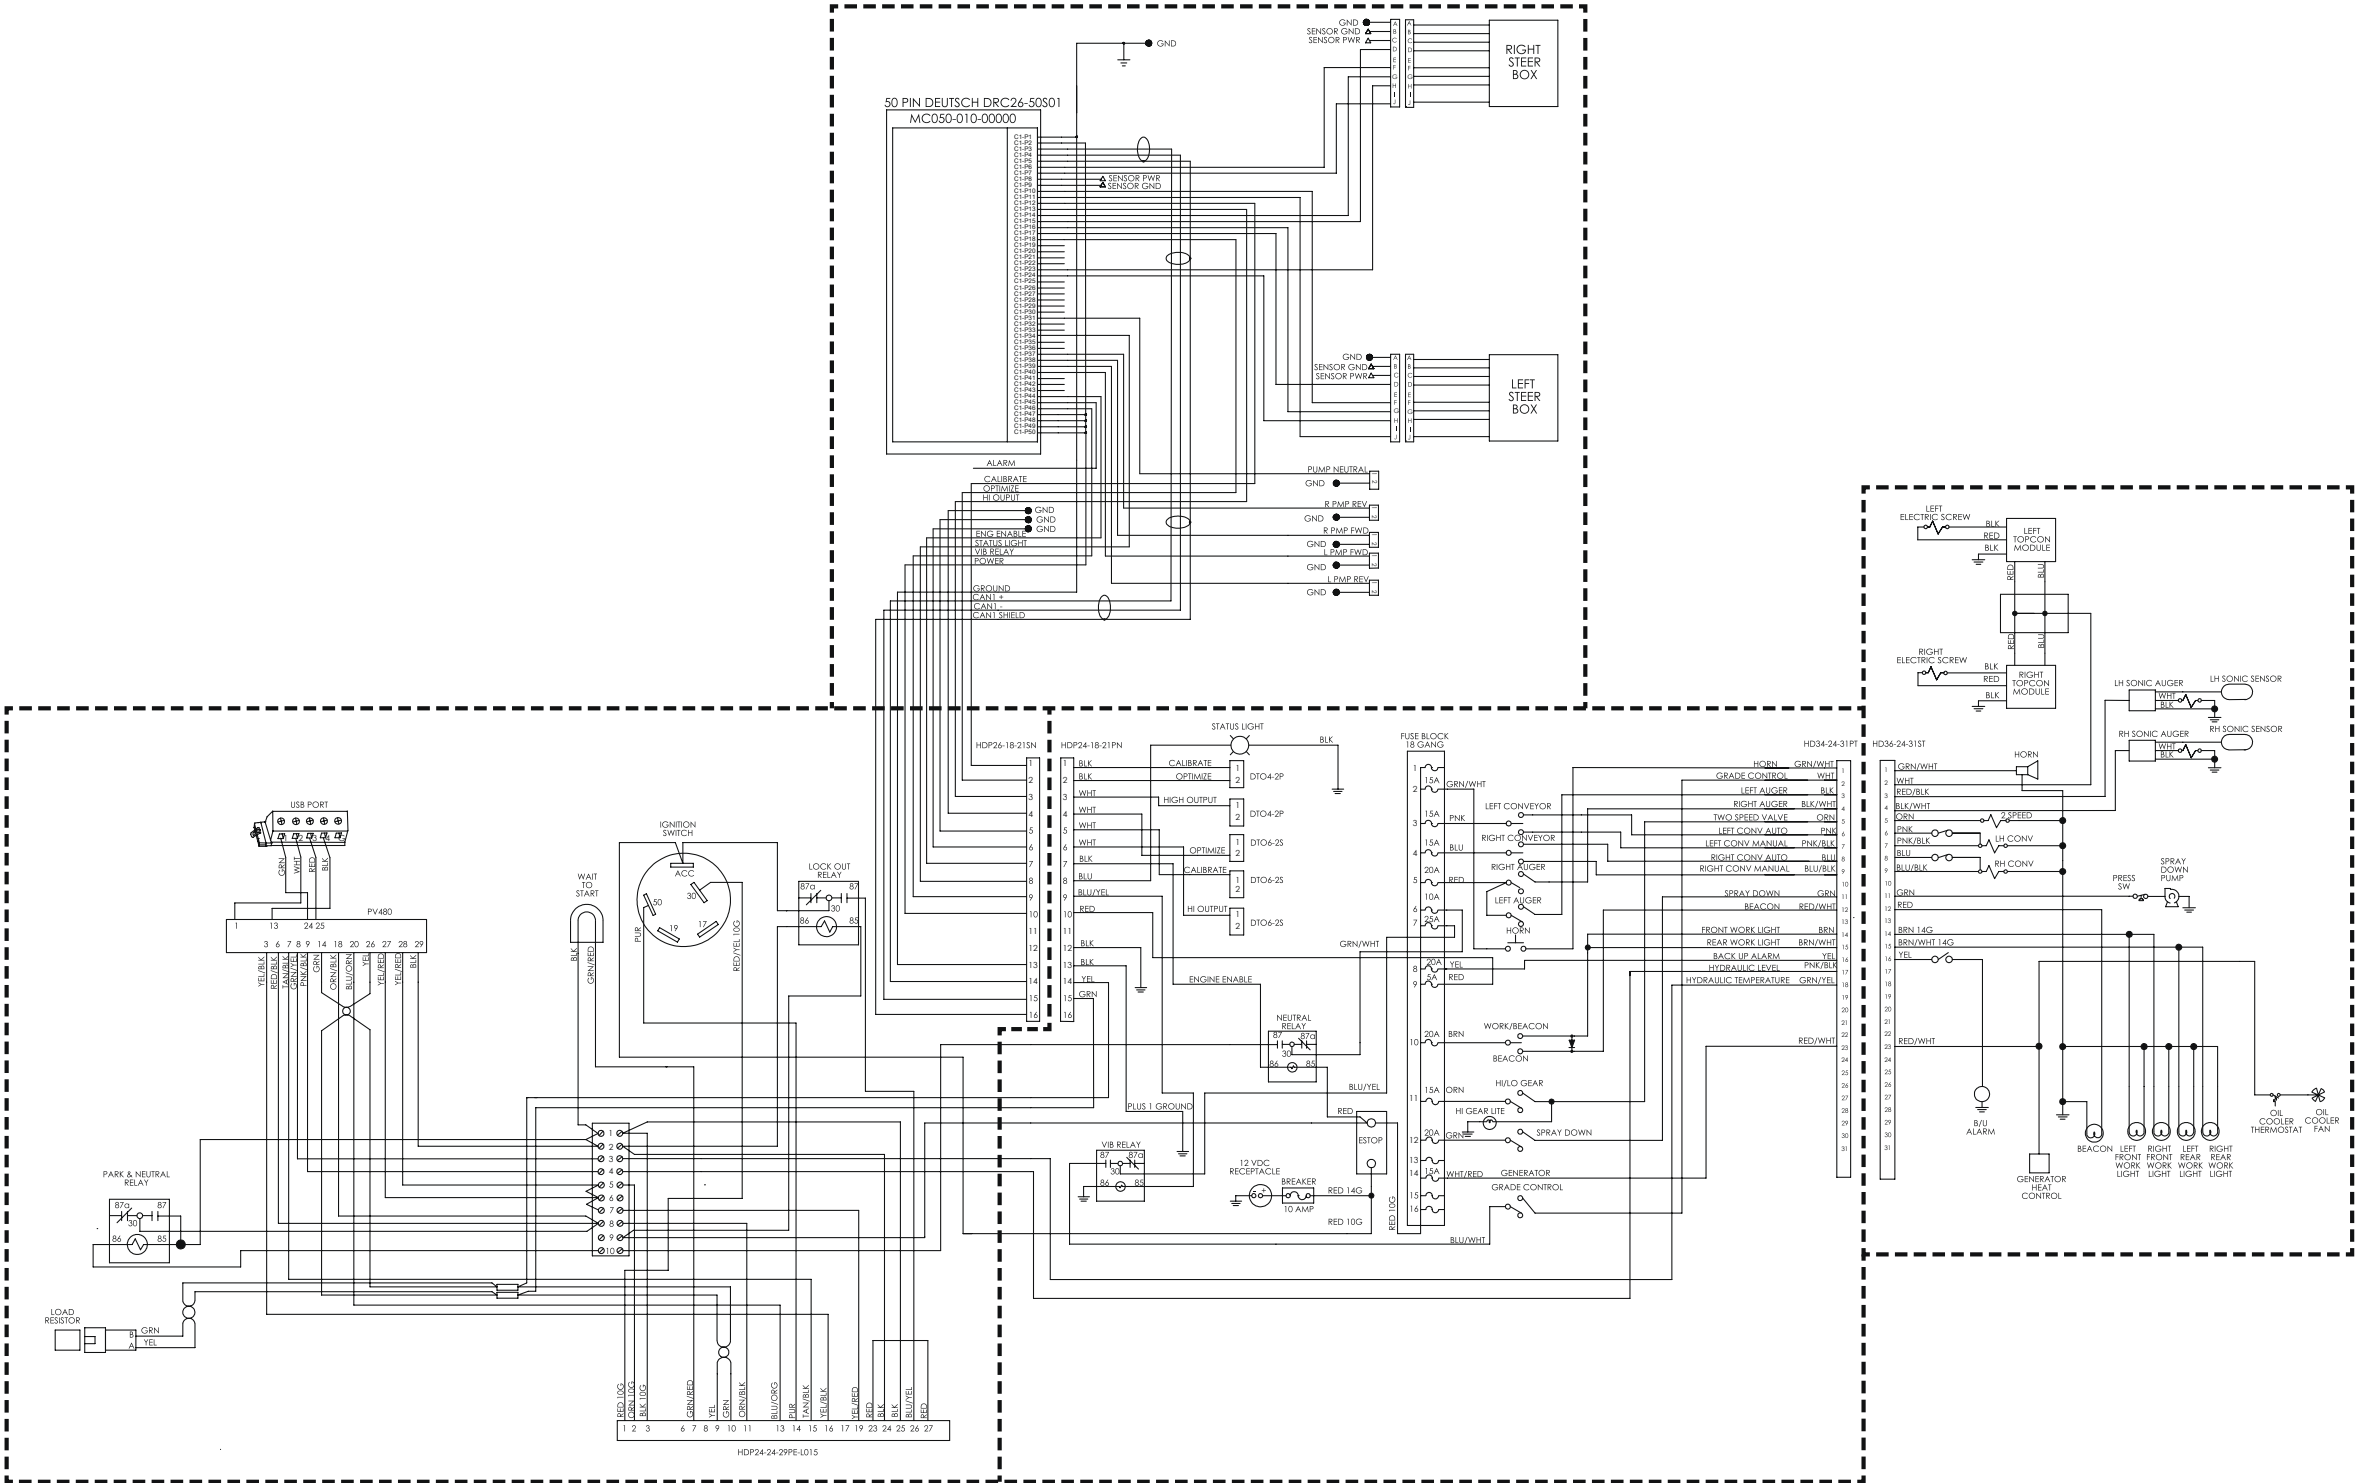

NOTES

ELECTRICAL SCHEMATIC (2 OF 6)

Schematic # 1014863

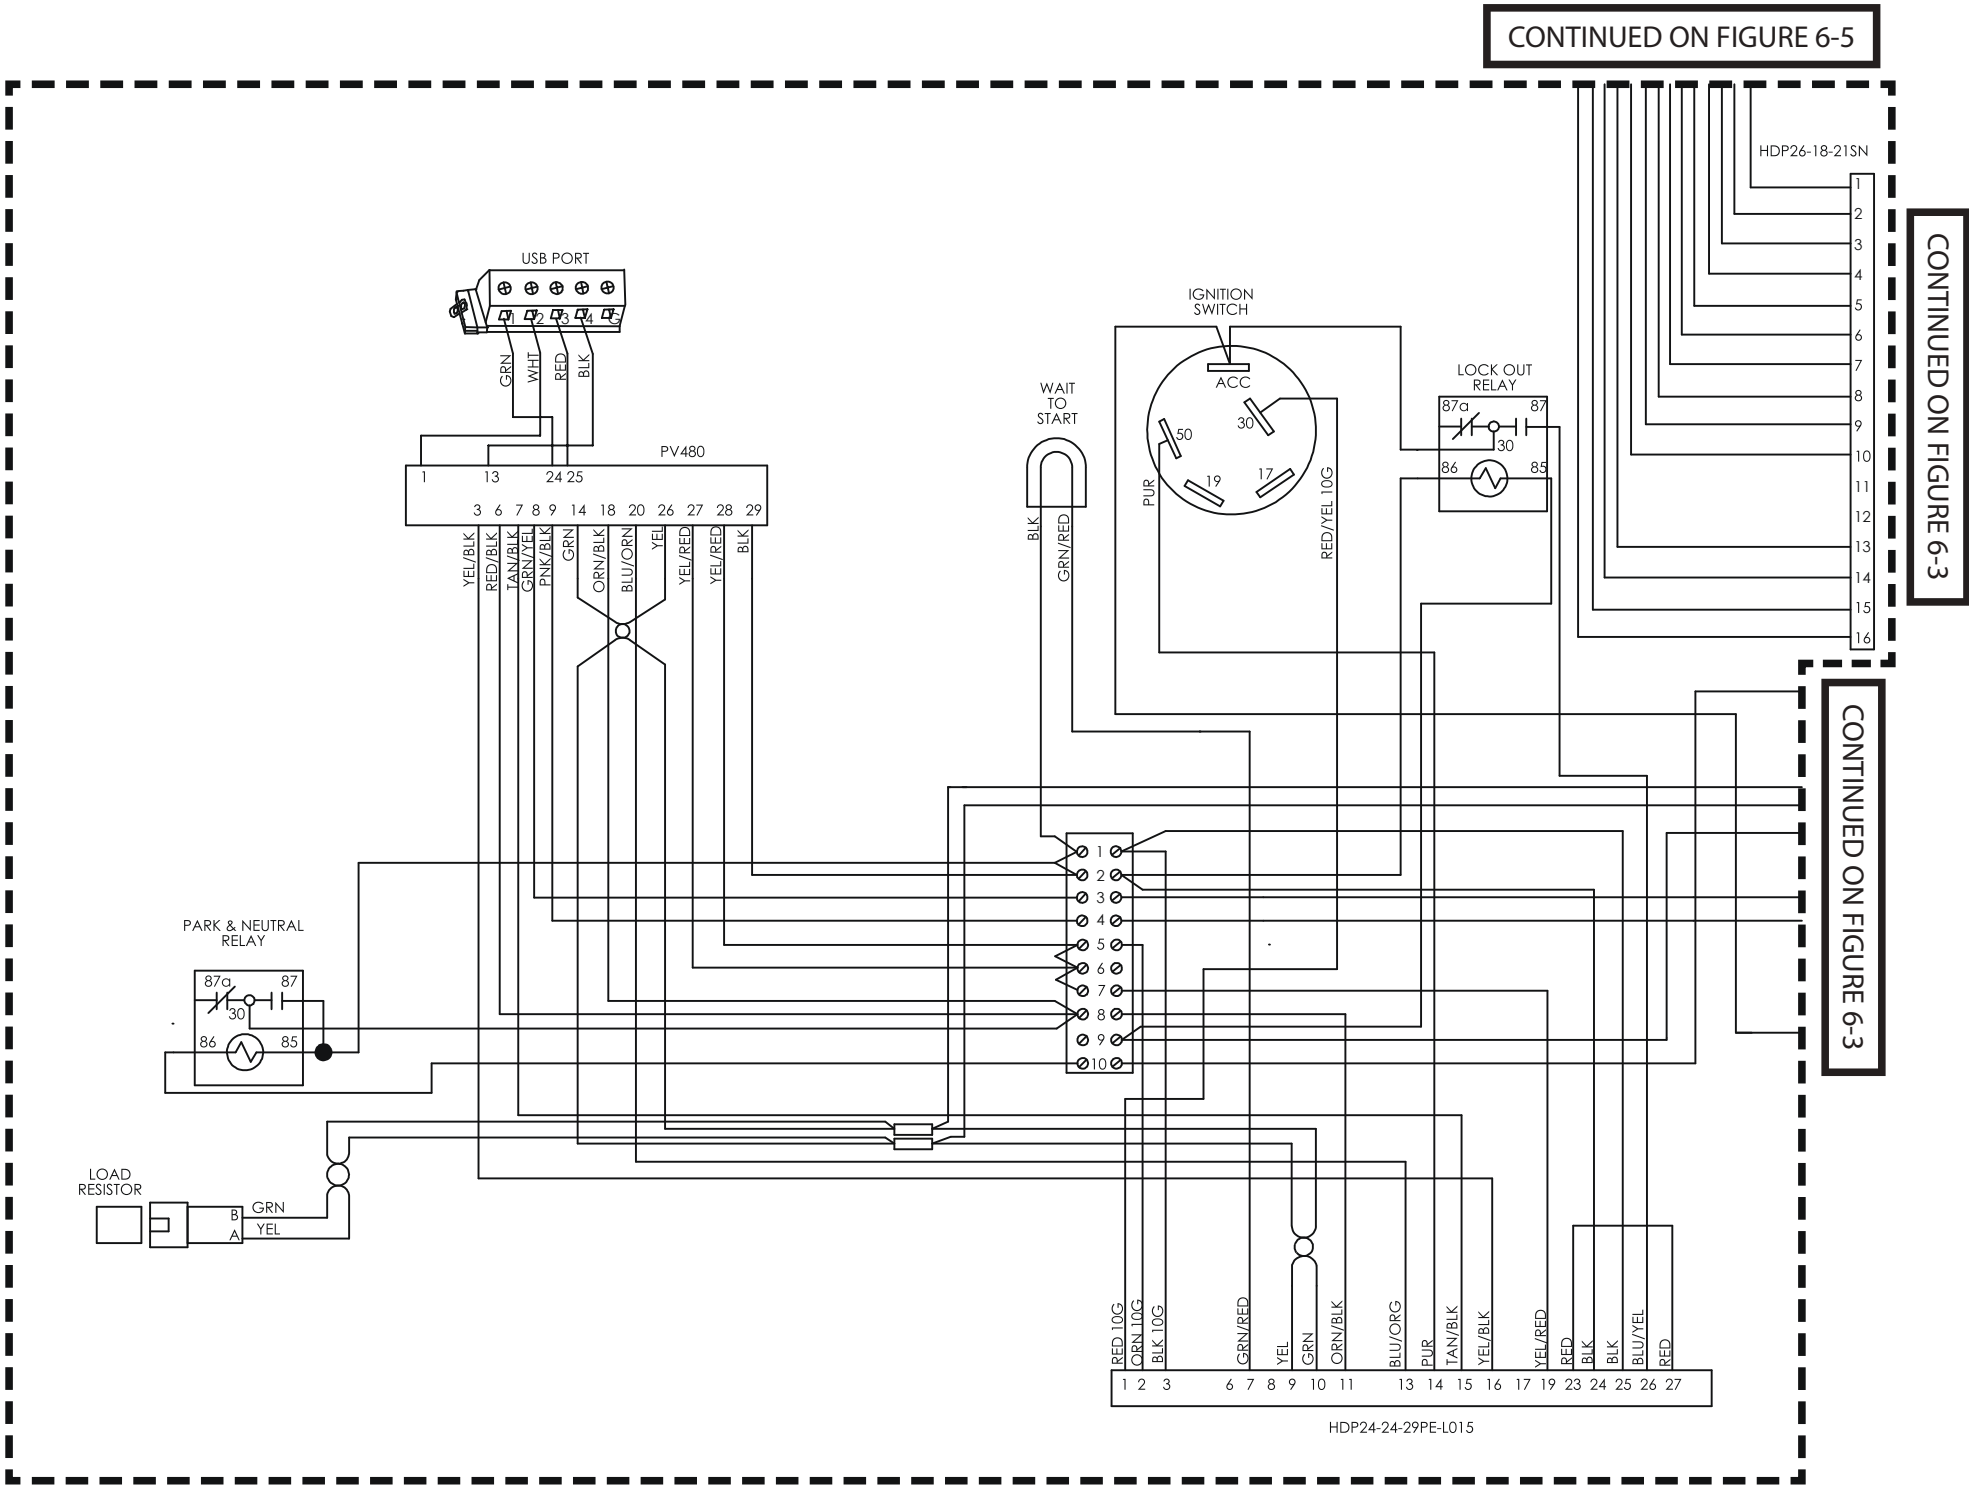


Figure 6-2. Electrical Schematic (2 of 6)

NOTES

ELECTRICAL SCHEMATIC (3 OF 6)

Schematic # 1014863

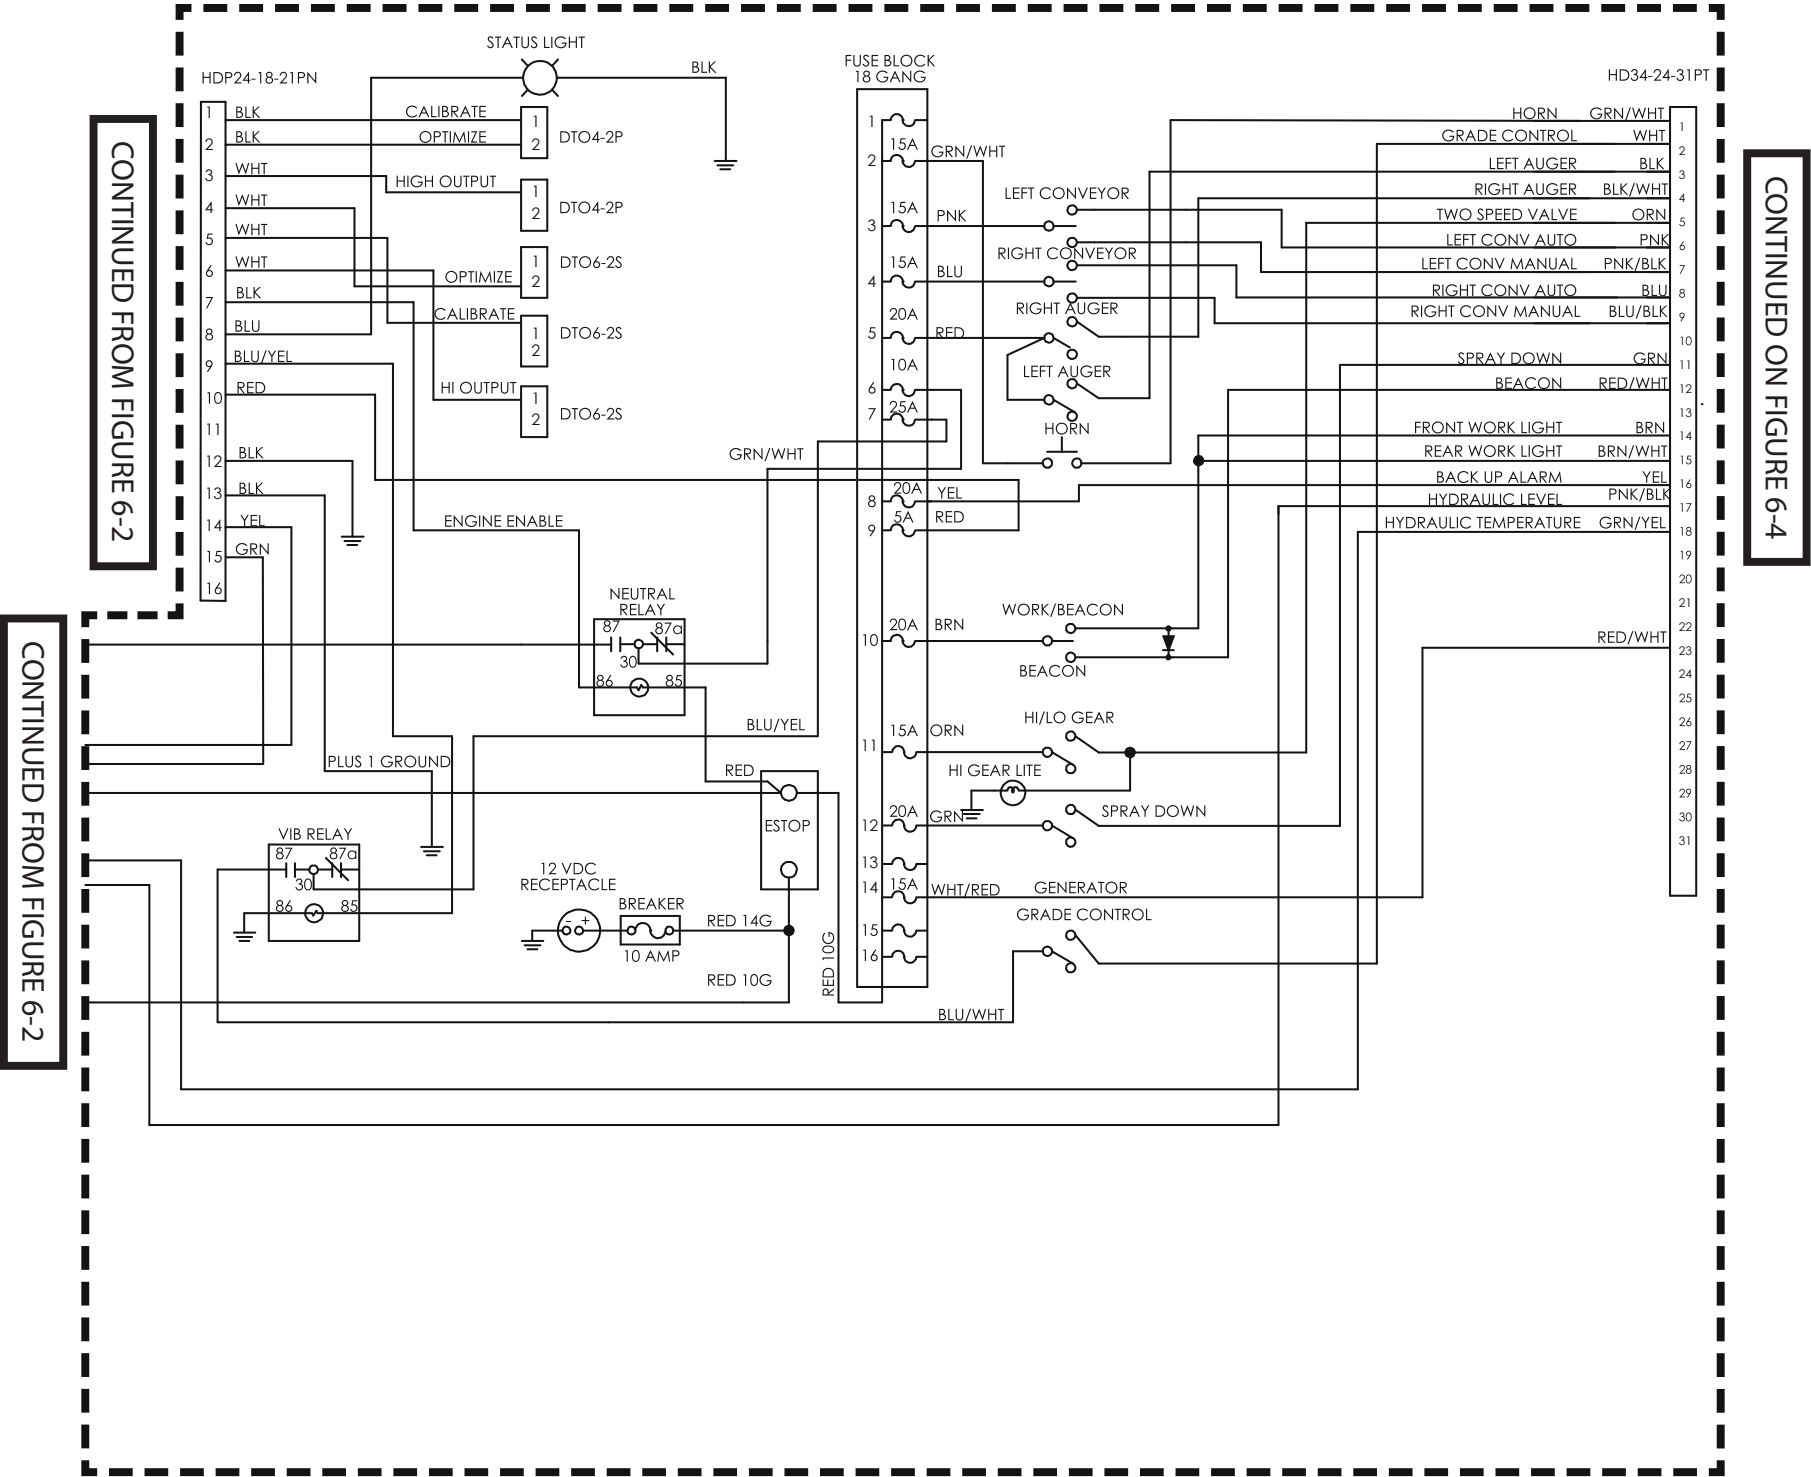


Figure 6-3. Electrical Schematic (3 of 6)

NOTES

ELECTRICAL SCHEMATIC (4 OF 6)

Schematic # 1014863

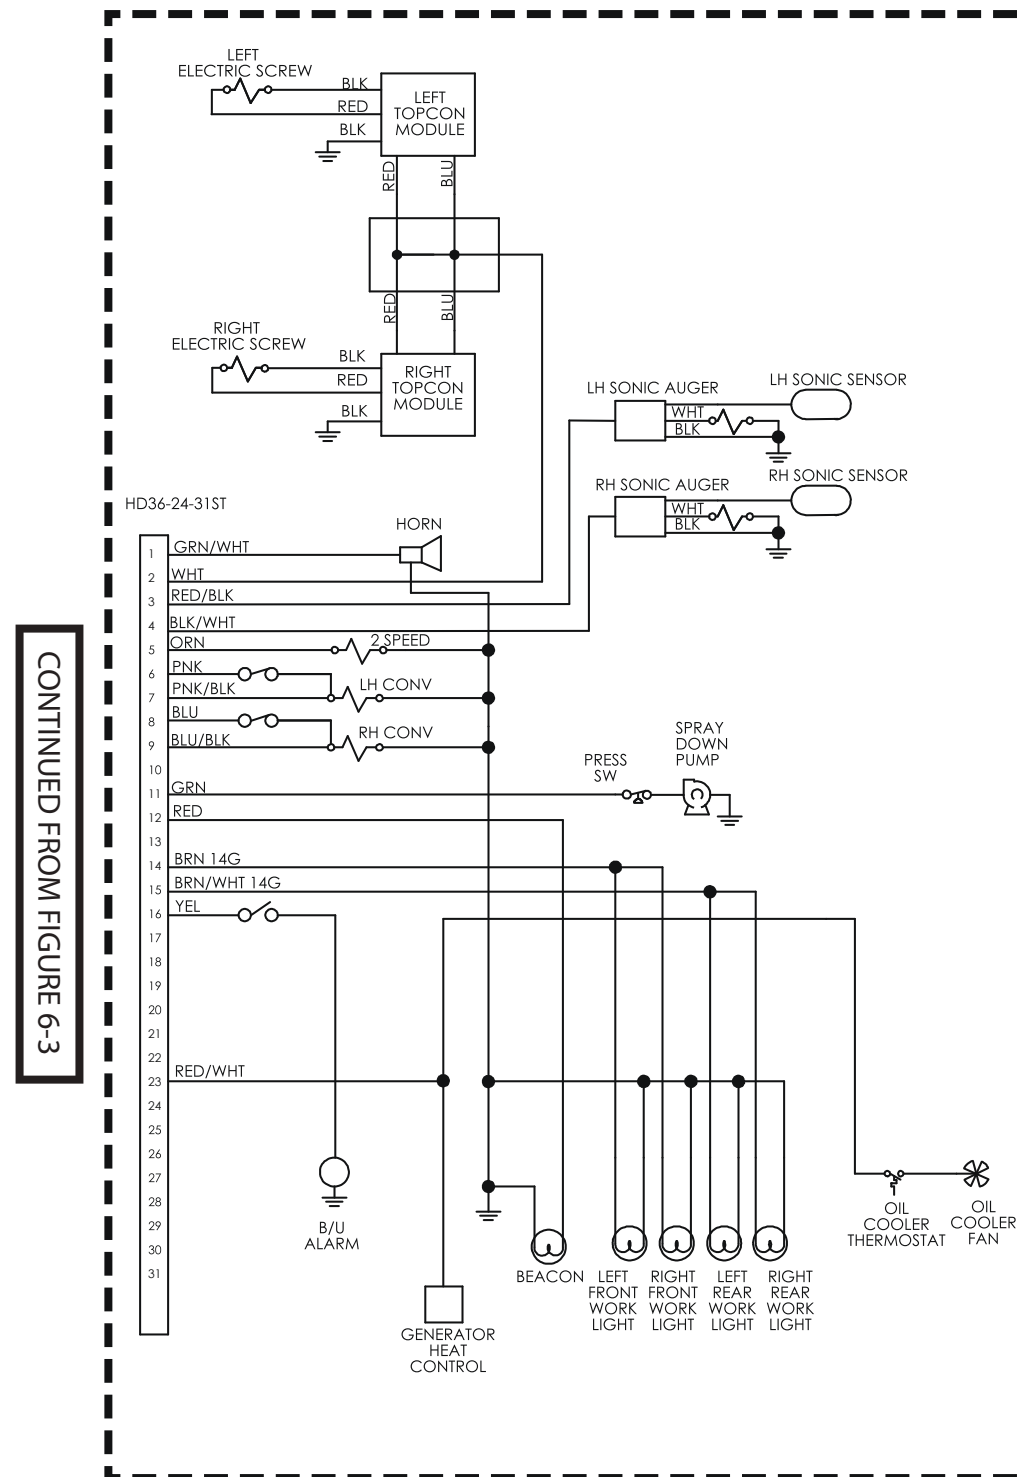


Figure 6-4. Electrical Schematic (4 of 6)

NOTES

ELECTRICAL SCHEMATIC (5 OF 6)

Schematic # 1014863


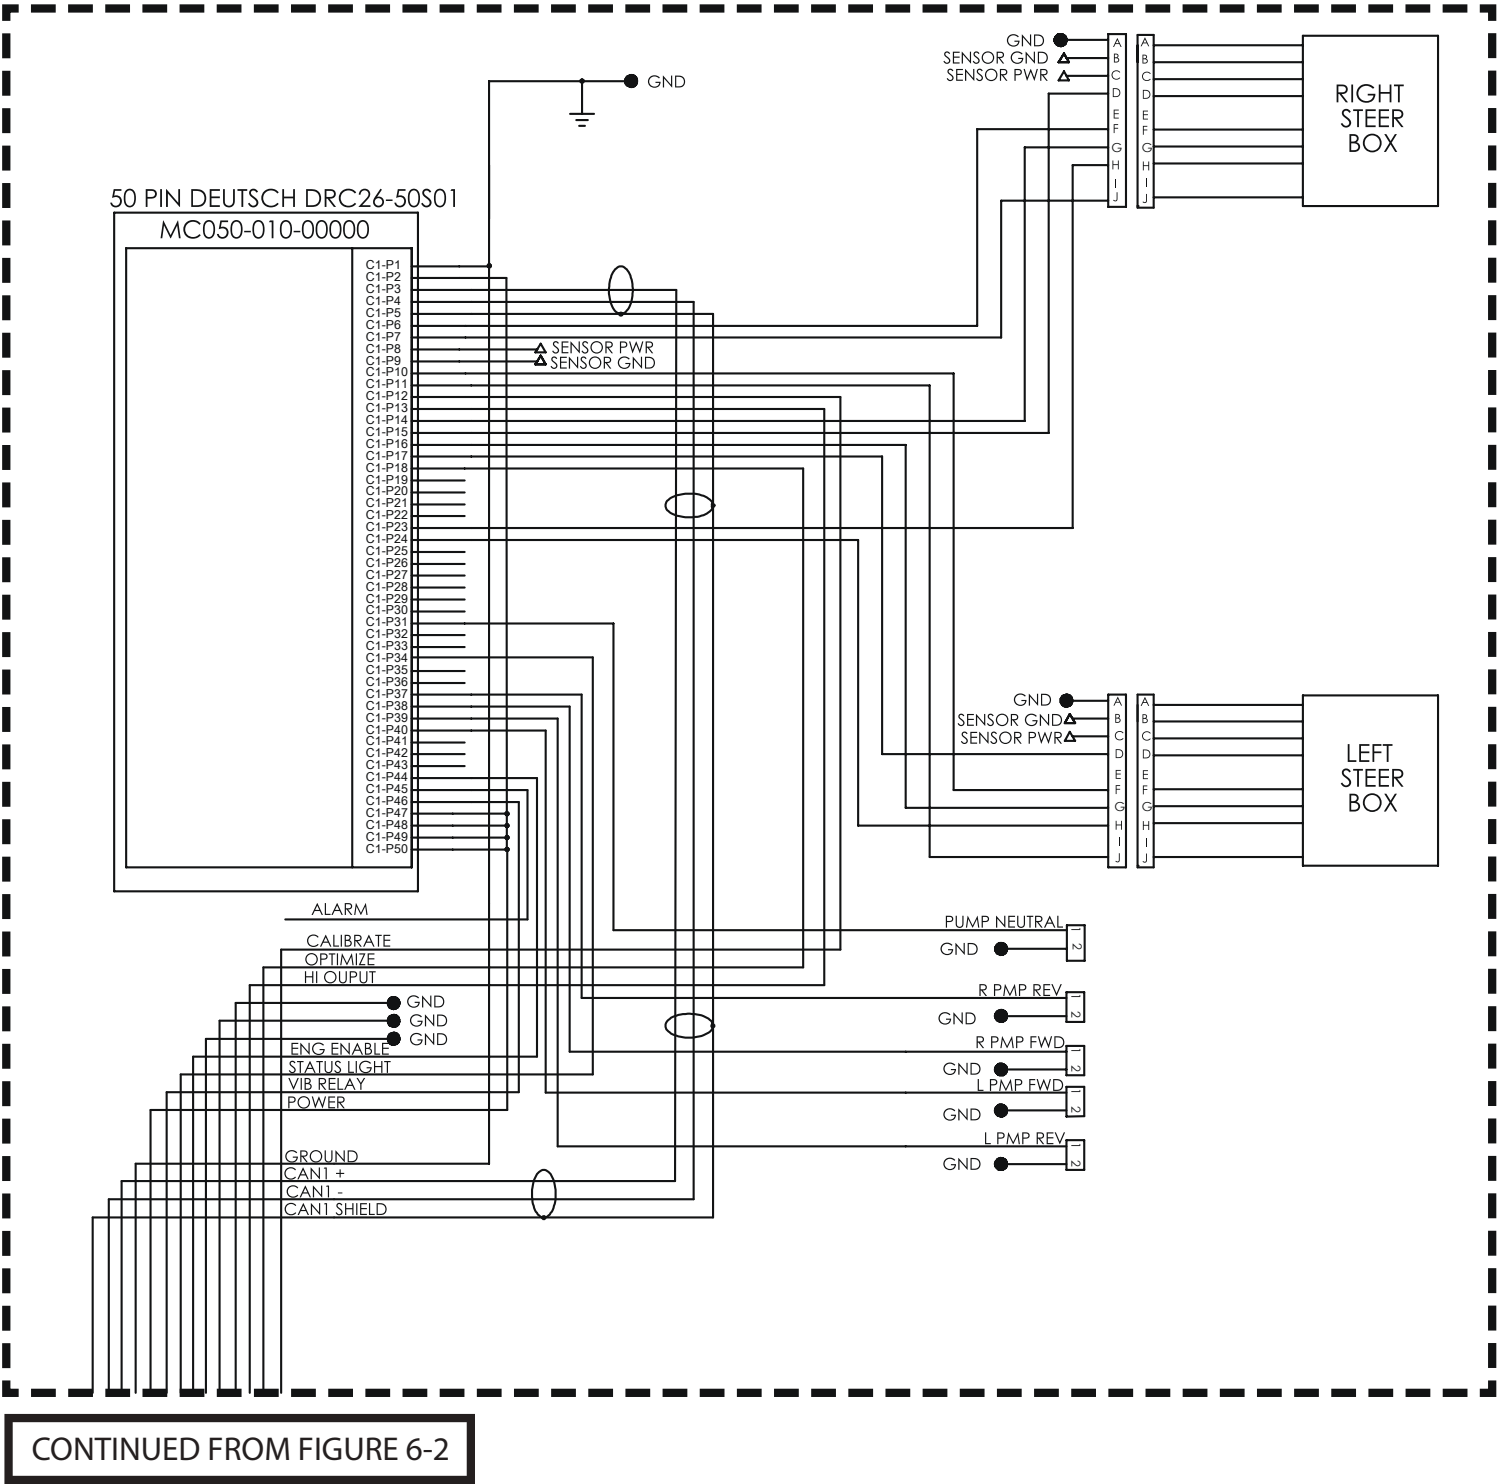


Figure 6-5. Electrical Schematic (5 of 6)

NOTES

ELECTRICAL SCHEMATIC (6 OF 6)


Schematic # 1014863

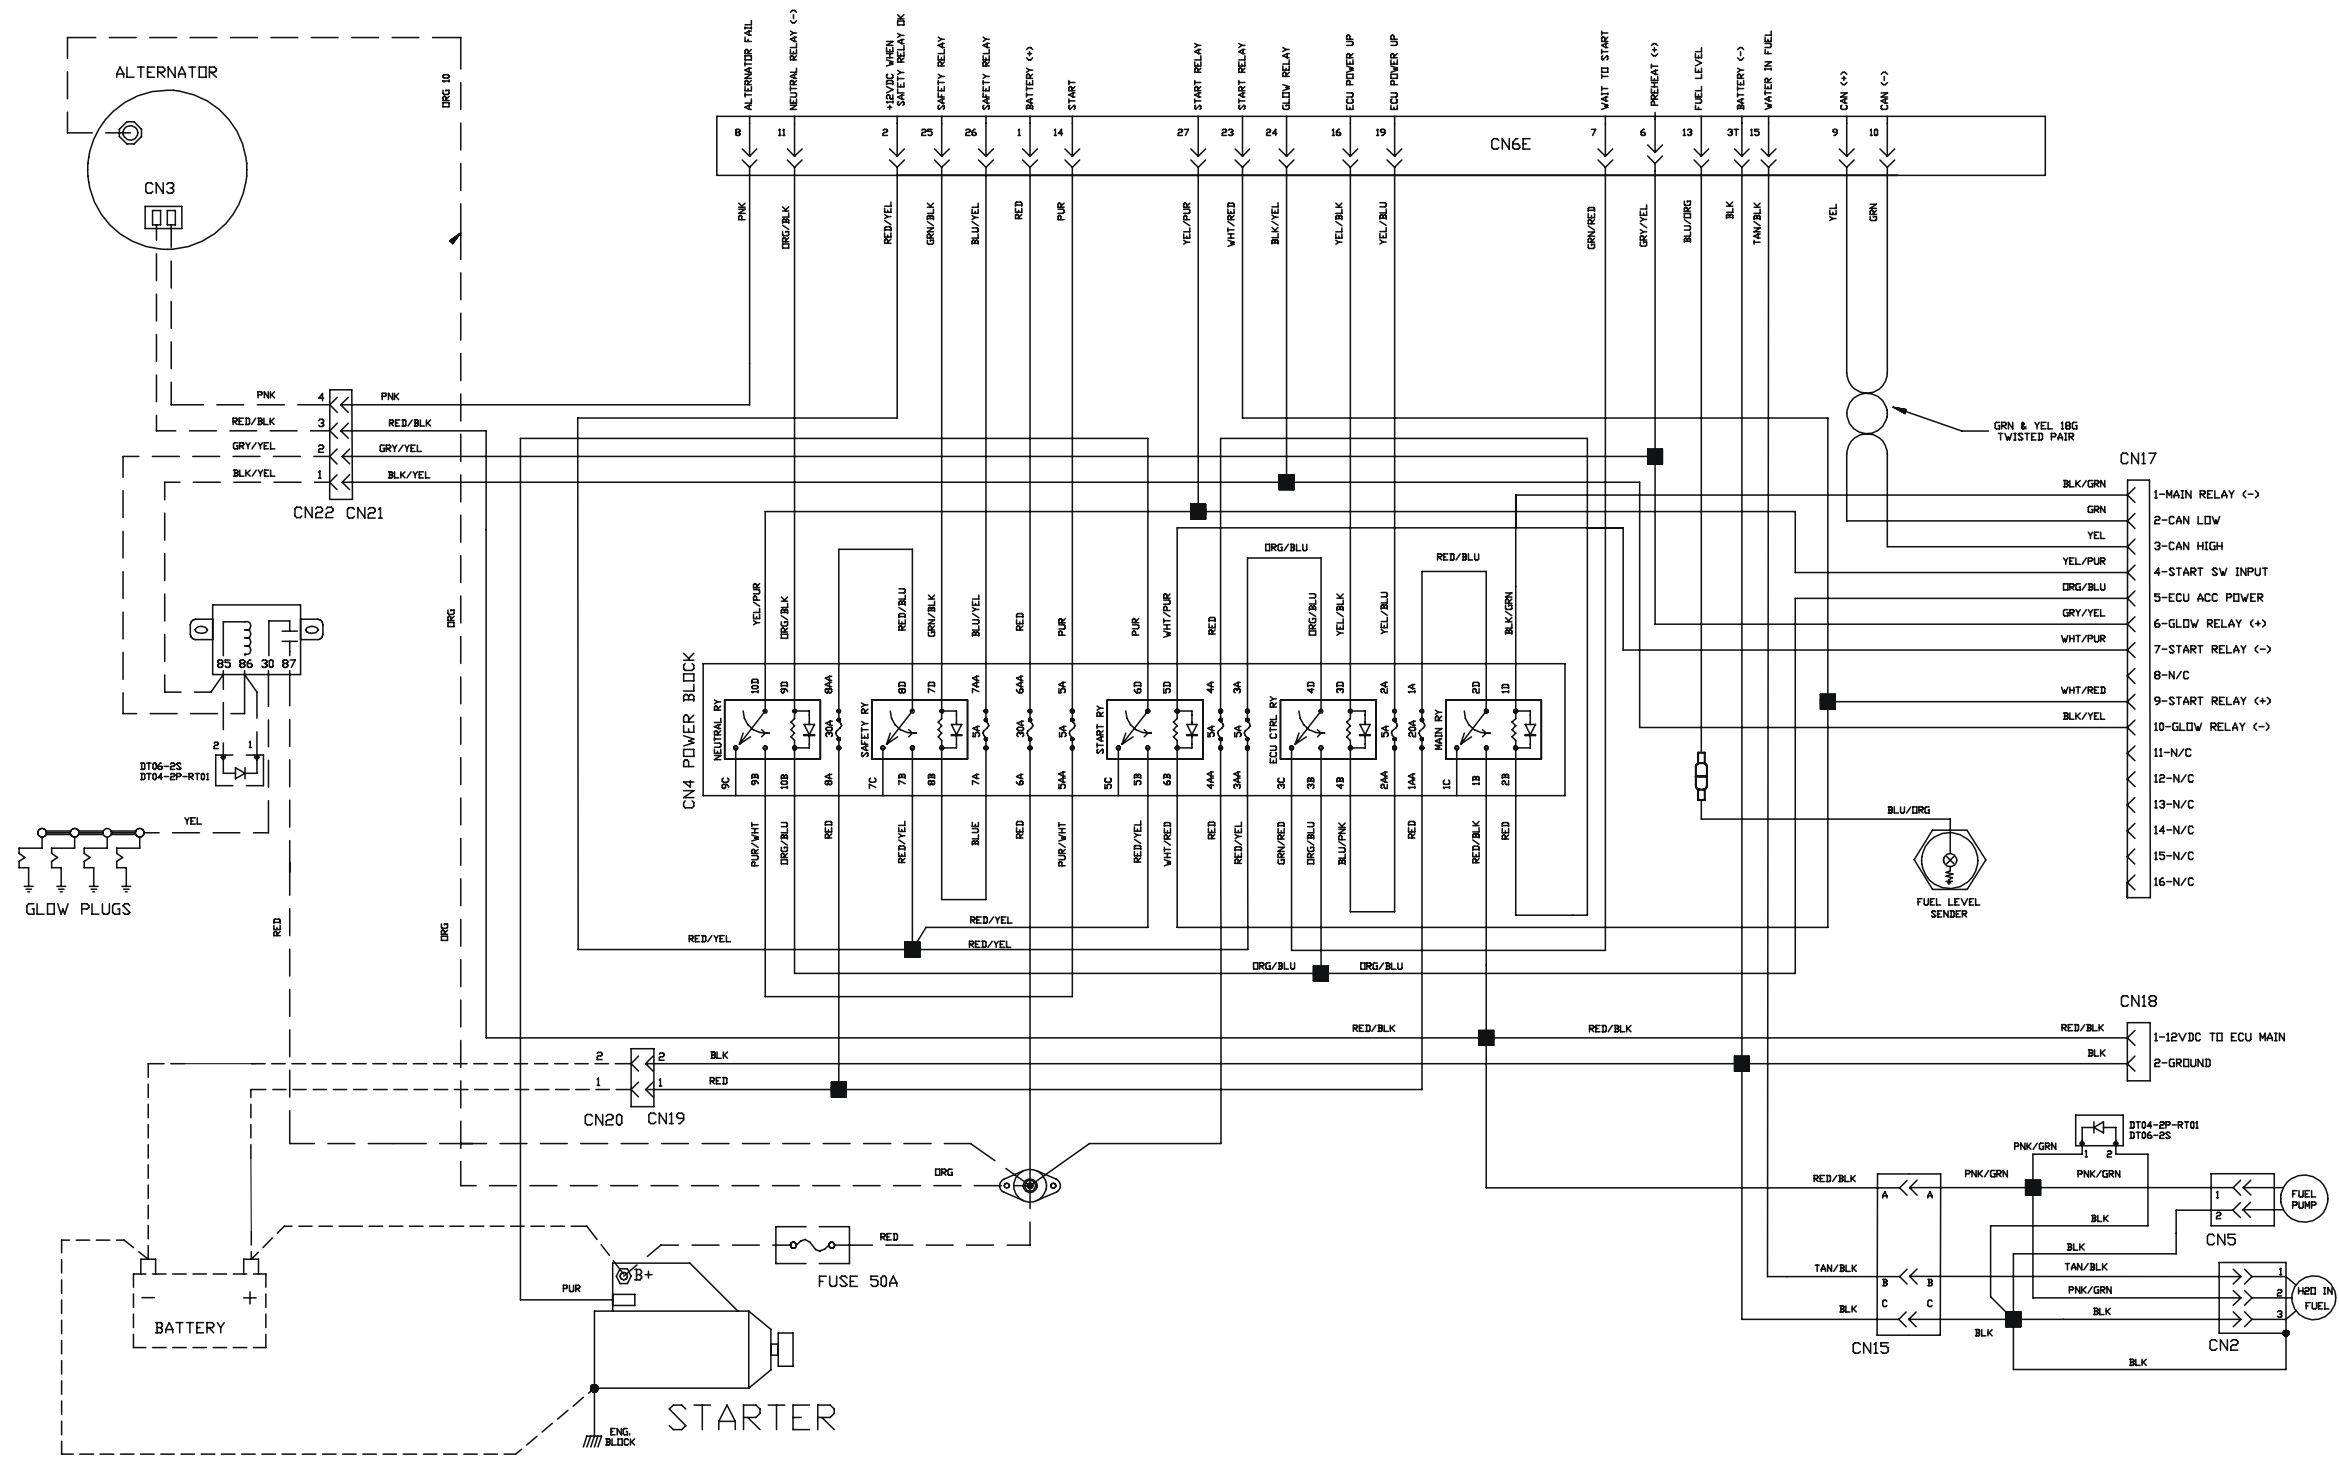

NOTES

BULKHEAD TO GENERATOR HARNESS

Schematic # 1007254

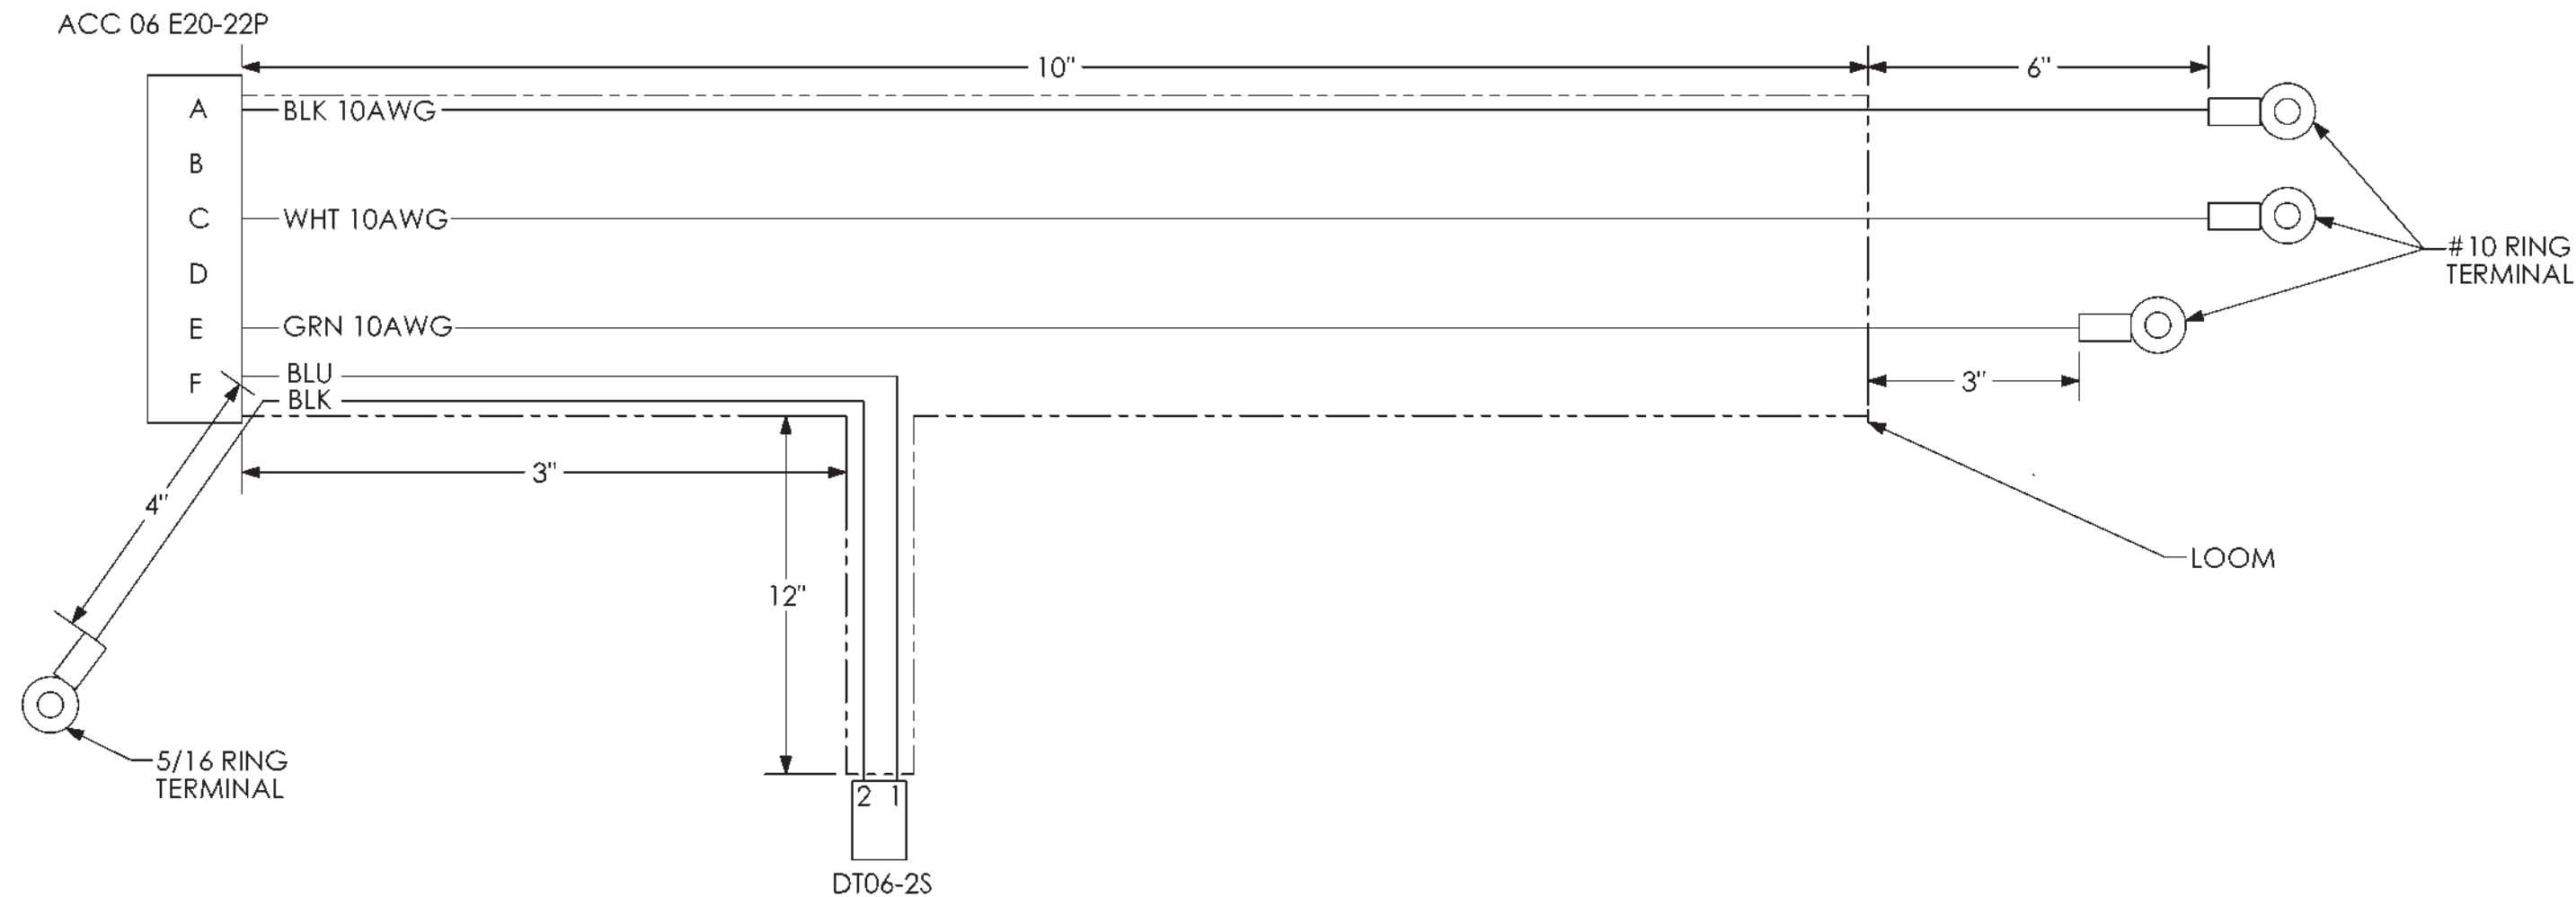

- NOTES:
- 1. USE CONVOLUTED SPLIT LOOM
 - 2. ALL WIRES 16AWG UNLESS NOTED OTHERWISE
 - 3. WIRE TYPE GXL OR TXL
 - 4. RING TERMINALS ARE 3/8

Figure 6-7. Generator Control to Bulkhead Harness

NOTES

ELECTRIC STEERING CORD, 4 FEET

Schematic # 851548-04


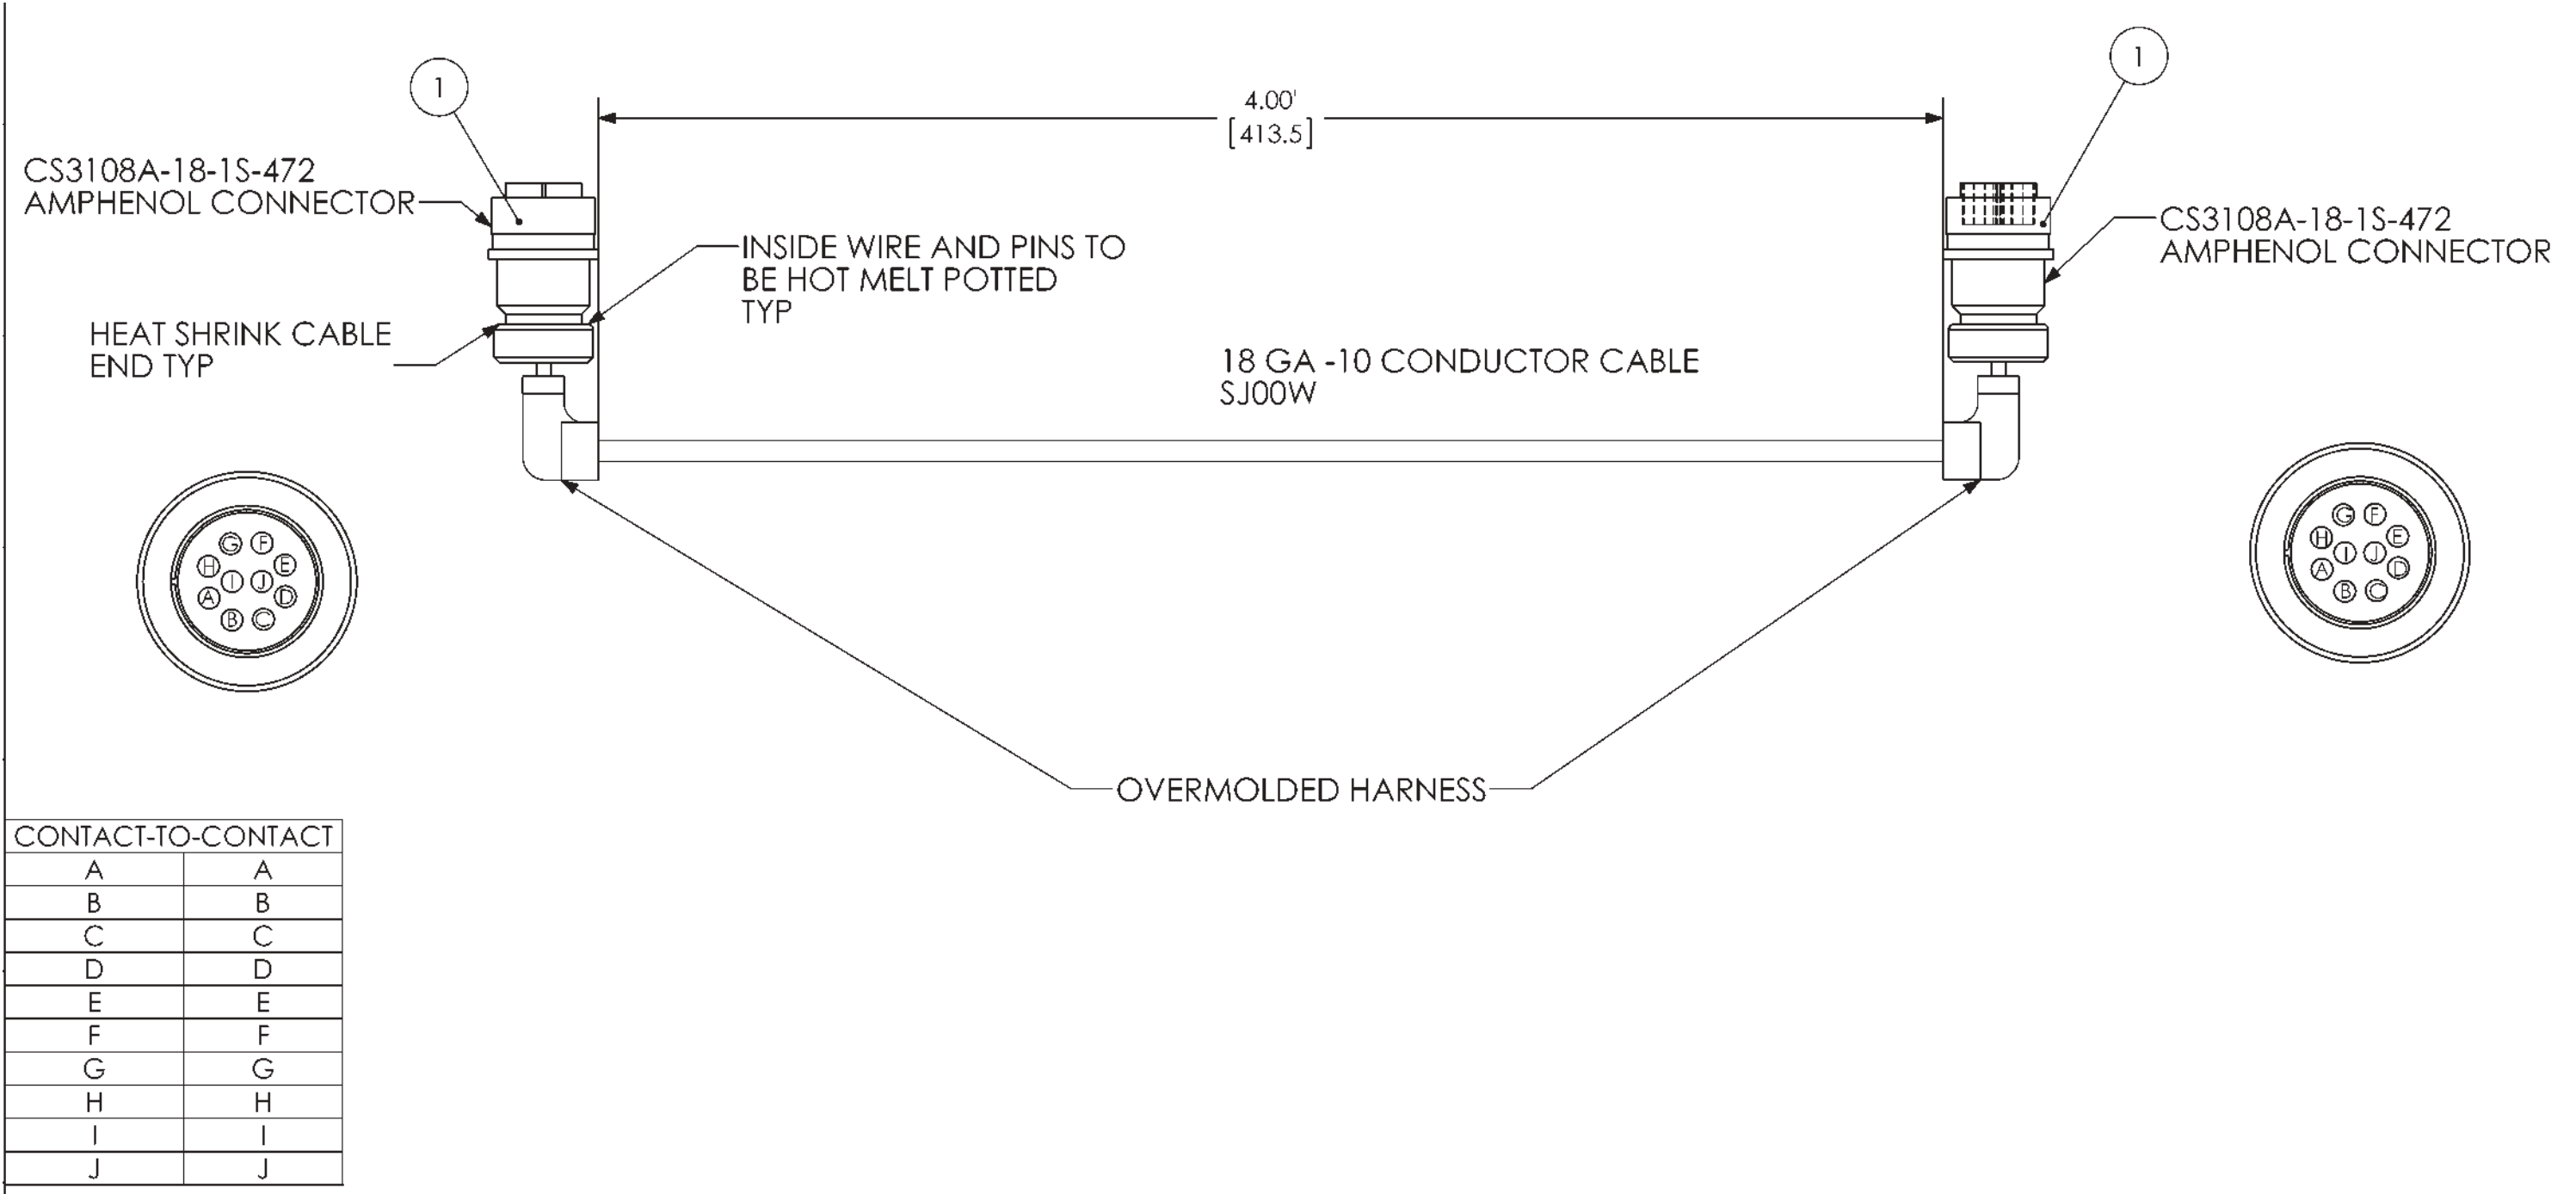


Figure 6-8. Electric Steering Cord, 4 Feet

NOTES

PLUS ONE HARNESS

Schematic # 1014667

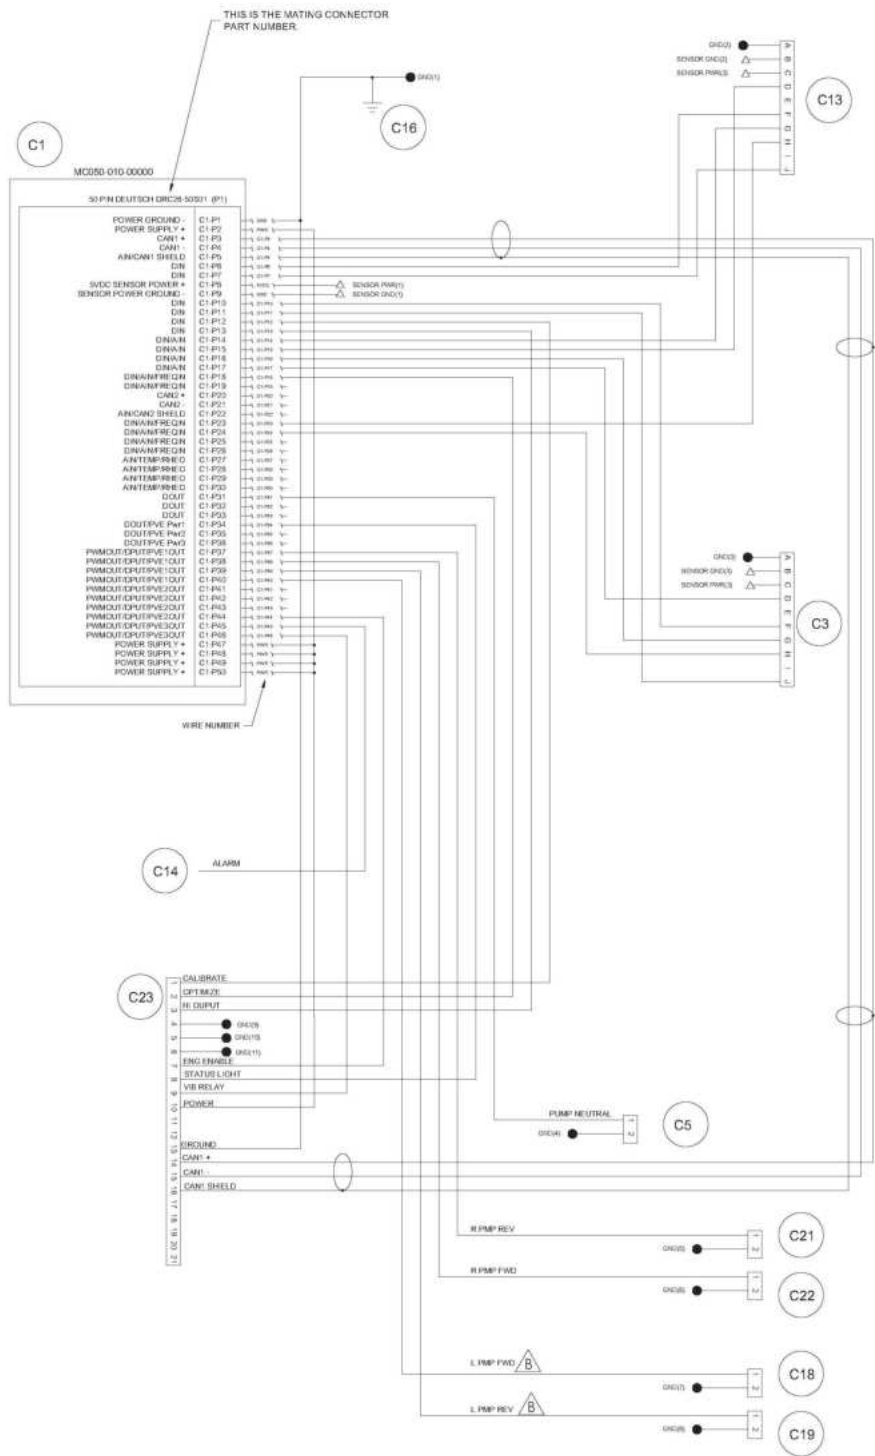

NOTE:
UNLESS OTHERWISE SPECIFIED
ALL DIMENSIONS ARE IN INCHES
POWER WIRE TO BE 18 AWG GXL RED WIRE
GROUND WIRE TO BE 18 AWG GXL BLACK WIRE
ALL OTHER WIRE TO BE 18 AWG GXL WHITE WITH BLACK TEXT - "VIDEOJET
#2, OR "DOMINO" EQUIVALENT
WIRES TO BE LABELED PER SCHEMATIC. WIRES WITHOUT LABELS SHALL BE
PRINTED WITH THE WIRE NUMBER FROM THE 50 PIN CONNECTOR
CONNECTOR LABEL TO BE ON ALL CONNECTORS USING POLY STICKER
REFERENCE "BUILT PER SA-1000-SPEC" ON HARNESS LABEL

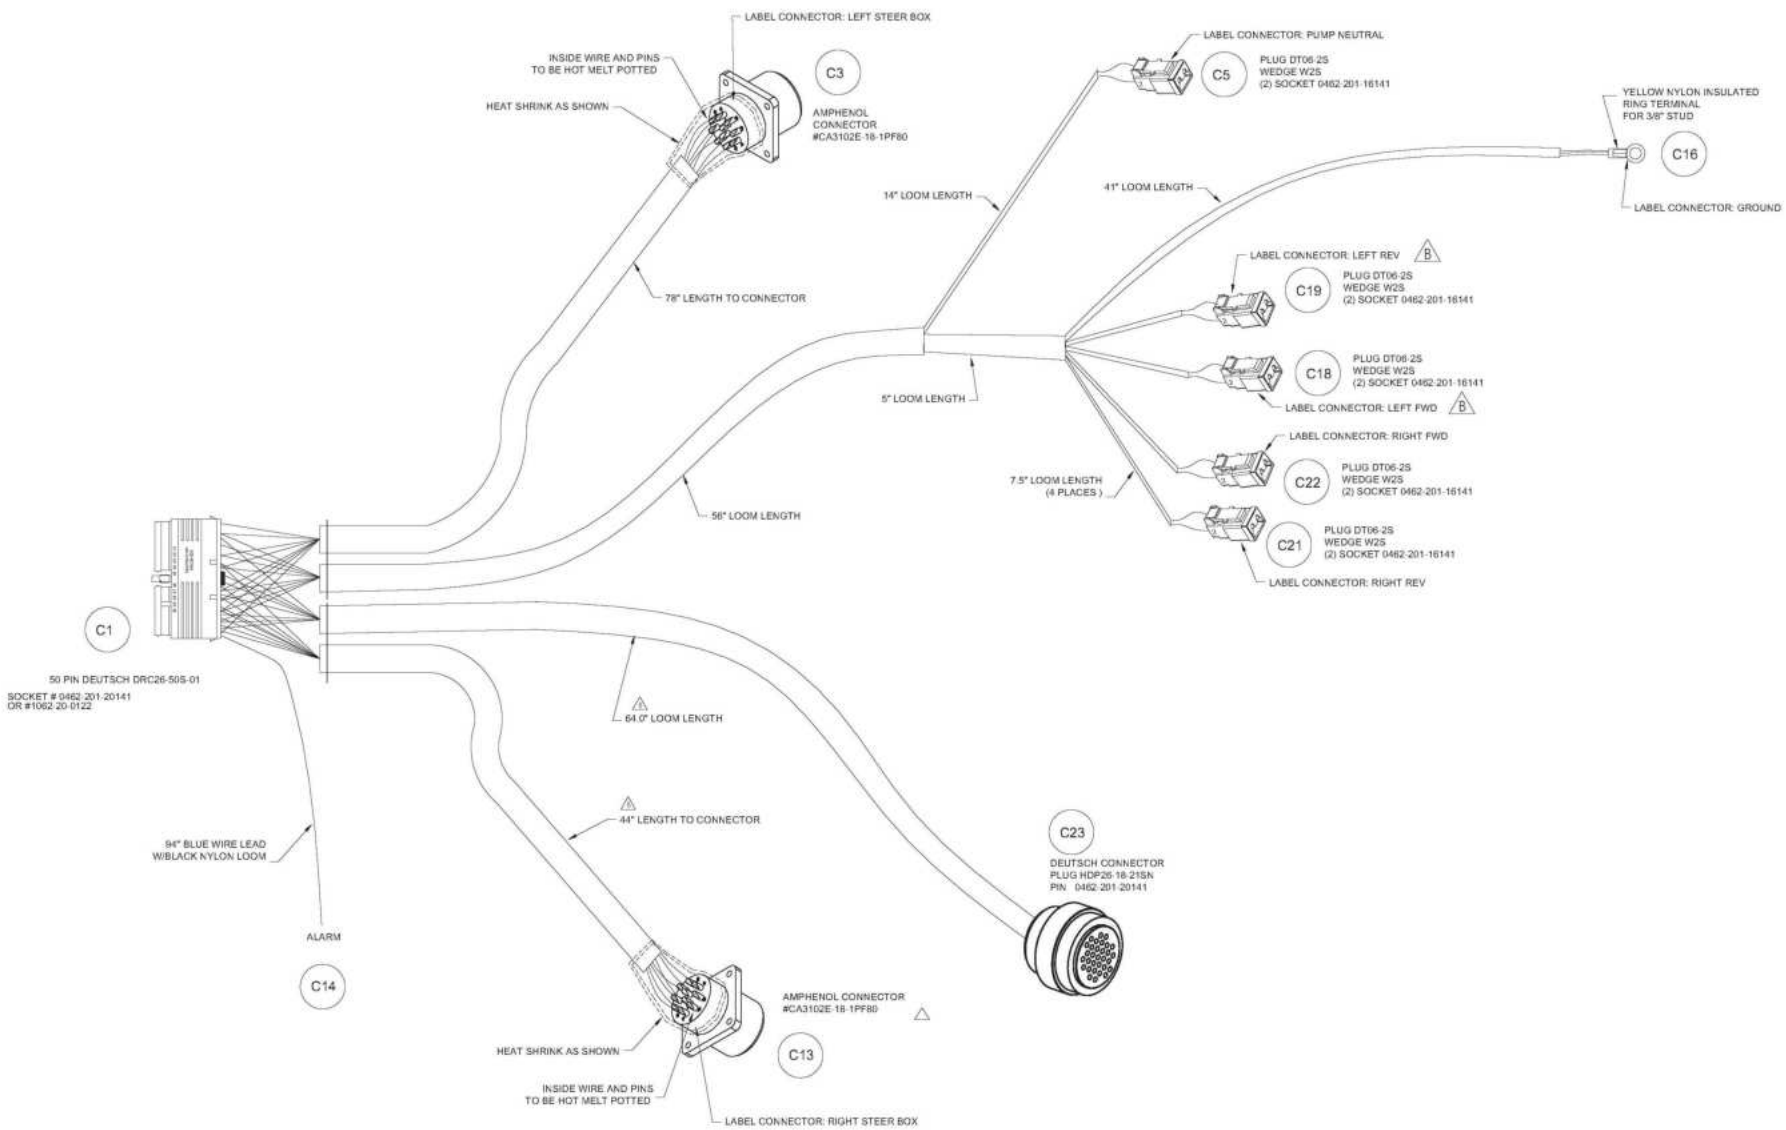


Figure 6-9. Plus One Harness

NOTES

ULTRASONIC POWER HARNESS

Schematic # 1010680

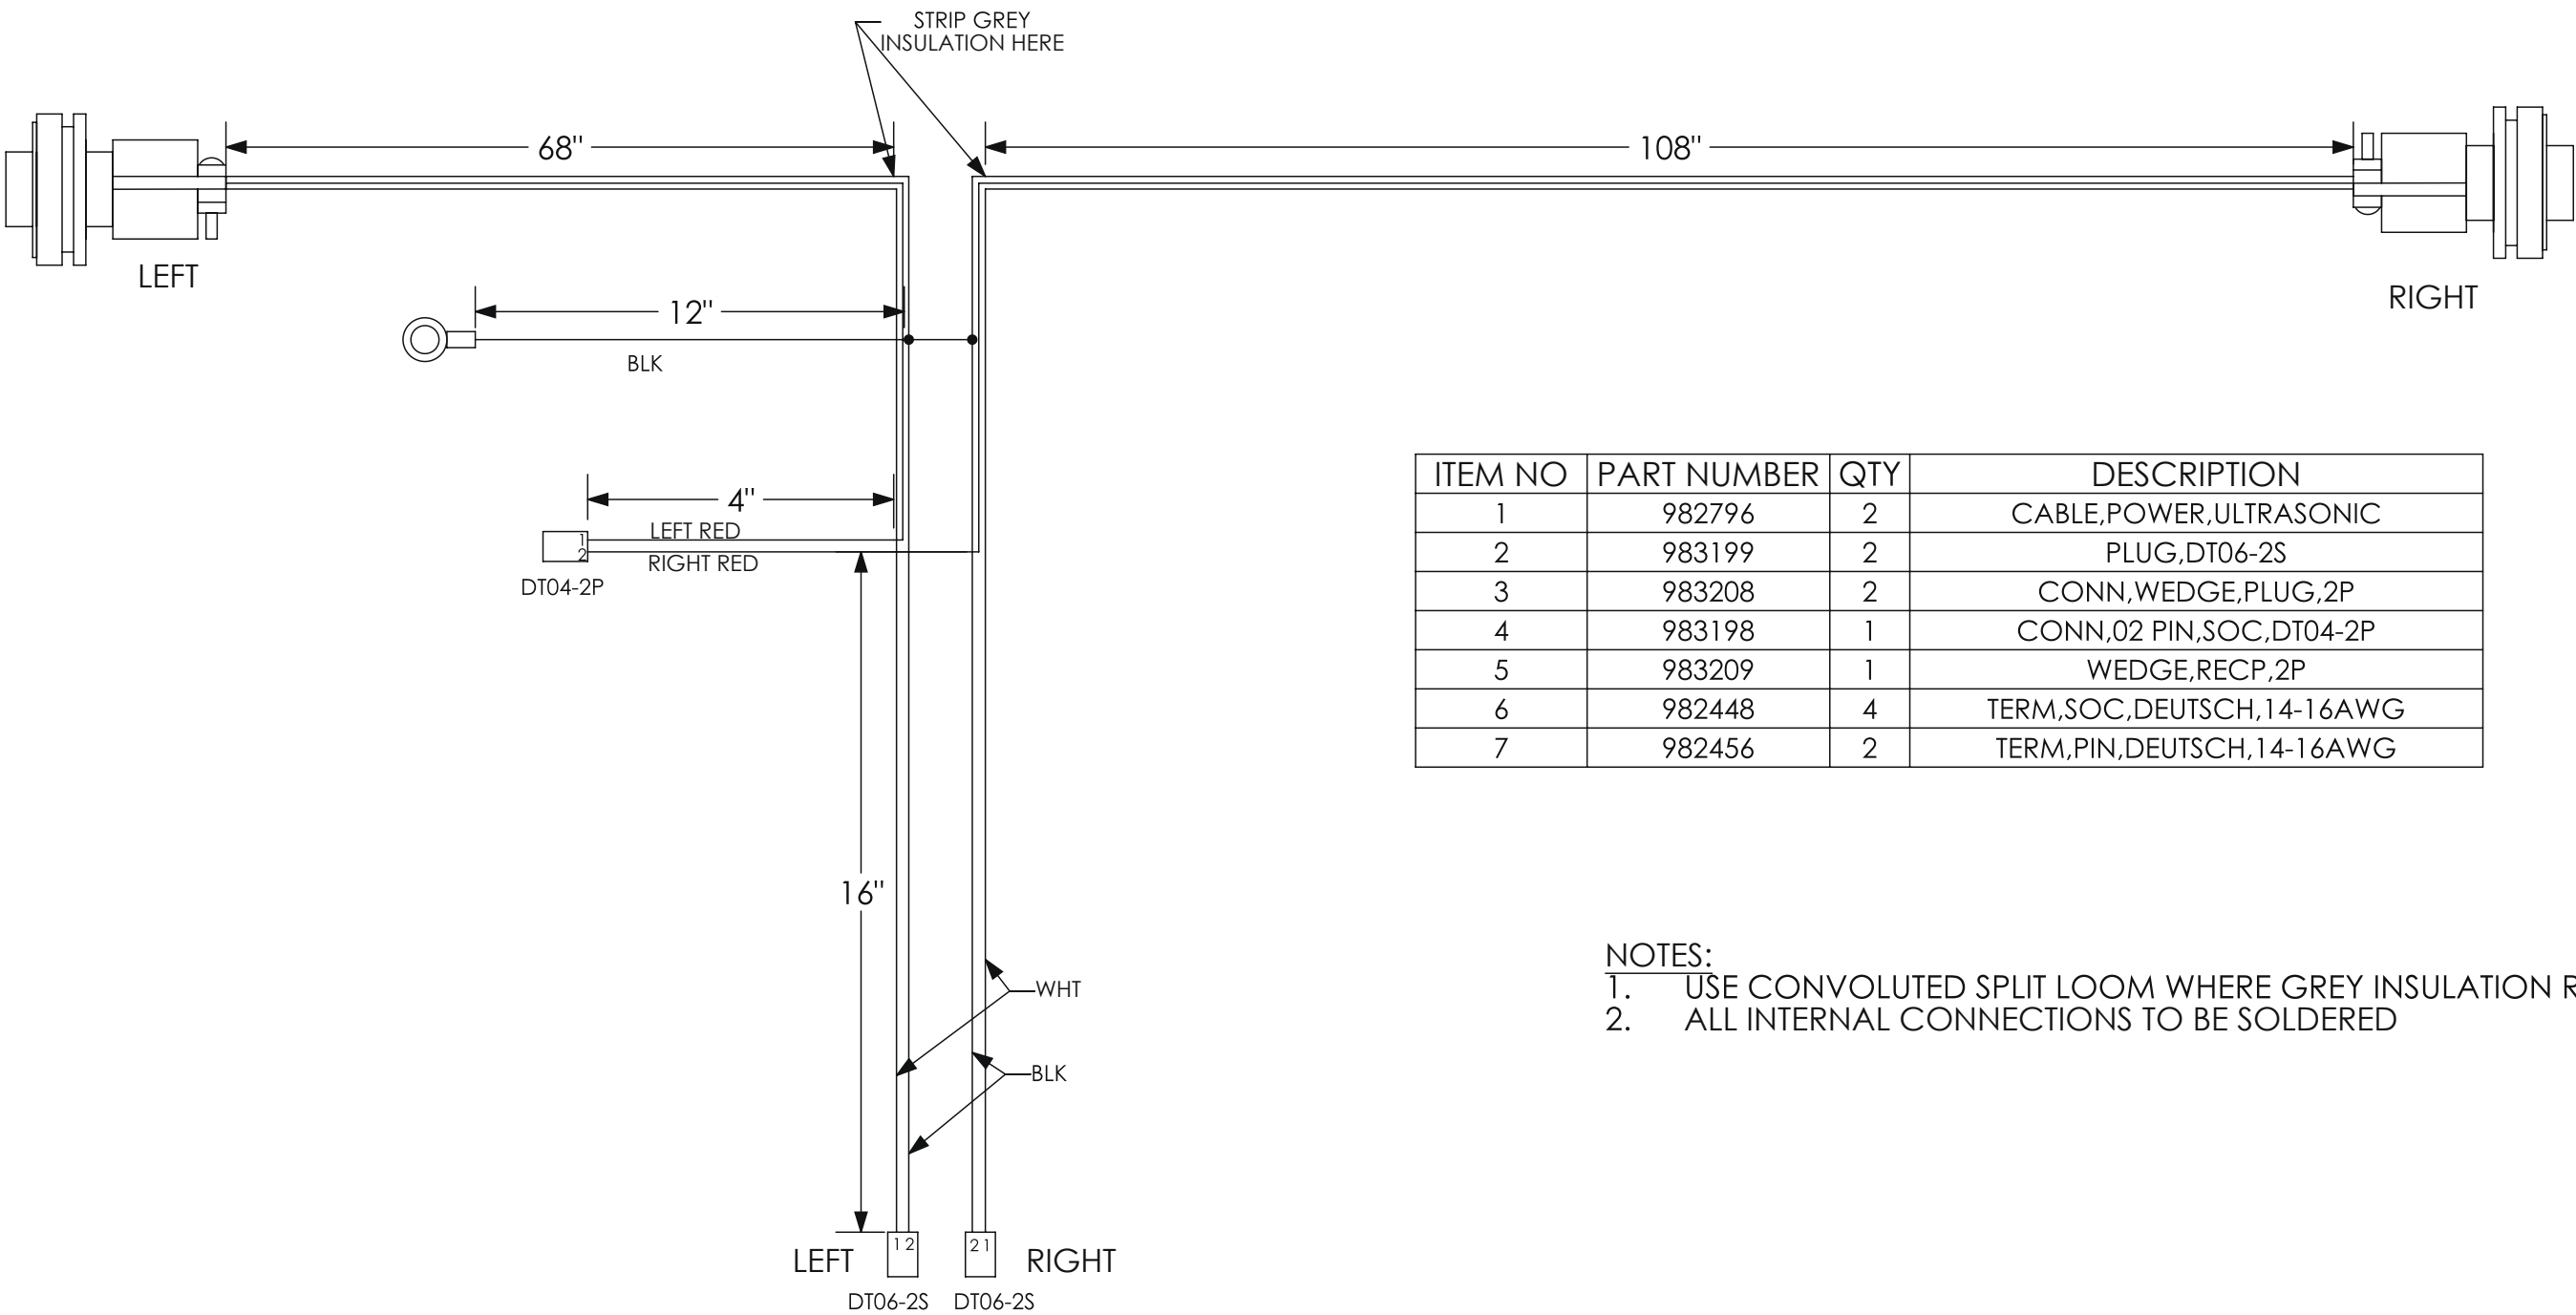


Figure 6-10. Ultrasonic Power Harness

NOTES

MANUAL STEERING CONTROL BOX (1 OF 2)

Schematic # 1013634

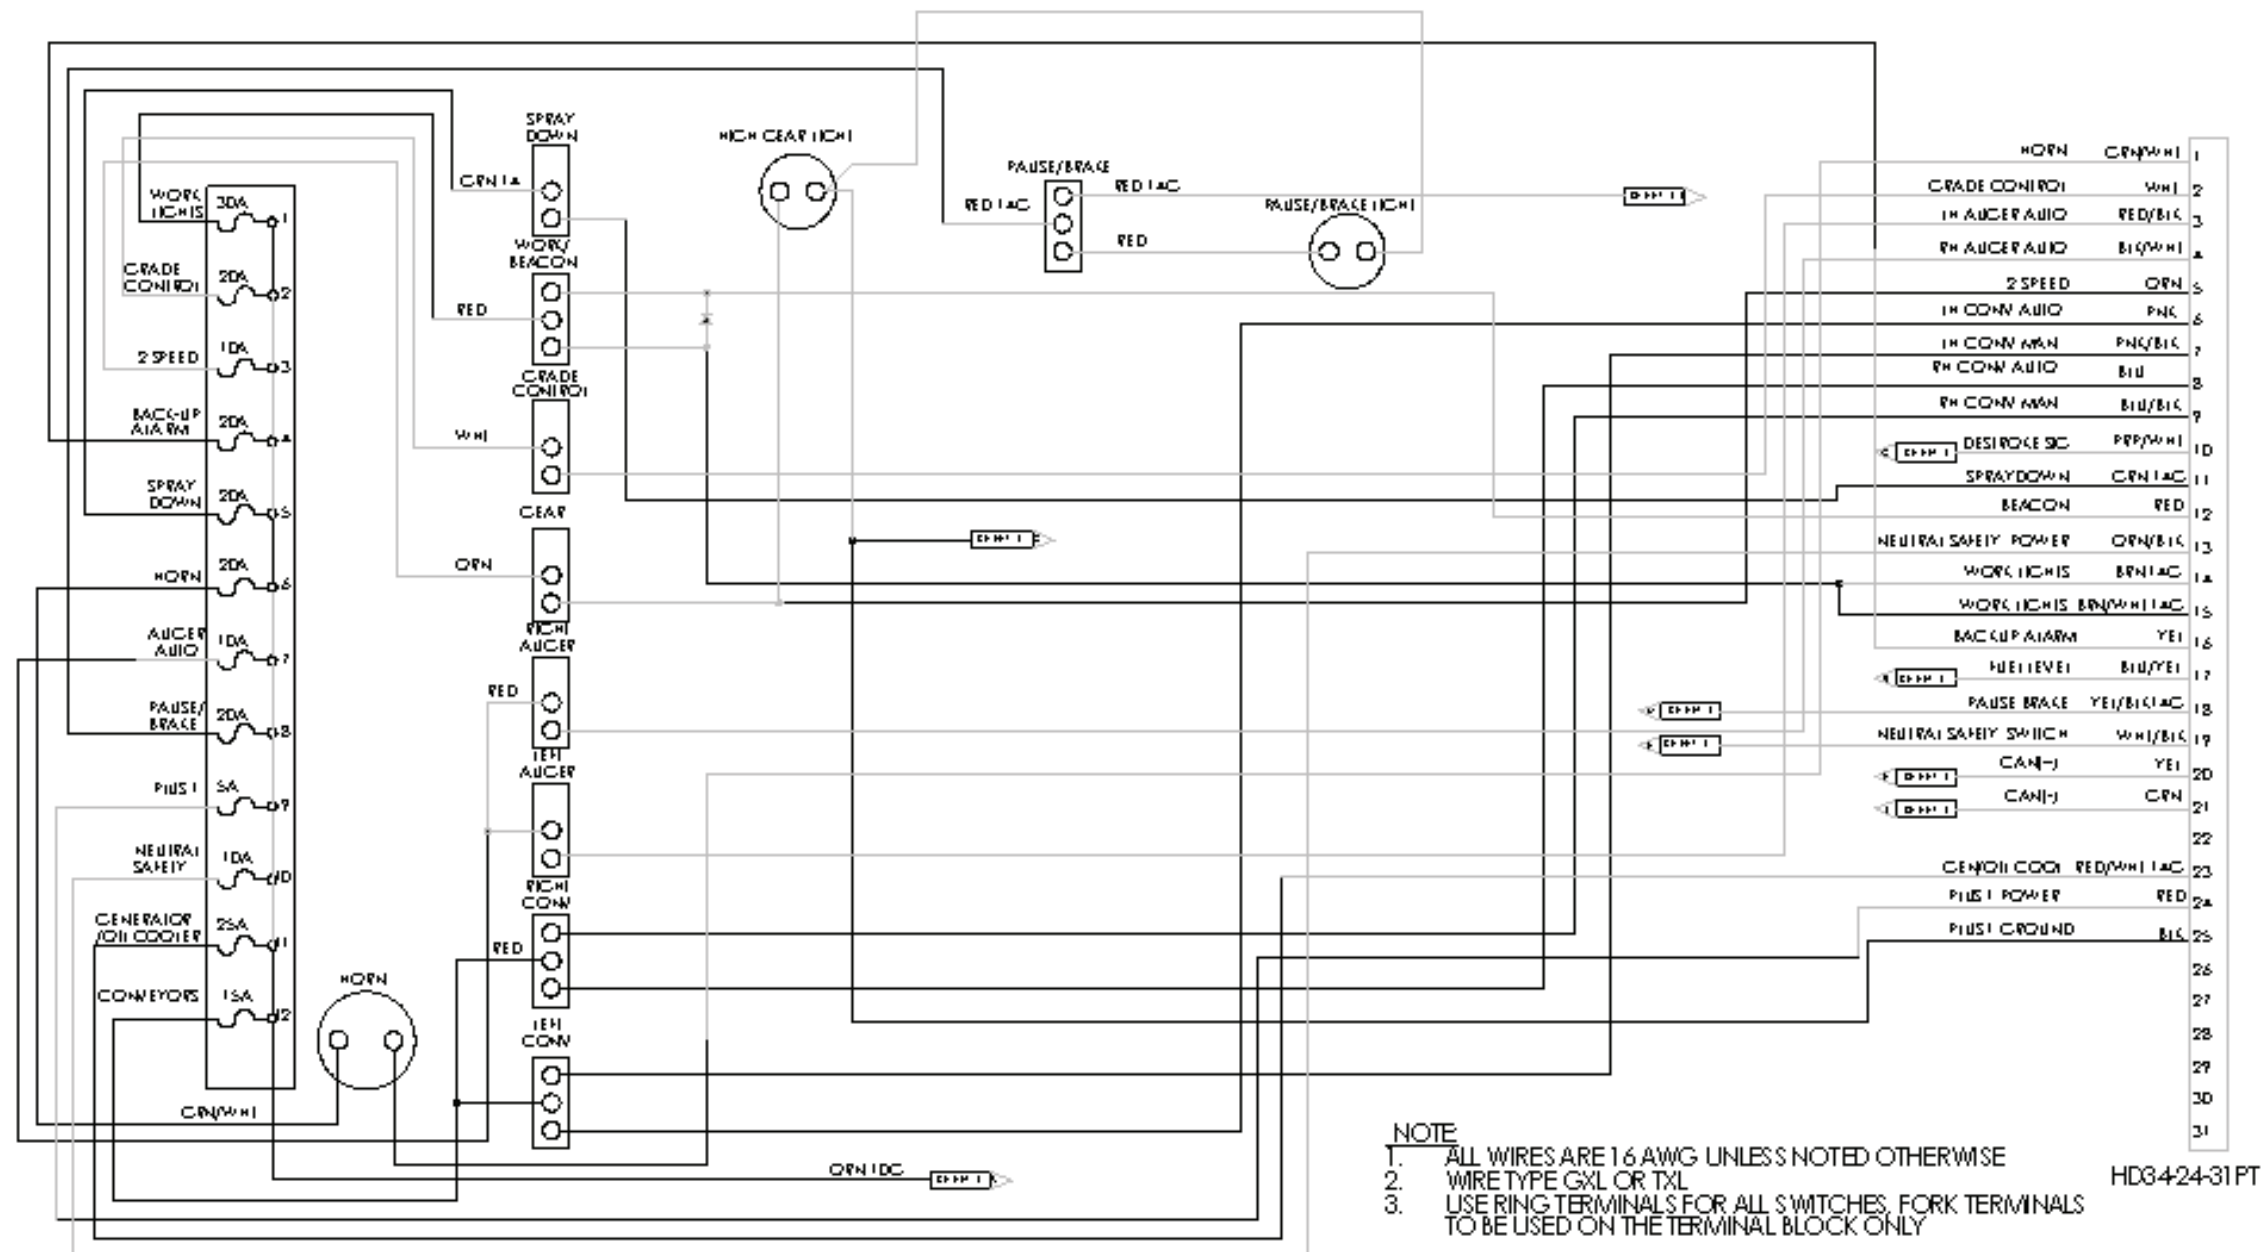


Figure 6-11. Manual Steering Control Box (1 of 2)

NOTES

MANUAL STEERING CONTROL BOX (2 OF 2)

Schematic # 1013634

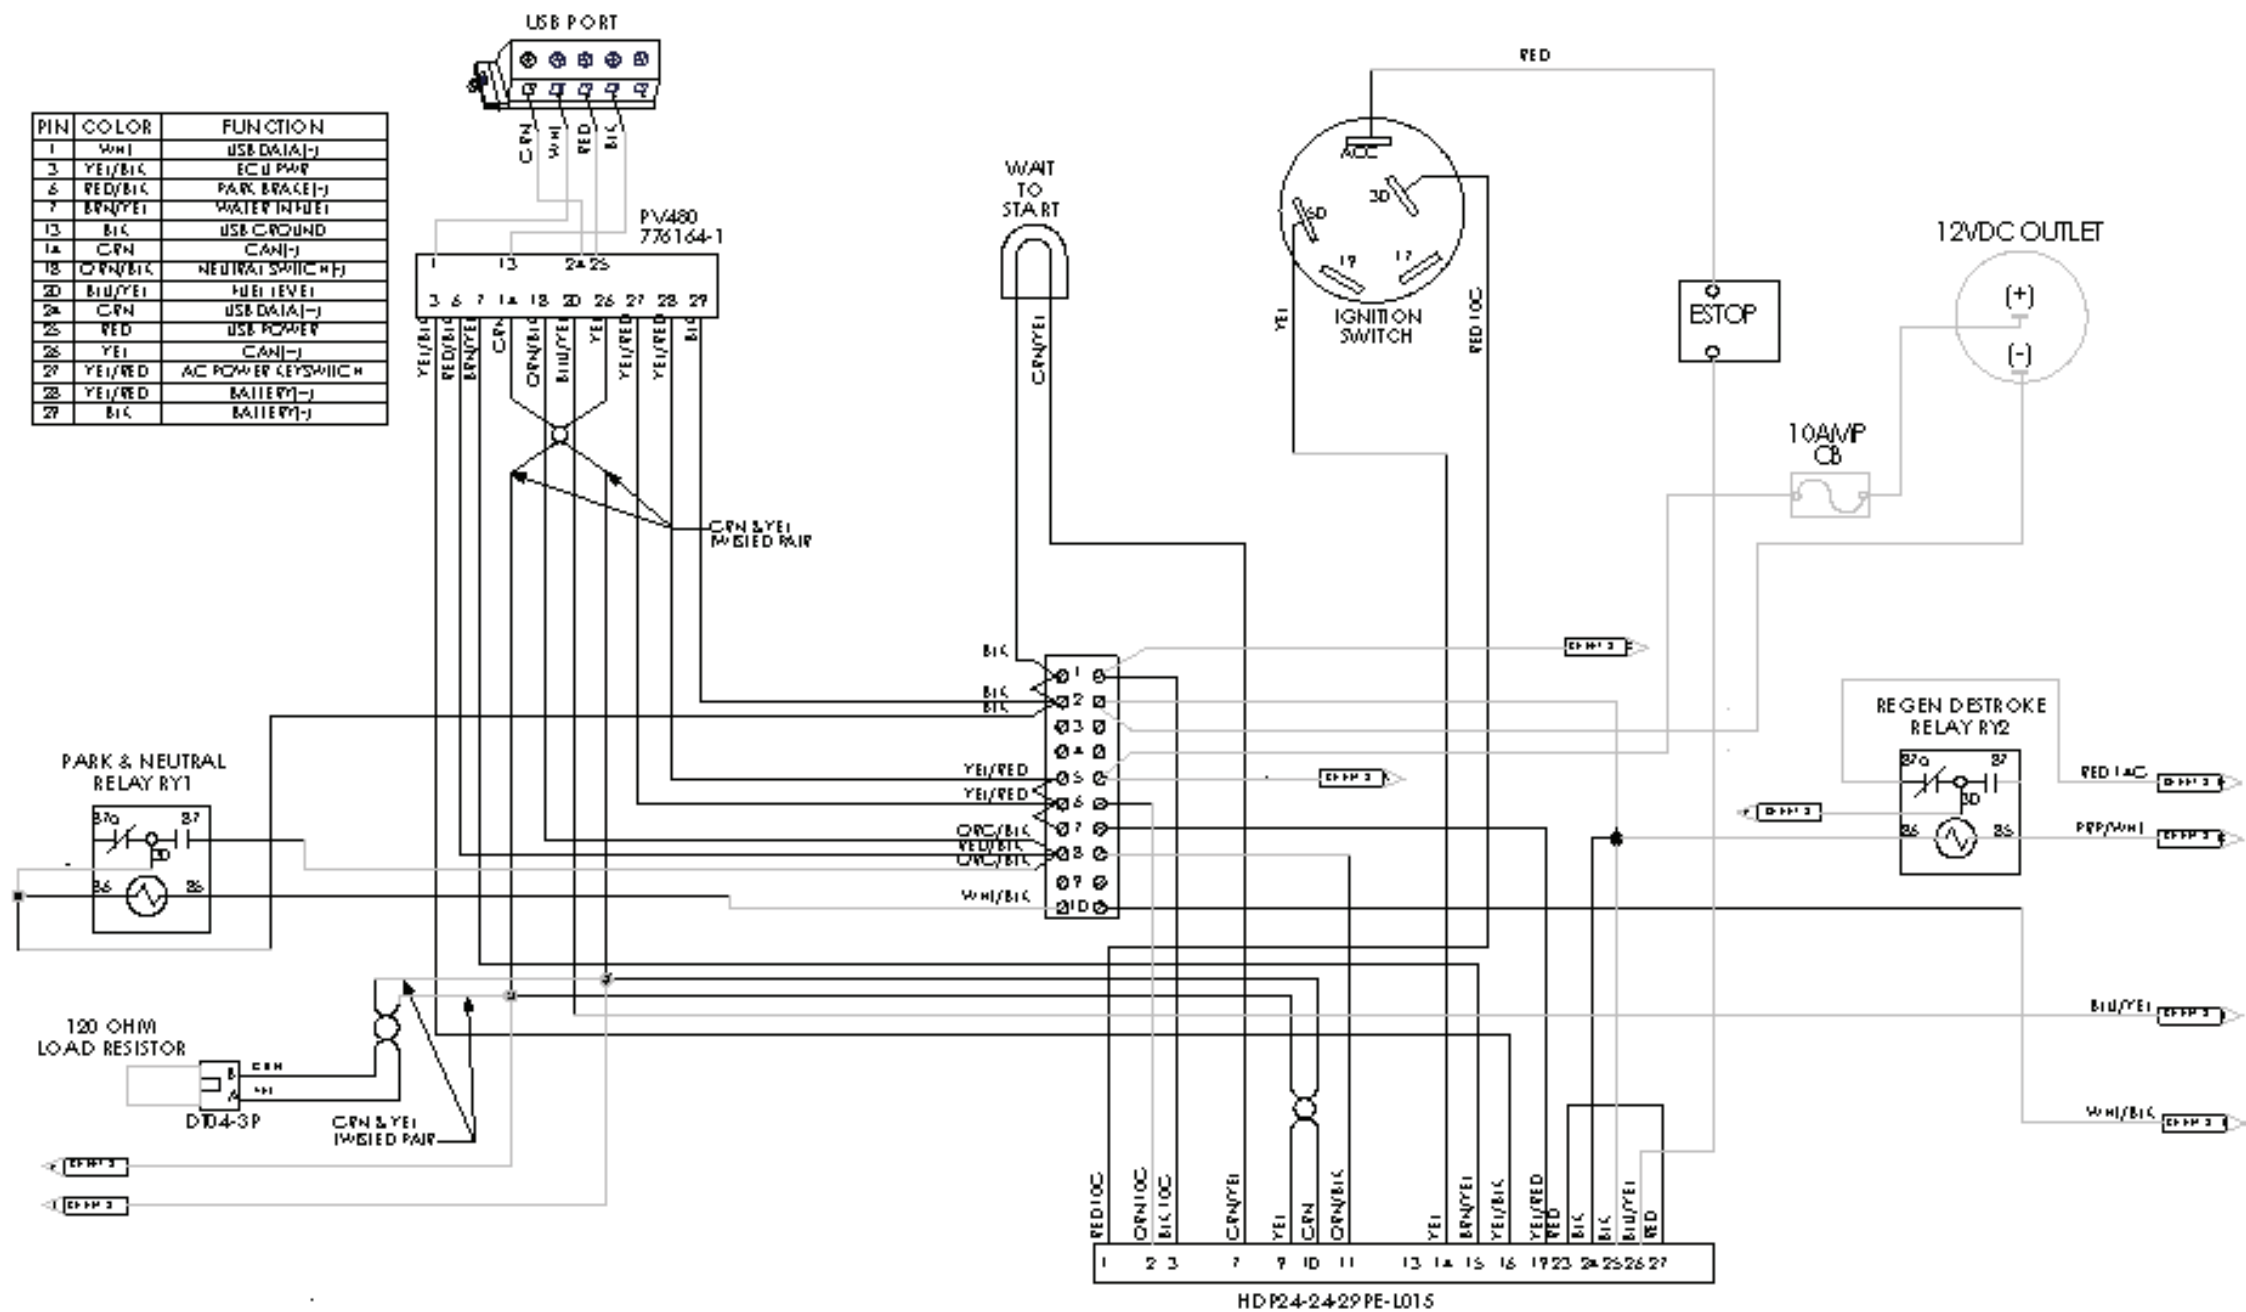


Figure 6-12. Manual Steering Control Box (2 of 2)

NOTES

STEERING WHEEL BOX (OPTION)

Schematic # 1000708

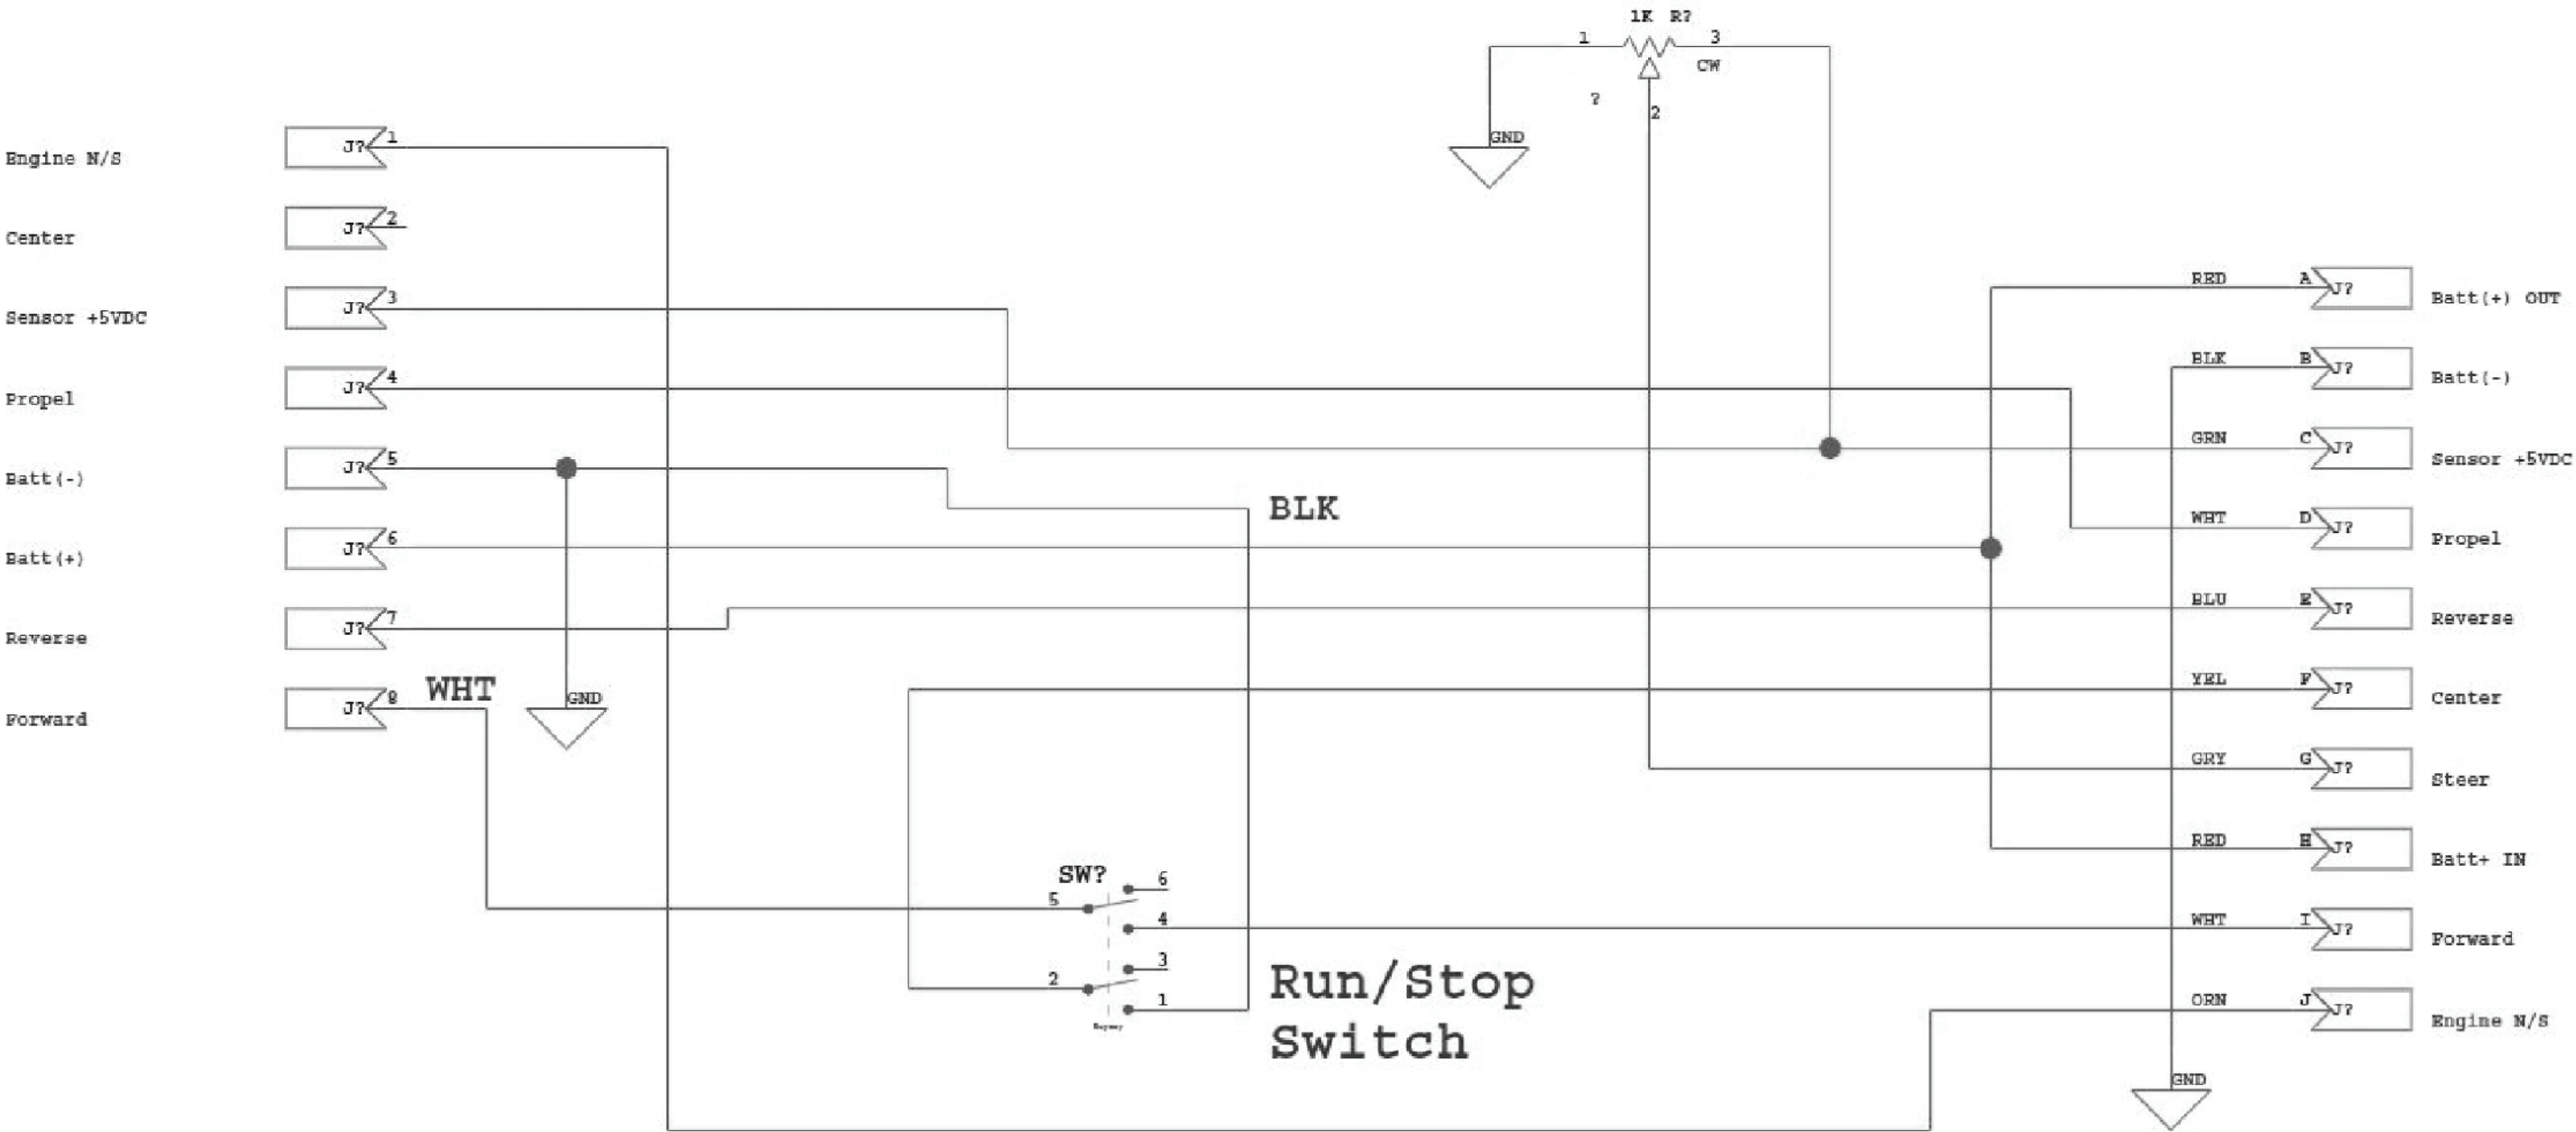


Figure 6-13. Steering Wheel Box (Option)

NOTES

CONTROL BOX ASSEMBLY (1 OF 2)

Schematic # 1013633

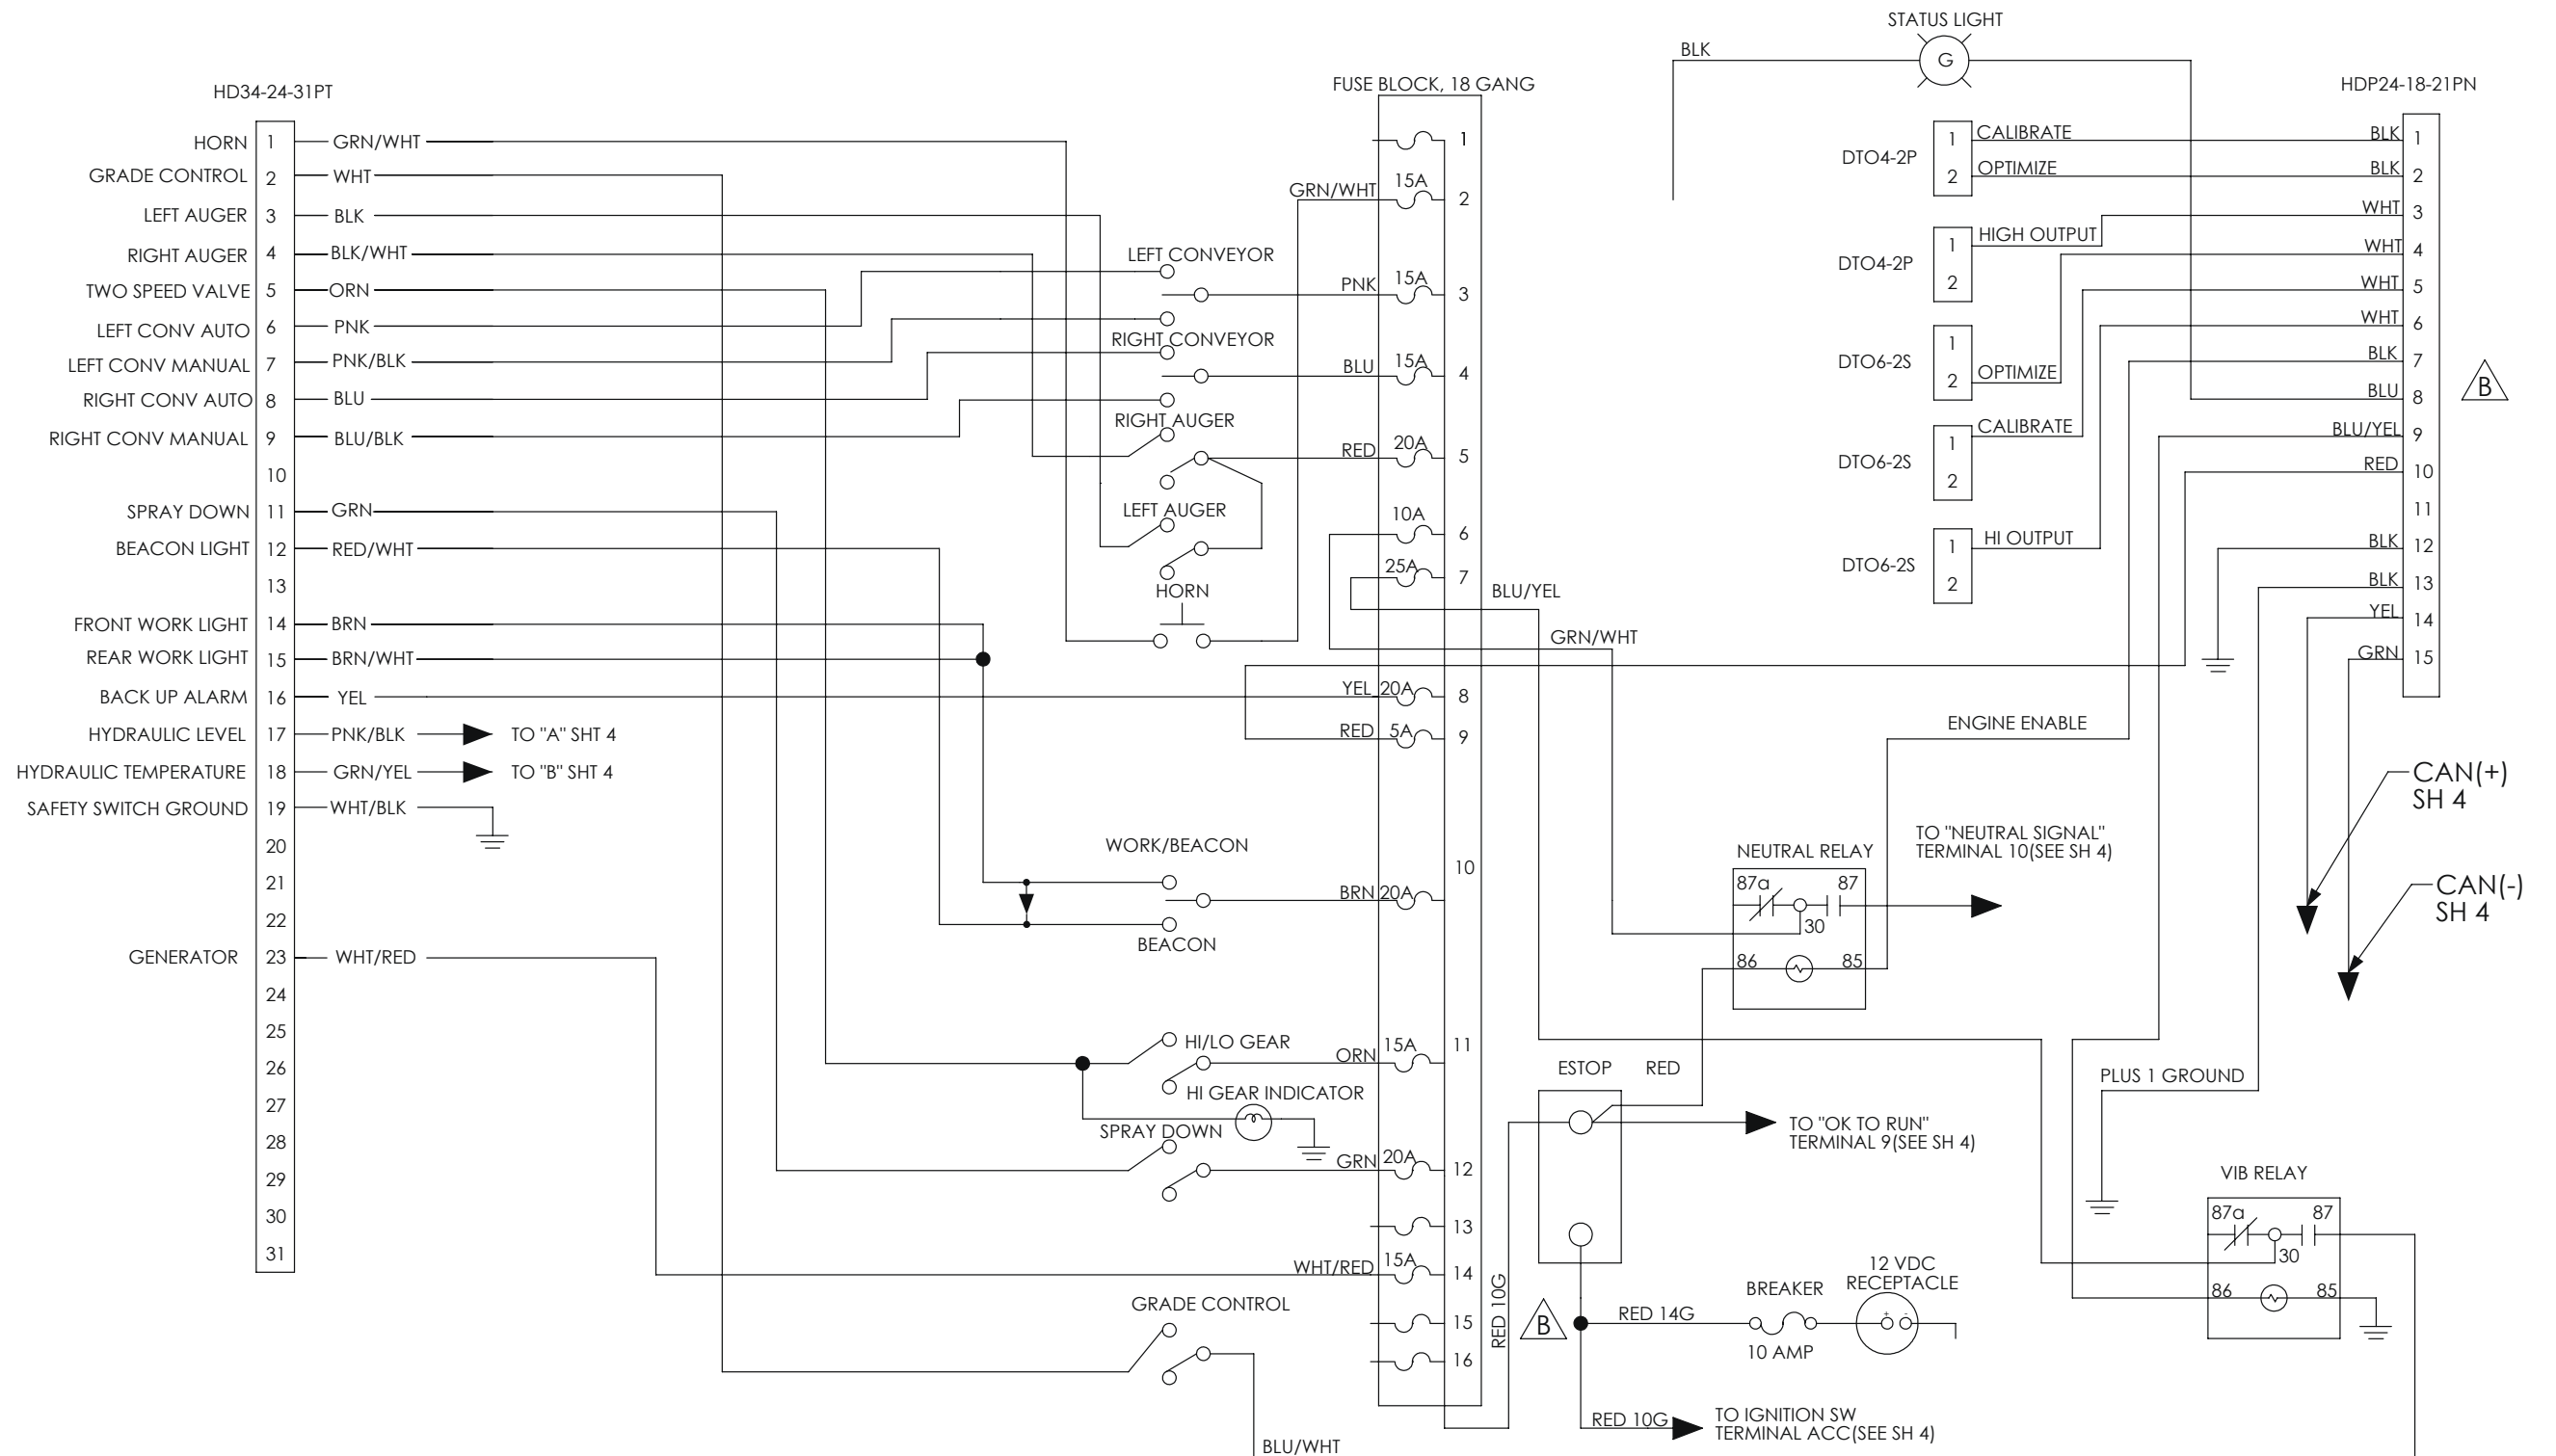


Figure 6-14. Control Box Assembly (1 of 2)

NOTES

CONTROL BOX ASSEMBLY (2 OF 2)

Schematic # 1013633

PIN	COLOR	FUNCTION
1	WHT	USB DATA(-)
3	YEL/BLK	ECU PWR(-)
6	RED/BLK	PARK BRAKE(-)
7	TAN/BLK	WATER IN FUEL(+)
8	GRN/YEL	HYD TEMP
9	PNK/BLK	HYD LEVEL
13	BLK	USB GROUND
14	GRN	CAN BUS(-)
18	ORN/BLK	NEUTRAL SWITCH(-)
20	BLU/ORN	FUEL LEVEL
24	GRN	USB DATA(+)
25	RED	USB POWER
26	YEL	CAN BUS(+)
27	YEL/RED	ACC PWR KEY SW
28	YEL/RED	BATTERY(+)
29	BLK	BATTERY(-)

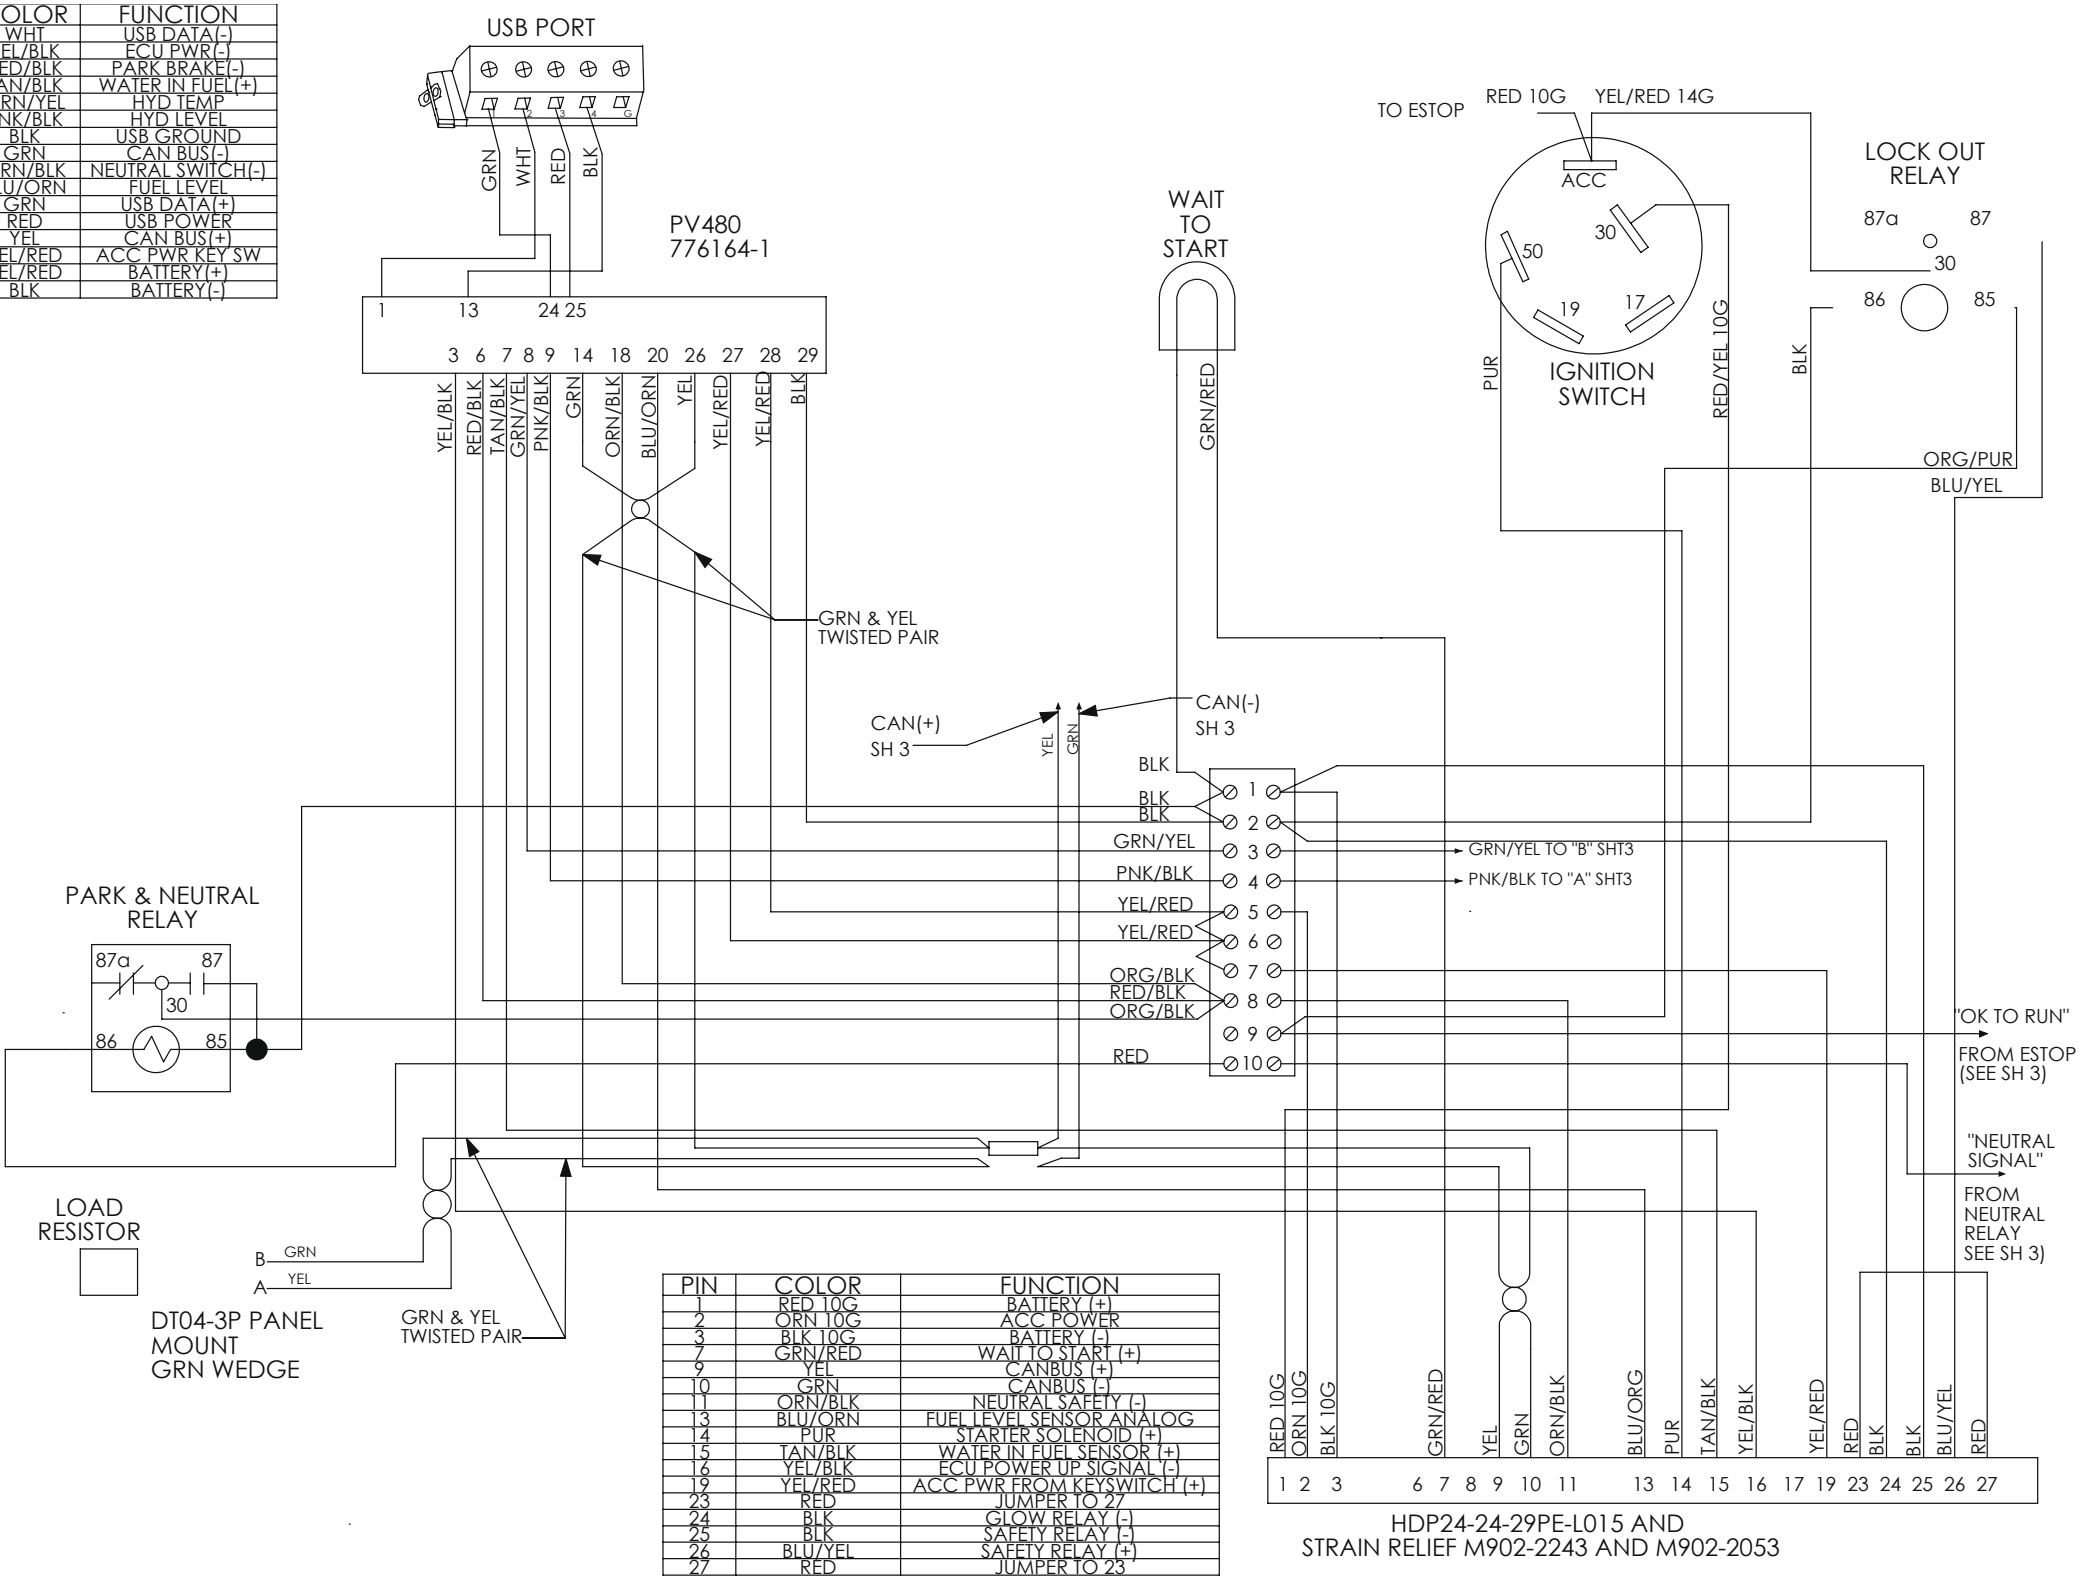


Figure 6-15. Control Box Assembly (2 of 2)

NOTES

ELECTRIC HEAT CONTROL

Schematic # 1010397

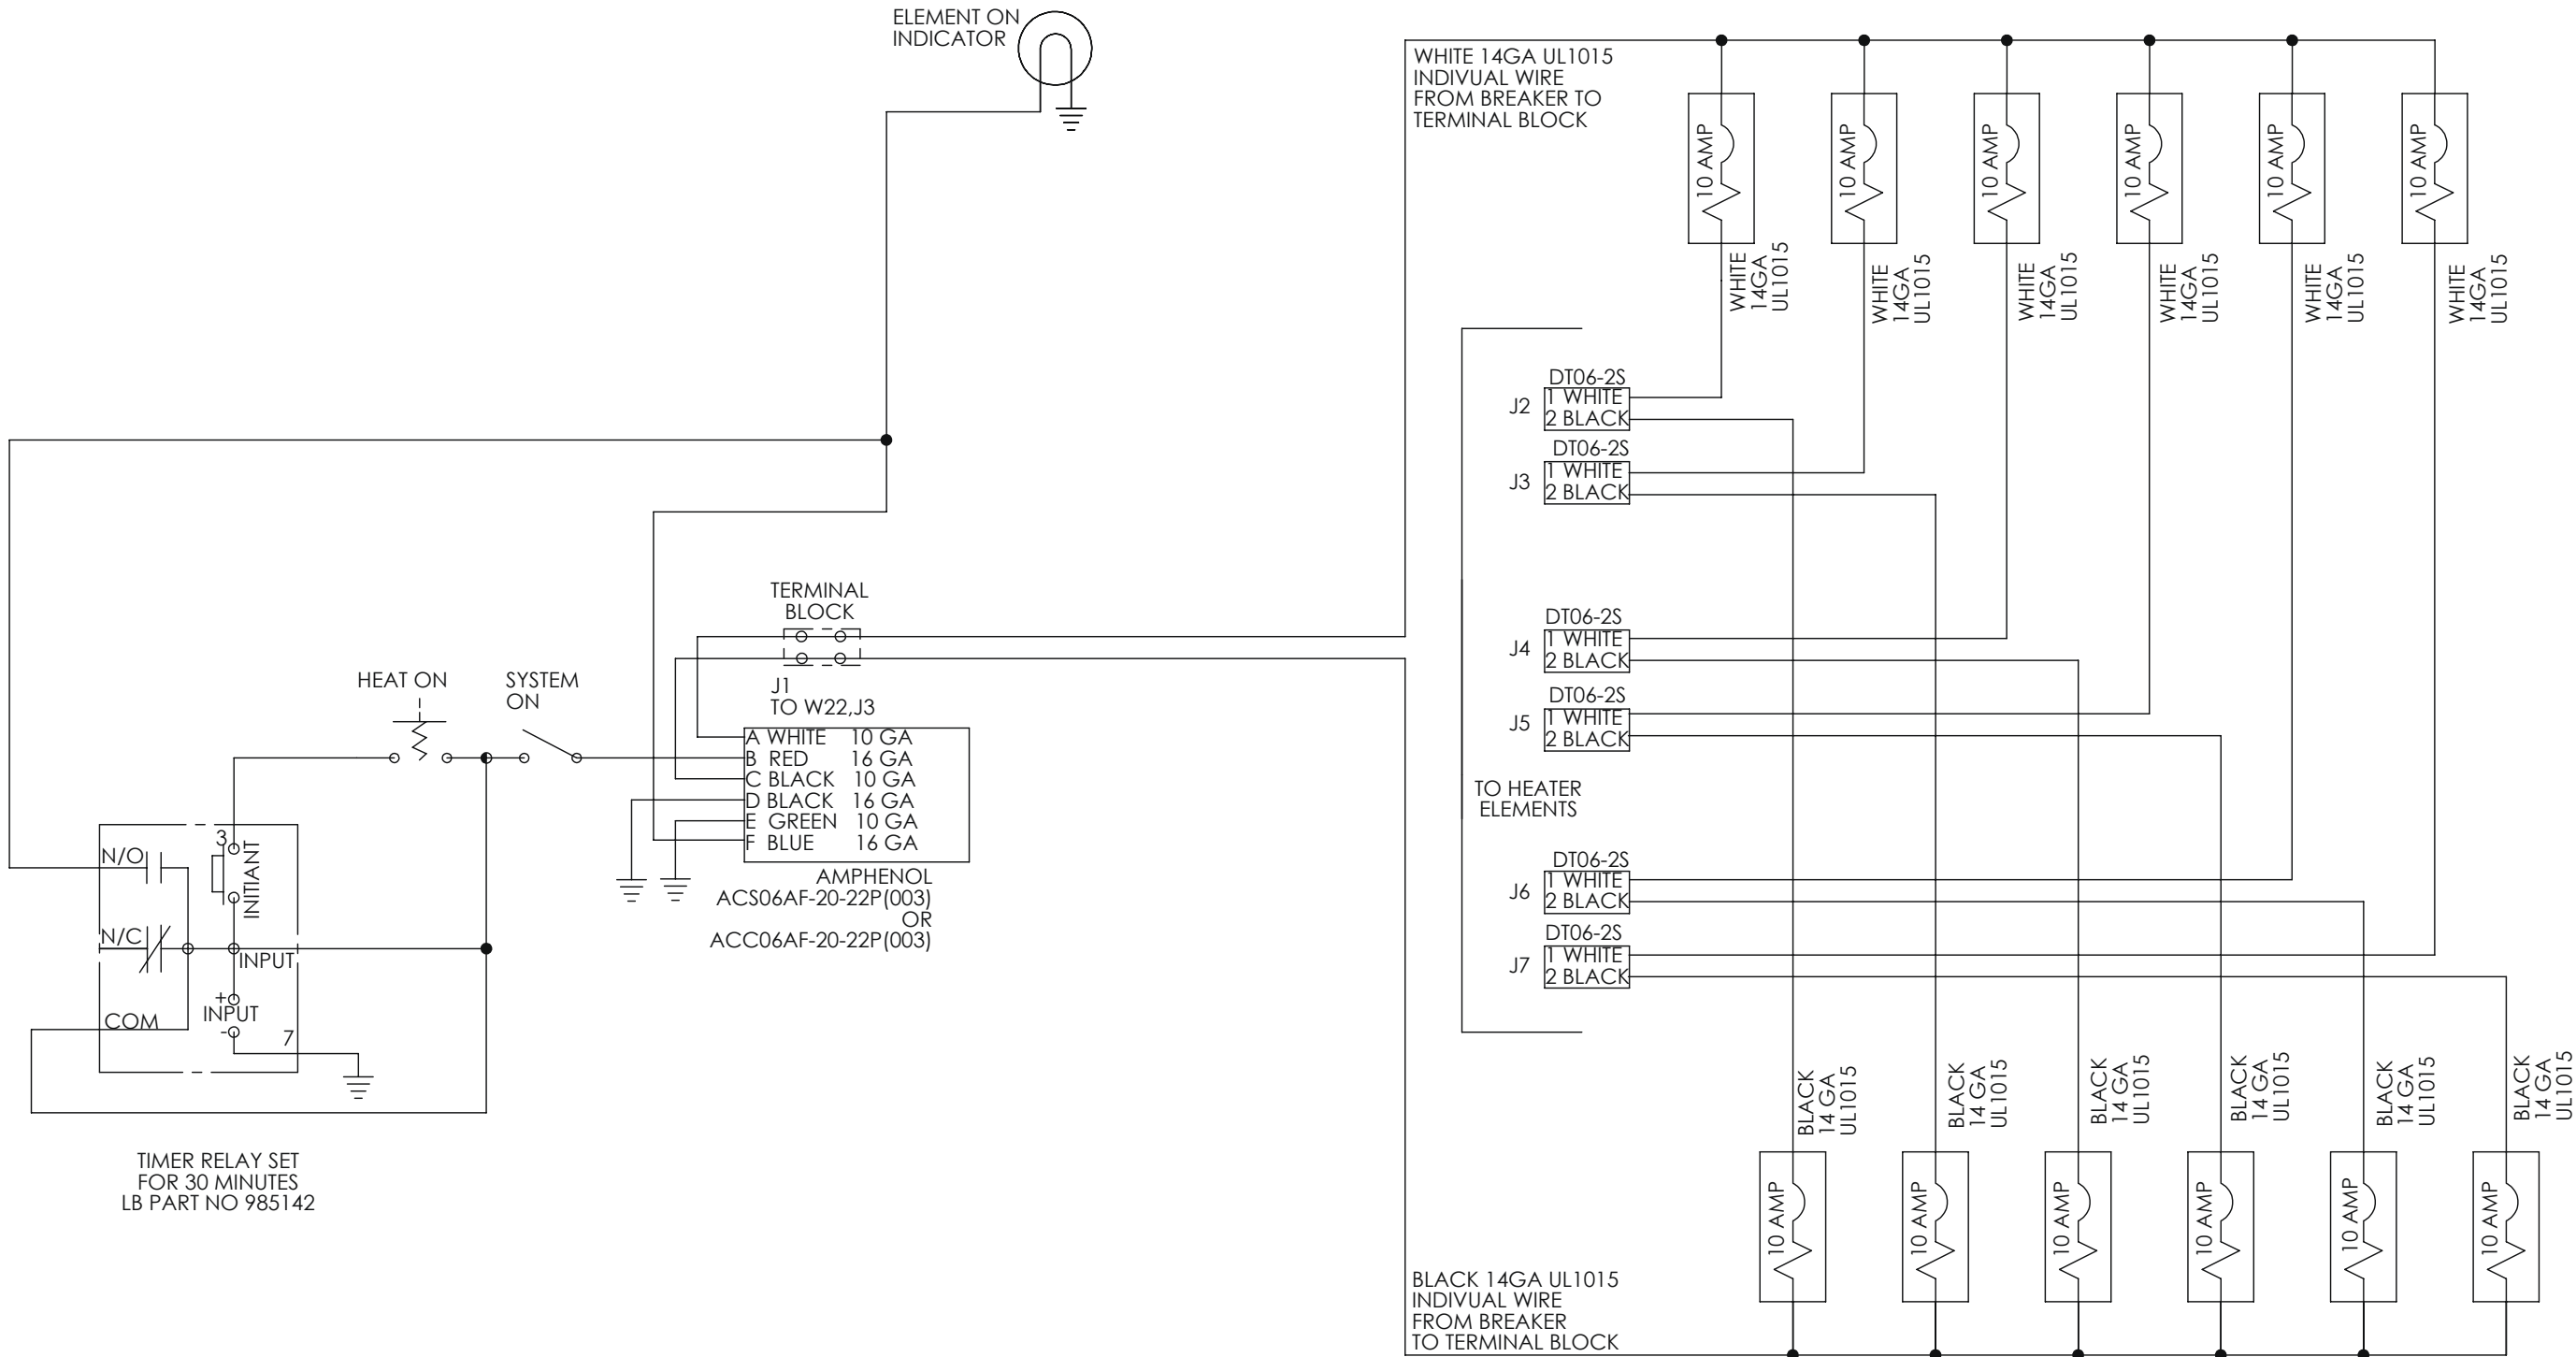


Figure 6-16. Electric Heat Control, No Timer

NOTES

MAIN HARNESS (1 OF 2)

Schematic # 1007170

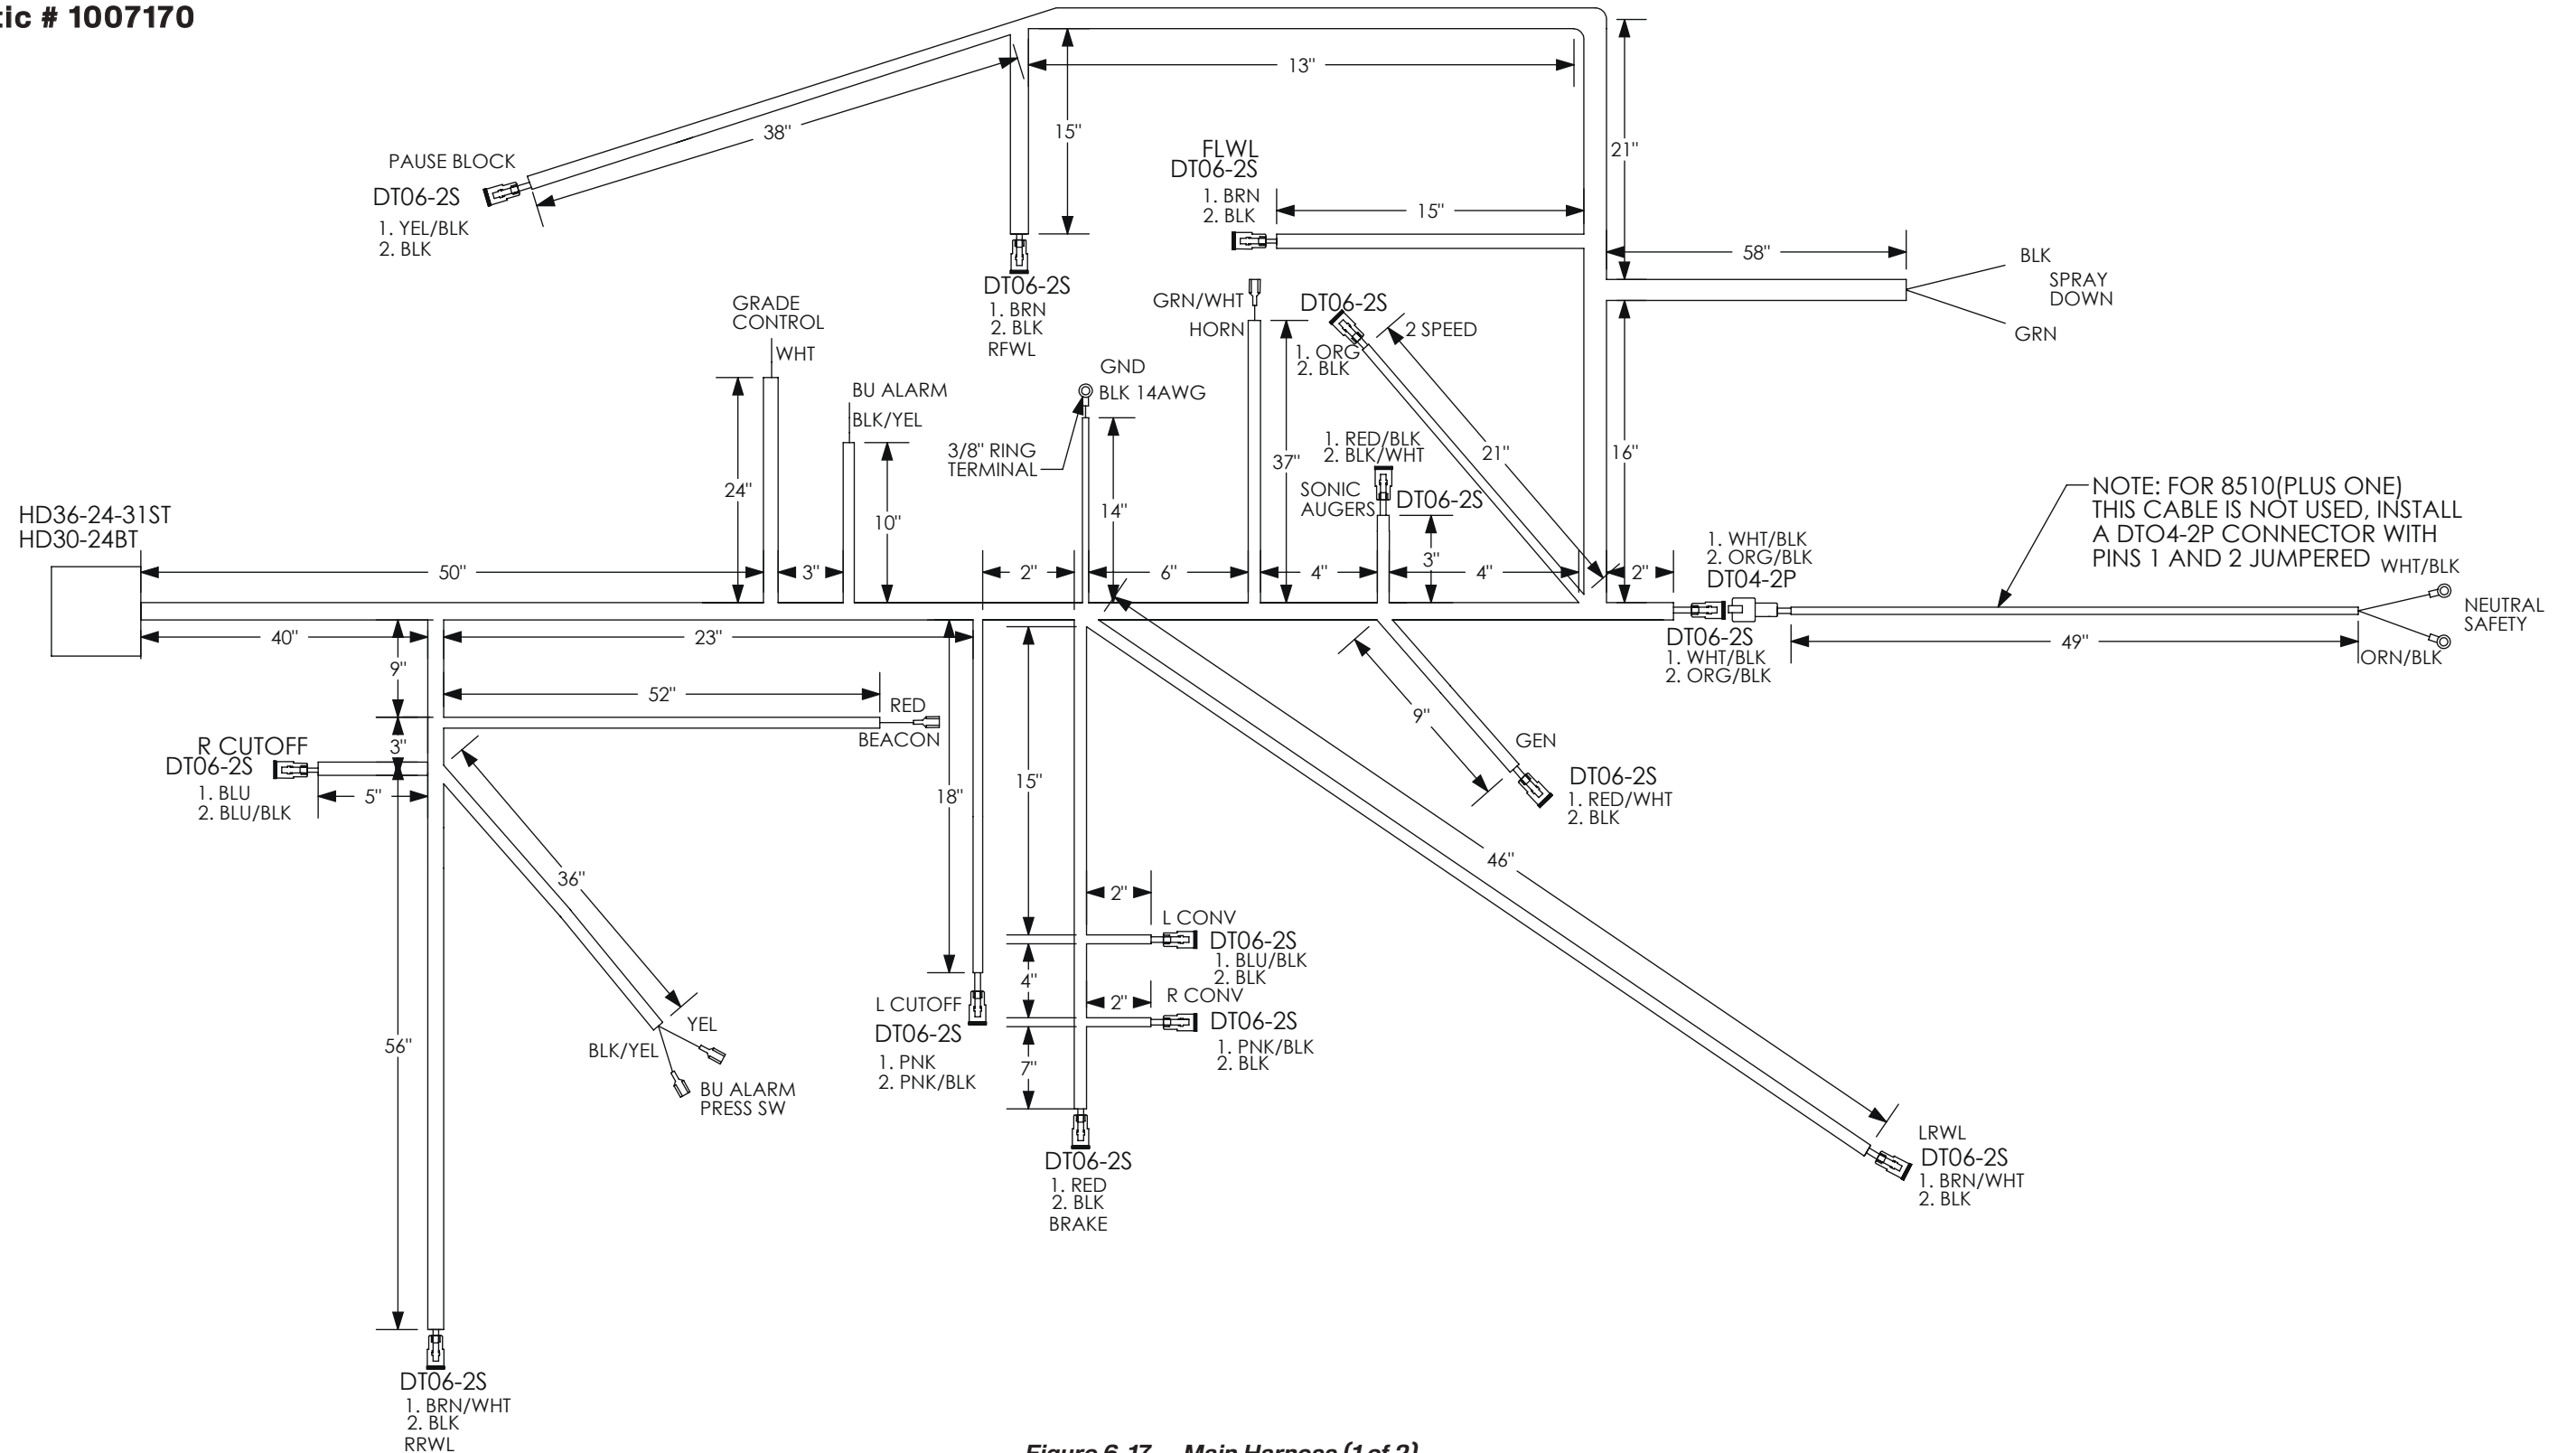


Figure 6-17. Main Harness (1 of 2)

NOTES

Schematic # 1007170



Figure 6-18. Main Harness (2 of 2)

NOTES

HYDRAULIC SYSTEM (1 OF 4)

Schematic # 1015174

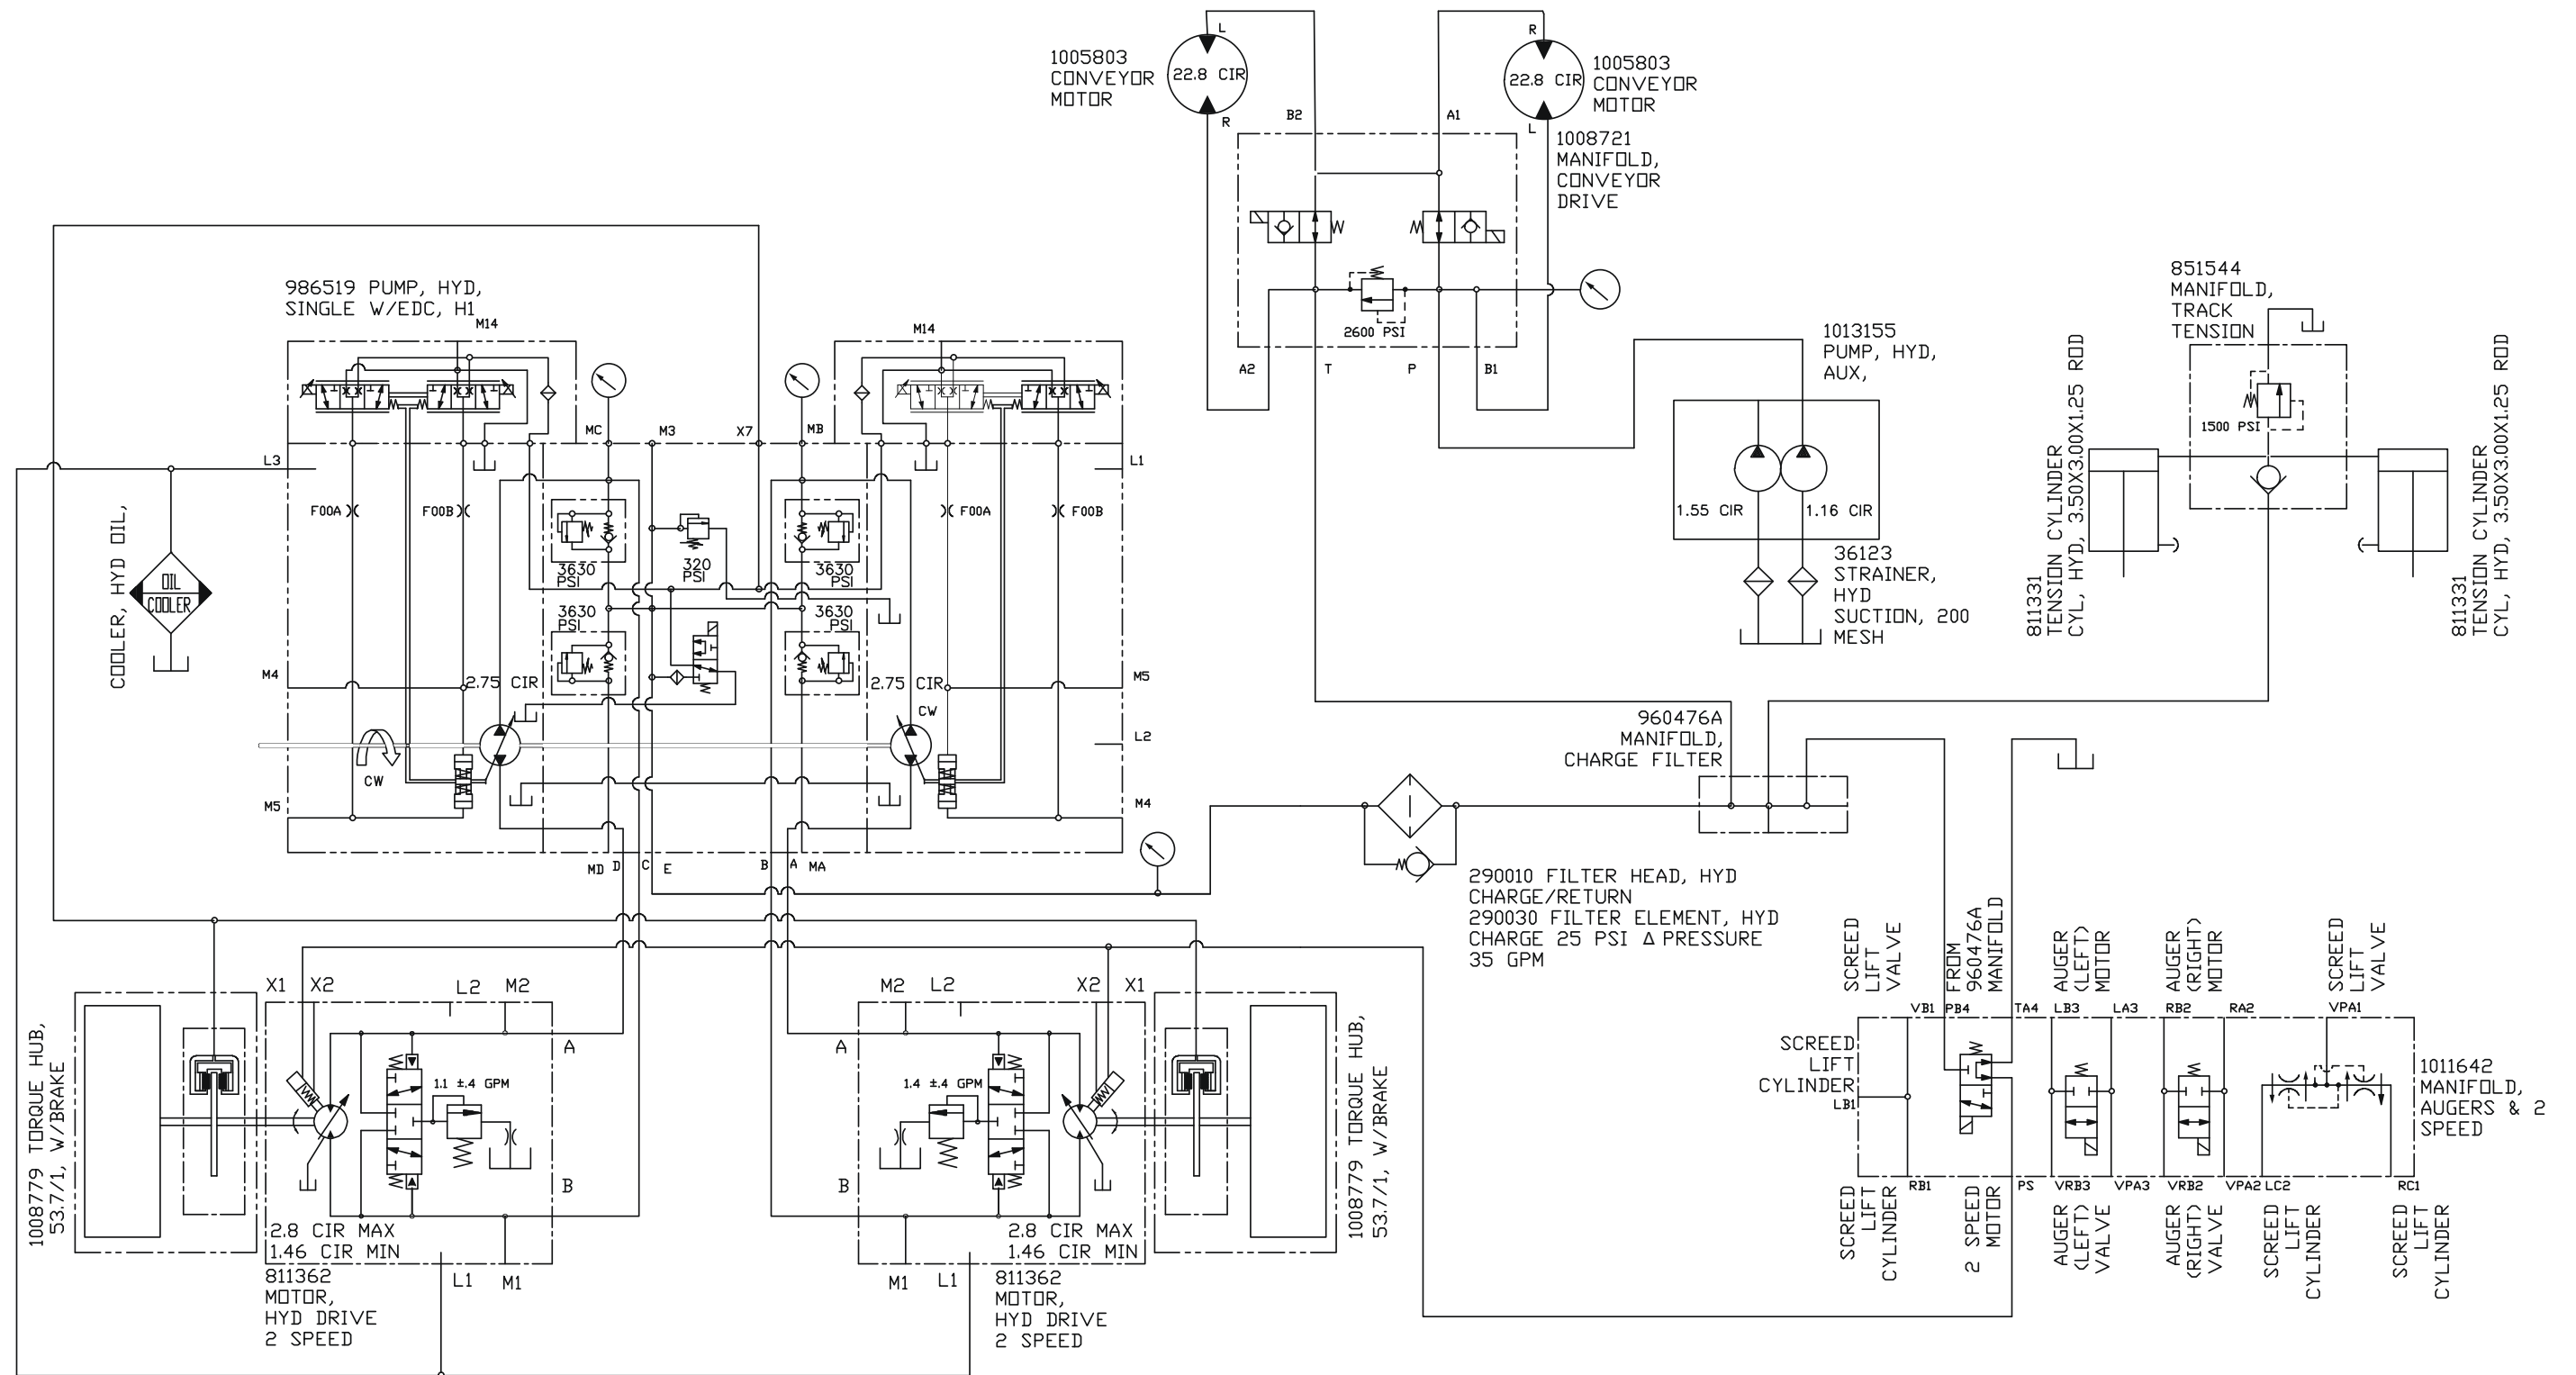


Figure 6-19. Hydraulic System (1 of 4)

NOTES

HYDRAULIC SYSTEM (2 OF 4)
Schematic # 1015174

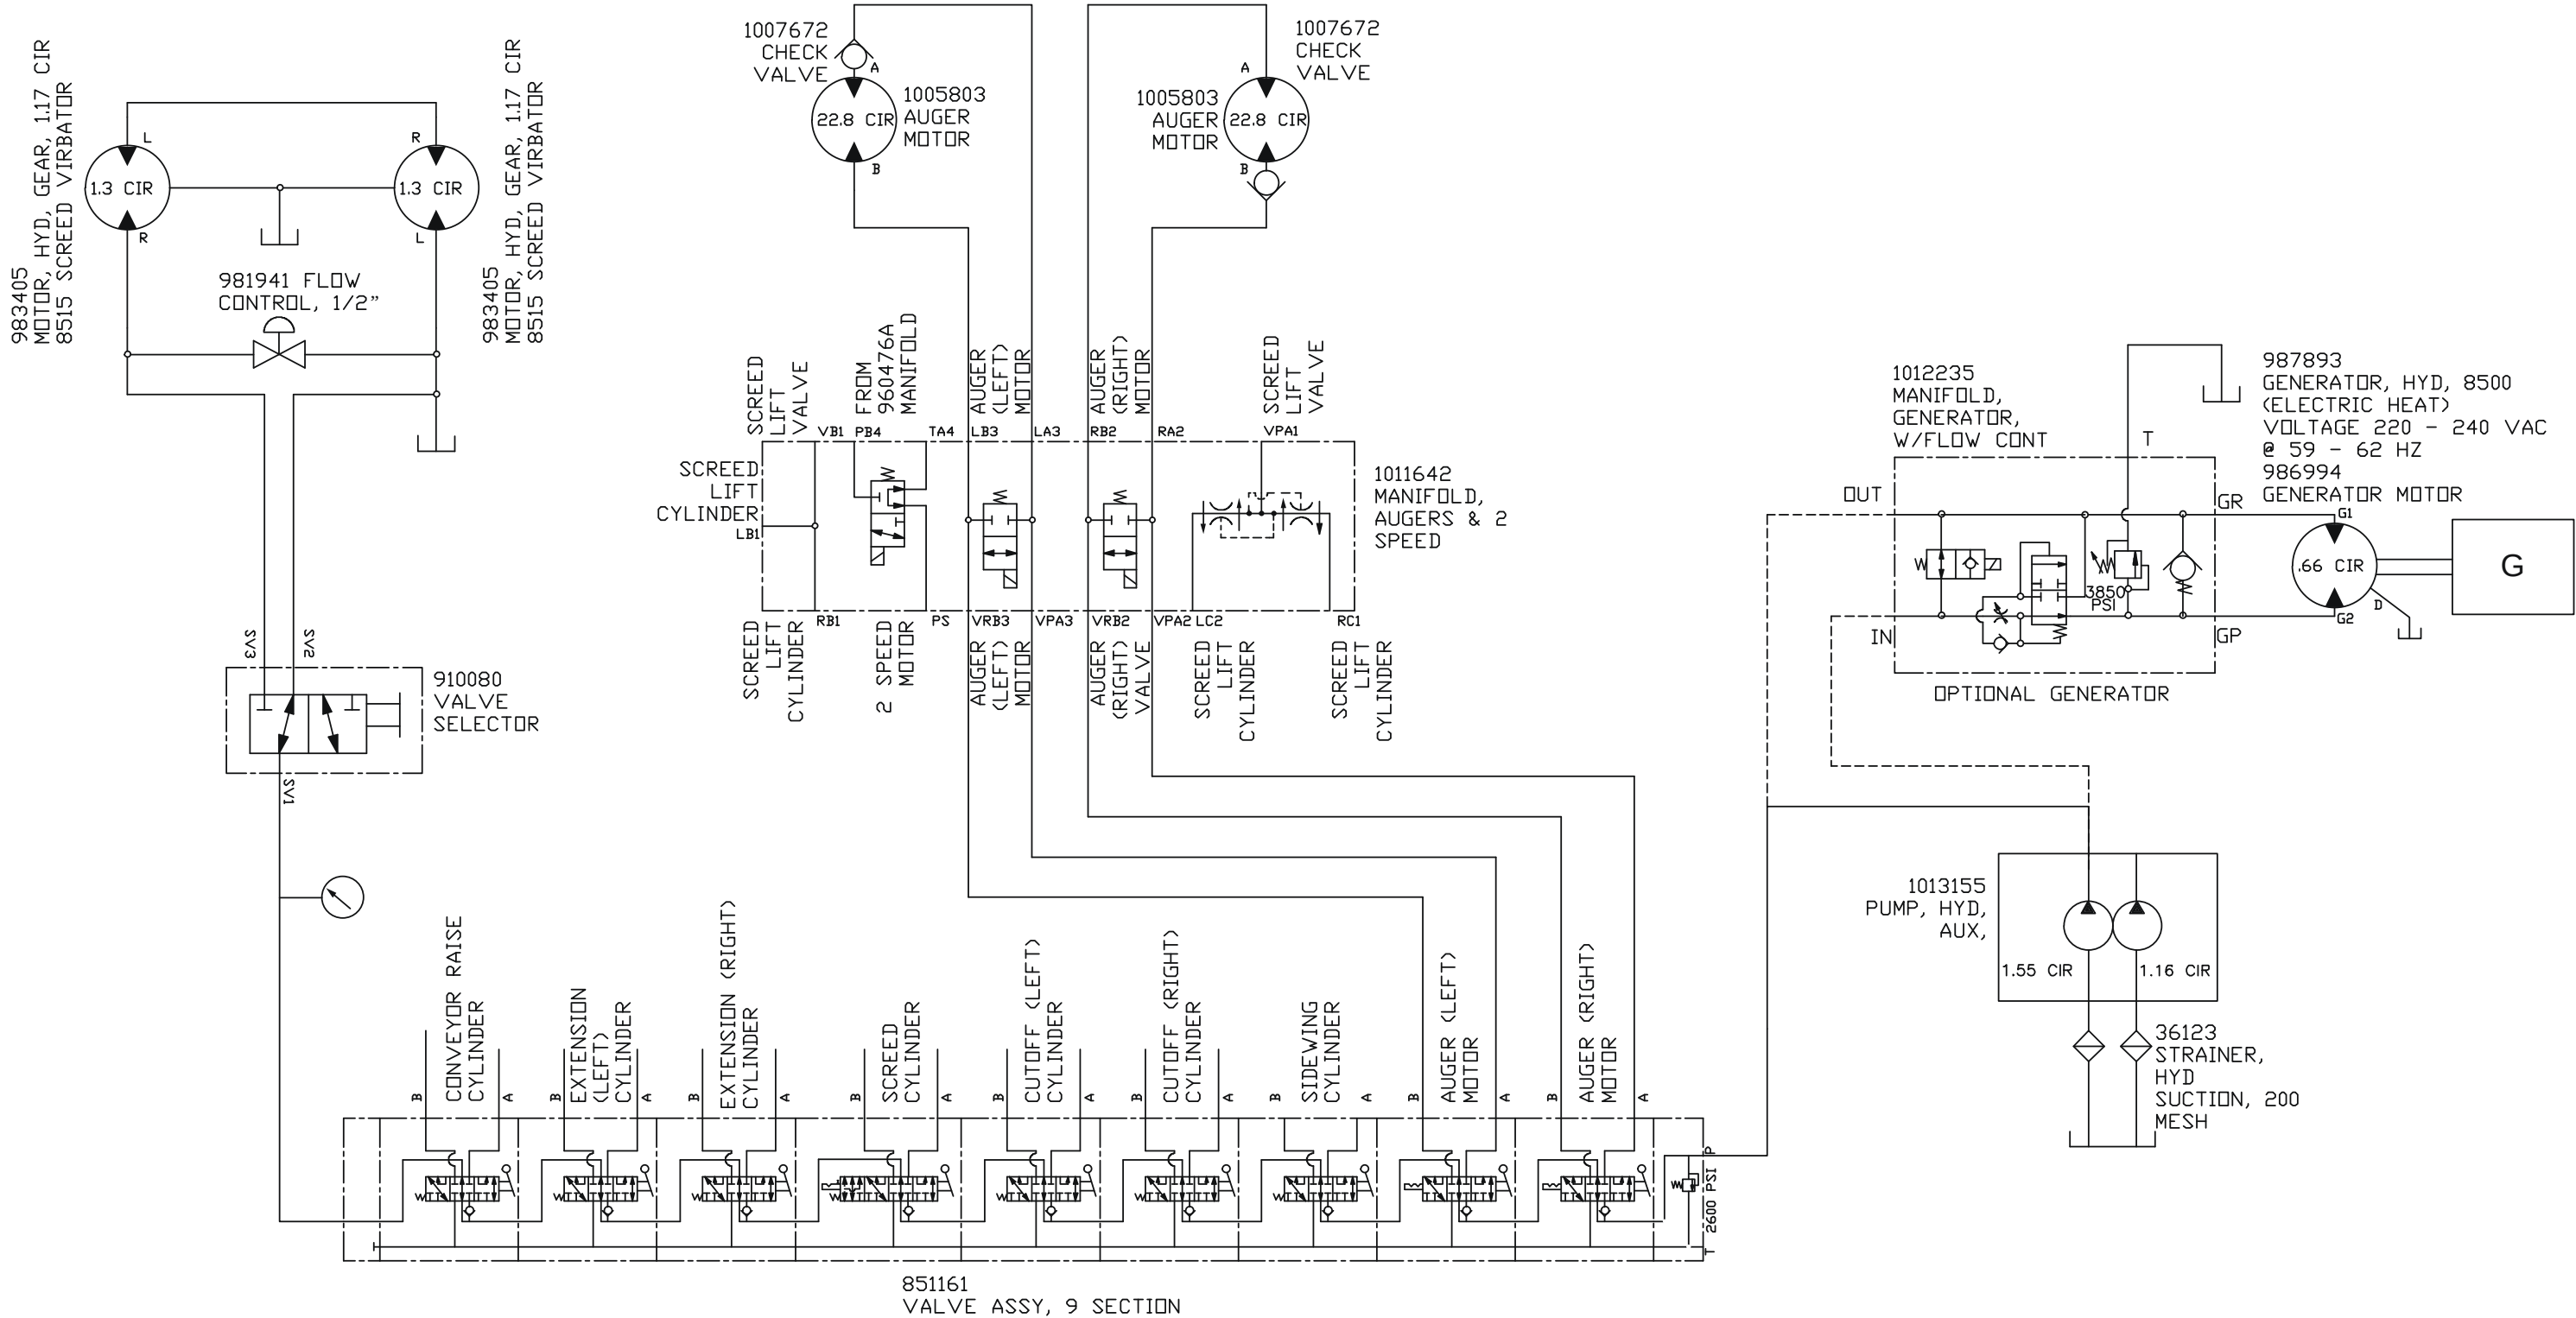


Figure 6-20. Hydraulic System (2 of 4)

NOTES

HYDRAULIC SYSTEM (3 OF 4)

Schematic # 1015174

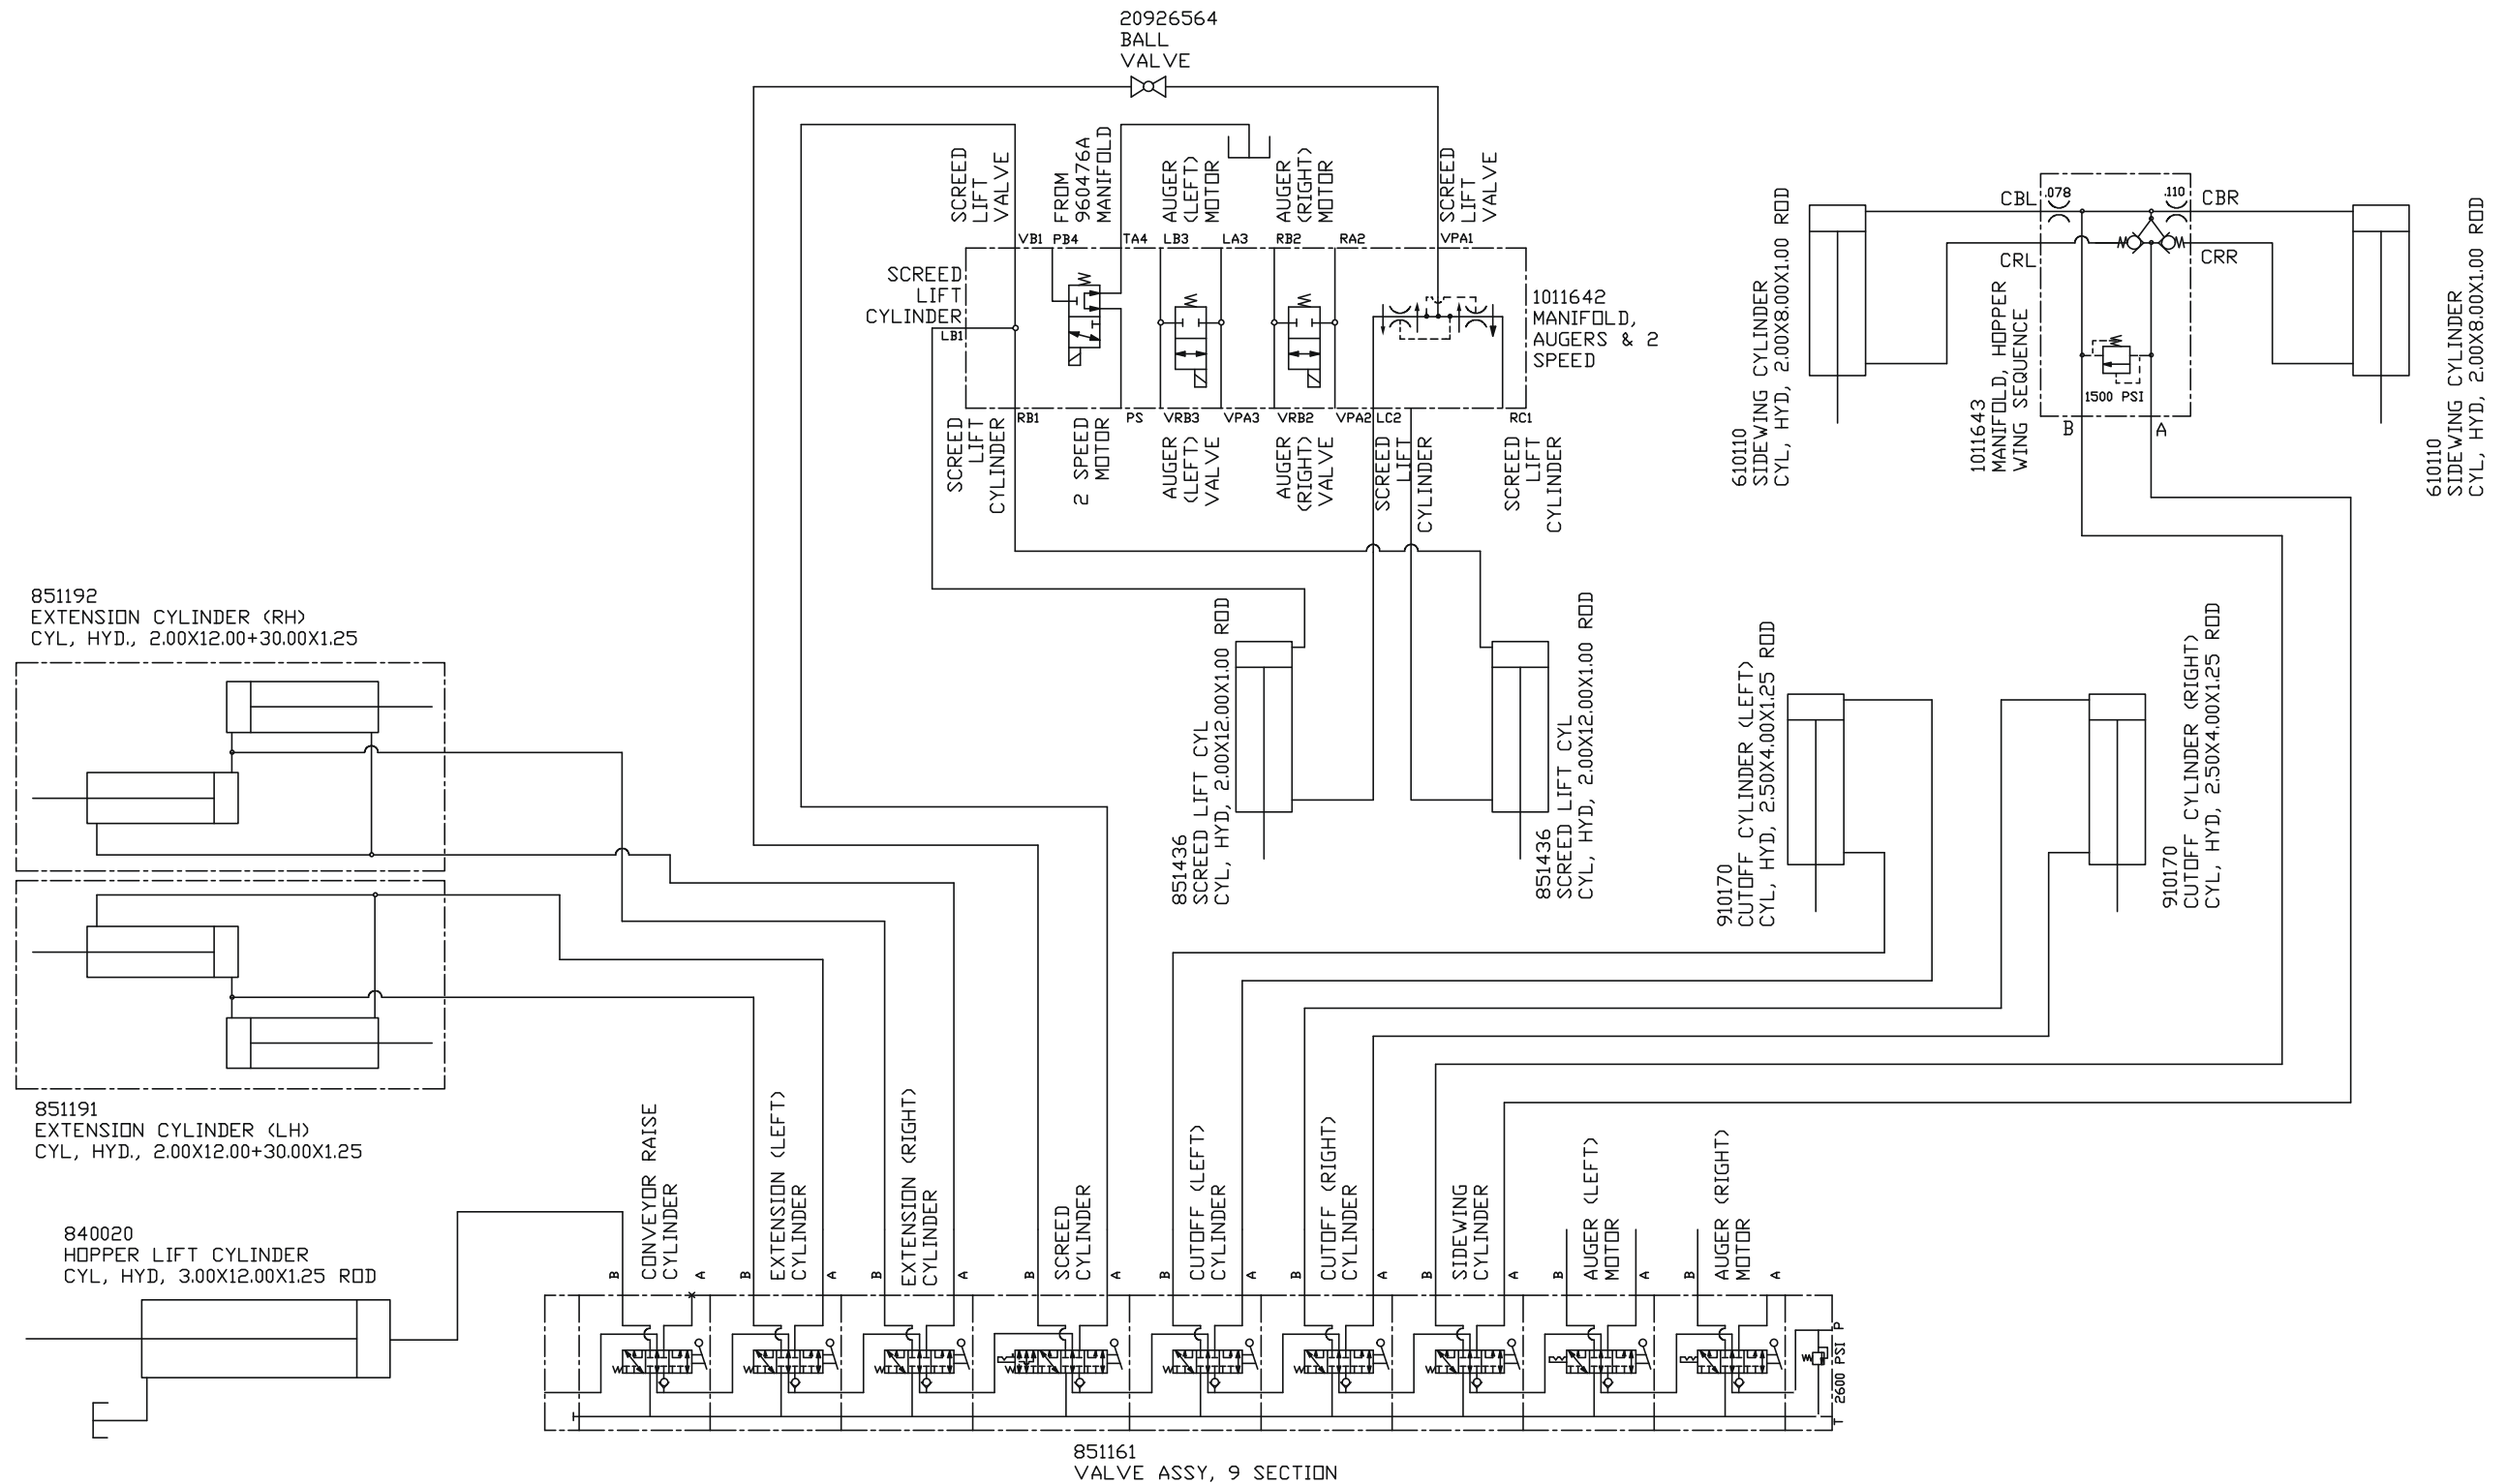


Figure 6-21. Hydraulic System (3 of 4)

NOTES

HYDRAULIC SYSTEM (4 OF 4)

Schematic # 1015174

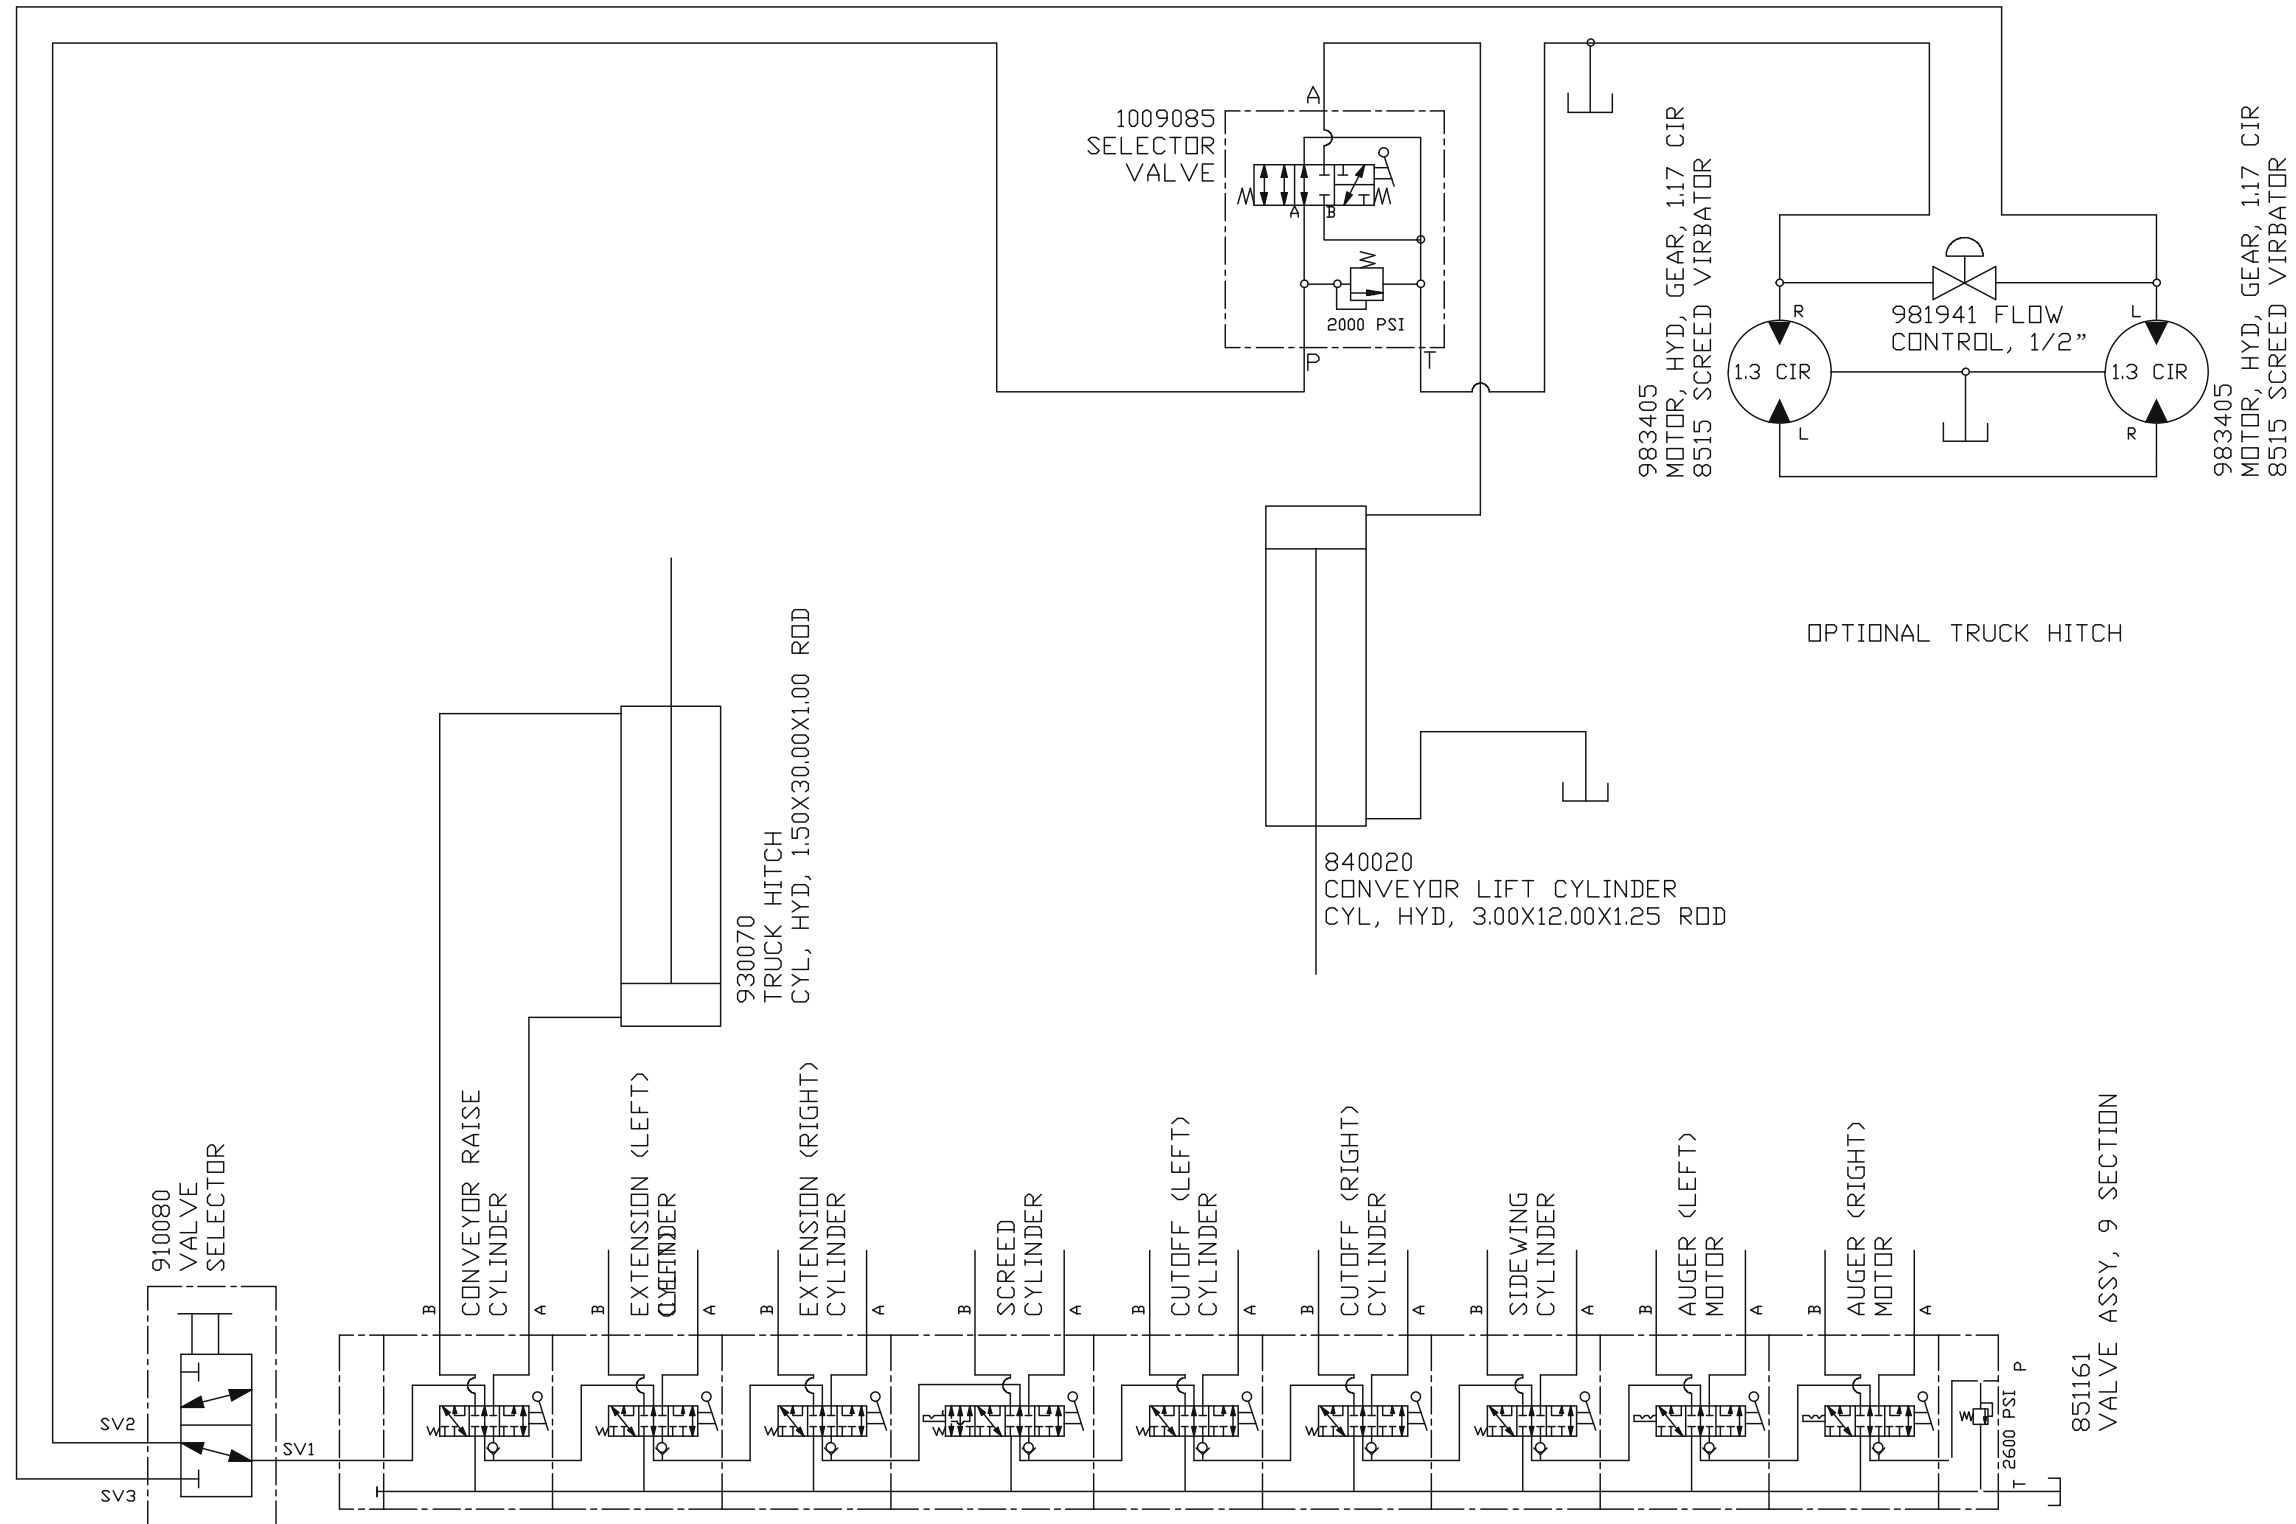


Figure 6-22. Hydraulic System (4 of 4)

NOTES



Section 7

ILLUSTRATED PARTS LIST


Quick Reference	7-5
Sprocket Drive Track System - 4 Roller Undercarriage	7-6
Sprocket Drive Track System - 4 Roller Undercarriage	7-8
Rubber Track Undercarriage - 5 Roller Undercarriage	7-10
Conveyor Drive Assembly (1 of 2)	7-12
Conveyor Drive Assembly (2 of 2).	7-14
Hopper Components (1 of 2)	7-16
Hopper Components (2 of 2)	7-18
Auger Assembly	7-20
Conveyor Drive Cutoff / Screed Lift Cylinders	7-22
Hydraulic Components / (Left) Side Fuel Tank	7-24
Hydraulic Test Port Assembly	7-26
H1 Pump & Controls	7-28
Kubota T4F Engine Assembly (1 of 3)	7-30
Kubota T4F Engine Assembly (2 of 3).	7-32
Kubota T4F Engine Assembly (3 of 3).	7-34
Spray Down	7-36
Screed Arm Assembly With Toe Point	7-38
Propane Heaters.	7-40
Sheet Metal Covers - High Deck (1 of 2).	7-42
Sheet Metal Covers - High Deck (2 of 2)	7-44
Sheet Metal Covers - Low Deck (1 of 2)	7-46
Sheet Metal Covers - Low Deck (2 of 2).	7-48
Controls - High Deck (Right)	7-50
Controls - Low Deck (Right)	7-52
Controls - Left Side.	7-54

Main Valve Manifold Detail	7-56
Instrument Panel - Dash (1 of 2)	7-58
Instrument Panel - Dash (2 of 2)	7-60
Screed Non-Sloping Overview	7-62
Screed Frame Non-Sloping - Propane	7-64
Extension Single Adjust Assembly - Propane (Left)	7-66
Extension Single Adjust Assembly - Propane (Right)	7-68
Extension Double Adjust Assembly - Propane (Left)	7-70
Extension Double Adjust Assembly - Propane (Right)	7-72
Screed Frame Non-Sloping - Electric	7-74
Extension Single Adjust Assembly - Electric (Left)	7-76
Extension Single Adjust Assembly - Electric (Right)	7-78
Extension Double Adjust Assembly - Electric (Left)	7-80
Extension Double Adjust Assembly - Electric (Right)	7-82
Endgate Assembly (Left)	7-84
Endgate Assembly (Right)	7-86
Screed Pull Arm Assembly (Left)	7-88
Screed Pull Arm Assembly (Right)	7-90
Citrus Tank & Heat Control Box	7-92
Vibrator Assembly (Left)	7-94
Walk Board Assembly	7-96
Slide Plate Assembly	7-98
Screed Miscellaneous Components	7-100
Generator	7-102
Power Crown (Option)	7-104
Strike Offs And Extensions (Option)	7-106
Paver Leveling Control TOPCON P-32 (Option)	7-108
Truck Hitch Assembly (Option)	7-110
815HD Series Screed 8515 Non-Sloping Overview	7-112
815HD Series Screed Frame Non-Sloping	7-114
815HD Series Vibrator Assembly	7-116
815HD Series Walk Board Assembly	7-118
815HD Series Slide Plate Assembly	7-120
815HD Series Extension Assembly (Left)	7-122

815HD Series Extension Assembly (Right)	.7-124
815HD Series Endgate Assembly (Left)	.7-126
815HD Series Endgate Assembly (Right)	.7-128
815HD Series Screed Pull Arm Assembly (Left)	.7-130
815HD Series Screed Pull Arm Assembly (Right)	.7-132
815HD Series Citrus Tank & Heat Control Box	.7-134
815HD Series Screed Optional Components	.7-136
HD Heated Endgate Assembly - Option (1 of 3)	.7-138
HD Heated Endgate Assembly - Option (2 of 3)	.7-140
HD Heated Endgate Assembly - Option (3 of 3)	.7-142
HD Heated LeeBoy Edge Endgate Assembly - Option (1 of 3)	.7-144
HD Heated LeeBoy Edge Endgate Assembly - Option (2 of 3)	.7-146
HD Heated LeeBoy Edge Endgate Assembly - Option (3 of 3)	.7-148
HD Heated Endgate Assembly - Option.	.7-150
Alphabetical Parts Index	.7-152

QUICK REFERENCE

FILTERS/STRAINERS		
Engine	Description	Part #
	Oil Filter	986537-03
	Fuel/Water Separator Filter	1009253-19
	Fuel Filter	1009253-18
	Air Cleaner, Primary	1009253-17
	Air Cleaner, Secondary	1009253-16
Hydraulic		
	Hydraulic Filter	36123
	Charge/Return Filter	290030
	Charge/Return Filter Head	290010
Spray Down		
	Pump and Strainer Kit	1011738

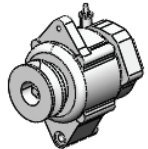ENGINE COMPONENTS		
Engine	Description	Part #
	Engine Belt	1009253-20
	Alternator	1009253-21
	Starter	1001166-03

ELECTRICAL COMPONENTS		
	Description	Part #
	5A Fuse (1)	36746
	10A Fuse (3)	36340
	15A Fuse (1)	36341
	20A Fuse (5)	36342
	30A Fuse (1)	36218
	Breaker, 10 Amp	986546

TRACK ASSEMBLIES		
	Description	Part #
	Track Assembly w/Poly Pads	851101P
	Rubber Track Assembly	982585

WEAR PLATES		
	Description	Part #
	Screed, Main - LP, 1-Adjuster	981724SRV
	Screed Extension - LP, 1-Adjuster	851182SRV
	Screed, Main - LP, 2-Adjuster	981724SRV
	Screed Extension - LP, 4-Adjuster	988318SRV
	Screed, Main - Electric, 1-Adjuster	985547SRV
	Screed Extension - Electric, 1-Adjuster	987872SRV
	Screed, Main - Electric, 2-Adjuster	985547SRV
	Screed Extension - Electric, 2-Adjuster	988319SRV
	Screed, Main - 815HD	1007089SRV
	Screed Extension - 815HD	1006380SRV

Specifications and designs may change without prior notice. These illustrations do not necessarily show the standard versions.

SPROCKET DRIVE TRACK SYSTEM - 4 ROLLER UNDERCARRIAGE

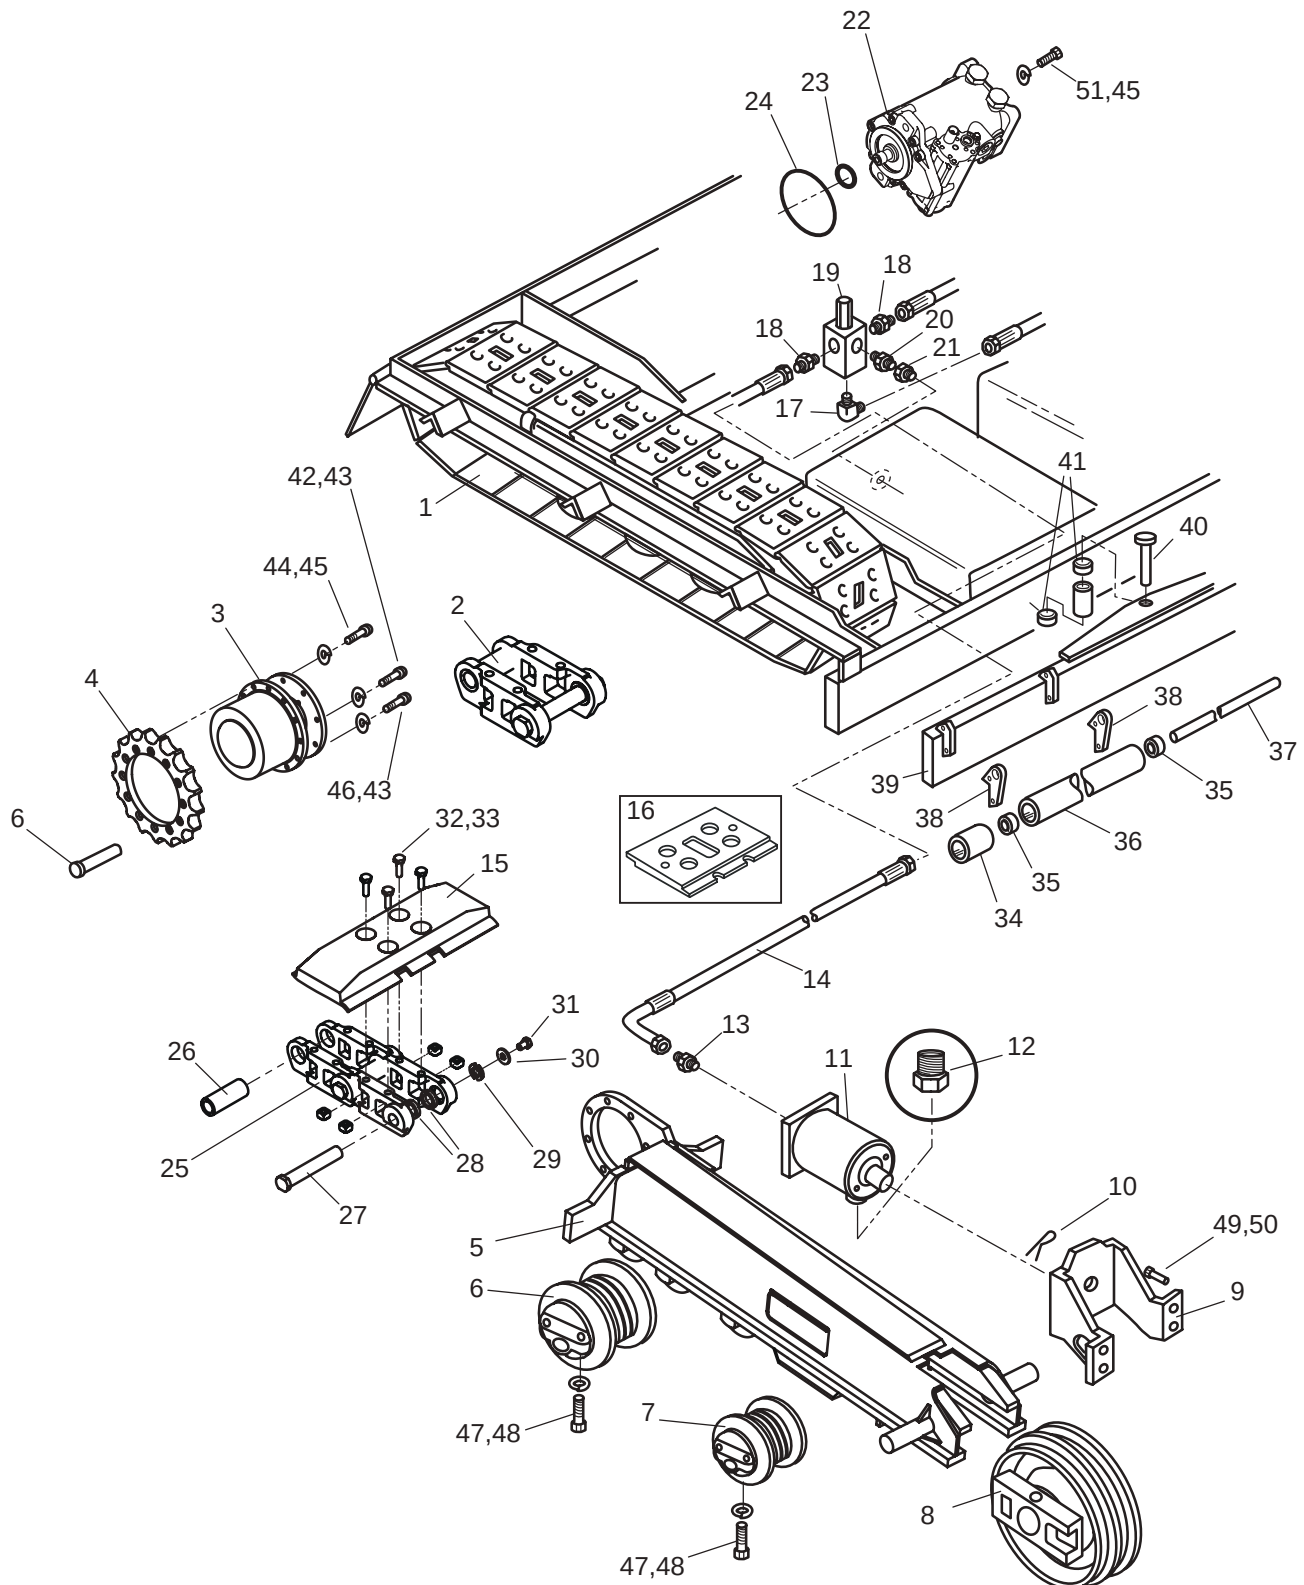


Figure 7-1 Sprocket Drive Track System (1 of 2)

Sprocket Drive Track System - 4 Roller Undercarriage

Item No.	Part Number	Qty.	Description	Remarks
GRP	1009869		Track, Drive Poly, Group Comer	
1	851101P	1	Assembly, Track, One Side, w/Poly Pads	Includes 3 & 15
2	851102	1	Chain Rail, Track Drive	(1) Link Shown for Reference
3	1008779	1	Torque Hub, 47.6:1, w/Brake	
4	1006737	1	Sprocket, Track Drive	
5	1008788	1	Weldment, Undercarriage, Comer (Right)	
REF	1008789	1	Weldment, Undercarriage, Comer (Left)	Not Shown
6	851566	1	Track Roller, B/I	
7	811326	3	Track Roller, B/O	
8	1001589	1	Idler, Track Front	
9	811329ASRV	1	Yoke, Track Idler	
10	870307	1	Hair Pin Cotter, .177	
11	811331	1	Cylinder, Hydraulic, Track Tensioner	
REF	811331-01	1	Seal Kit, Hydraulic Cylinder	
12	851644	1	Breather, Track Tensioner Cylinder	
13	2404-10-8	1	Adapter, Hydraulic Hose	
14	8550B	1	Assembly, Hose, Track Tensioner (Right)	
15	851104	A/R	Track Pad, Poly	
16	811304	A/R	Track Pad, Cast	Option
17	6801-10-8	1	Fitting, 90°, 10MJ-08MB	
18	6400-10-8	2	Fitting Straight, 10MJ-08MB	
19	851544	1	Manifold, Track Tensioner	
20	6401-8-8-O	1	Fitting, Straight, 08MP-08MB	
21	5406-12-8	1	Adapter, Reducer, Pipe, -12 / -8	
22	811362	1	Motor, Hydraulic, Drive, 2-Speed	
23	59941203	A/R	Seal, Hydraulic Motor/Pump	
24	811366	A/R	O-Ring, Hydraulic Motor	
25	811312	A/R	Link Kit, Track Repair	
26	851460	A/R	Bushing, Track Link, Short	
27	811307	A/R	Pin, Track Link, Plain	
28	811310	A/R	Spacer, Track Link Bushing	
29	811305	A/R	Washer, Track Chain Master Pin	
30	80474	A/R	Washer, Flat, M10	
31	989272-50	A/R	CSHH, M10x1.50 x 16mm	
32	811308	A/R	CSHH, Track Pad	
33	811309	A/R	Nut, Track Pad Cap Screw	
34	980035	2	Roller, Extension Bumper	

SPROCKET DRIVE TRACK SYSTEM - 4 ROLLER UNDERCARRIAGE

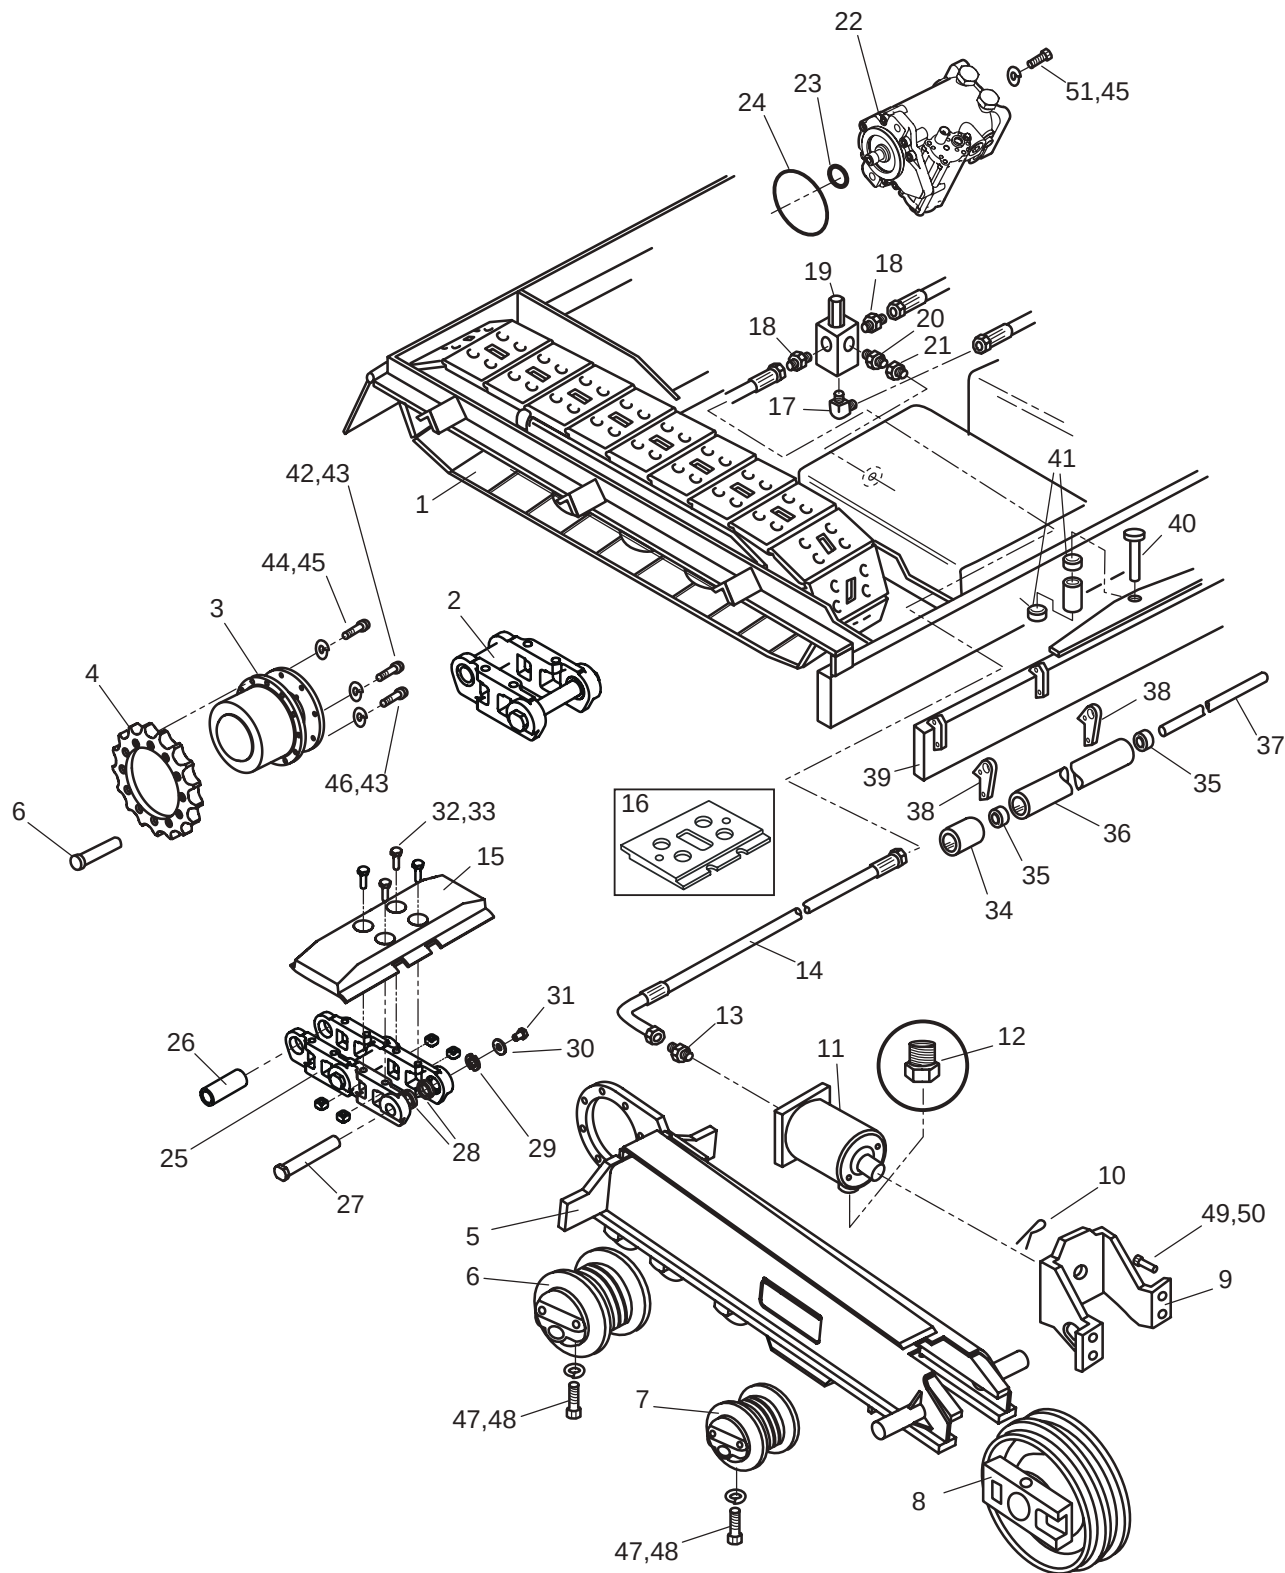


Figure 7-1 Sprocket Drive Track System (2 of 2)

Sprocket Drive Track System - 4 Roller Undercarriage

Item No.	Part Number	Qty.	Description	Remarks
35	850130	4	Bearing, Auger, Axle, Idler	
36	980032	2	Assembly, Roller, Push Bar, w/Bearings / Shaft	
37	980034	2	Shaft, Push Bar Roller	
38	852664	2	Extension, Front Bumper	
39	984283SRV	1	Assembly, Push Roller, Swivel	
40	810081SRV	1	Pin, Push Bar Swivel	
41	810070	2	Bushing, 2.00 ID x 2.50 OD x 2.50	
42	1008903	1	CSLS, M16x2 x 45mm	
43	307-10	5	Washer, Lock, Hi-Collar, 5/8	
44	100-M16-2-65-8.8F	9	CSHH, M16x2 x 65mm, C8.8, FT	
45	302-10	11	Washer, Lock, 5/8	
46	1008895	4	CSLS, M16x2 x 35mm	
47	100-M12-1.75-50-8.8F	16	CSHH, M12x1.75 x 50mm, C8.8, FT	
48	300-8	16	Washer, Flat, 1/2	
49	100-4-20-16-5F	4	CSHH, 1/4-20 x 1.00, GR5, FT	
50	300-4	4	Washer, Flat, 1/4	
51	100-M12-1.75-45-8.8F	4	CSHH, M12x1.75 x 45mm, C8.8, FT	
REF	1006286	4	Mount, Push Roller, Extended	Not Shown

RUBBER TRACK UNDERCARRIAGE - 5 ROLLER UNDERCARRIAGE

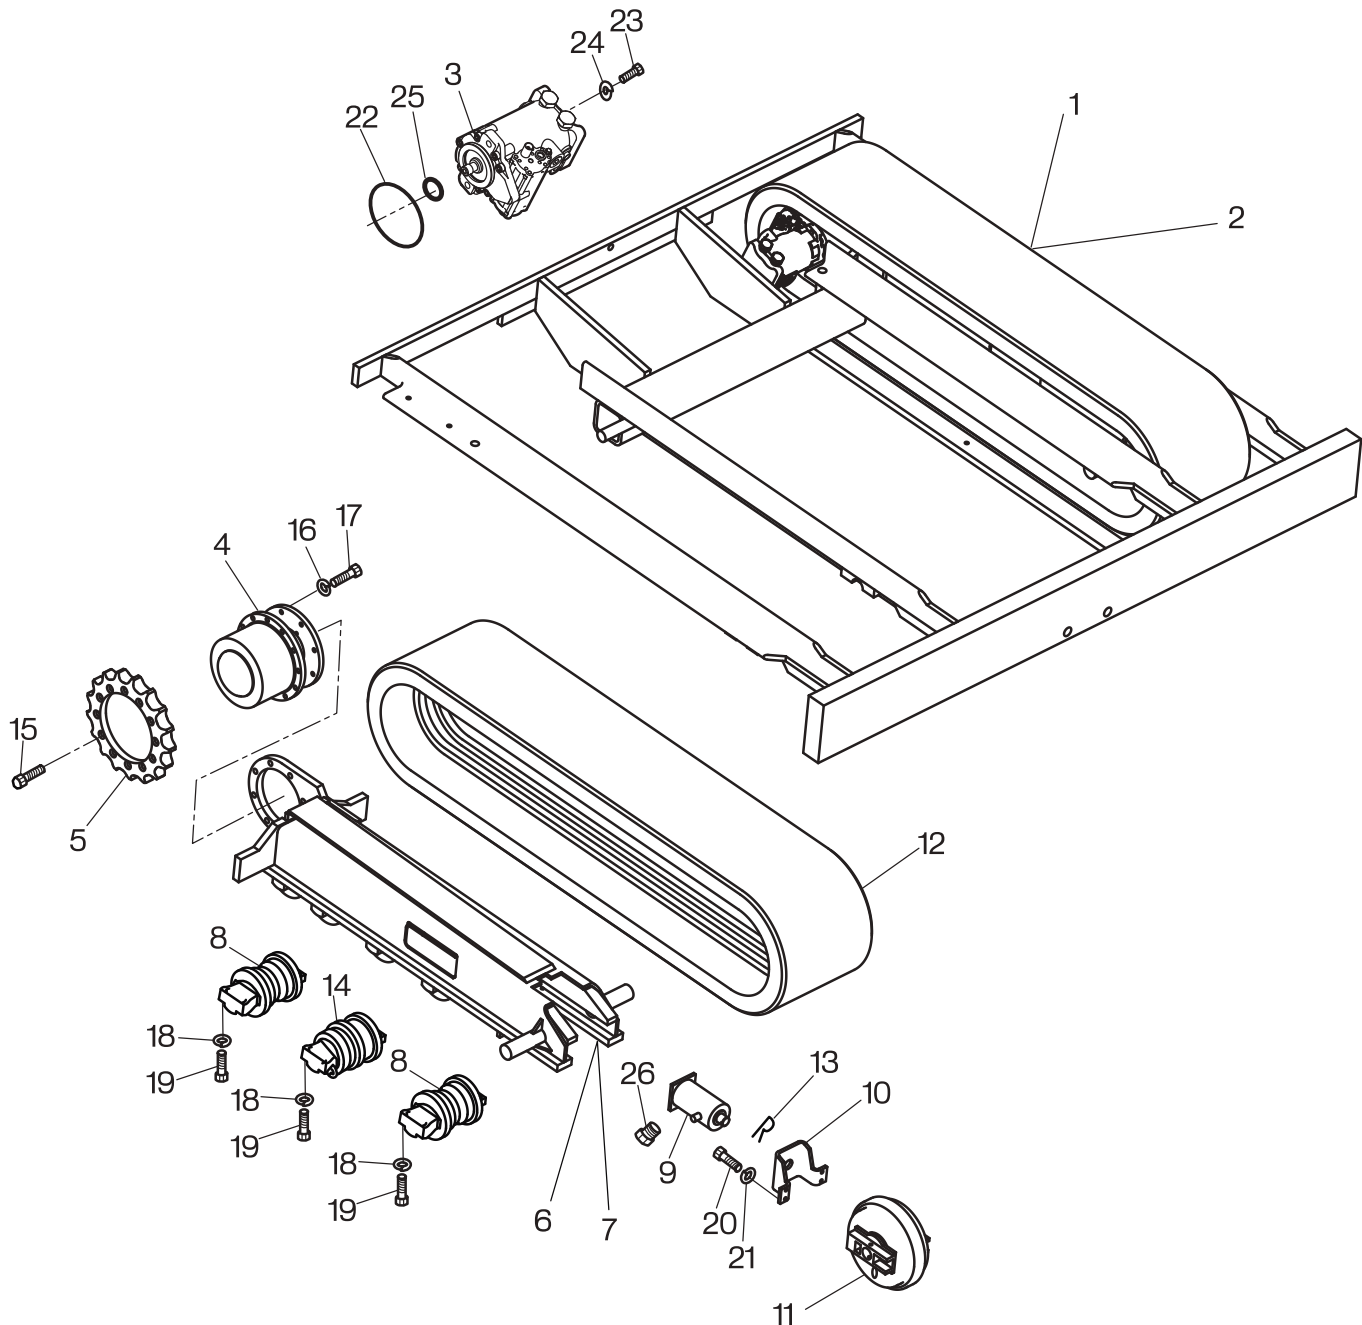


Figure 7-2 Rubber Track Undercarriage

Rubber Track Undercarriage - 5 Roller Undercarriage

Item No.	Part Number	Qty.	Description	Remarks
1	1009873	1	Under Carriage, 8515, Rubber (Left)	
2	1009874	1	Under Carriage, 8515, Rubber (Right)	
3	811362	1	Motor, Hydraulic, Drive, 2 Speed	
4	1008779	1	Torque Hub, 47.6:1, w/Brake	
5	1009464	1	Sprocket, Track Drive, 17 Tooth	Rubber Track Only
6	1009466	1	Weldment, Undercarriage (Right)	Rubber Track Only
7	1009465	1	Weldment, Undercarriage (Left)	Rubber Track Only
8	851566	2	Track Roller, B/1	Rubber Track Only
9	811331	2	Cylinder, Hydraulic, Track Tensioner	Rubber Track Only
REF	811331-01	A/R	Seal Kit	Not Shown
10	811329ASRV	2	Yoke, Track Idler	
11	983530	2	Idler, Track Front	Rubber Track Only
12	982585	2	Track, Rubber, Continuous	
13	870307	2	Hair Pin Cotter, .177	
14	983588	3	Track Roller, B-1, Inner Flange	Rubber Track Only
15	100-10-11-20-8F	12	CSHH, 5/8-11 x 1.25, GR8, FT	
16	81201	7	Washer, Flat, SAE, 5/8	
17	100-10-11-32-8	7	CSHH, 5/8-11 x 2.00, GR8	
18	811328	20	Washer, Lock, M12	
19	811330A	12	CSHH, M12x1.50 x 50mm	
20	989272-36	4	CSHH, M10x1.50 x 30mm	
21	320142	4	Washer, Lock, M10	
22	811366	A/R	O-Ring, Hydraulic Motor	
23	100-8-13-28-5	2	CSHH, 1/2-13 x 1.75, GR5	
24	302-8	2	Washer, Lock, 1/2	
25	59941203	A/R	Seal, Hydraulic Motor/Pump	
26	851644	1	Breather, Track Tensioner Cylinder	
REF	983166	A/R	Assembly, Track, One Side	30 Pads per side
REF	983166-02	A/R	Track Pad, Poly, Heavy Duty	Not Shown *
REF	983166-03	A/R	Chain Rail, Track Drive, Heavy Duty	Not Shown *
REF	983166-04	A/R	Pin, Track Link, Master, Heavy Duty	Not Shown *
REF	983166-05	A/R	Kit, Track, Heavy Link	Not Shown *
REF	983166-06	A/R	CSHH, 135mm, Track Pad Bolt	Not Shown *
REF	987694	A/R	Spacer, Roller	Not Shown, (2) Per Roller

*Used only in place of rubber tracks.

CONVEYOR DRIVE ASSEMBLY (1 OF 2)

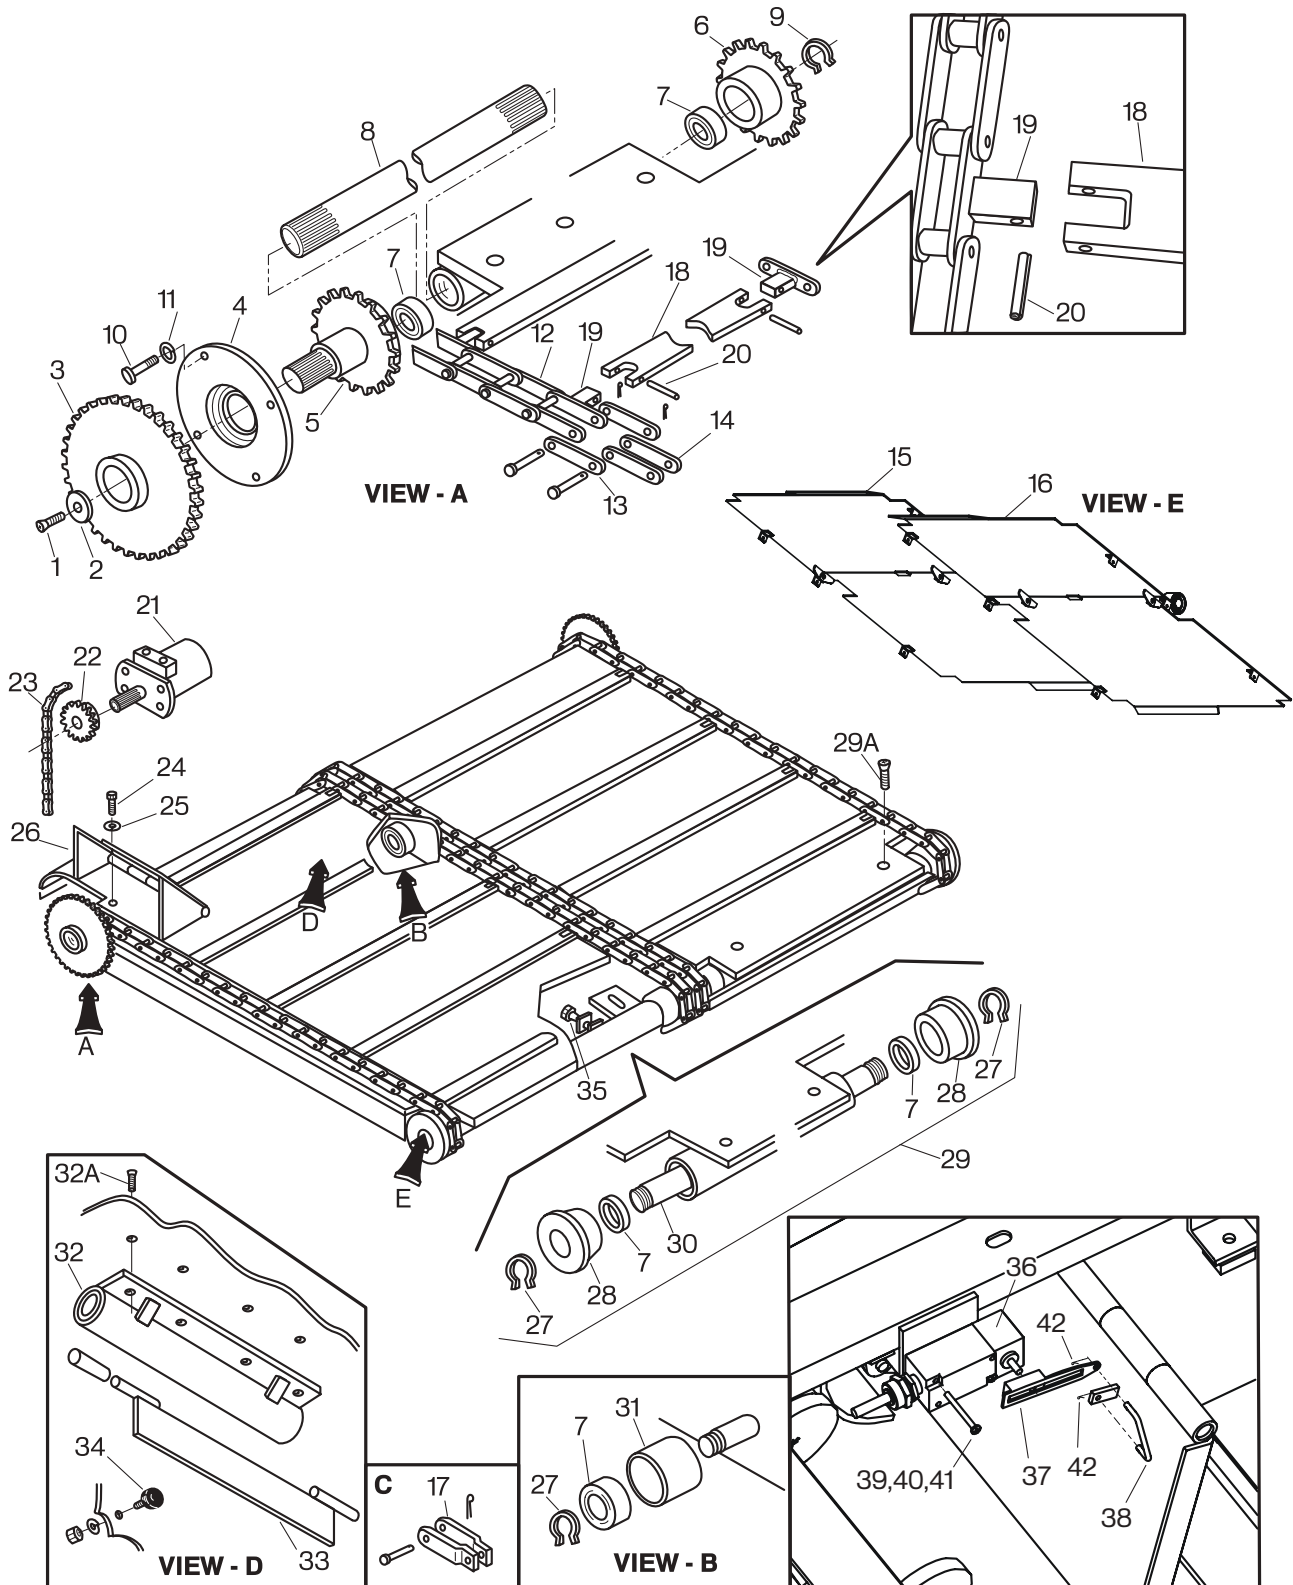


Figure 7-3 Conveyor Drive Assembly

Conveyor Drive Assembly (1 of 2)

Item No.	Part Number	Qty.	Description	Remarks
REF	851626SRV	1	Assembly, Conveyor, Complete	Not include 1,2,3,4,10,11
REF	851627SRV	1	Assembly, Bed, 8500 Conveyor	Not Shown
1	100-8-13-32-5	2	CSHH, 1/2-13 x 2.00, GR5	
2	851112	2	Washer, Counter Sunk, .500	
3	851473	2	Sprocket, Outer Drive	
4	851483SRV	2	Conveyor Mounting Plate w/Bearing	
5	851474SRV	2	Sprocket, Outer Drive C-188	
6	850030	2	Sprocket, Inner Drive C-188	
7	850130	20	Bearing, Auger, Axle, Idler	
8	851116	2	Drive Shaft, Conveyor	
9	850040	2	Snap Ring, Conveyor Drive Shaft	
10	100-8-13-16-5F	A/R	CSHH, 1/2-13 x 1.00, GR5, FT	
11	302-8	2	Washer, Lock, 1/2	
12	851117ASRV	A/R	Assembly, Conveyor Chain	
13	850070A	4	Link, Master w/Pins	
14	850080A	A/R	Block Link	
15	851127LSRV	A/R	Belly Pan (Left)	
16	851127RSRV	A/R	Belly Pan (Right)	
17	850215A	A/R	Half Link, Conveyor Chain w/Pin, Cotter	
18	851118A	A/R	Bar, Conveyor Flight Bar (Quick Change)	Thick side towards screed
19	850080B	A/R	Link w/Tab Conveyor Chain Inner	
REF	851118-2	A/R	Tab, Conveyor Chain Weld On	Replacement, Not Shown
20	851118-1	2	Pin, Roll Pin (3/8 x 2.00)	
21	1005803	2	Hydraulic Motor, Conveyor Main	
REF	1001027-01	A/R	Seal Kit, Hydraulic Motor	Not Shown
22	851120	2	Sprocket, Conveyor Drive Motor	
23	851121	2	Chain, Conveyor Drive (#80)	
24	100-10-11-20-5F	A/R	CSHH, 5/8-11 x 1.25, GR5, FT	
25	302-10	A/R	Washer, Lock, 5/8	
26	850038LSRV	A/R	Deflector, Left Side (High Deck)	
REF	850038RSRV	4	Deflector, Right Side (High Deck)	Not Shown
27	850040	4	Snap Ring, Conveyor Drive Shaft	
28	850120	4	Idler, Conveyor Chain Front	
29	851123	2	Assembly, Tube, Conveyor Front Chain Guide	
29A	100-10-11-32-5	4	CSHH, 5/8-11 x 2.00, GR5	
30	851124	2	Shaft, Conveyor Front Idler	
31	850162	4	Roller, Conveyor Chain Guide, w/ Bearing	

CONVEYOR DRIVE ASSEMBLY (2 OF 2)

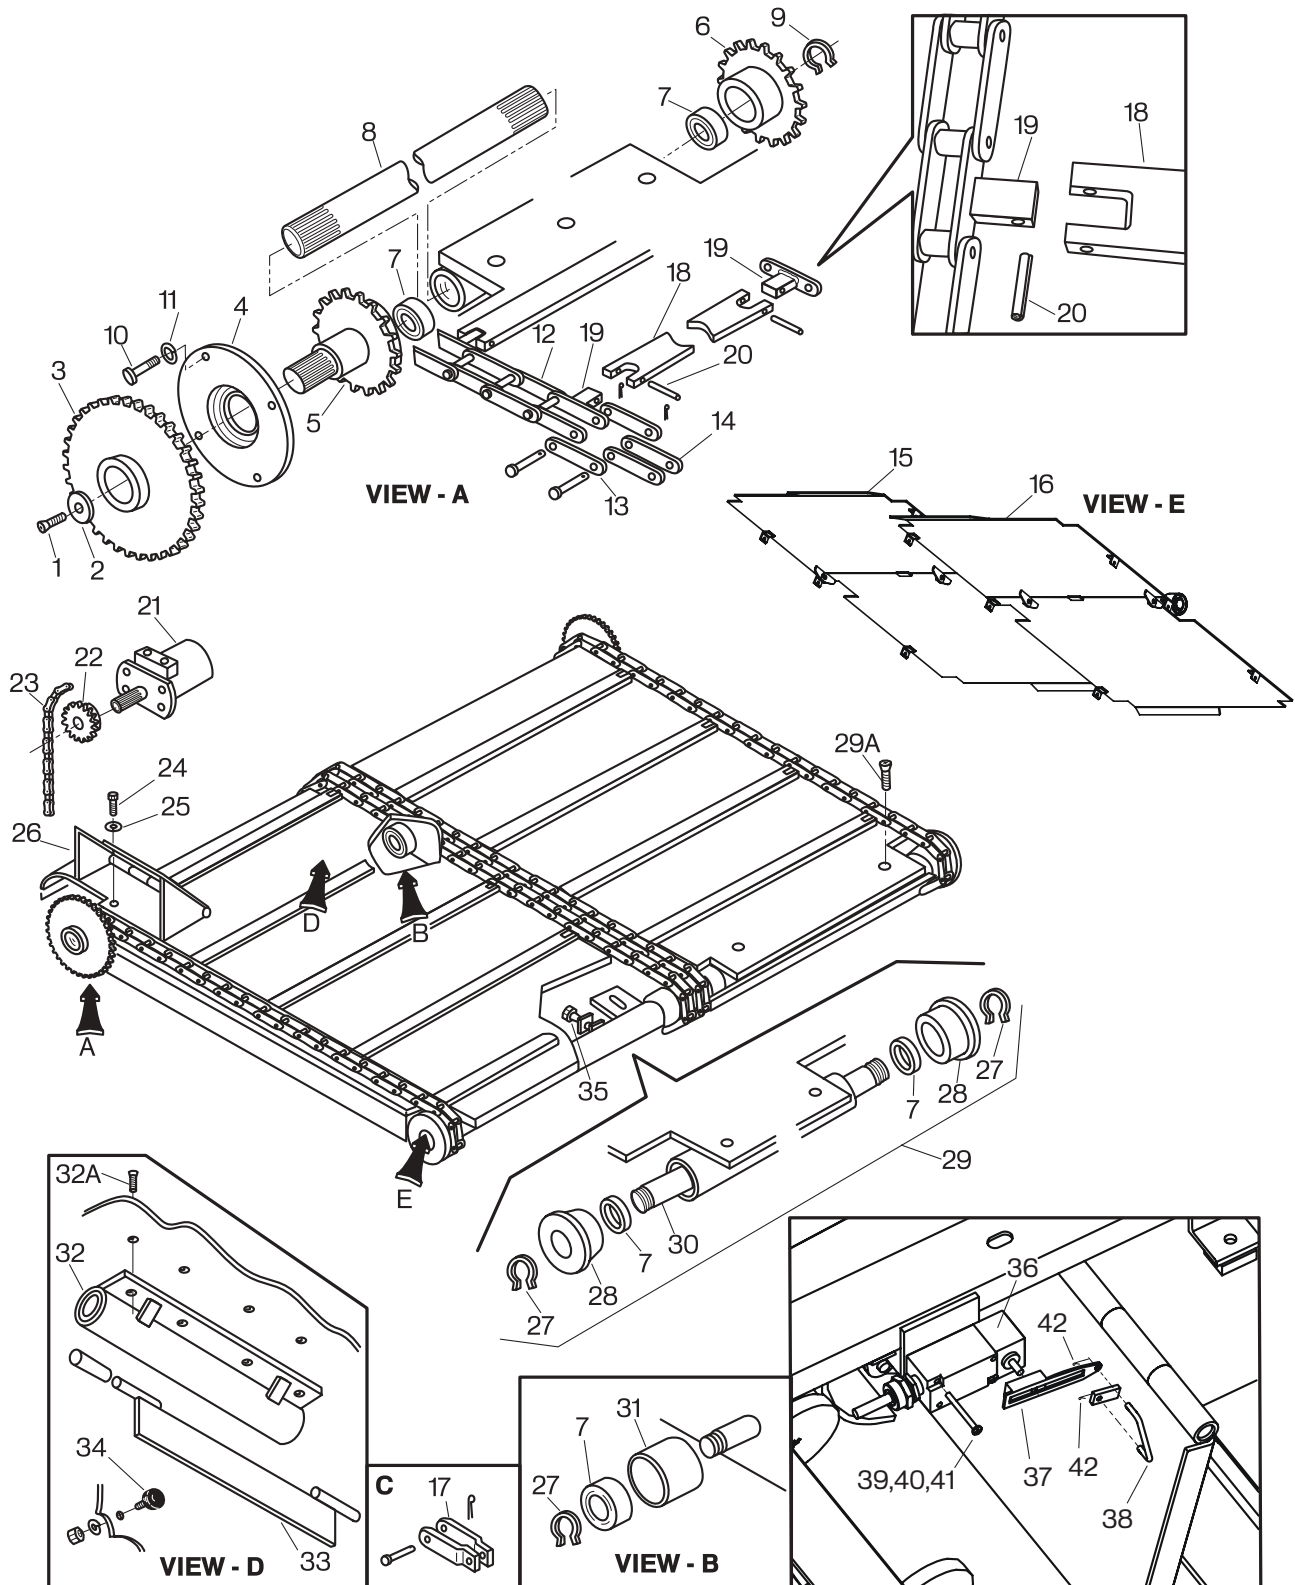


Figure 7-3 Conveyor Drive Assembly

Conveyor Drive Assembly (1 of 2)

Item No.	Part Number	Qty.	Description	Remarks
32	851651	2	Assembly, Tube, Conveyor Rear Drive	
32A	100-10-11-16-5F	8	CSHH, 5/8-11 x 1.00, GR5, FT	
33	851128SRV	2	Scraper, Conveyor	
34	410070	2	Stop Rubber, (Scraper)	
35	850170	4	Set Screw, 5/8-11 x 3.00, Square, Head	
36	900050SRV	2	Micro Switch, Automatic	
37	900060-1	2	Arm, Automatic Conveyor Switch	
38	900075	2	Rod, Conveyor, Switch Linkage	
39	900076	2	Machine Screw, Phillips Head, #10-32 x 2.25	
40	900077	2	Washer, Lock, #10	Not Shown
41	900078	2	Nut, Lock, #10-32	Not Shown
42	900079	2	Pin, Cotter .094 x .375	
REF	850100A	A/R	T-Pin, Casted Conveyor Chain	Not Shown

HOPPER COMPONENTS (1 OF 2)

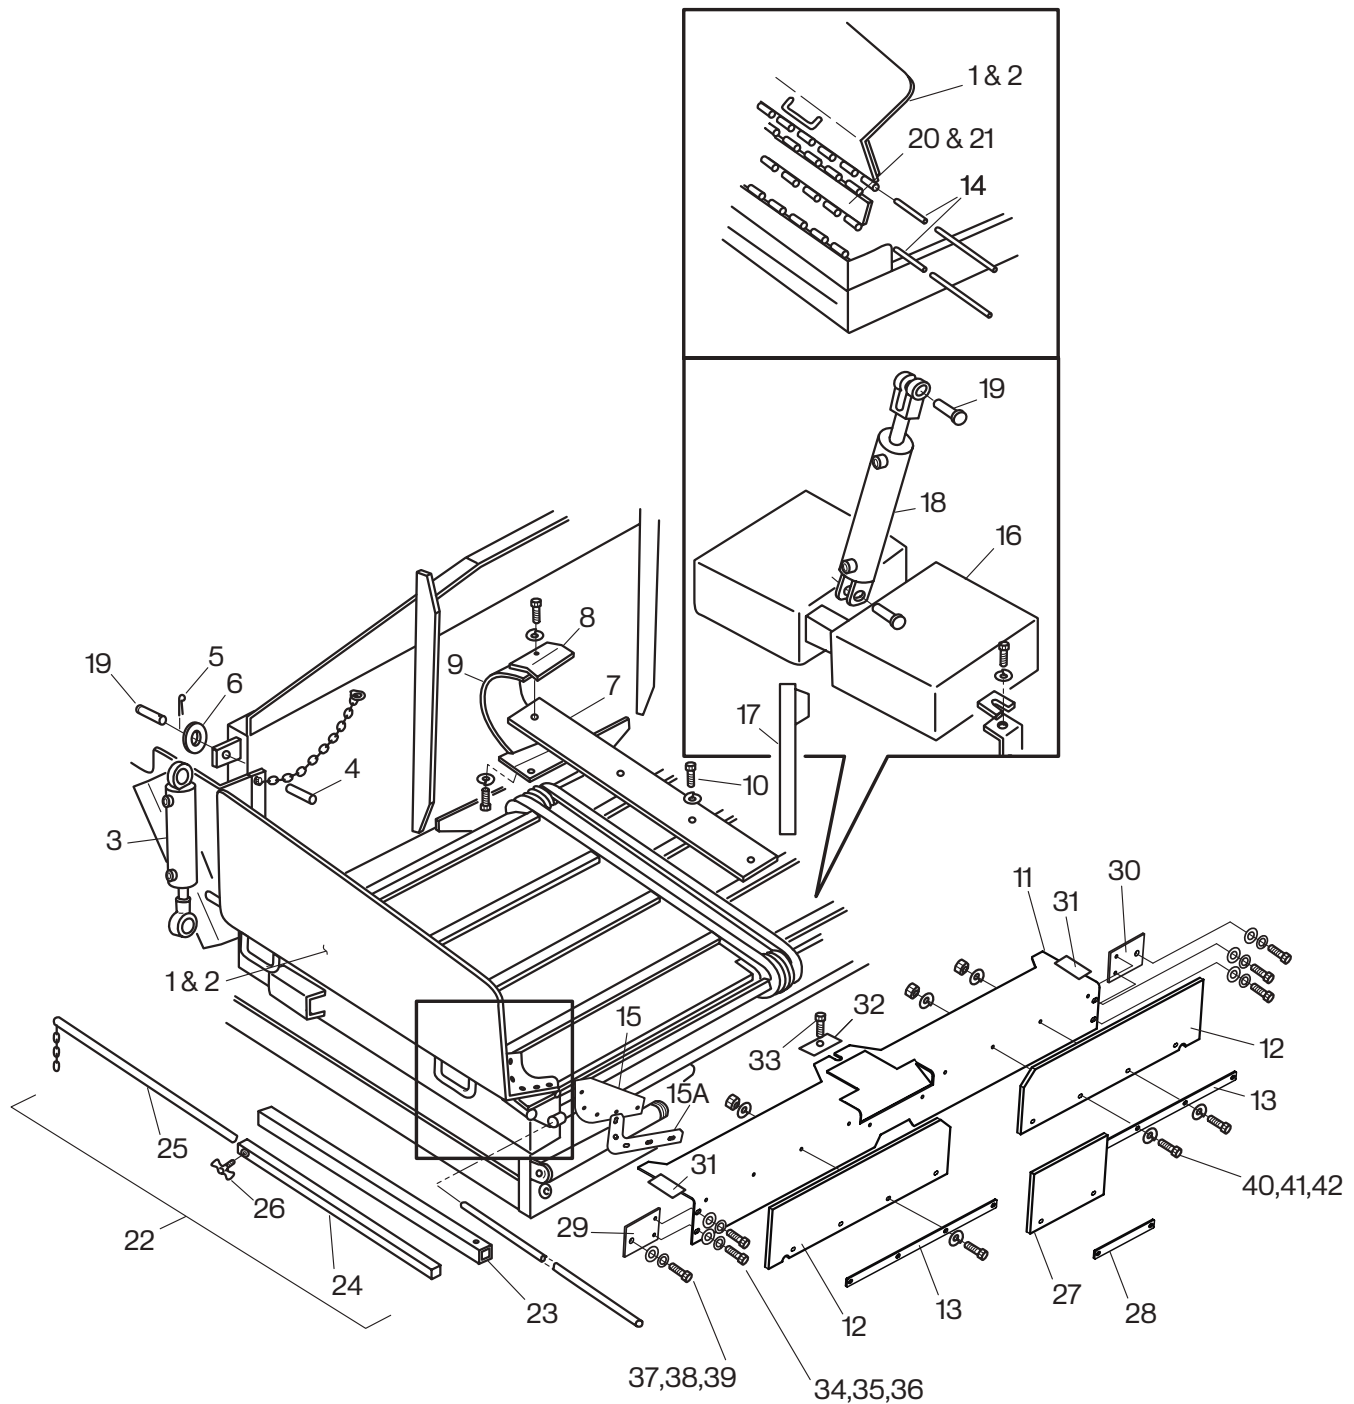


Figure 7-4 Hopper Components

Hopper Components (1 of 2)

Item No.	Part Number	Qty.	Description	Remarks
1	980703SRV	1	Assembly, Side Wing, 8515 (Right)	
2	980702SRV	1	Assembly, Side Wing, 8515 (Left)	
3	610110	2	Cylinder, Hydraulic, 2.00 x 8.00	
REF	910145-01	A/R	Seal Kit	Not Shown
REF	930041	A/R	Side Wing Cylinder Bushing	Not Shown
4	851132	2	Pin	
5	870307	4	Hair Pin, Cotter, .177	
6	300-16	2	Washer, Flat, SAE, 1	
7	851133SRV	1	Shield, 8500 Center Conv.	
8	802112SRV	1	Hold Down	
9	840162	1	Center Shield, Conveyor Rear	
10	100-6-16-12-5F	6	CSHH, 3/8-16 x .75, GR5, FT	
11	985669SRV	1	Shield, Front Support	
12	985057	2	Shield, Front Hard Rubber	
13	985062SRV	1	Clamp, Hopper Front Flashing	
14	854084SRV	4	Pin, Pivot Side Panel	
15	851147A	2	Shield, Corner Rubber	
15A	854076-1	2	Plate, Side Wing Rubber Shield	
16	988049	1	Bottom Tank	
17	987264SRV	1	Safety Prop, Hopper	
18	840020	1	Cylinder, Hopper Lift	
REF	38549-01	A/R	Seal Kit, Hopper Wing	Not Shown
19	240030	2	Pin, Hydraulic Cylinder	
20	840157SRV	1	Hinged Panel (Left)	
21	840156SRV	1	Hinged Panel (Right)	
REF	100-10-11-20-8F	A/R	CSHH, 5/8-11 x 1.25, GR8, FT	Hold down for item 20,21
REF	301-10	A/R	Washer, Flat, USS, 5/8	Hold down for item 20,21
22	920032SRV	2	Assembly, Guide Bar	
23	920041SRV	2	Bar, Guide (Outer)	
24	920051SRV	2	Housing, Guide Bar (Inner)	
25	920061SRV	2	Rod & Chain, Guide Bar	
26	920070	4	Thumb Screw, 3/8-16 x 1.00	
27	985058	1	Rubber, Front Lip, Center	
28	985063SRV	1	Flashing, Center, Front Lip	
29	1013152	1	Weldment, Lip, Right, Front	
30	1013153	1	Weldment, Lip, Left, Front	
31	853595	2	Bar, .125 x 1.50 x 9.50	

HOPPER COMPONENTS (2 OF 2)

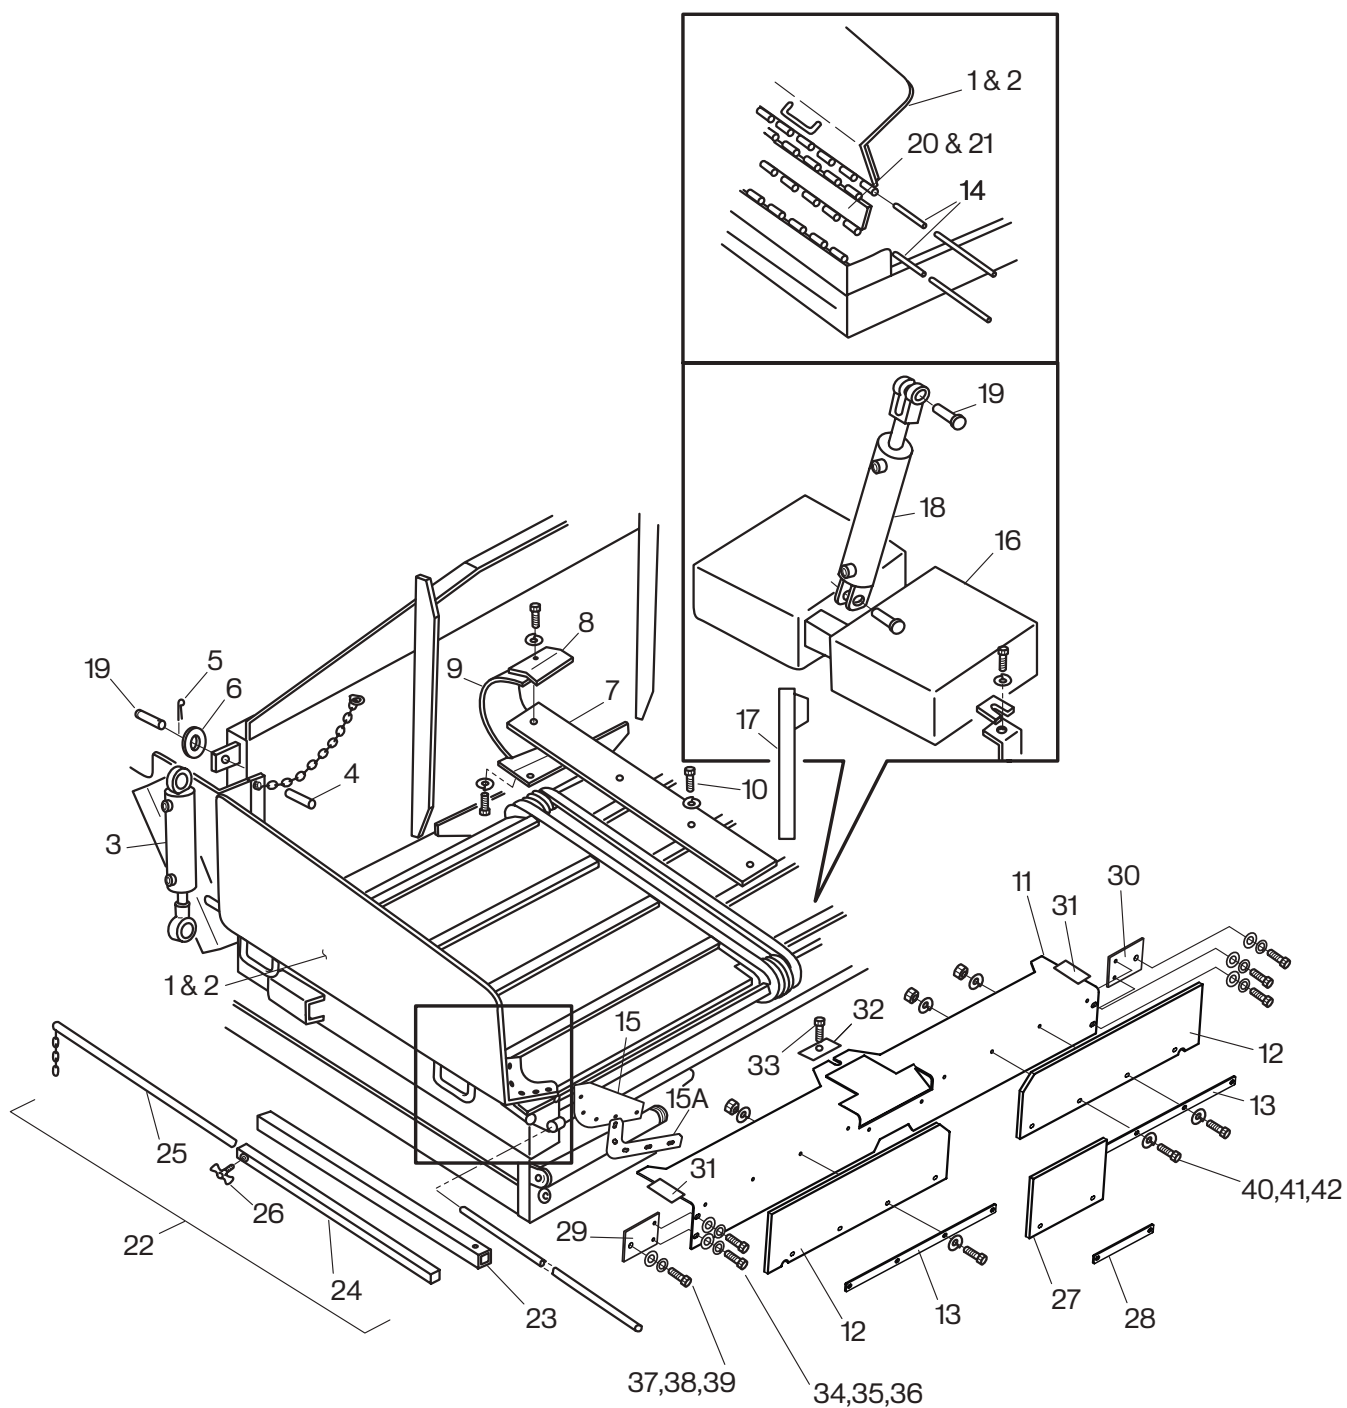


Figure 7-4 Hopper Components

Hopper Components (1 of 2)

Item No.	Part Number	Qty.	Description	Remarks
32	985581	1	Front Lip Clamp	
33	100-8-13-32-5F	1	CSHH, 1/2-13 x 2.00, GR5, FT	
34	100-8-13-24-5F	4	CSHH, .1/2-13 x 1.50, GR5, FT	
38	302-8	4	Washer, Lock, 1/2	
35	300-8	4	Washer, Flat, SAE, 1/2	
36	100-10-11-24-5F	2	CSHH, 5/8-11 x 1.50, GR5	
37	302-10	2	Washer, Lock, 5/8	
39	300-10	2	Washer, Flat, SAE, 5/8	
40	100-6-16-32-5	10	CSHH, 3/8-16 x 2.00, GR5	
41	300-6	20	Washer, Flat, SAE, 3/8	
42	204-6-16-5	10	Nut, Lock, Stover, 3/8-16, GR5	
43	1013877	2	Pin, Hopper Wing Lock	Not Shown

AUGER ASSEMBLY

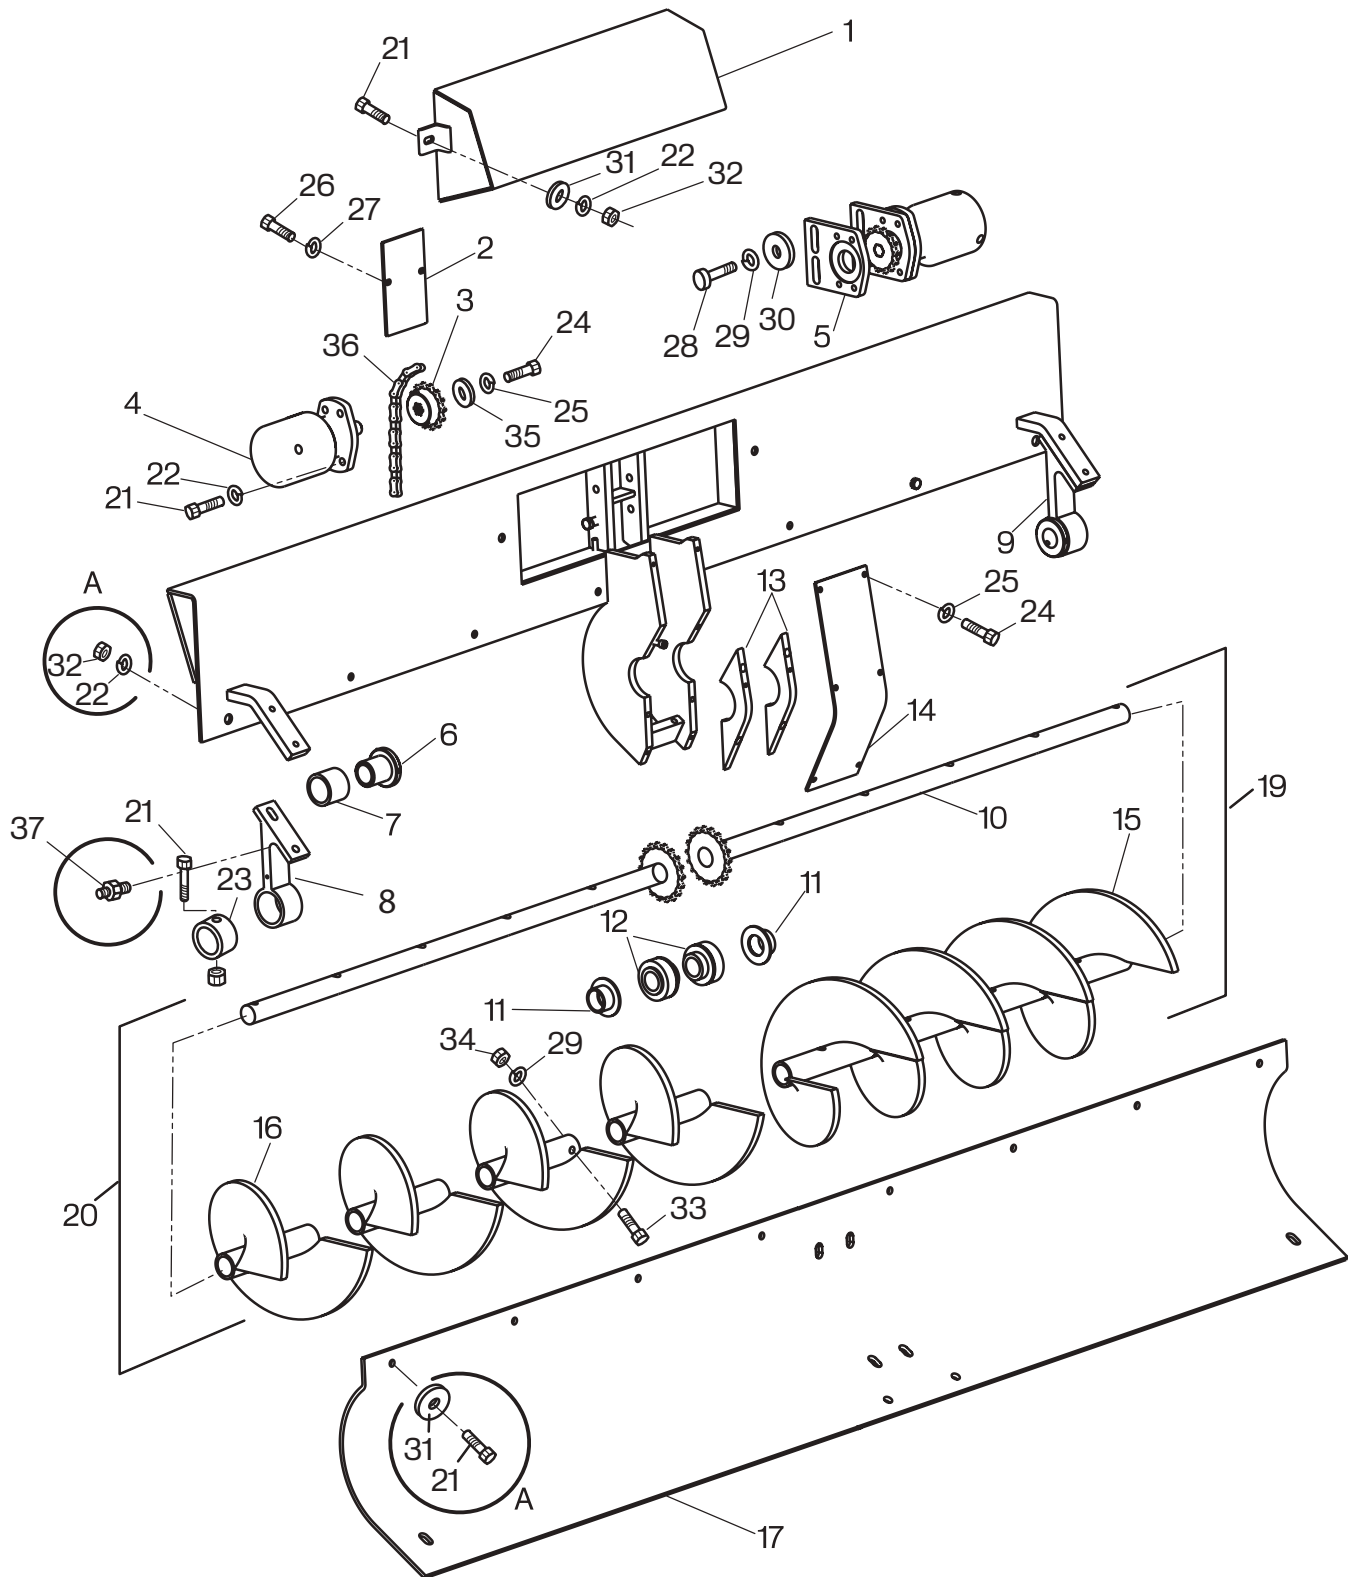


Figure 7-5 Auger Assembly

Auger Assembly

Item No.	Part Number	Qty.	Description	Remarks
1	981685	1	Assembly, Auger Motor Cover, 8515	
2	981688SRV	1	Chain Cover, 8515	
3	860030	2	Sprocket, 800/8500 Auger	
4	1005803	2	Hydraulic Motor, Conveyor Main	
5	981696	2	Mount, Motor, 8515	
6	851645	2	Collar, Auger End Mount	
7	810070	2	Bushing, 2.00 ID x 2.50 OD x 2.50	
8	1011441	1	Auger End Mount, 8000/8500 (Right)	
9	1011441*	1	Auger End Mount, 8000/8500 (Left)	*Move Grease Zerk to Outside
10	981691	2	Auger Shaft w/Sprocket, Spacer & Bearing	
11	982945	2	Assembly, Spacer Auger Shaft	
12	850130	2	Bearing, Auger, Axle, Idler	
13	981683	2	Clamp, Auger 12"	
14	981695SRV	1	Cover, Auger Support, 8515	
15	981700R	4	Auger Flight, 12", 8515 (Right)	
16	981700L	4	Auger Flight, 12", 8515 (Left)	
17	981699SRV	1	Plate, Wear, 12" Auger, 8515	
19	981692L	1	Assembly, Auger, 8515 (Left)	
20	981692R	1	Assembly, Auger, 8515 (Right)	
21	100-8-13-24-5	44	CSHH, 1/2-13 x 1.50, GR5	
22	302-8	14	Washer, Lock, 1/2	
23	851647	2	End Cap, Auger Shaft	
24	100-5-18-12-5F	8	CSHH, 5/16-18 x .75, GR5, FT	
25	302-5	8	Washer, Lock, 5/16	
26	100-6-16-12-5F	2	CSHH, 3/8-16 x .75, GR5, FT	
27	302-6	2	Washer, Lock, 3/8	
28	100-10-11-24-5F	4	CSHH, 5/8-11 x 1.50, GR5, FT	
29	302-10	12	Washer, Lock, 5/8	
30	301-10	4	Washer, Flat, USS, 5/8	
31	301-8	14	Washer, Flat, USS, 1/2	
32	200-8-13-5	10	Nut, Hex, 1/2-13, GR5	
33	100-10-11-44-5	8	CSHH, 5/8-11 x 2.75, GR5	
34	204-10-11-5	8	Nut, Lock, Stover, 5/8-11, GR5	
35	308-6-24	2	Washer, Fender, 3/8 x 1.50	
36	985815	2	Chain, Auger Drive	
37	140610	2	Fitting, Lube, Straight, 1/4-28	
REF	853411	A/R	Link, Master	Not Shown
REF	985796	1	Extension, 12" Auger (Right)	Not Shown
REF	985795	1	Extension, 12" Auger (Left)	Not Shown

CONVEYOR DRIVE CUTOFF / SCREED LIFT CYLINDERS

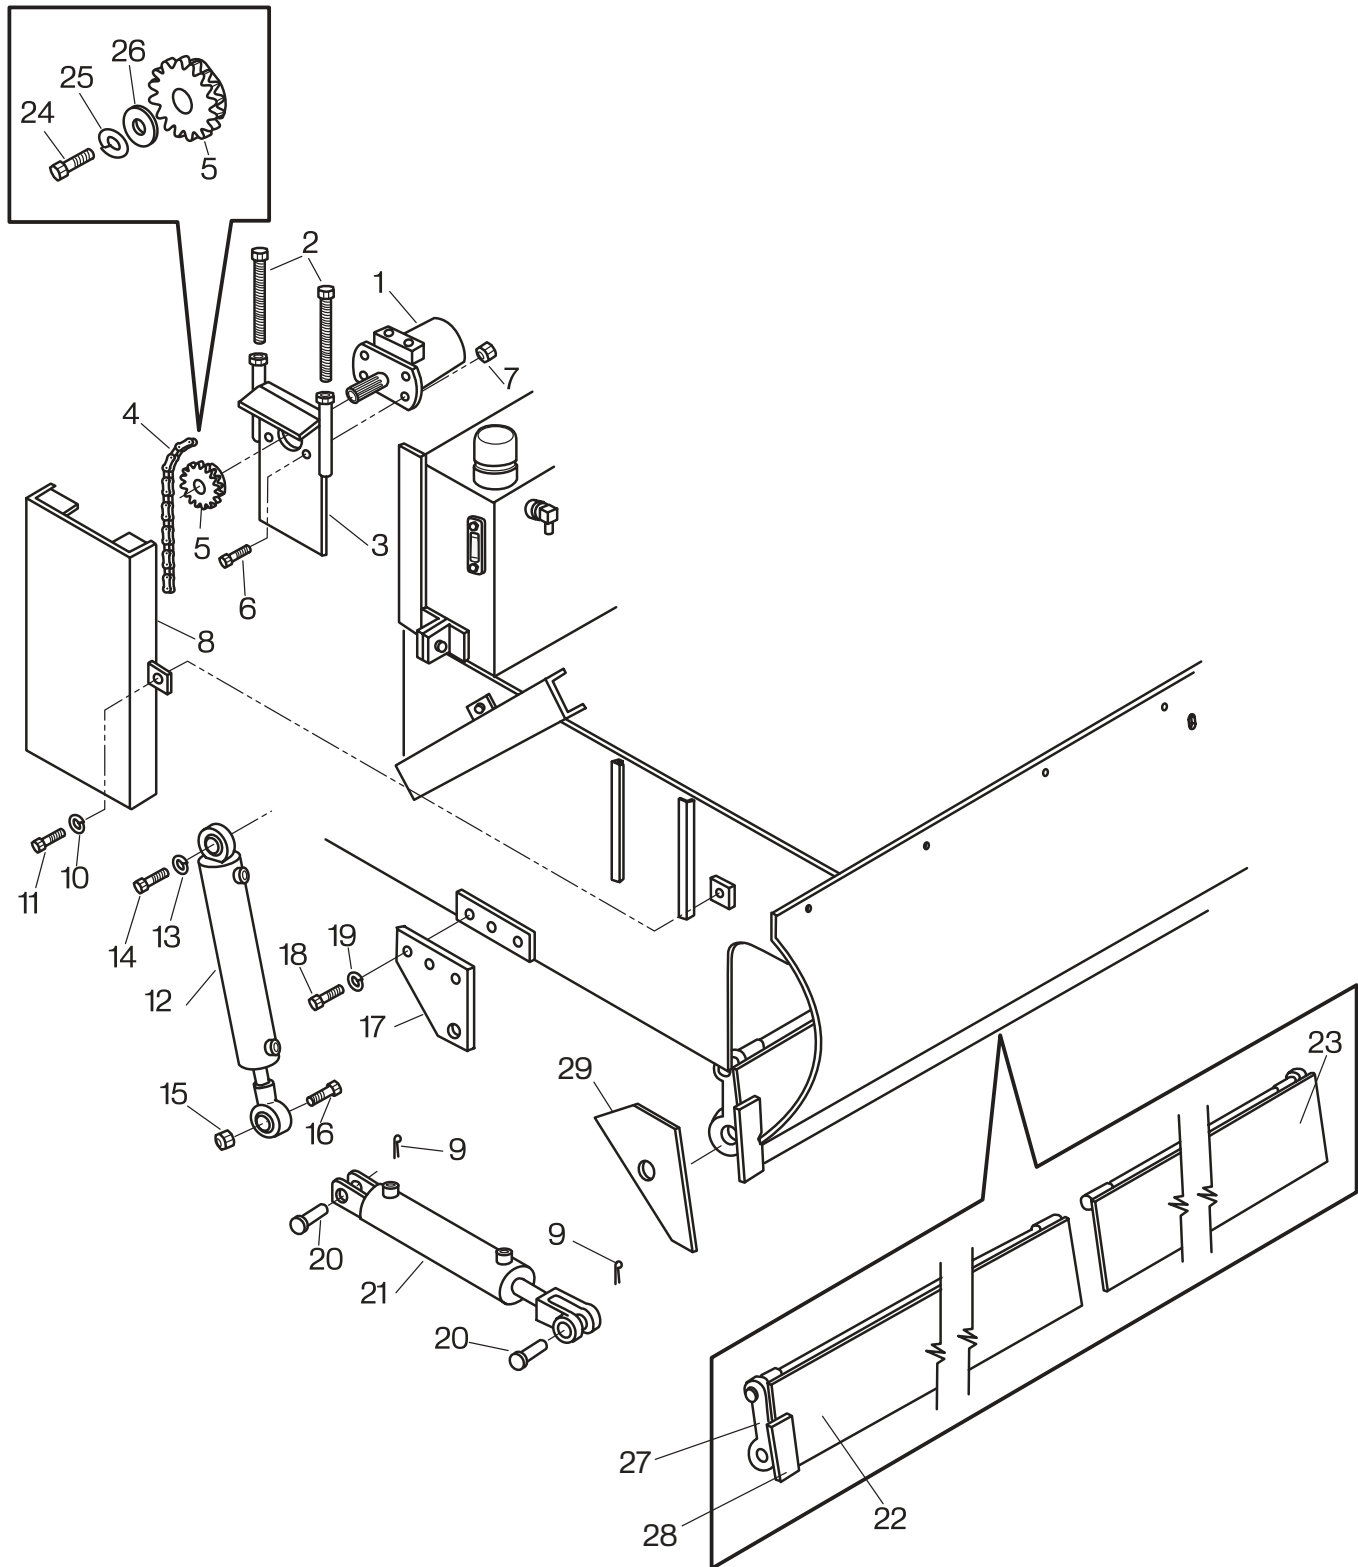


Figure 7-6 Conveyor Drive Cutoff / Screed Lift Cylinders

Conveyor Drive Cutoff / Screed Lift Cylinders

Item No.	Part Number	Qty.	Description	Remarks
1	1005803	2	Hydraulic Motor, Conveyor Main	
2	851148SRV	4	Bolt, Conveyor Drive Chain Adjuster	
3	851149SRV	2	Mount, Conveyor Drive Motor	
4	851121	2	Chain, Conveyor Drive (#80)	
5	851120	2	Sprocket, Conveyor Drive Motor	
6	100-8-13-32-5	8	CSHH, 1/2-13 x 2.00, GR5	
7	200-8-13-5	8	Nut, Hex, 1/2-13, GR5	
8	854532SRV	1	Chain Guard, Conveyor Drive (Left)	
REF	853572SRV	1	Chain Guard, Conveyor Drive (Right)	Not Shown
9	80338	4	Cotter Pin, .188 x 2.00 Long	
10	302-6	6	Washer, Lock, 3/8	
11	100-6-16-12-5F	6	CSHH, 3/8-16 x .75, GR5, FT	
12	851436SRV	2	Hydraulic Cylinder, Screed Lift	
REF	910145-01	A/R	Seal Kit, 2.00 Cylinder	Not Shown
13	302-16	2	Washer, Lock, 1	
14	100-16-14-48-8	2	CSHH, 1-14 x 3.00, GR8	
15	204-16-14-5	2	Nut, Lock, Stover, 1-14, GR5	
16	100-16-14-56-5	2	CSHH, 1-14 x 3.50 GR5	
17	851152	2	Plate, Cut Off Cylinder Mount	
18	100-10-11-24-5F	6	CSHH, 5/8-11 x 1.50, GR5, FT	
19	302-10	6	Washer, Lock, 5/8	
20	240030	2	Pin, Hydraulic Cylinder	
21	910170	2	Hydraulic Cylinder, Cutoff	
REF	910170-01	A/R	Seal Kit, 2.50 Cylinder	Not Shown
22	851153SRV	1	Cutoff (Left)	
23	851154SRV	1	Cutoff (Right)	
24	100-4-20-16-5F	2	CSHH, 1/4-20 x 1.00, GR5, FT	
25	302-4	2	Washer, Lock, 1/4	
26	860036	2	Washer, Fender, 1/4 x 1	
27	853497	2	Plate, 8000-8500, Cut Off Cylinder Mount	
28	853593SRV	2	Bar, .250 x 2.00 x 7.00	
29	853596	2	Plate, Cut Off Gusset	

HYDRAULIC COMPONENTS / (LEFT) SIDE FUEL TANK

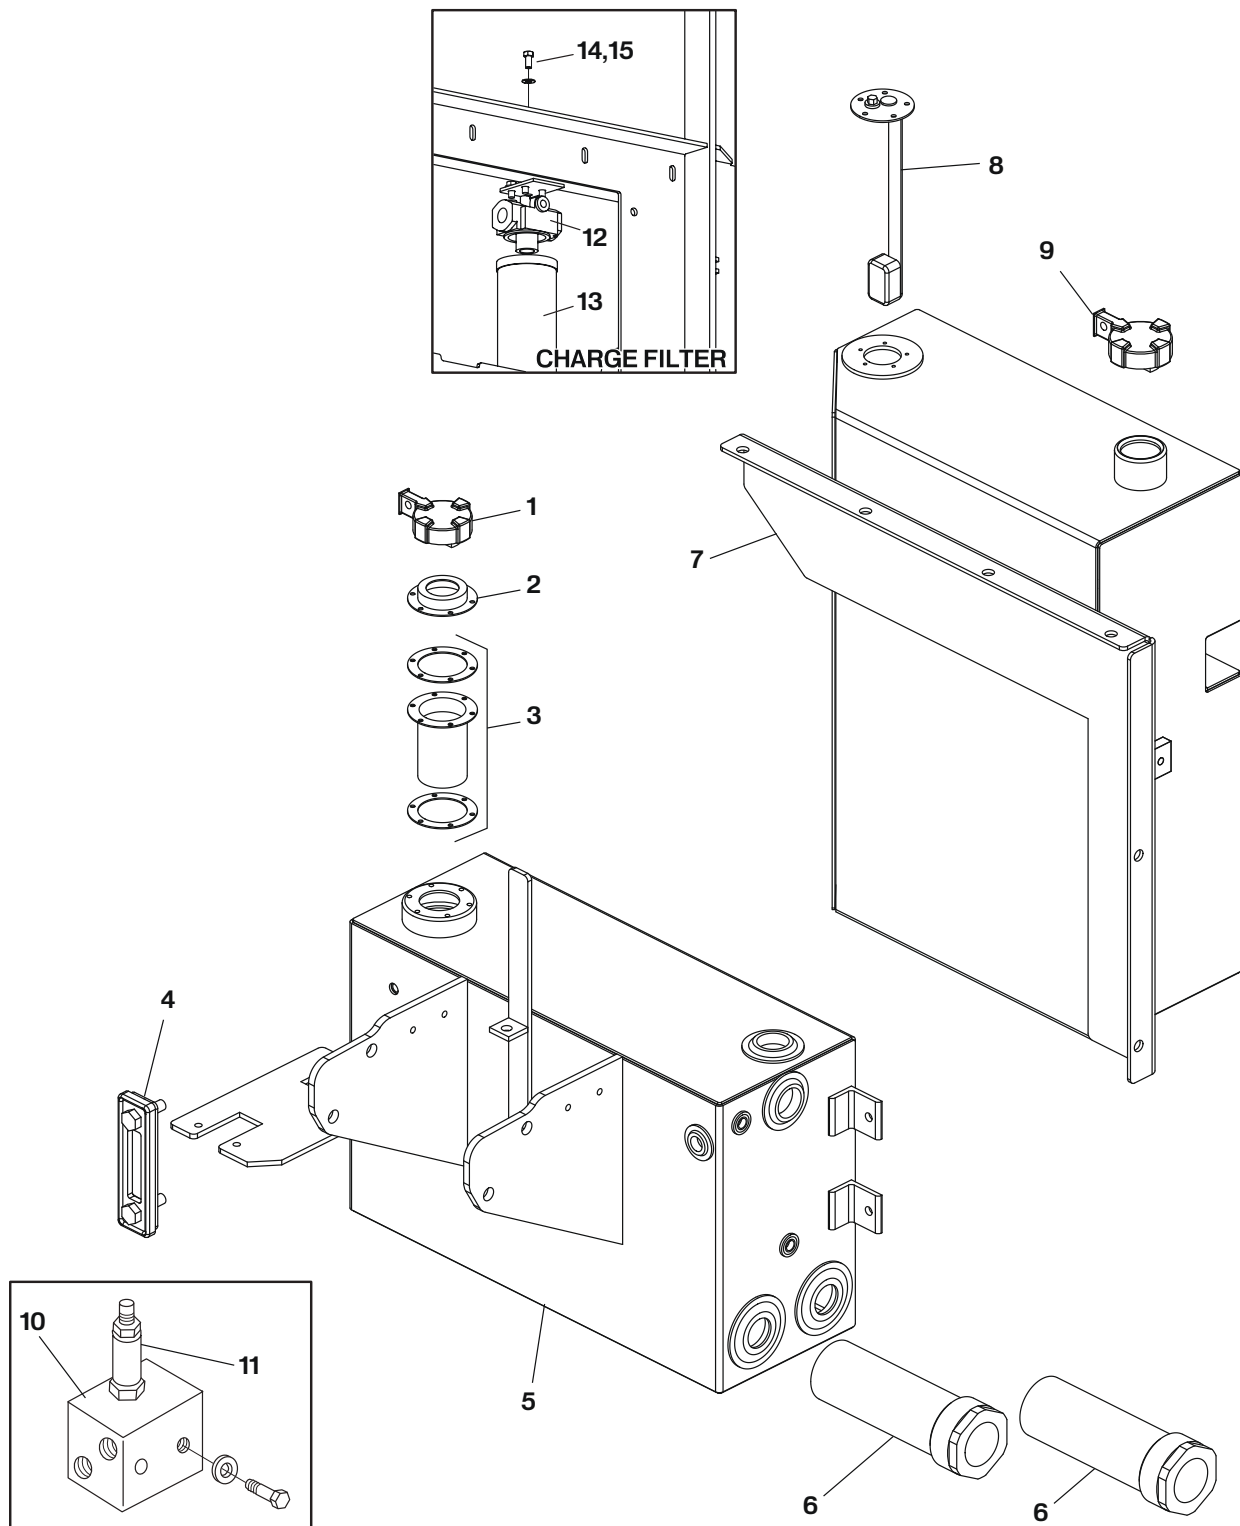


Figure 7-7 Hydraulic Components / Fuel Tank

Hydraulic Components / (Left) Side Fuel Tank

Item No.	Part Number	Qty.	Description	Remarks
1	140030HL	1	Cap, Hydraulic Tank, Lockable	
2	140030FN	1	Filler Neck	
3	140030GK	1	Strainer & Gasket Kit	
4	500070	1	Sight Gauge, Hydraulic Oil Temp/Level	
5	1015300	1	Assembly, Tank Hydraulic	
6	36123	2	Strainer, Hydraulic Suction, 200 Mesh	
7	1009361	1	Assembly, Tank Fuel	Includes Item 8, 9
8	140040	1	Sending Unit, Fuel Tank	
9	140030FL	1	Cap, Fuel Tank, Lockable	
10	1011643	1	Manifold, Side Wing	
11	910122-1	1	Relief Valve, Side Wing Manifold	
12	290010	1	Filter, Head, Charge/Return	
13	290030	1	Filter, Element, Charge/Return	
14	100-6-16-16-5F	4	CSHH, 3/8-16 x 1.00, GR5, FT	
15	302-6	4	Washer, Lock, 3/8	

HYDRAULIC TEST PORT ASSEMBLY

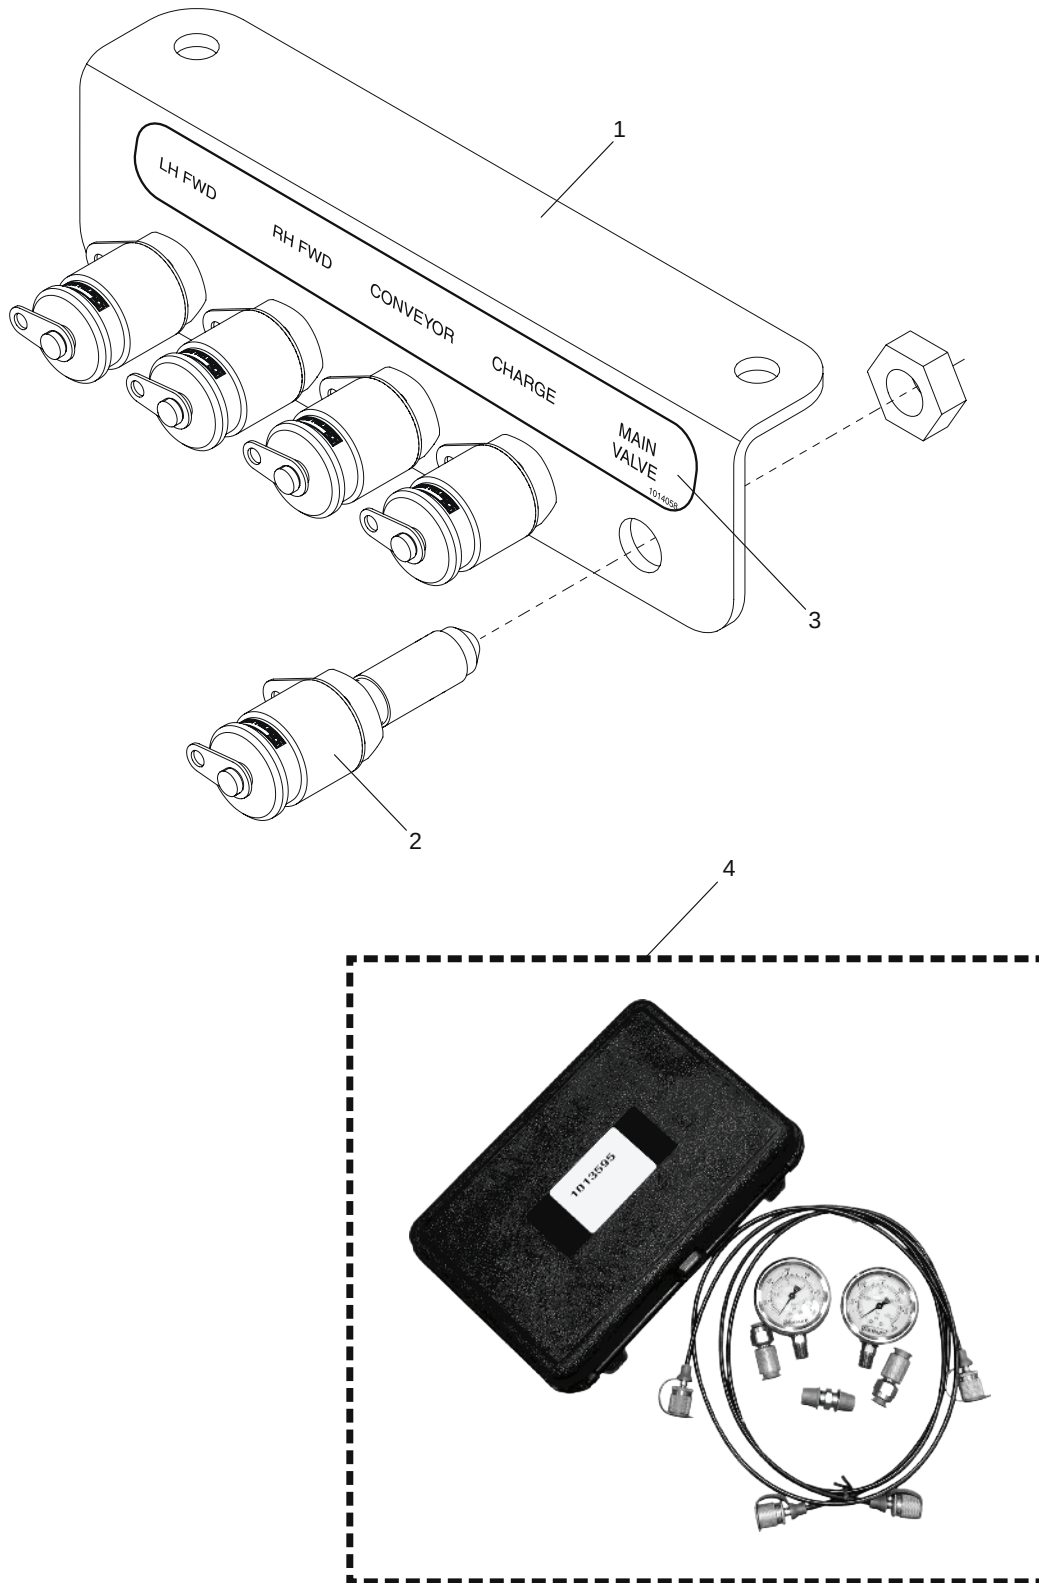


Figure 7-8 Hydraulic Test Port Assembly

Test Port Assembly

Item No.	Part Number	Qty.	Description	Remarks
1	1013805	1	Plate, Bracket, Common Test Port	
2	1013583	5	Test Port, Hydraulic, To #4 JIC Bulkhead	
3	1014058	1	Decal, Info, Test Port	
4	1013595	1	Kit, Pressure Test, Hydraulic	Option
REF	1013588-24	3	SMS Test Hose Assembly w/#4 Female JIC - 24"	Not Shown
REF	1013588-96	2	SMS Test Hose Assembly w/#4 Female JIC - 96"	Not Shown

H1 PUMP & CONTROLS

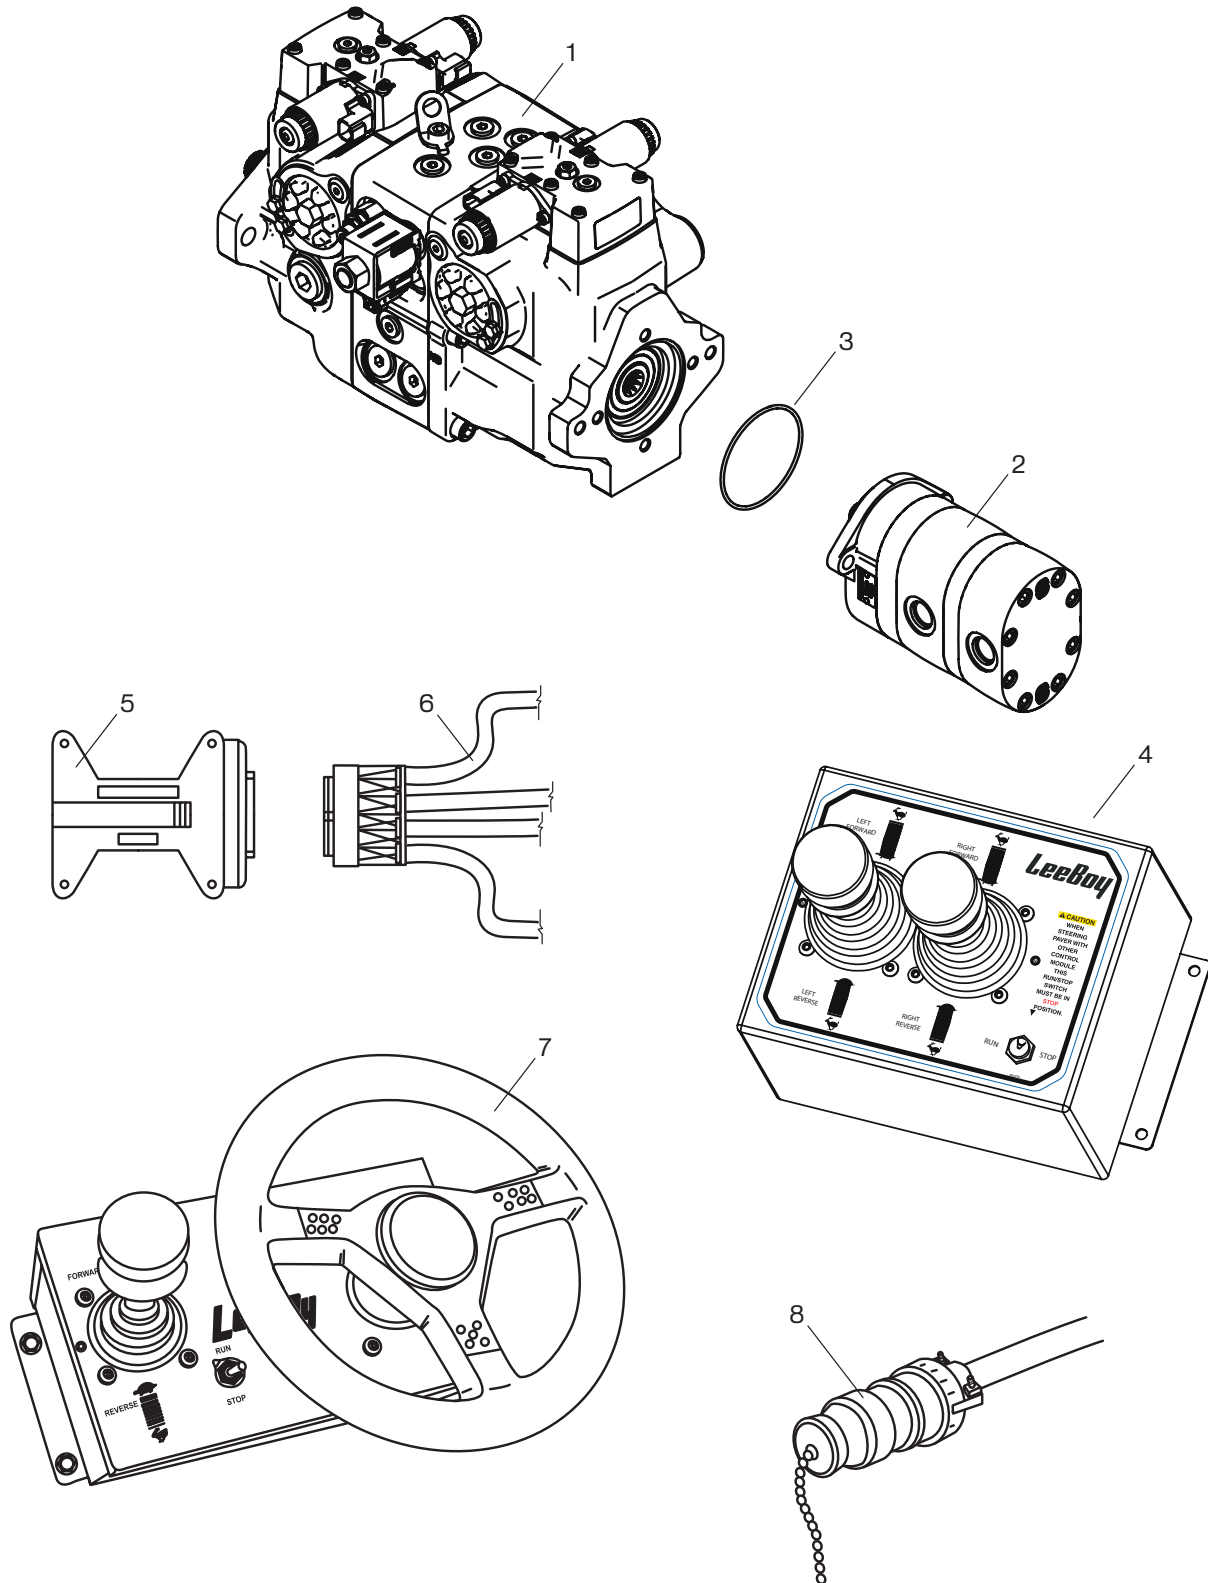


Figure 7-9 H1 Pump & Controls

H1 Pump & Controls

Item No.	Part Number	Qty.	Description	Remarks
1	986519	1	Pump, Hydraulic Single w/EDC (H-1 Pump)	
REF	986519-01	A/R	Coil, Control Bypass H-1 Pump	Not Shown
REF	986519-02	A/R	Nut, Plastic, H-1 Pump	Not Shown
REF	986519-03	A/R	Kit, Shaft, H-1 Pump	Not Shown
2	1013155	1	Pump, Hydraulic, 25.4 CC/19 CC	
3	36808	1	O-Ring, Piggyback to Main	
4	1008904SRV	2	Dual Joysticks, Control Box, Plus One	
5	1012975	1	Controller, 50 DIN, Plus One	
6	1014667	1	Harness, Plus One to Pumps	
7	1000708	2	Steering Wheel, Control Box, Plus One	
8	851548-04	2	Cord, 4 FT , Electronic Steering	
REF	160320	1	Horn, Backup Alarm	Not Shown
REF	490010	A/R	Handle Grip for Steering Box Handle	Not Shown
REF	851540	A/R	Potentiometer, Steering Box	Not Shown
REF	72026-01	A/R	Switch, Limit SPDT	Not Shown
REF	851391	A/R	Switch, Toggle, SPST, 2-Position	Not Shown

KUBOTA T4F ENGINE ASSEMBLY (1 OF 3)

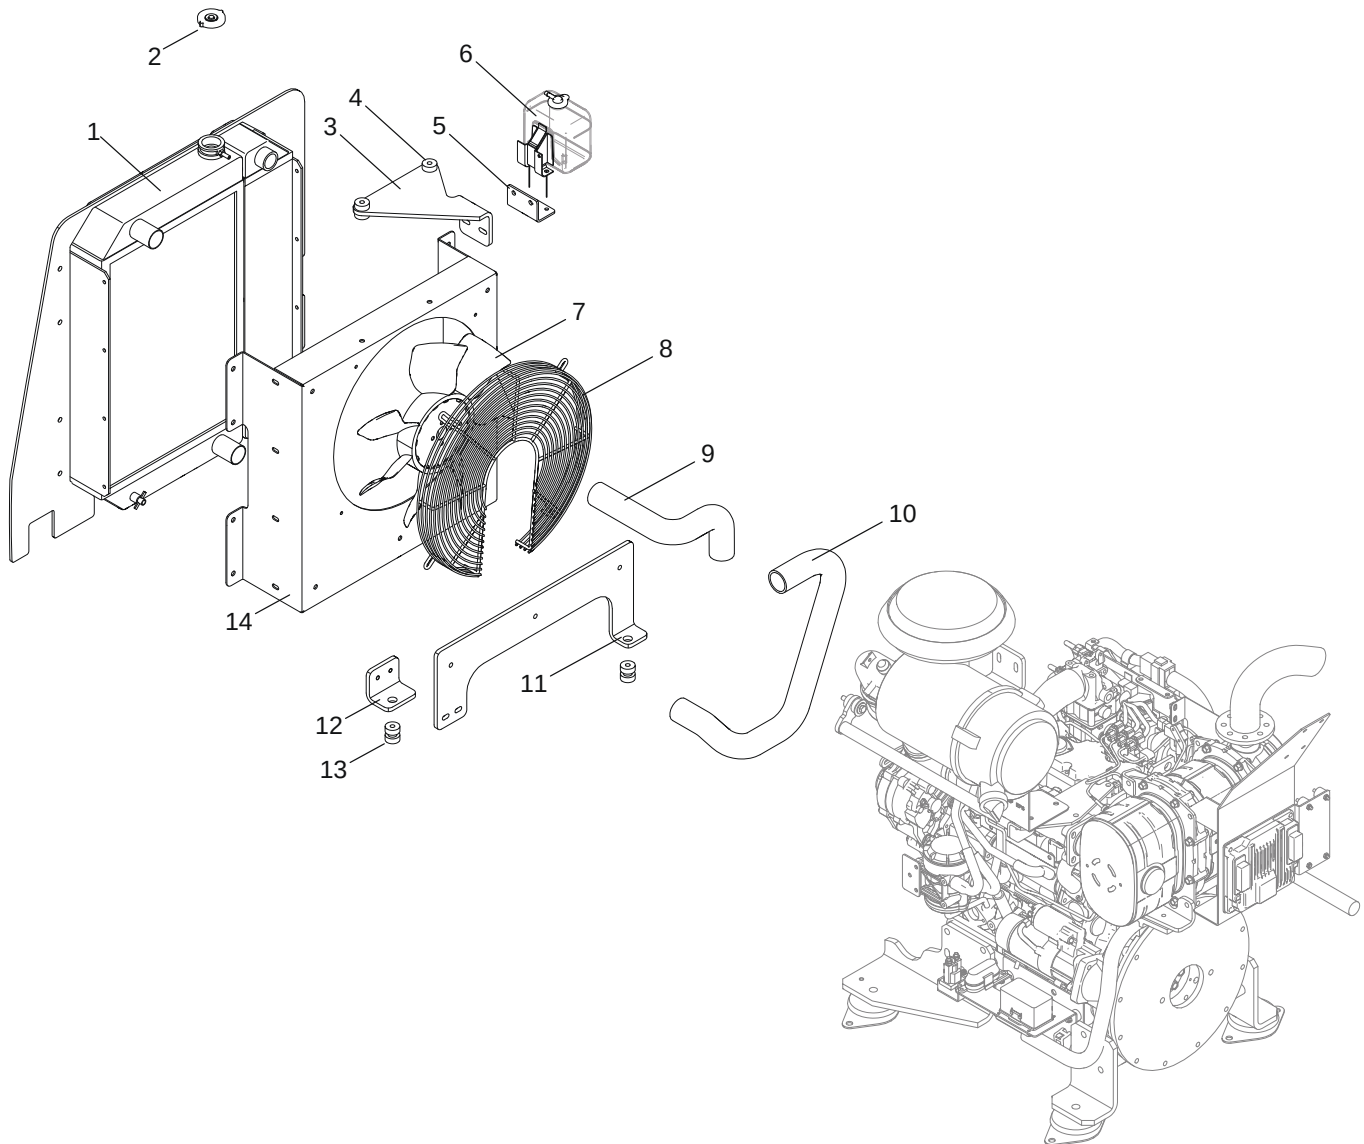


Figure 7-10 Kubota T4F Engine Assembly (1 of 3)

Kubota T4F Engine Assembly (1 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1014671		Engine, Kubota, T4F, 74HP, 8515	
1	988673-13	1	Assembly, Radiator/Cooler, Kubota	
2	1002184-04	1	Cap, Radiator, 13.5 PSI, 2.25 Neck	
3	1001166-57	4	Isolator, Radiator, Upper Mount	
4	1009384-08	1	Bracket, Recovery Bottle	
5	986537-46	1	Tank, Coolant Recovery, Kubota	
6	1009253-23	1	Fan, Radiator 8515	
7	1005365-23	1	Guard, Fan, Maintainer	
8	986537-21	1	Hose, Radiator, Upper	
9	1001166-15	1	Hose, Radiator, Lower	
10	1009384-12	1	Mount, Lower Radiator	
11	1009384-18	1	Bracket, Radiator Support	

KUBOTA T4F ENGINE ASSEMBLY (2 OF 3)

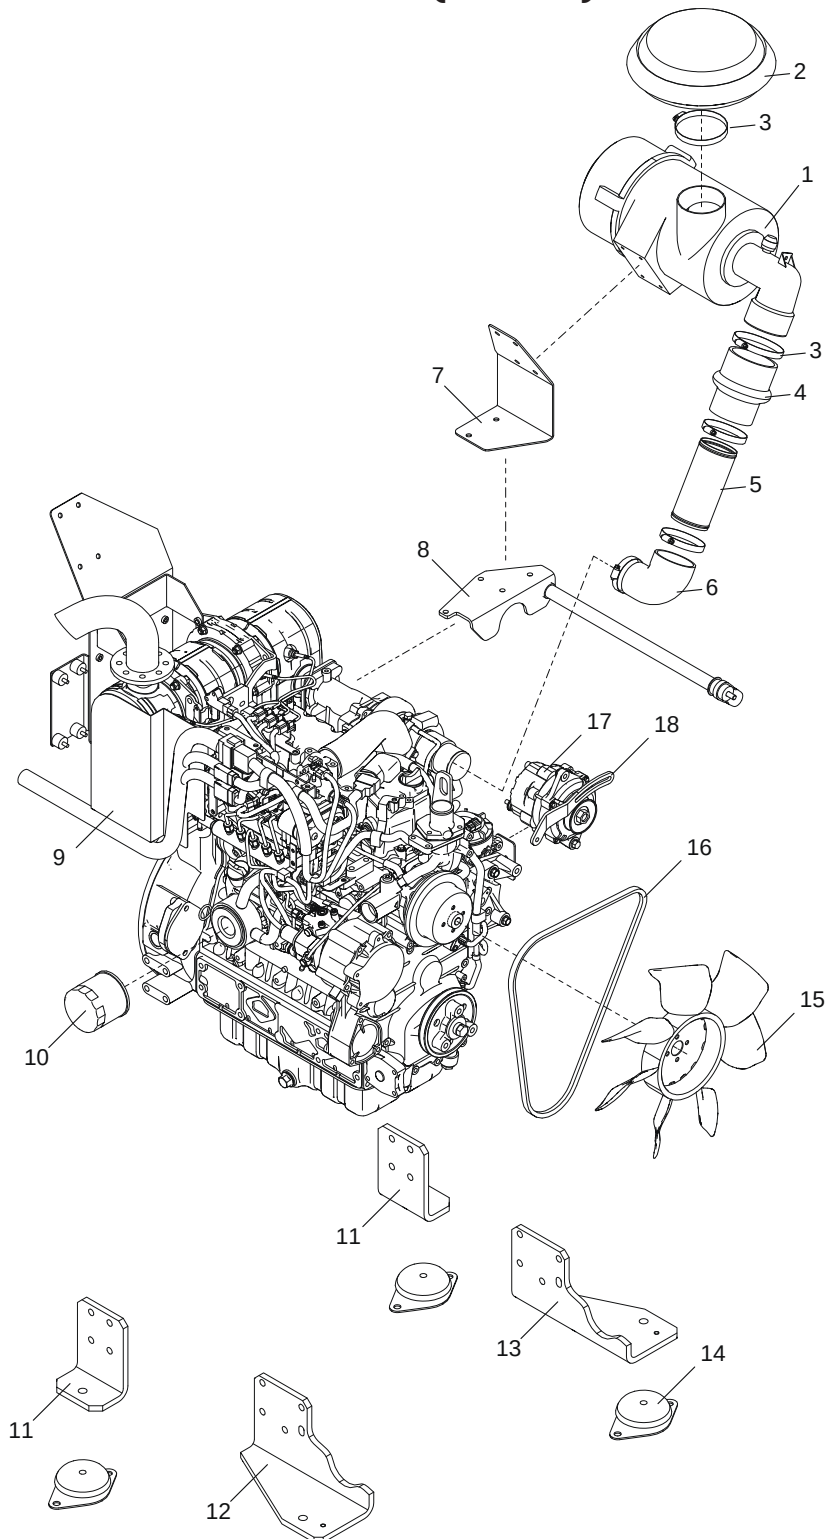


Figure 7-11 Kubota T4F Engine Assembly (2 of 3)

Kubota T4F Engine Assembly (1 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1014671		Engine, Kubota, T4F, 74HP, 8515	
1	1010255	1	Assembly, Air Breather	
REF	1009253-17	1	Filter, Air, Primary	Not Shown
REF	1009253-19	1	Filter, Air, Secondary	Not Shown
2	1002917-29	1	Hood, Air Inlet, 3.75	
3	35567	5	Clamp, Hose, #60	
4	1009253-25	1	Sleeve, Rubber, Intake Reducer	
5	1009384-04	1	Tube, Intake, Kubota	
6	1009384-02	1	Elbow, Reducing	
7	986537-03	1	Filter, Oil	
REF	1009253-18	1	Filter, Fuel	
REF	1009253-19	1	Filter, Fuel/Water Separator	
8	988673-14	2	Mount, Engine, Rear	
9	986537-16	1	Mount, Engine, Front (Left)	
10	986537-17	1	Mount, Engine, Front, (Right)	
11	986537-14	4	Isolator, Engine	
12	1009253-23	1	Fan, Radiator	
13	1009253-20	1	Belt, Fan	
14	1009253-21	1	Alternator	
15	1009253-31	1	Bracket, Alternator	

KUBOTA T4F ENGINE ASSEMBLY (3 OF 3)

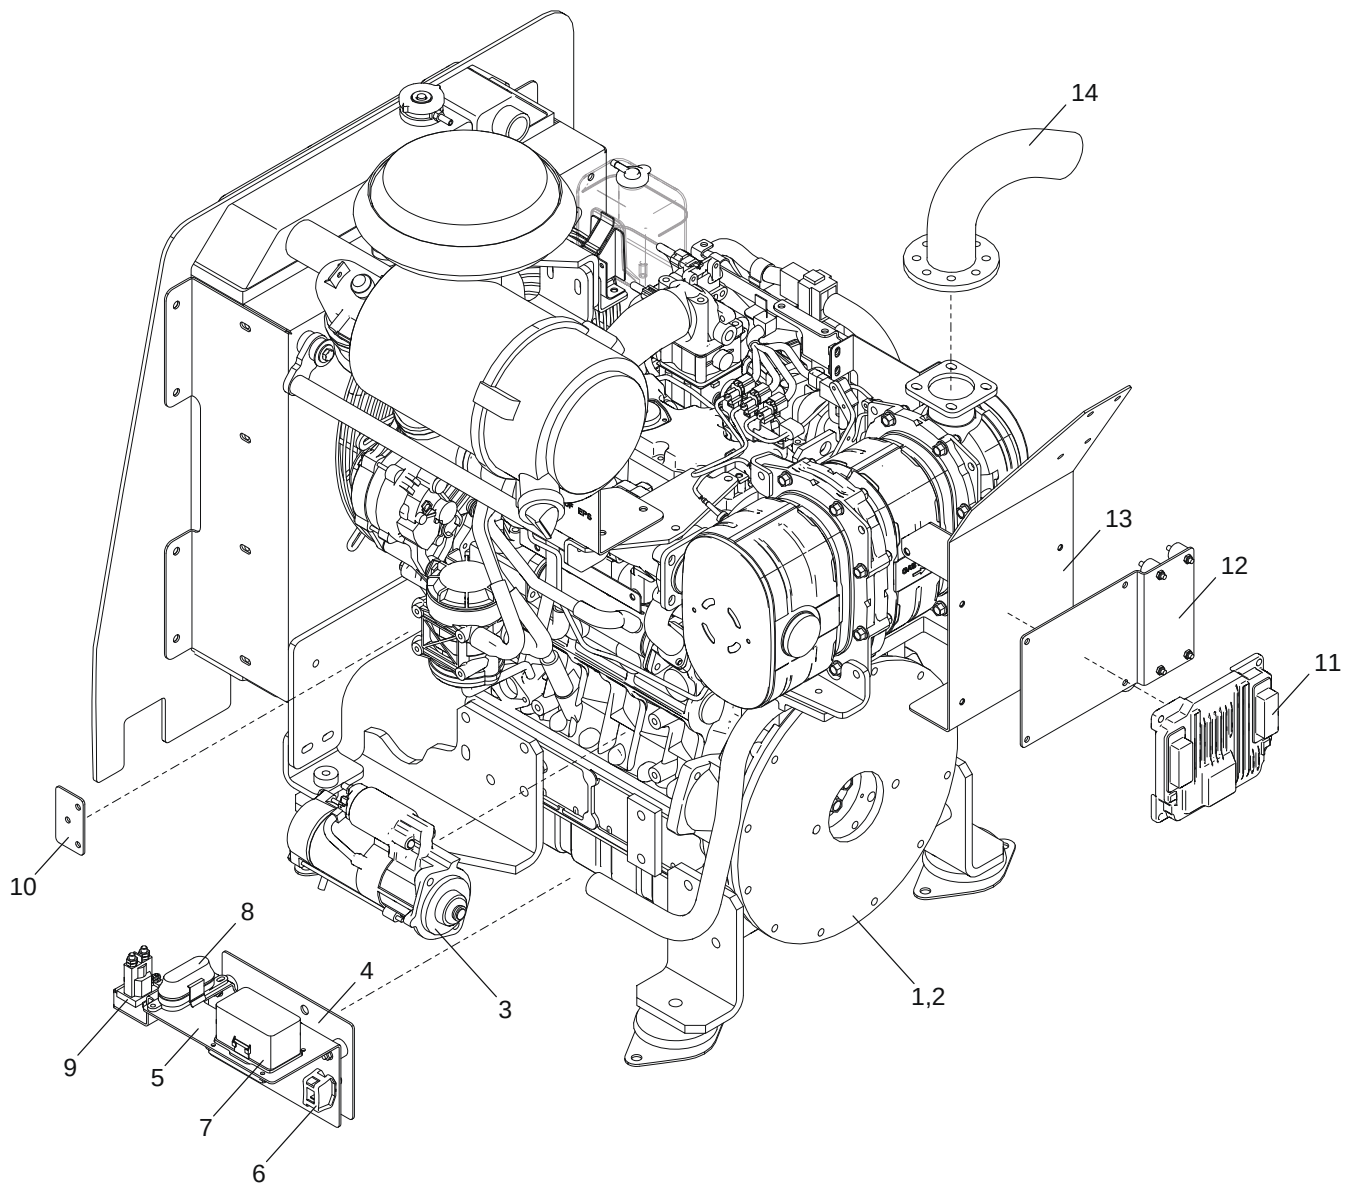


Figure 7-12 Kubota Engine Assembly (3 of 3)

Kubota T4F Engine Assembly (1 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1014671		Engine, Kubota, T4F, 74HP, 8515	
1	1002676-02	1	Assembly, Drive Plate	
2	1002676-03	1	Coupling, Drive Plate	
3	1001166-03	1	Starter, Kubota, 100A	
4	1009253-30	1	Plate, Mounting	
5	1009253-26	1	Plate, Fuse Mounting	
6	1009253-28	1	Relay/Fuse Block	
7	1009253-27	1	Fuse Holder	
8	985751	1	Relay, 12VDC, SPST, 100A, Heavy Duty	
9	1009253-29	1	Bracket, Harness	
10	1009253-24	1	ECU, Kubota	
11	1009253-01	1	Bracket, ECU Mounting	
12	1011364	1	Tail Pipe, Tier 4, Kubota	
13	1010471	1	Pump, Fuel w/Filter, Facet	
14	1009253-19	1	Filter, Fuel/Water Separator	
15	1009253-18	1	Filter, Fuel	

SPRAY DOWN

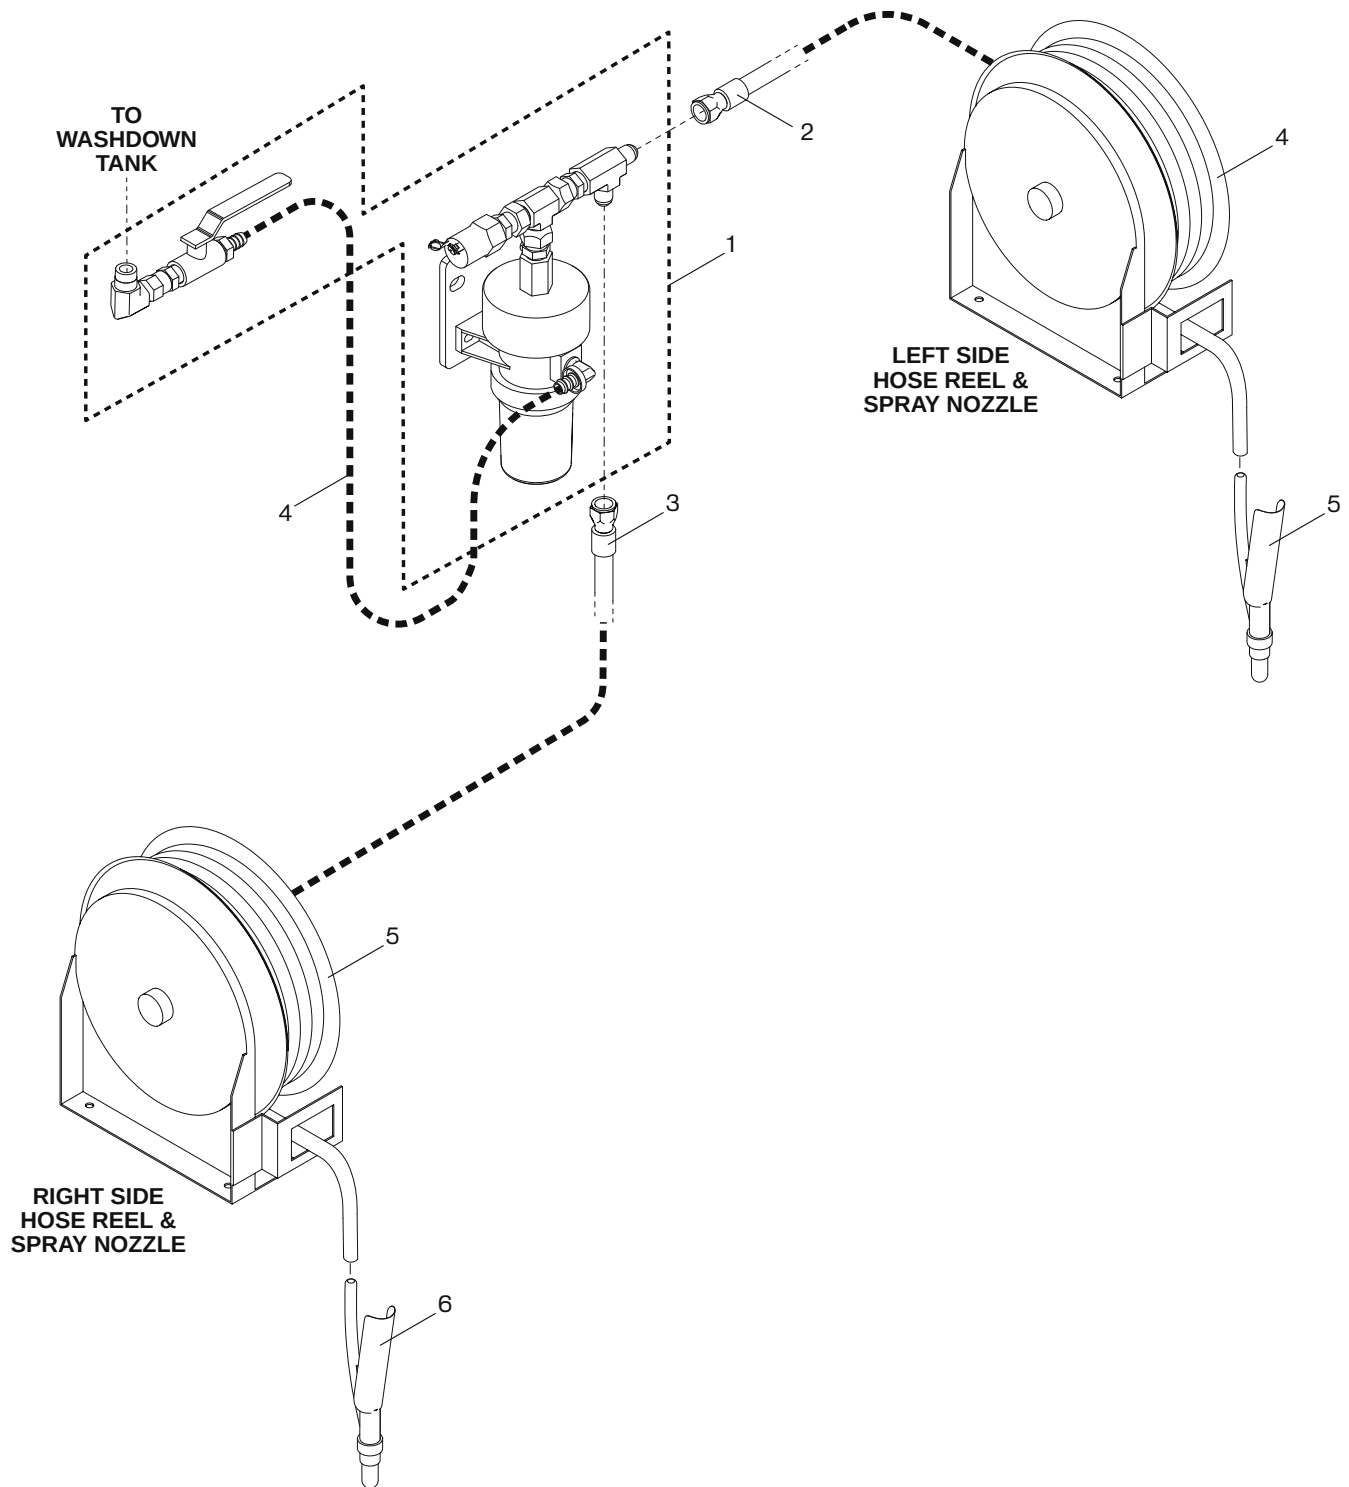


Figure 7-13 Spray Down

Spray Down

Item No.	Part Number	Qty.	Description	Remarks
1	1011885	1	Kit, Spray Down Pump w/Cut Off	
2	1008061	1	Hose, Spraydown, 4 Ft., 5LOLOA-JFJX-OPEN-108	To Left Hose Reel
3	1008060	1	Hose Spraydown, 9 Ft., 5LOLA-JFJX-OPRN-48	To Right Hose Reel
4	38579	A/R	Hose, 06, Low Pressure Push-On	To Tank
5	920200	1	Reel, w/Hose, Spraydown, .312 Diameter Hose	
REF	2501-6-6	2	Adapter, Elbow, 90°, -6 JIC/-6 NPTF	(1) Per Reel
REF	5LOC-6RFJX	2	Fitting, Push Lok, -5 LOC/-6 RFJX	(1) Per Reel
6	920220	2	Handle & Nozzle, Fuel	
REF	901210A	A/R	Nozzle, Spraydown	

SCREED ARM ASSEMBLY WITH TOE POINT

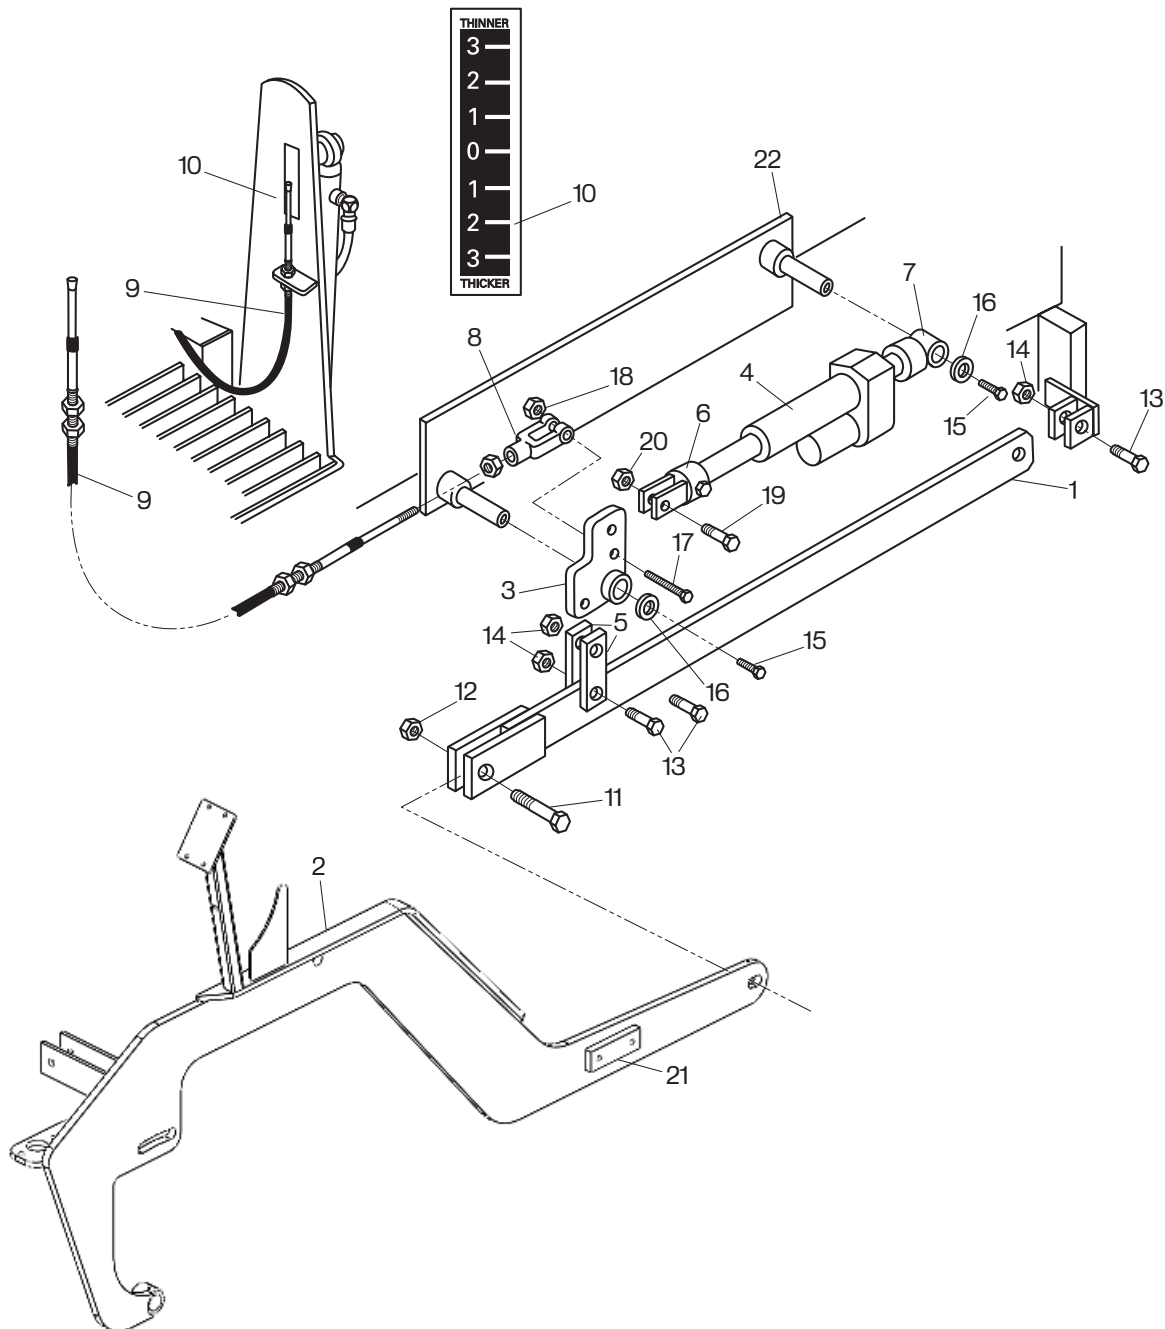


Figure 7-14 Screed Arm Assembly w/Toe Point

Screed Arm Assembly With Toe Point

Item No.	Part Number	Qty.	Description	Remarks
1	851206SRV	1	Extension, Screed Arm	
2	1000757SRV	1	Assembly, Screed Arm, 8510 (Right)	
REF	1000758SRV	1	Assembly, Screed Arm, 8510 (Left)	Not Shown
3	851209SRV	1	Mount, Pivot	
4	851518	2	Screw, Electric (6.00")	
REF	35193	2	Connector, Sealed, Tower, 2-Pin	Not Shown
REF	36165	4	Terminal, Sealed Connector, 16-14 GA, Female	Not Shown
REF	36166	4	Seal, Cable, 18-16 GA, Green	Not Shown
5	851210SRV	2	Ears, Pivot	
6	851211	1	End, Rod End of Screw	
7	851212	1	End, Motor End of Screw	
8	851213	1	Clevis, .188 x .250	
9	851520	1	Cable, Height Locator .188 x 90 w/5.00" Stroke	
10	851215	1	Decal, Height	
11	100-16-8-40-5	1	CSHH, 1-8 x 2.50, GR5	
12	204-8-13-5	1	Nut, Lock Stover, 1-8, GR5	
13	100-10-11-40-5	3	CSHH, 5/8-11 x 2.50, GR5	
14	204-10-11-5	3	Nut, Lock, Stover, 5/8-11, GR5	
15	100-6-16-12-5F	2	CSHH, 3/8-16 x .75, GR5, FT	
16	308-6-24	2	Washer, Flat, Fender, 3/8 x 1.50	
17	100-4-20-32-5	1	CSHH, 1/4-20 x 2.00, GR5	
18	204-4-20-5	1	Nut, Lock, Stover, 1/4-20, GR5	
19	100-8-13-28-5	2	CSHH, 1/2-13 x 1.75, GR5	
20	204-8-13-5	2	Nut, Lock, Stover, 1/2-13, GR5	
21	855568	1	Bracket, Grade Control	
22	853586SRV	1	Mounting Plate 6" Electric Screw, RH	
REF	853585SRV	1	Mounting Plate 6" Electric Screw, (Left)	Not Shown
23	987909	1	Fitting, 90° 06MJ-06MP, .078 Orifice	
24	920238	1	Remote, Electric Flight Screw	

PROPANE HEATERS

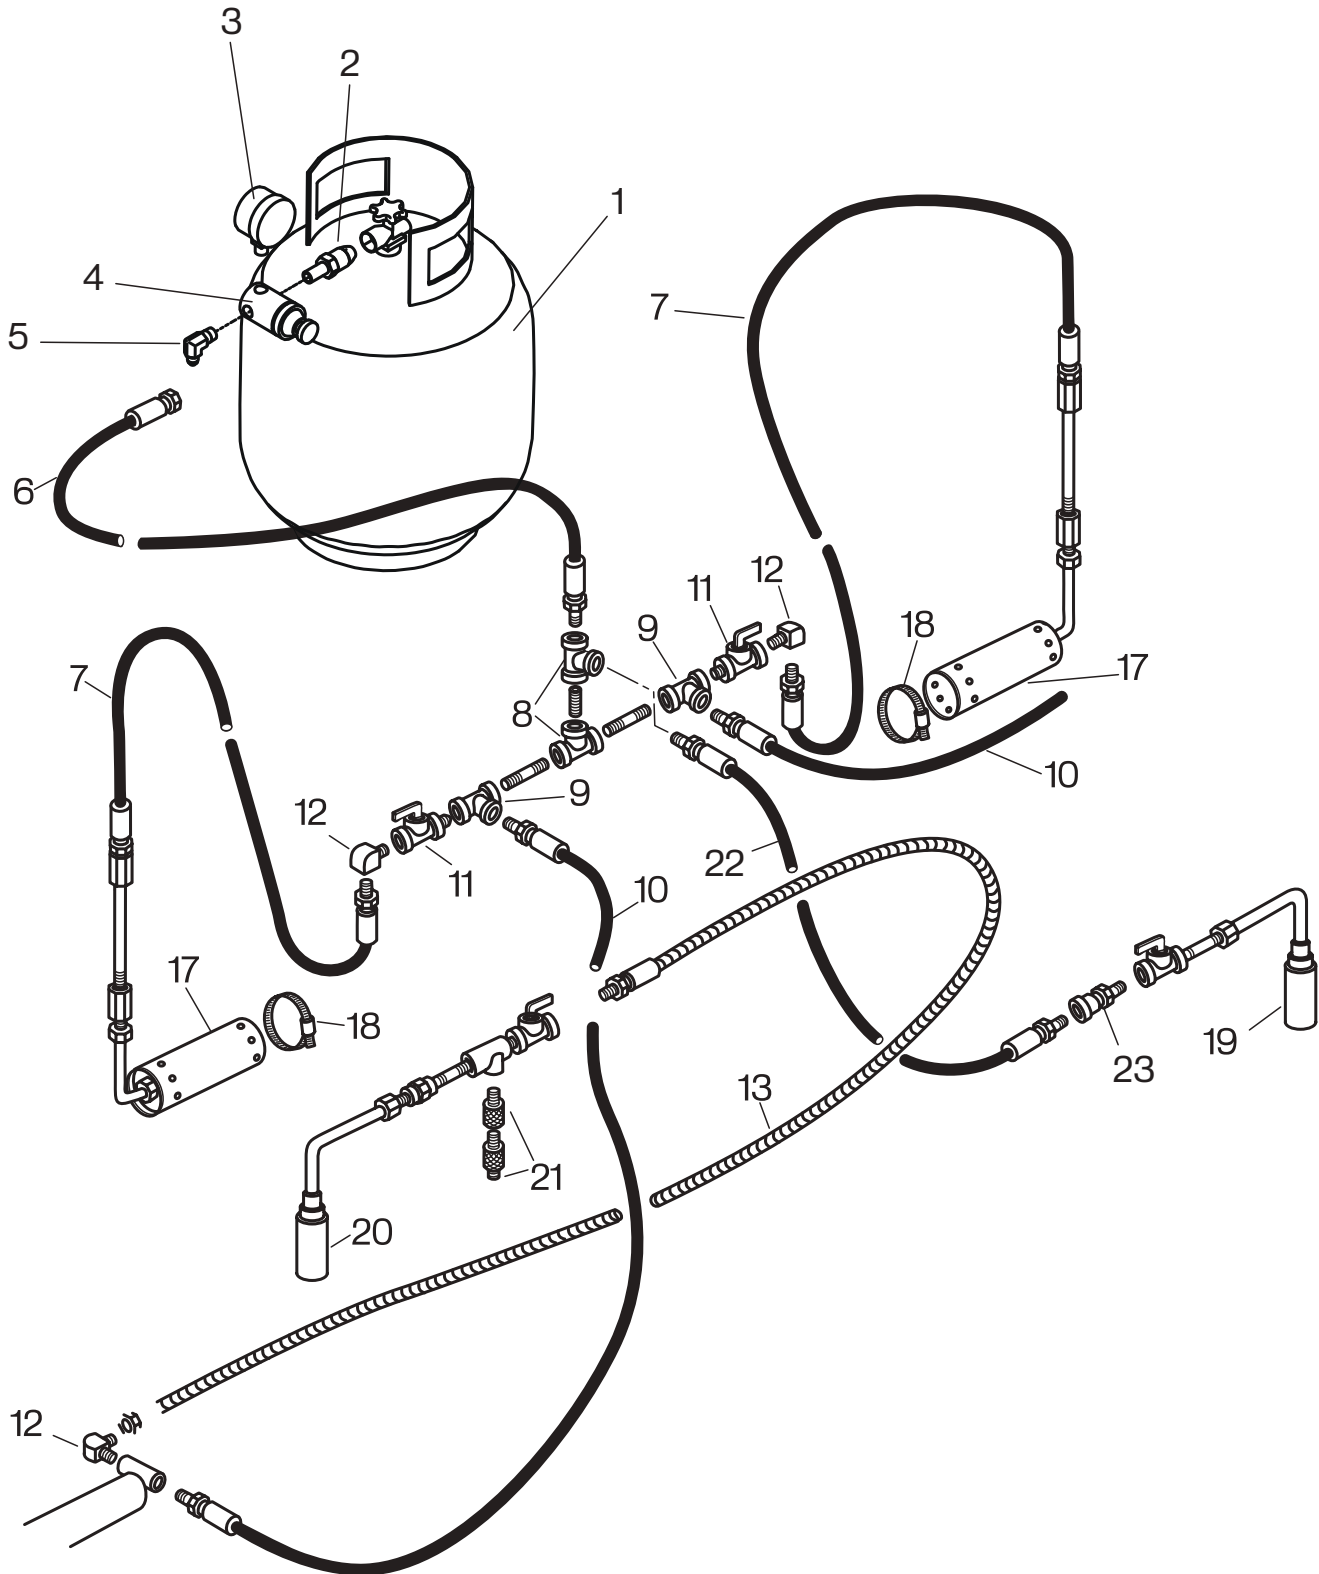


Figure 7-15 Propane Heaters

Propane Heaters

Item No.	Part Number	Qty.	Description	Remarks
1	230010	1	LPG Tank, 20 lbs.	
REF	982515	1	Regulator, 0 - 60 PSI, LP	Includes 2 - 5
2	230030	1	Adapter, POL	
3	230110	1	Gauge, LPG Pressure	
4	230100-A	1	Body, Regulator, LPG	
5	71822	1	Adapter, Elbow, 90°, -4 JIC / -4 NPTF	
6	230032	1	Hose, LPG Regulator to Tee	
7	230034	2	Hose, Ignitor Burner	
8	230080	2	Tee, .250 Pipe	
9	230081	2	Tee, .250 Street	
10	230038	2	Hose, Screed Extension Burner	
11	1008544	5	Valve, Selector (Cutoff)	
12	230069	3	Adapter, Hose to Pipe (90°)	
13	851225	2	Hose, Screed Extension Burner	
17	982504	2	Burner, Screed Extension	
18	230240	2	Hose Clamp, 2.125 (Size 28)	
19	1008652SRV	A/R	Burner Nozzle, Ignitor	
20	1008654SRV	2	Burner Nozzle, Screed Extension	
21	230084	2	Quick Disconnect Coupling	
22	230034	1	Hose, Ignitor Burner	
23	1009358	1	Adaptor 9/16-18 UNF-2B (Left) X 4 JIC Male	

SHEET METAL COVERS - HIGH DECK (1 OF 2)

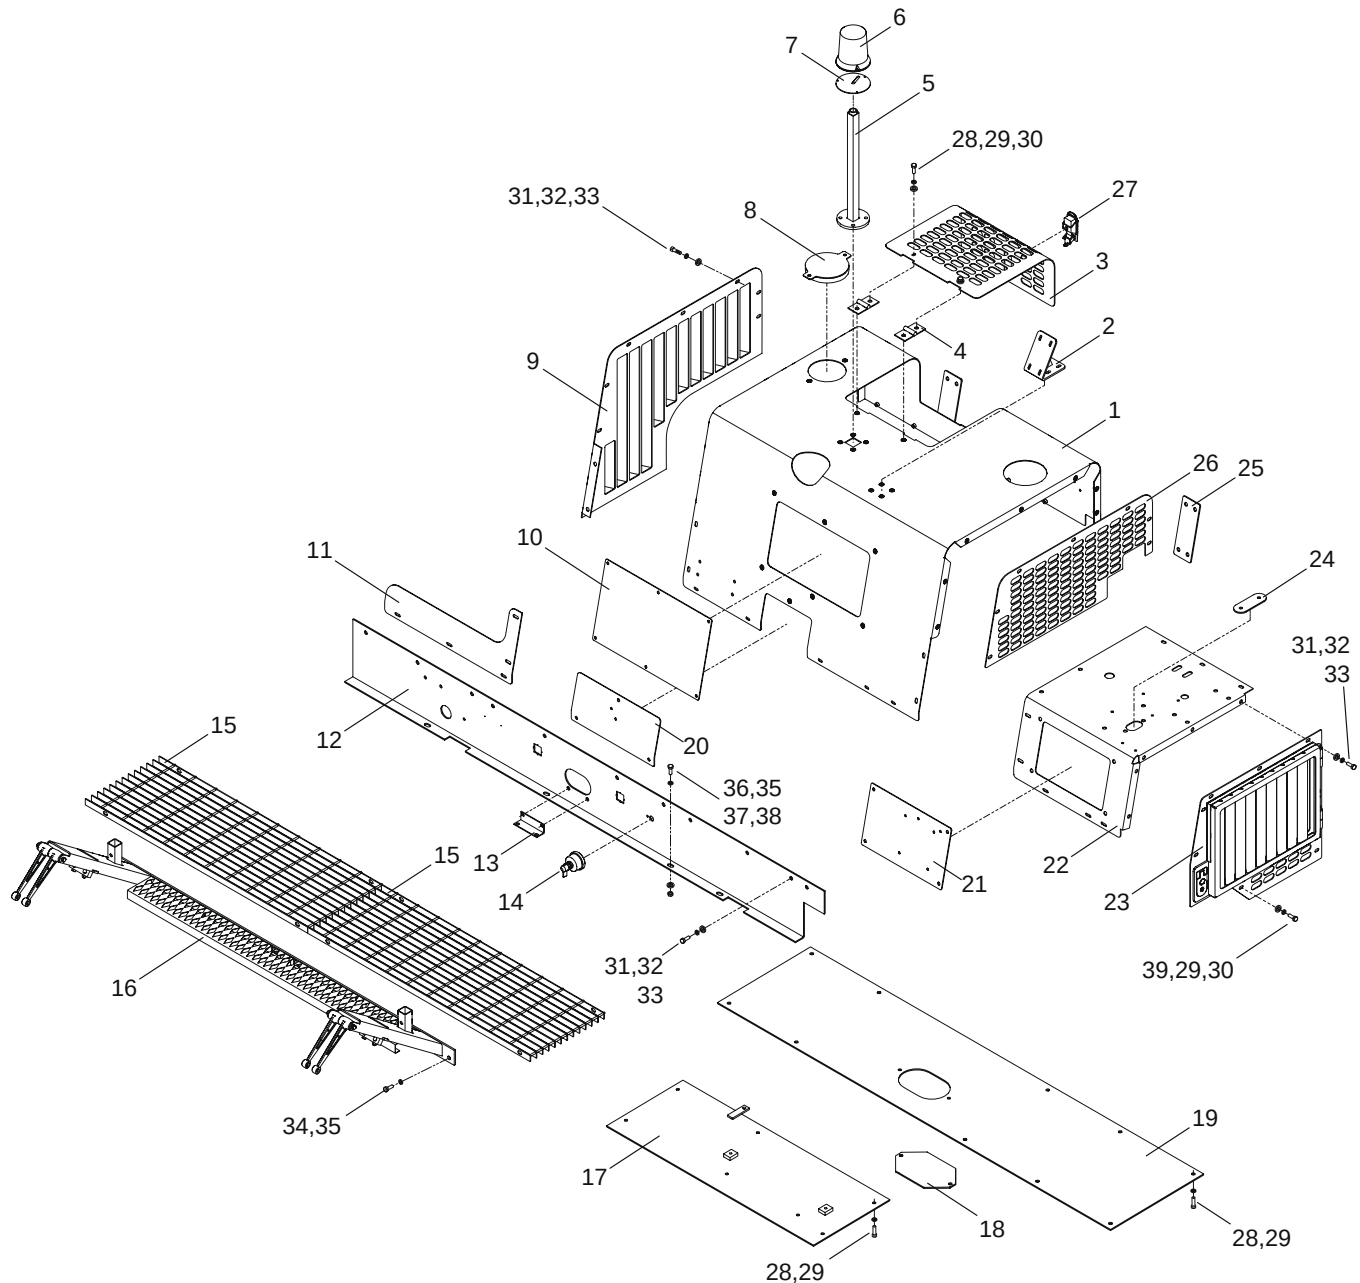


Figure 7-16 Sheet Metal Covers - High Deck (1 of 2)

Sheet Metal Covers - High Deck (1 of 2)

Item No.	Part Number	Qty.	Description	Remarks
1	1011483	1	Weldment, Cover, Kubota, T4F	
2	1011395	1	Weldment, Air Breather Mount	
3	1009349	1	Door, Engine Access, T4F	
4	987639	2	Hinge, (2) Thru Holes	
5	989469SRV	1	Assembly, Beacon Light Post	
6	1013231	1	Strobe Light, Amber	
7	1013234	1	Weldment, Mount, LED Beacon	
8	1010105	1	Weldment, Radiator Cap Cover	
9	1010269	1	Weldment, Engine Cover w/Deflectors (Left)	
10	987629	1	Cover, Access Hole (Top)	
11	988116SRV	1	Left Side SM	
12	988115	1	Toeboard	
13	1013314	1	Bracket, Mounting	
14	SW29	1	Switch, Battery Disconnect	
15	1014686	2	Grating, Walkboard, Half	
16	1012044	1	Assembly, Lower Control Arms	
17	1014240	1	Weldment, Rear Engine Pan	
18	980751	1	Plate, Cover	
19	853645SRV	1	Plate, Conveyor Flap Extension	Includes 16 - 17
20	988117	1	Cover, Center Engine, 8510	
21	987633	1	Cover, Access Hole, (Right)	
22	1010451	1	Weldment, Cover, T4F (Right)	
23	1011030	1	Assembly, Side Access Door (Right)	
24	988126	1	Cover, Top Con Hole	
25	988226SRV	2	Bar, 7 GA x 2.00 x 3.25 w/Holes	
26	1009351	1	Cover, Vent, Top, T4F (Right)	
REF	980460	1	Lever Latch	
27	35560	2	Key, Vandalism Lock	Not Shown
28	100-6-16-16-5F	A/R	CSHH, 3/8-16 x 1.00, GR5, FT	
29	302-6	A/R	Washer, Lock, 3/8	
30	300-6	A/R	Washer, Flat, SAE, 3/8	
31	100-5-18-16-5F	A/R	CSHH, 5/16-18 x 1.00, GR5, FT	
32	302-5	A/R	Washer, Lock, 5/16	
33	300-5	A/R	Washer, Flat, SAE, 5/16	
34	100-8-13-20-5F	A/R	CSHH, 1/2-13 x 1.25, GR5, FT	
35	300-8	A/R	Washer, Flat, SAE, 1/2	
36	100-8-13-32-5	A/R	CSHH, 1/2-13 x 2.00, GR5	

SHEET METAL COVERS - HIGH DECK (2 OF 2)

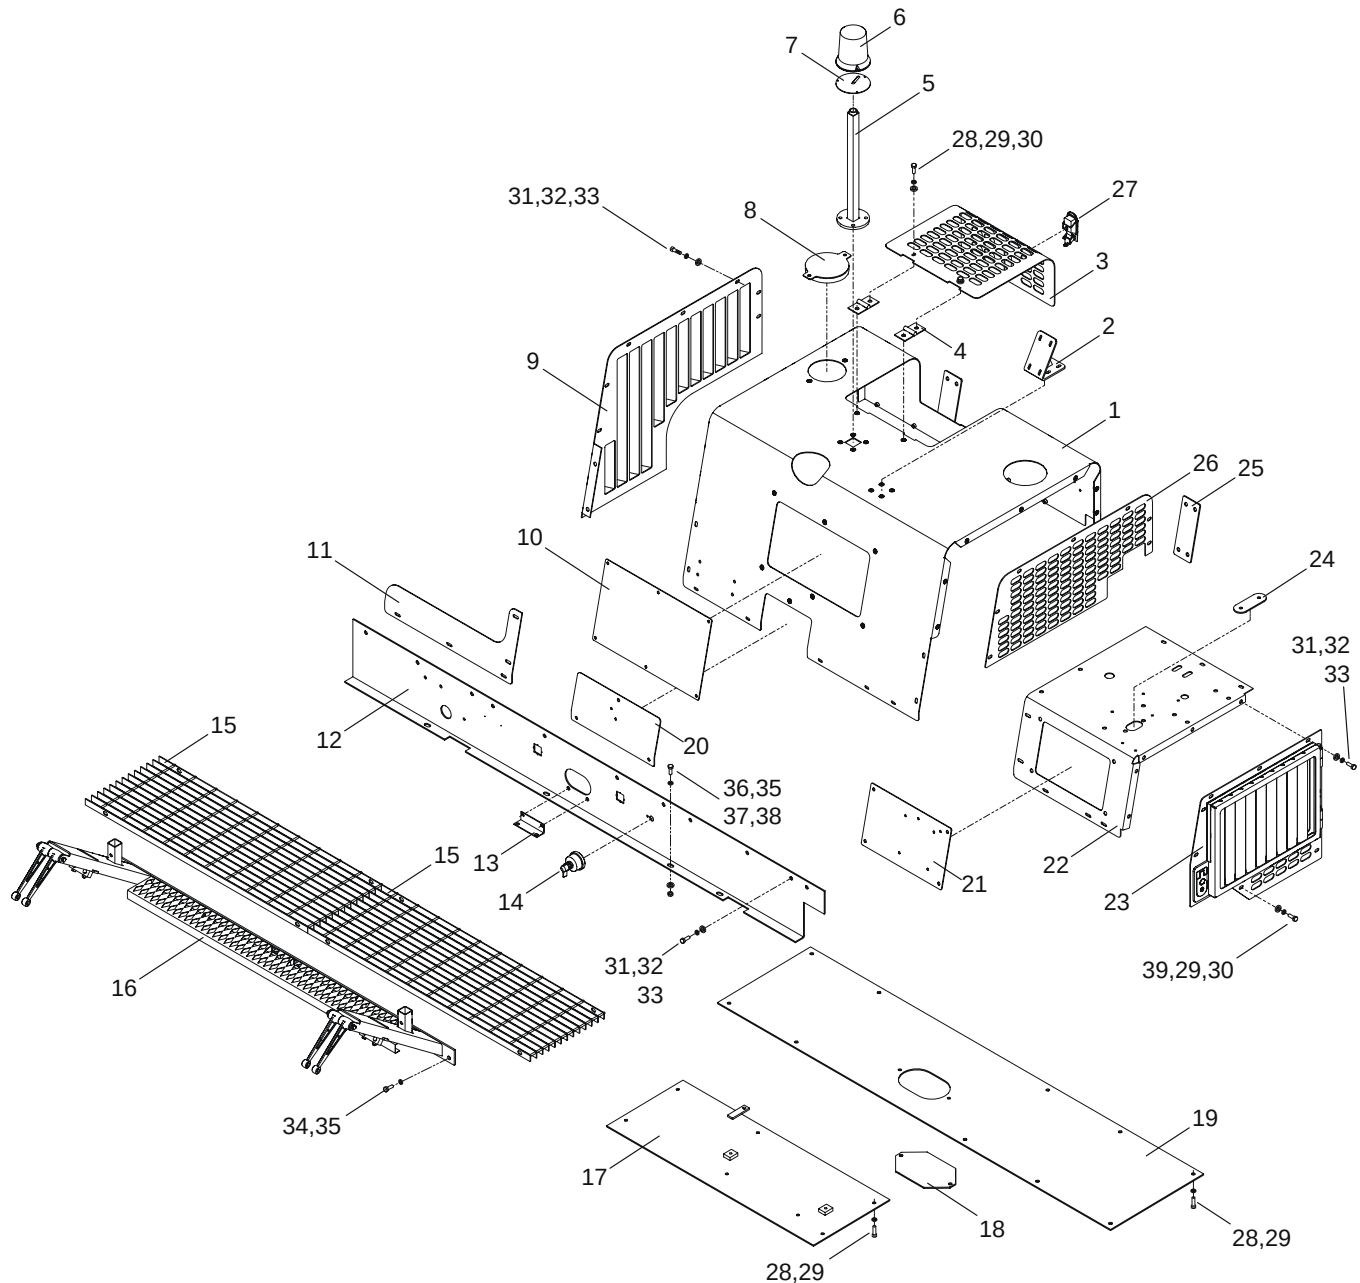


Figure 7-16 Kubota Sheet Metal Covers - High Deck (2 of 2)

Sheet Metal Covers - High Deck (1 of 2)

Item No.	Part Number	Qty.	Description	Remarks
37	302-8	A/R	Washer, Lock, 1/2	
38	200-8-13-5	A/R	Nut, Hex, 1/2-13, GR5	
39	100-6-24-16-5F	A/R	CSHH, 3/8-24 x 1.00, GR5, FT	
REF	Purchase Locally	1	Battery, 12V, 1125 CCA, Group 31	Not Shown
REF	986804	1	Cable, Battery	Not Shown
REF	5804	1	Cable, Battery	Not Shown

SHEET METAL COVERS - LOW DECK (1 OF 2)

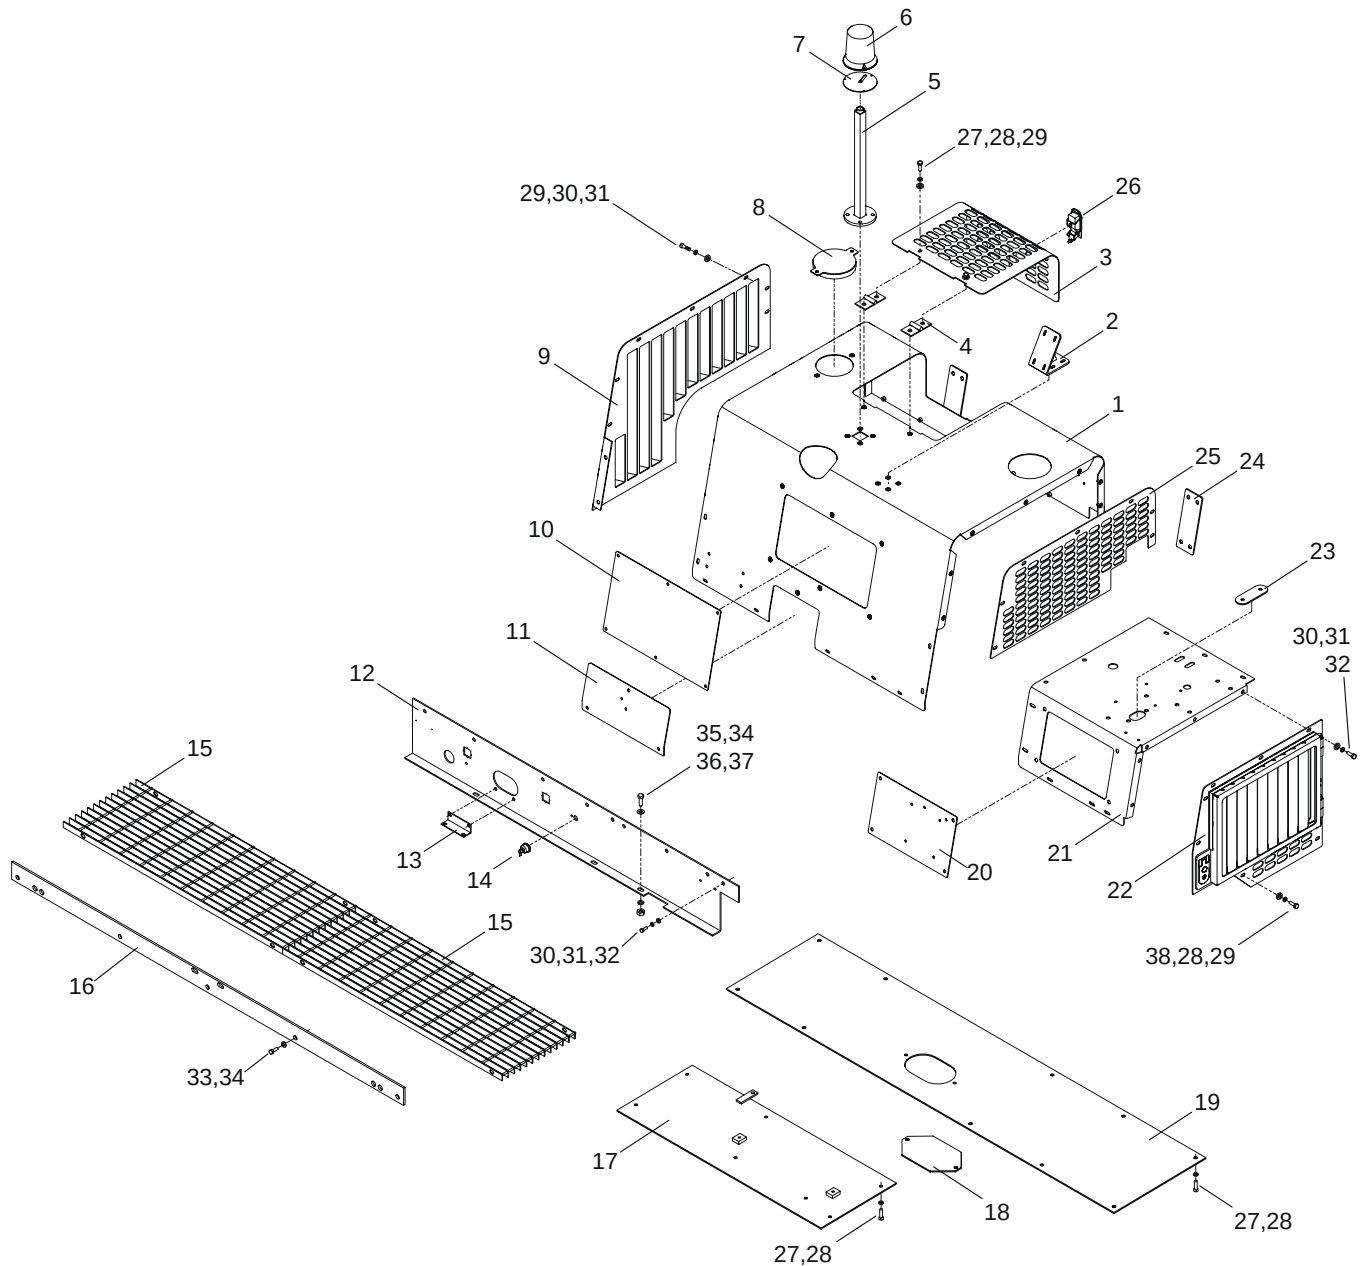


Figure 7-17 Sheet Metal Covers - Low Deck (1 of 2)

Sheet Metal Covers - Low Deck (1 of 2)

Item No.	Part Number	Qty.	Description	Remarks
1	1011483	1	Weldment, Cover, Kubota, T4F	
2	1011395	1	Weldment, Air Breather Mount	
3	1009349	1	Door, Engine Access, T4F	
4	987639	2	Hinge, (2) Thru Holes	
5	989469SRV	1	Assembly, Beacon Light Post	
6	1013231	1	Strobe Light, Amber	
7	1013234	1	Weldment, Mount, LED Beacon	
8	1010105	1	Weldment, Radiator Cap Cover	
9	1010269	1	Weldment, Engine Cover w/Deflectors (Left)	
10	987629	1	Cover, Access Hole (Top)	
11	988117	1	Cover, Center Engine, 8510	
12	988189	1	Toeboard	
13	1013314	1	Bracket, Mounting	
14	SW29	1	Switch, Battery Disconnect	
15	1014686	2	Grating, Walkboard, Half	
16	1003240	1	Tail Piece, Bolt On	
17	1014240	1	Weldment, Rear Engine Pan	
18	980751	1	Plate, Cover	
19	853645SRV	1	Plate, Conveyor Flap Extension	Includes 16 - 17
20	987633	1	Cover, Access Hole, (Right)	
21	1010451	1	Weldment, Cover, T4F (Right)	
22	1011030	1	Assembly, Side Access Door (Right)	
23	988126	1	Cover, Top Con Hole	
24	988226SRV	2	Bar, 7 GA x 2.00 x 3.25 w/Holes	
25	1009351	1	Cover, Vent, Top, T4F (Right)	
REF	980460	1	Lever Latch	
26	35560	2	Key, Vandalism Lock	Not Shown
27	100-6-16-16-5F	A/R	CSHH, 3/8-16 x 1.00, GR5, FT	
28	302-6	A/R	Washer, Lock, 3/8	
29	300-6	A/R	Washer, Flat, SAE, 3/8	
30	100-5-18-16-5F	A/R	CSHH, 5/16-18 x 1.00, GR5, FT	
31	302-5	A/R	Washer, Lock, 5/16	
32	300-5	A/R	Washer, Flat, SAE, 5/16	
33	100-8-13-20-5F	A/R	CSHH, 1/2-13 x 1.25, GR5, FT	
34	300-8	A/R	Washer, Flat, SAE, 1/2	
35	100-8-13-32-5	A/R	CSHH, 1/2-13 x 2.00, GR5	
36	302-8	A/R	Washer, Lock, 1/2	

SHEET METAL COVERS - LOW DECK (2 OF 2)

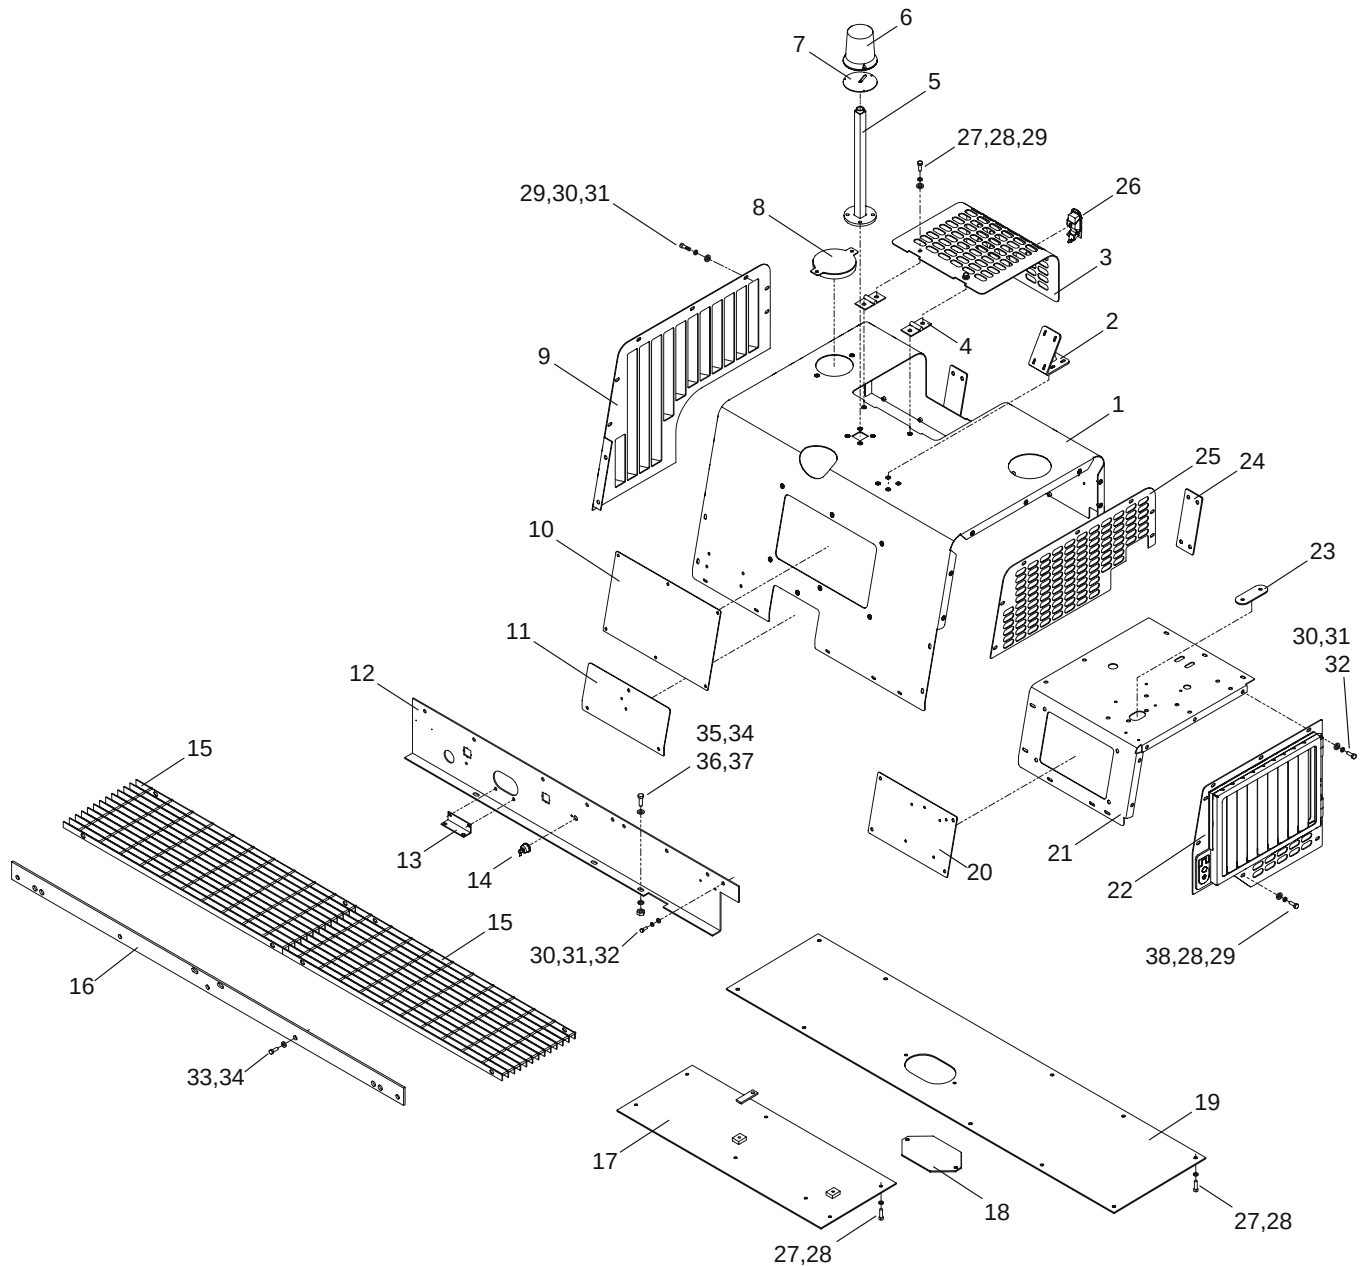


Figure 7-17 Sheet Metal Covers - Low Deck (2 of 2)

Sheet Metal Covers - Low Deck (2 of 2)

Item No.	Part Number	Qty.	Description	Remarks
38	200-8-13-5	A/R	Nut, Hex, 1/2-13, GR5	
39	100-6-24-16-5F	A/R	CSHH, 3/8-24 x 1.00, GR5, FT	
REF	Purchase Locally	1	Battery, 12V, 1125 CCA, Group 31	Not Shown
REF	986804	1	Cable, Battery	Not Shown
REF	5804	1	Cable, Battery	Not Shown

CONTROLS - HIGH DECK (RIGHT)

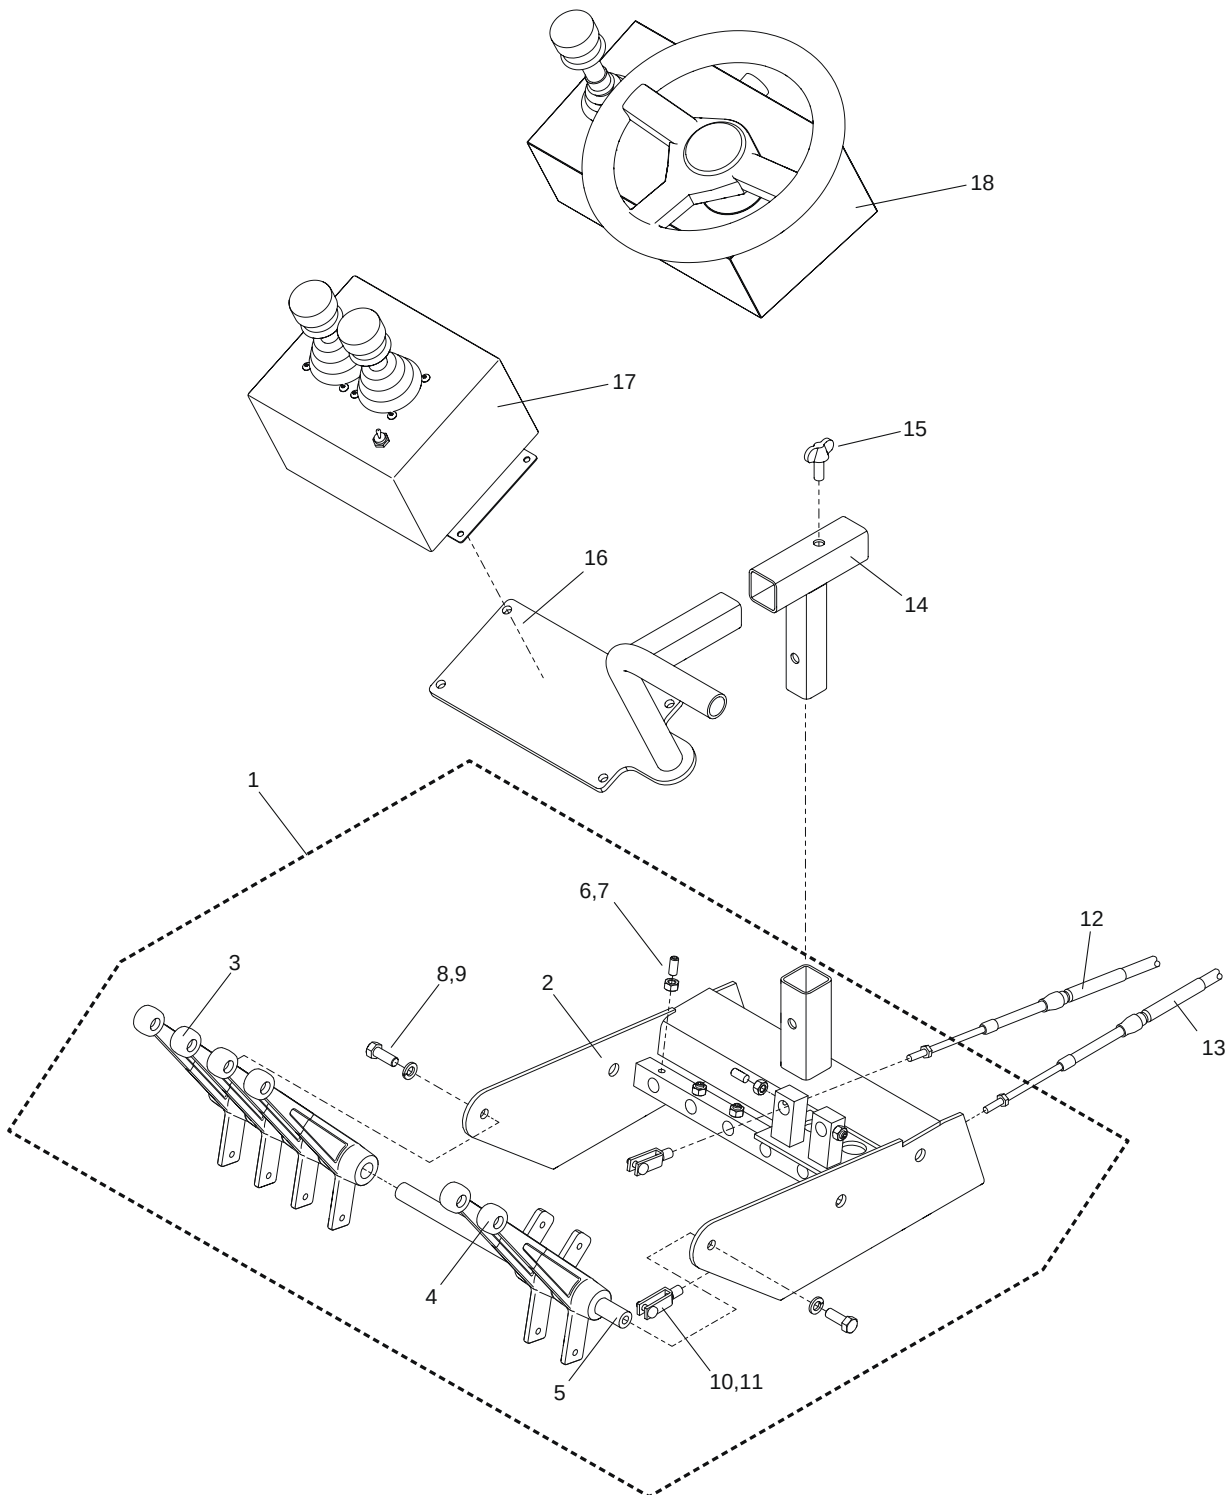


Figure 7-18 Controls - High Deck (Right)

Controls - High Deck (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	1011979	1	Assembly, Right Side Controls, High Deck	Includes 2 - 9
2	1011978	1	Weldment, Right Hand Control	
3	920210	4	Cast Handle, Right Hand Control	
4	920210-02SRV	2	Cast Handle, Right Hand Drive, HD	
5	988202	1	Rod, Control Handle Pivot, HD	
6	126-5-18-12	10	Set Screw, Hex Socket, Oval, 5/16-18 x .75	
7	200-5-18-5	10	Nut, Hex, 5/16-18, GR5	
8	100-6-24-16-5F	2	CSHH, 3/8-24 x 1.00, GR5, FT	
9	302-6	2	Washer, Lock, 3/8	
10	350050	10	Clevis, 1/4-28	
11	350080	10	Pin, Clevis, .250 x .875	
REF	960019	10	Pin, Cotter, .094 x .75	Not Shown
12	920120	2	Cable, Push/Pull, 104" x 3" Stroke	
13	920136	6	Cable, Push/Pull, 136" x 3" Stroke	
14	984343SRV	1	Assembly, Tee, Electronic Steer	
15	920070	2	Thumb Screw, 3/8-16 x 1.00	
16	853836SRV	1	Assembly, Electric Steer Box	
17	1008904SRV	1	Dual-Joystick Control Box, Plus One	Standard
18	1000708	1	Steering Box Wheel, Plus One	Optional

CONTROLS - LOW DECK (RIGHT)

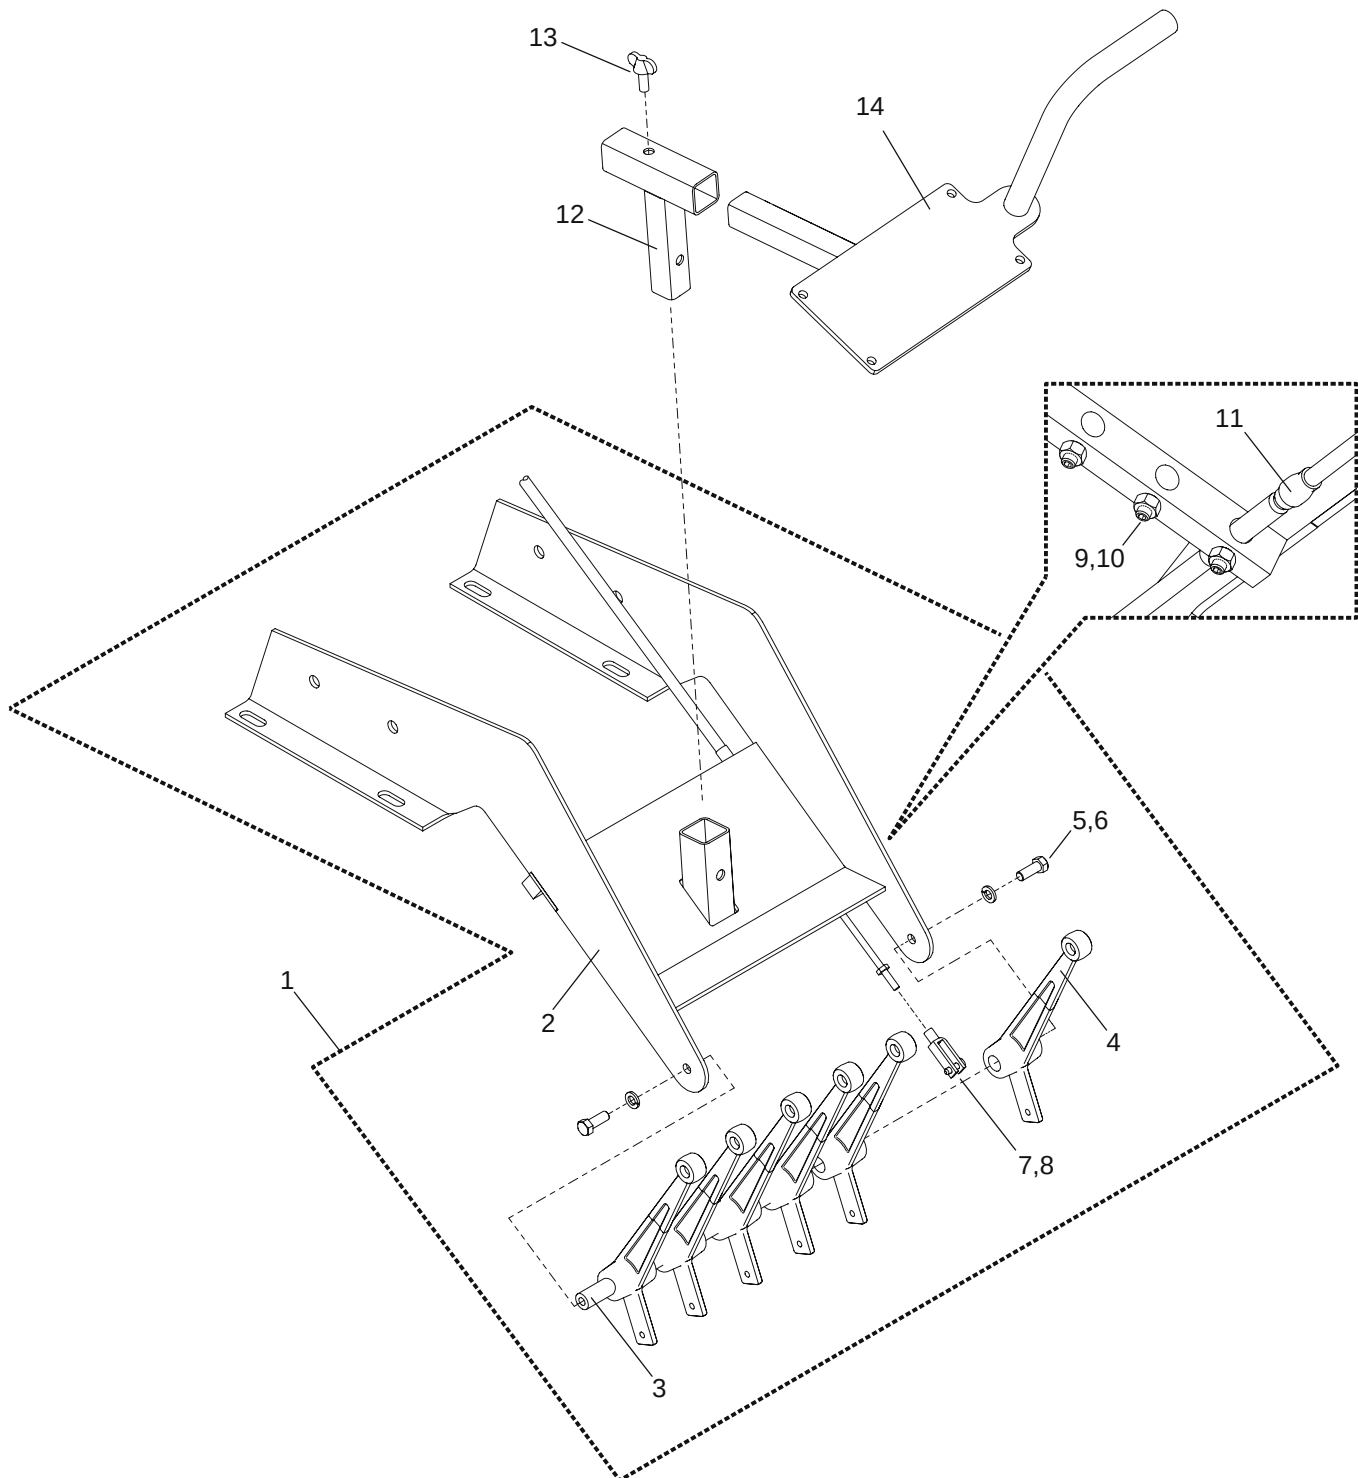


Figure 7-19 Controls - Low Deck (Right)

Controls - Low Deck (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	1011981	1	Assembly, Controls, Right Side, Low Deck	Includes 2 - 6
2	1011980	1	Weldment, Controls, Right Side, Low Deck	
3	988202	1	Rod, Control Handle Pivot, HD	
4	920210	4	Cast Handle, Right Hand Control	
5	100-6-24-16-5F	2	CSHH, 3/8-24 x 1.00, GR5, FT	
6	302-6	2	Washer, Lock, 3/8	
7	350050	8	Clevis, 1/4-28	
8	350080	8	Pin, Clevis, .250 x .875	
REF	960019	8	Pin, Cotter, .094 x .75	Not Shown
9	126-5-18-12	8	Set Screw, Hex Socket, Oval, 5/16-18 x .75	
10	200-5-18-5	8	Nut, Hex, 5/16-18, GR5	
11	920136	6	Cable, Push/Pull, 136" x 3" Stroke	
12	984343SRV	1	Assembly, Tee, Electronic Steer	
13	920070	2	Thumb Screw, 3/8-16 x 1.00	
14	853836SRV	1	Assembly, Electric Steer Box	
REF	1008904SRV	1	Dual-Joystick Control Box, Plus One	Standard
REF	1000708	1	Steering Box Wheel, Plus One	Optional

This technical drawing is an exploded view of a mechanical assembly, showing 20 numbered components. The assembly includes a main rectangular housing (20) with a top flange (2) and a base flange (3). A central vertical shaft (1) passes through the housing. A horizontal shaft (4) is mounted on the top flange. A vertical shaft (5) is mounted on the base flange. A horizontal shaft (6) is mounted on the side of the housing. A vertical shaft (7) is mounted on the front of the housing. A horizontal shaft (8) is mounted on the bottom of the housing. A vertical shaft (9) is mounted on the right side of the housing. A horizontal shaft (10) is mounted on the left side of the housing. A vertical shaft (11) is mounted on the top of the housing. A horizontal shaft (12) is mounted on the bottom of the housing. A vertical shaft (13) is mounted on the right side of the housing. A horizontal shaft (14) is mounted on the left side of the housing. A vertical shaft (15) is mounted on the top of the housing. A horizontal shaft (16) is mounted on the bottom of the housing. A vertical shaft (17) is mounted on the right side of the housing. A horizontal shaft (18) is mounted on the left side of the housing. A vertical shaft (19) is mounted on the top of the housing. A horizontal shaft (20) is mounted on the bottom of the housing.

7-54

Controls - Left Side

Item No.	Part Number	Qty.	Description	Remarks
1	1014673	1	Weldment, Left Side Controls	
2	1014844	1	Bar, Cable Mount, Left Hand Drive	
3	853836L	1	Weldment, Mount, Steering Box	
4	984343SRV	1	Assembly, Tee, Electronic Steer	
5	920070	2	Thumb Screw, 3/8-16 x 1.00	
6	1003119	1	Linkage, Controls (Left)	
7	910080	1	Selector Valve, Vibrator	
8	20926564	1	Ball Valve, On/Off, 1/4	
9	1007673	1	Bracket, Screed Lift Lock	
10	851161	1	Assembly, Valve, 9 Section w/Float	See Fig 7-21
11	350050	8	Clevis, 1/4-28	
12	350080	8	Pin, Clevis, .250 x .875	
13	920136	8	Cable, Push/Pull, 136" x 3" Stroke	
REF	126-5-18-12	12	Set Screw, Hex Socket, Oval, 5/16-18 x .75	
REF	200-5-18-5	12	Nut, Hex, 5/16-18, GR5	
14	100-5-18-32-5	2	CSHH, 5/16-18 x 2.00, GR5	
15	302-5	5	Washer, Lock, 5/16	
16	200-5-18-5	5	Nut, Hex, 5/16-18, GR5	
17	100-5-16-48-5	3	CSHH, 5/16-18 x 3.00, GR5	
18	302-5	5	Washer, Lock, 5/16	
19	200-5-18-5	5	Nut, Hex, 5/16-18, GR5	
20	1014830	1	Assembly, Control Box Slide	

MAIN VALVE MANIFOLD DETAIL

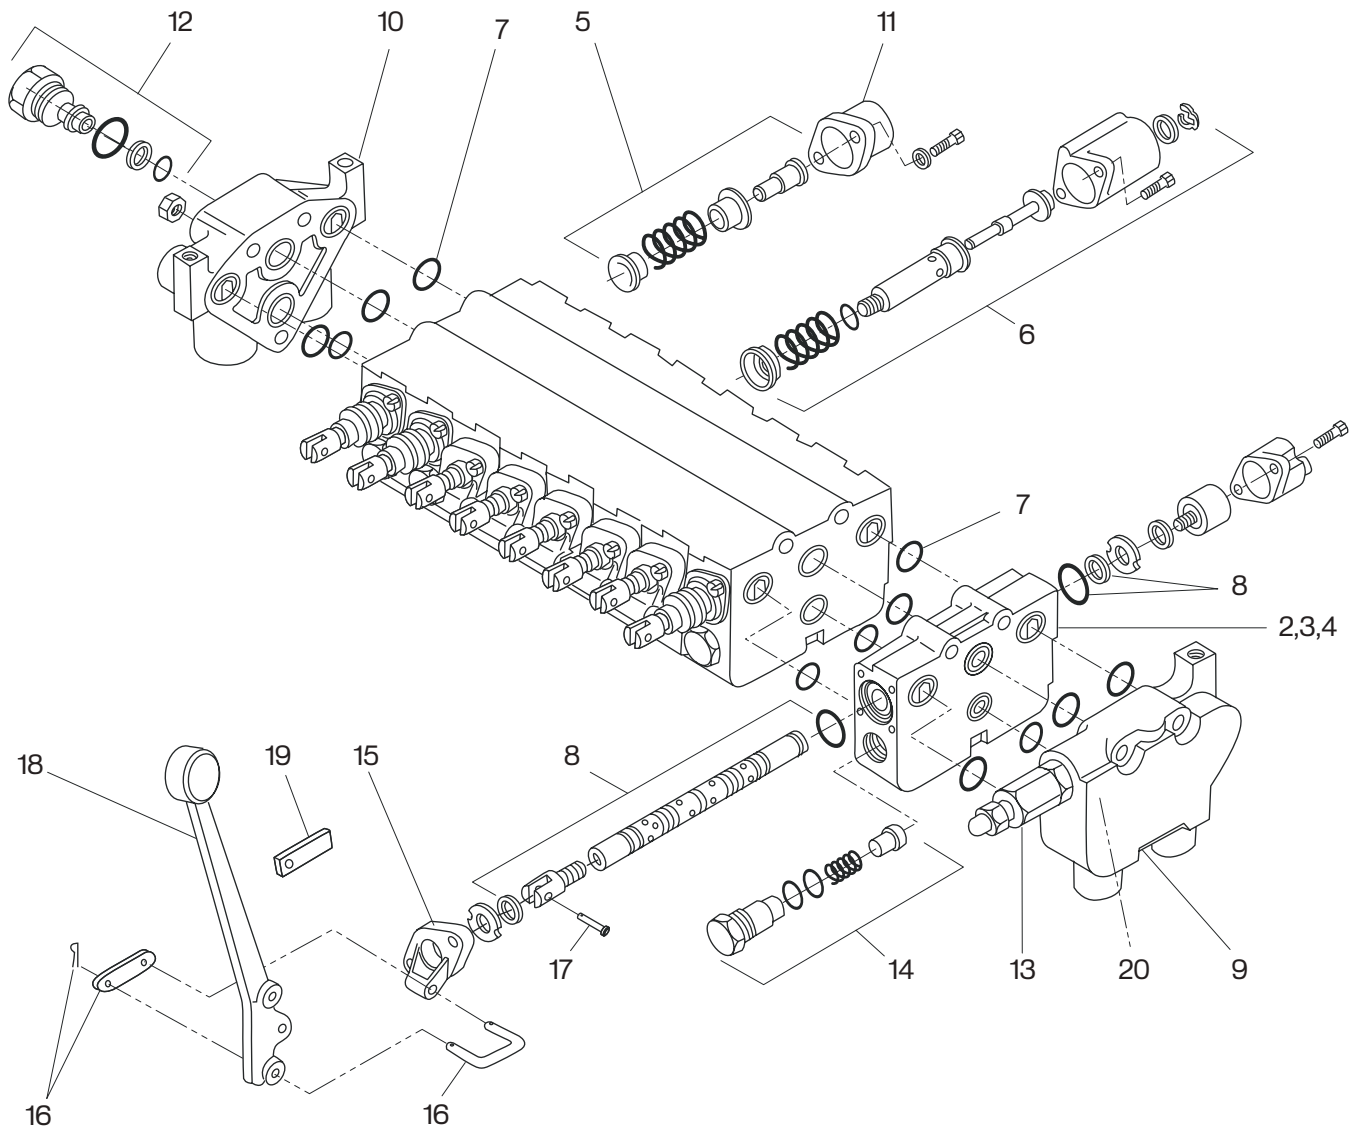


Figure 7-21 Main Valve Manifold Detail

Main Valve Manifold Detail

Item No.	Part Number	Qty.	Description	Remarks
GRP	851161		Assembly, Valve, 9 Section w/Float	
2	910054	6	Valve Section, Spring Return	
3	910052	2	Valve Section, Detented	
4	910054FLS	1	Valve Section, Float	
5	901014	6	Spring Center Kit	
6	141050	1	Float Positioner Kit	
REF	901007	2	Detent Kit	
7	910062	10	Seal Kit, Valve Section	
8	910059	9	Seal Kit, Valve Spool	
REF	910065	A/R	Seal Kit, Relief Valve	Not Shown
9	910055	1	Cover, Valve Inlet	
10	910056	1	Cover, Valve Outlet	
11	141040	9	Cap, Valve Spool Cover	
12	901002	1	Power Beyond Sleeve	
13	901009	1	Valve, Main Relief	
14	141020	9	Valve & Plug, Anticavitation	
15	910058	1	Bracket, Valve Lever Mount	
16	901010	9	Link Assy, Valve Lever	
17	350080	9	Pin, Clevis	
18	910060	9	Handle, Vertical	
19	852648	9	Tab, Auger Valve Reverse Lockout	
20	72371	1	FITT, Test 04MP-02PD	

INSTRUMENT PANEL - DASH (1 OF 2)

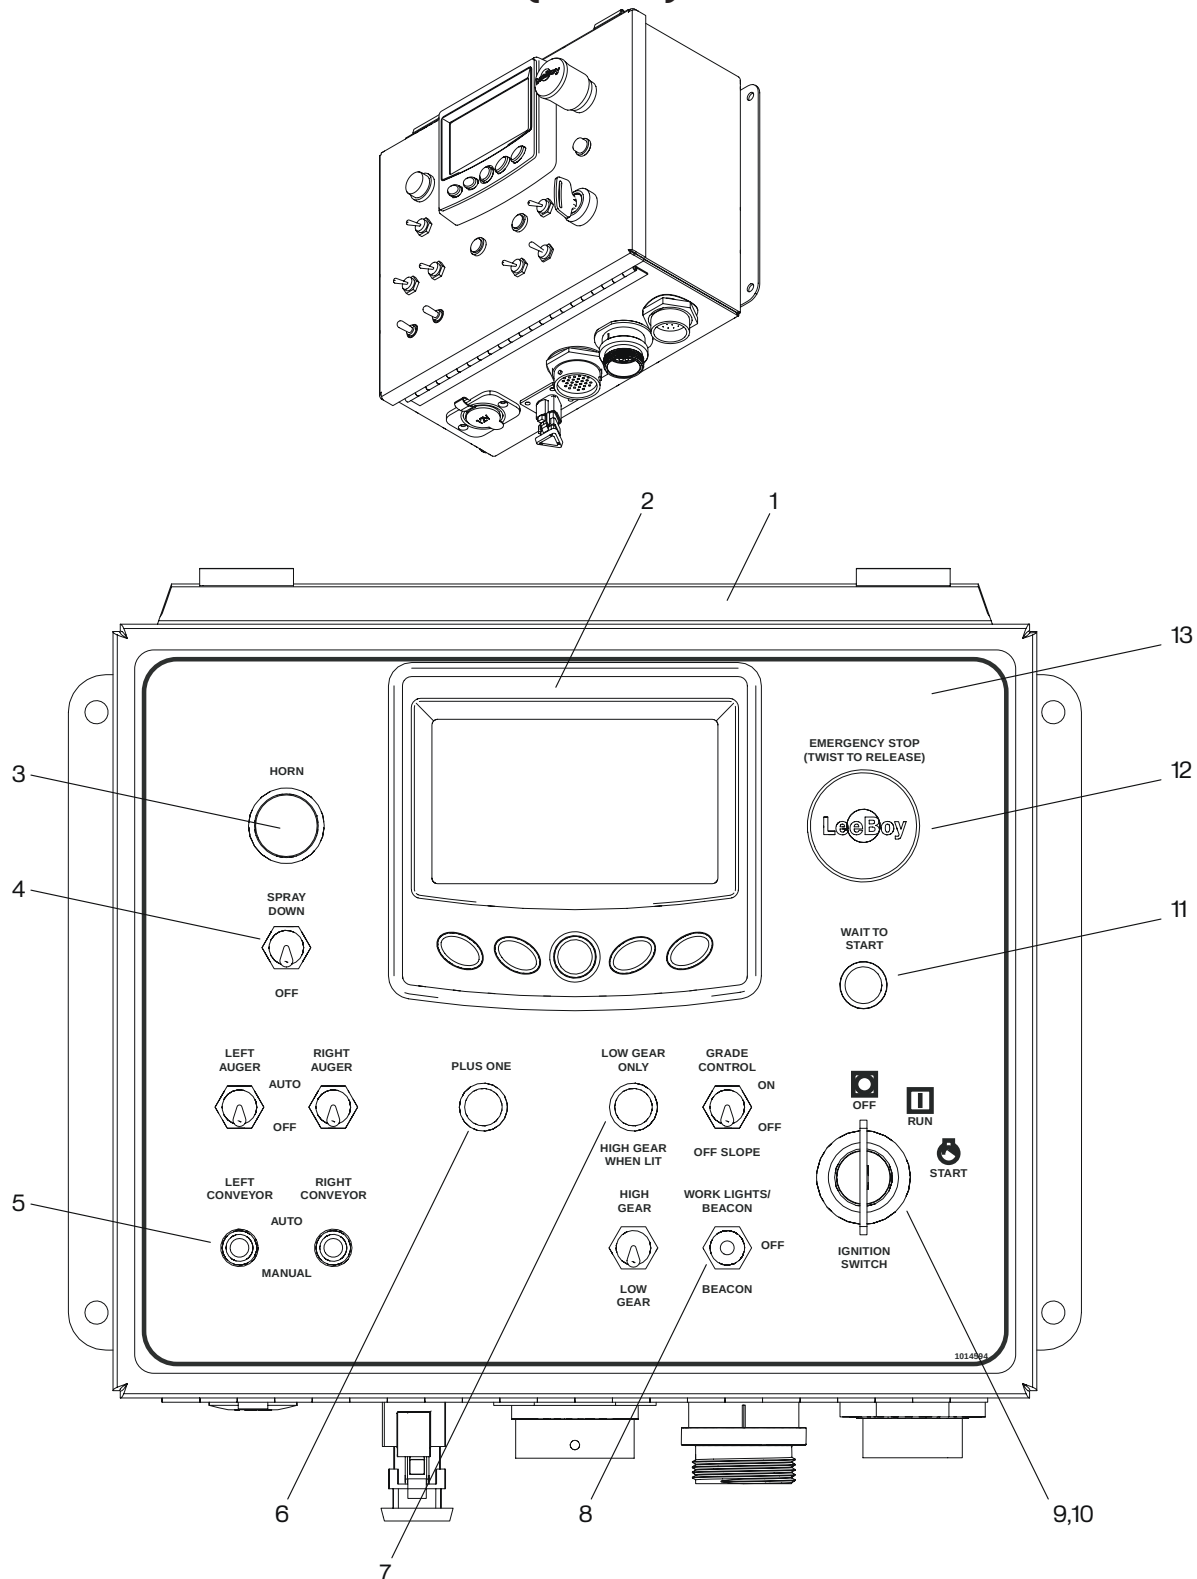


Figure 7-22 Instrument Panel - Dash (1 of 2)

Instrument Panel - Dash (1 of 2)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1013633		Assembly, Control Box, Kubota	
1	1013636	1	Enclosure, Control Box w/Holes , 8510D	
2	1013632	1	Display, PV480, T4F, 8510/8515 T4F	
3	982249	1	Switch, Push Button	
4	851391	5	Switch, Toggle, SPST, 2-POS	
5	900030	2	Switch, Toggle, Auto Conveyor	
6	31985	1	Light, Green, Dash, .500 Hole	
7	31986	1	Light, Blue, Dash, .500 Hole	
8	851090613	1	Switch, Toggle, SPDT, 3-POS	
9	39146-14	1	Switch, Ignition w/Heat St	
10	982008-04	1	Key, Ignition, Kubota, 300B, 635	
11	1010500	1	Light, Indicator, White	
12	1010672	1	Switch, Emergency Stop, 1-NC	
13	1014594	1	Decal, Operator Control Panel	

INSTRUMENT PANEL - DASH (2 OF 2)

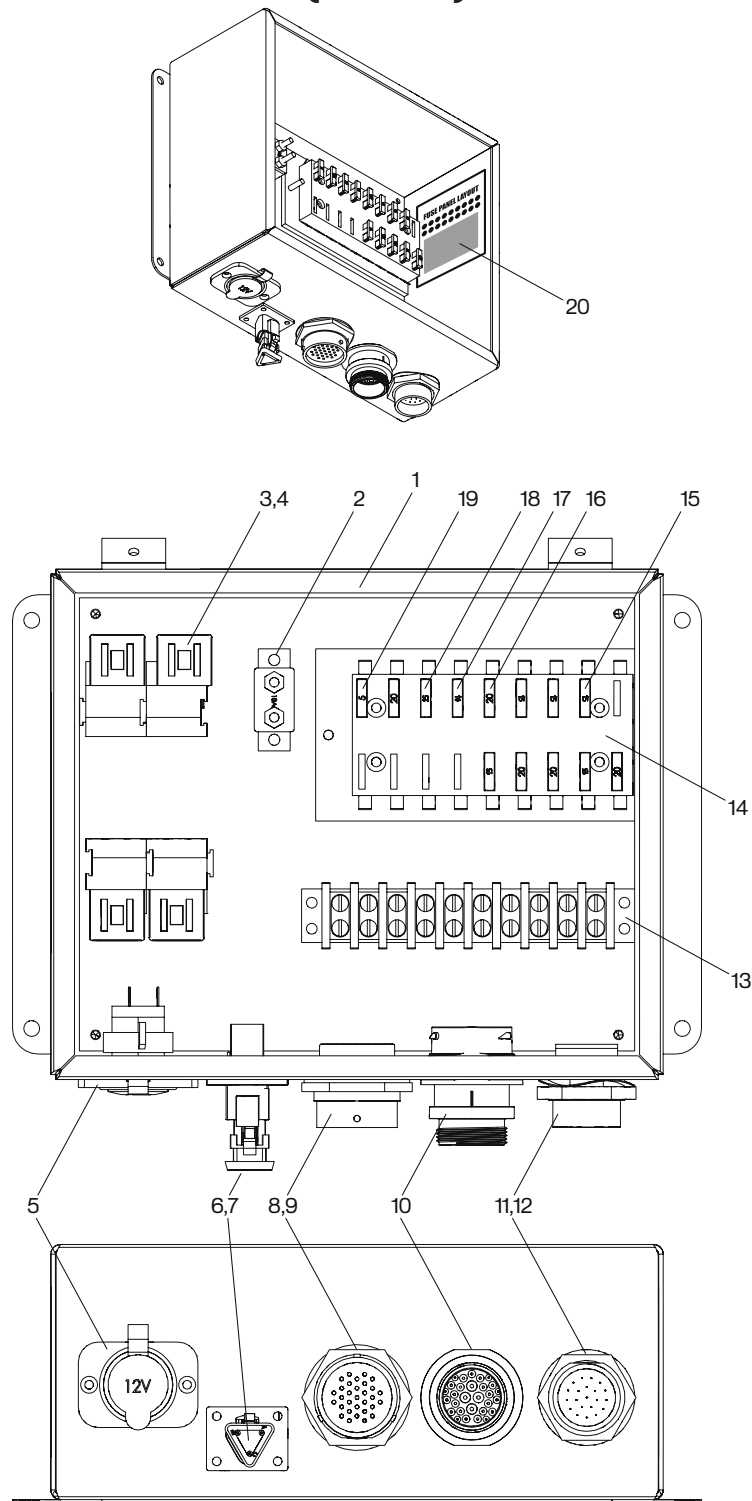


Figure 7-23 Instrument Panel - Dash (2 of 2)

Instrument Panel - Dash (2 of 2)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1013633		Assembly, Control Box, Kubota	
1	1013636	1	Enclosure, Control Box w/Holes , 8510D	
2	986546	1	Circuit Breaker, 10A	
3	36086	4	Bracket, Relay Mount	
4	36085	4	Relay, 12VDC, SPDT, 40A, 5 Pin	
5	1011147	1	Lighter, Cigarette, 12V	
6	1010657	1	Connector, 03-Pin, Panel Mount, DT04-3P	Deutsch
7	989179	1	Connector, 03-Pin, Plug w/120 Ohm	Deutsch
8	981916	1	Connector, 31-Pin, Receptacle, HD34-24-31	Deutsch
9	981916-01	1	Connector, Nut, 24 Shell	Deutsch
10	1011851	1	Connector, 29-Pin, HDP24-24-29PE-L15	Deutsch
11	1002564	1	Connector, 21-Pin, Receptacle, HDP	Deutsch
12	1002564-02	1	Nut, 18 Shell, Plastic	Deutsch
13	987982	1	Terminal Block, 1- Gang	
14	685060	1	Fuse Block, 18 Gang, ATC	
15	36341	4	Fuse, 15A, ATC	
16	36342	5	Fuse, 20A, ATC	
17	36340	1	Fuse, 10A, ATC	
18	36218	1	Fuse, 25A, ATC	
19	36746	1	Fuse, 5A, ATC	
20	1014681	1	Decal, Control Panel, Fuse	

SCREED NON-SLOPING OVERVIEW

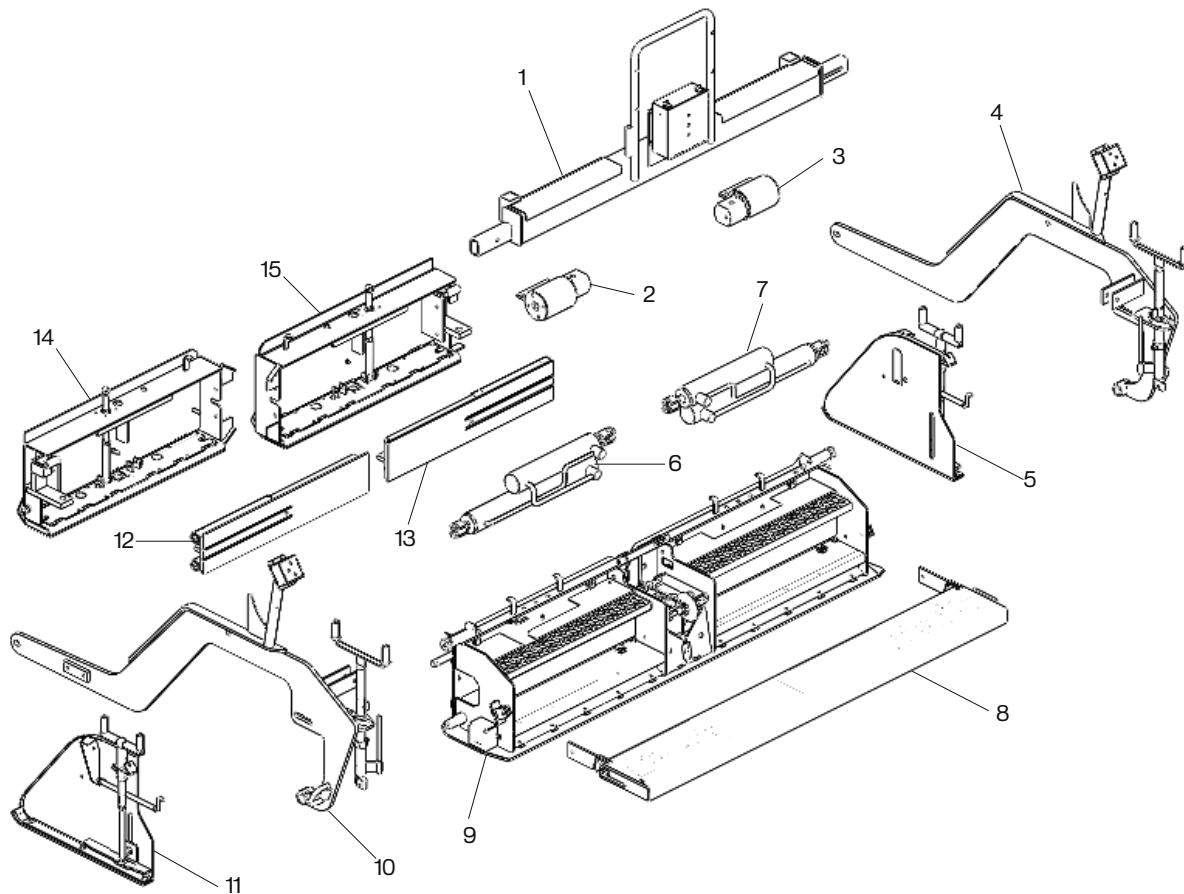


Figure 7-24 Screed Non-Sloping Overview

Screed Non-Sloping Overview

Item No.	Ref. Figure	Description	Remarks
1	7-39	Screed Citrus Tank and Electric Heat Control Box	
2	7-40	Screed Vibrator Assembly (Left)	
3	7-40	Screed Vibrator Assembly (Right)	
4	7-38	Screed Pull Arm Assembly (Right)	
5	7-36	Screed Endgate Assembly (Right)	
6	7-43	Screed Miscellaneous Components	
7	7-43	Screed Miscellaneous Components	
8	7-41	Screed Walk Board Assembly	
9	7-25	Screed Frame Non-Sloping	See 7-30 for Electric
10	7-37	Screed Pull Arm Assembly (Left)	
11	7-35	Screed Endgate Assembly (Left)	
12	7-42	Screed Slide Plate Assembly	
13	7-42	Screed Slide Plate Assembly	
14	7-26	Screed Extension Single Adjuster (Left)	See 7-31 for Electric
REF	7-28	Screed Extension Double Adjuster (Left)	See 7-33 for Electric
15	7-27	Screed Extension Single Adjuster (Right)	See 7-32 for Electric
REF	7-29	Screed Extension Double Adjuster (Right)	See 7-34 for Electric

SCREED FRAME NON-SLOPING - PROPANE

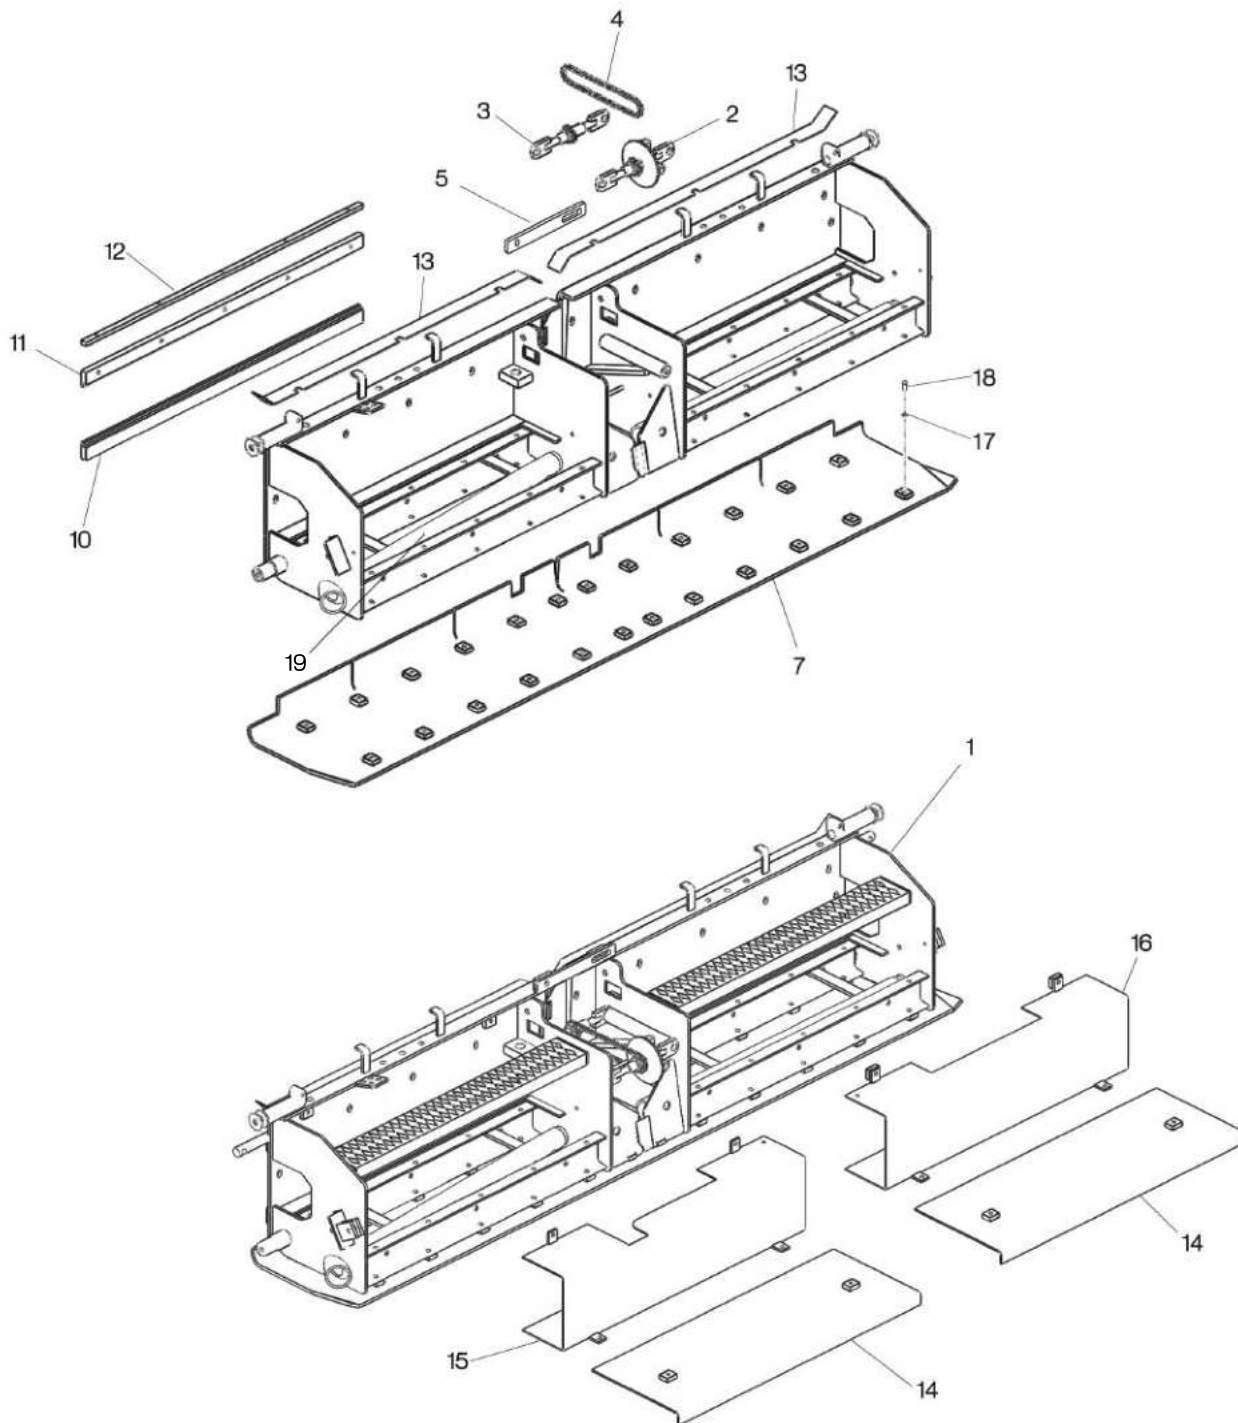


Figure 7-25 Screed Frame Non-Sloping - Propane

Screed Frame Non-Sloping - Propane

Item No.	Part Number	Qty.	Description	Remarks
1	1000251SRV	1	Group, Screed Base 8500 Series Prop	Includes item 14, 15, 16
2	870182	1	Assembly, Crown & Valley, Rear	
3	870172	1	Assembly, Crown & Valley, Front	
4	870190	1	Chain, Roller, 40 x 52 Pitch	
5	988376	1	Locking Bar, Crown And Valley	
7	981724SRV	1	Wear Plate, 8' Bullnose	
10	855783	1	Bottom Rail, 8500 Screed Extension	
11	855784	1	Top Rail, 8500 Screed Extension	
12	988556	1	Bar Jack, Screed Slide	
13	855562	1	Bar, .125 x 2.00 x 44.50, Notches	RH or (Left)
14	851201SRV	2	Cover, Screed Plate Access	
15	851204SRV	1	Cover, Screed Extension Cylinder (Left)	
16	851203SRV	1	Cover, Screed Extension Cylinder (Right)	
17	302-6	24	Washer, Lock, 3/8	
18	100-6-24-16-5F	24	CSHH, 3/8-24 x 1.00, GR5, FT	
19	851197-1	2	Pipe, Screed Burner, Med	
REF	1004918	1	Screed, 8515 LP, 4 Adjusters Extensions	Option

EXTENSION SINGLE ADJUST ASSEMBLY - PROPANE (LEFT)

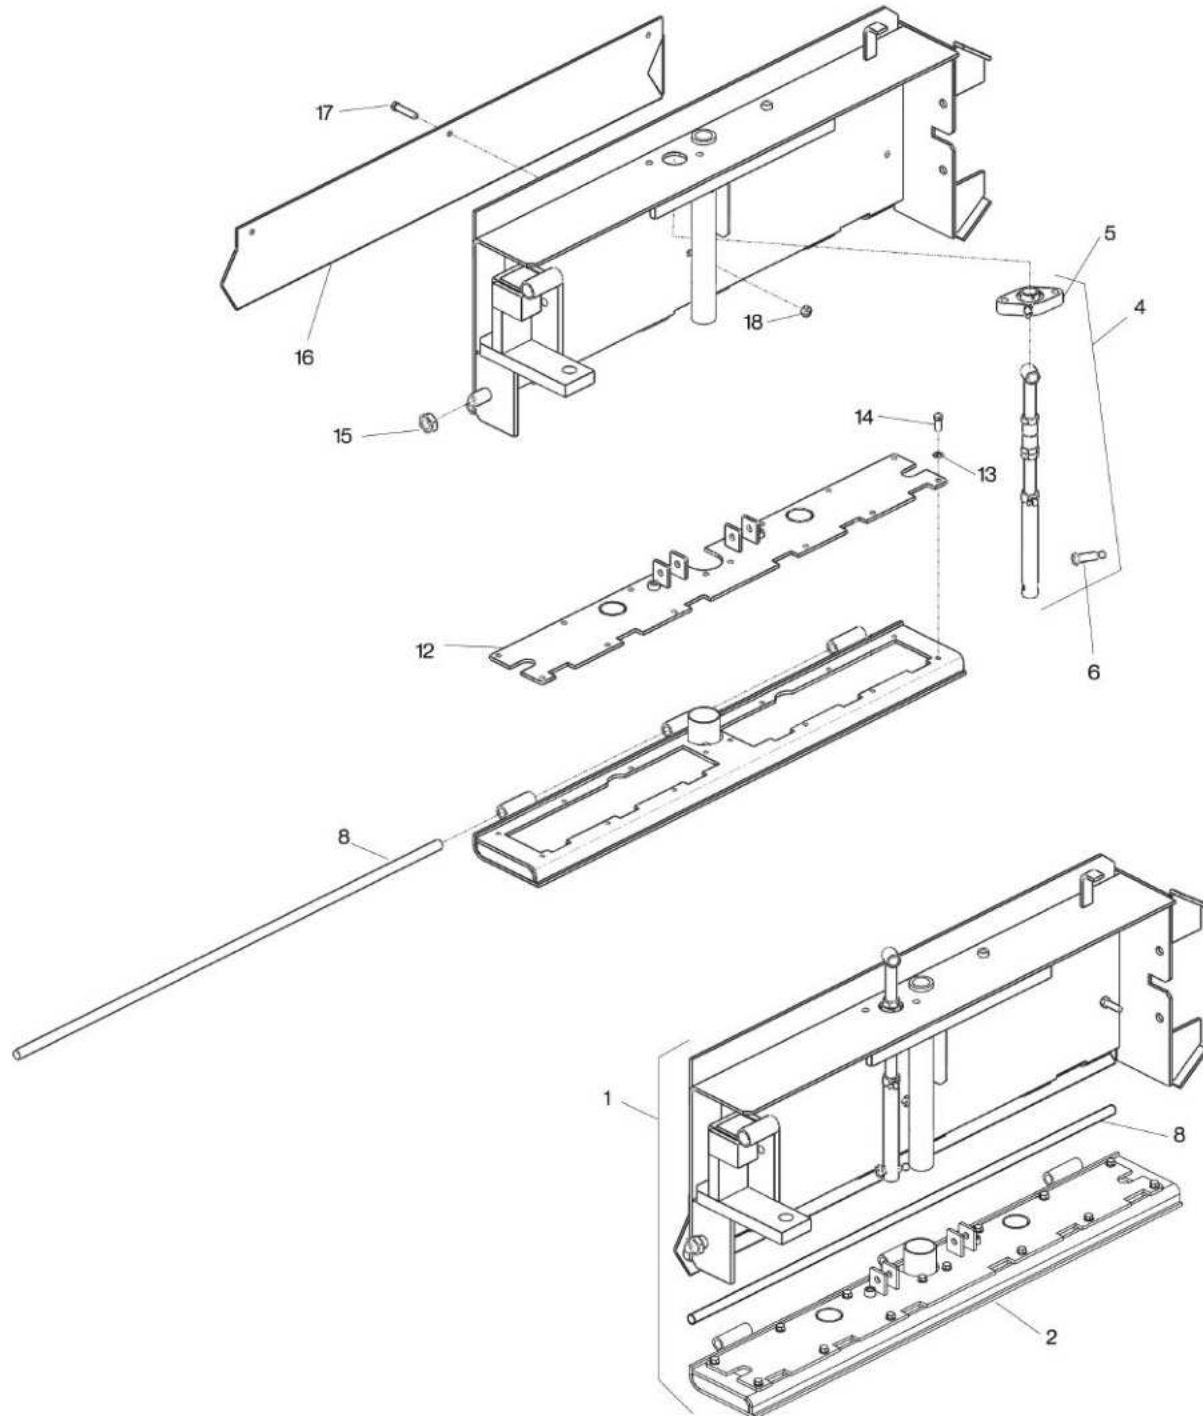


Figure 7-26 Extension Single Adjust Assembly - Propane (Left)

Extension Single Adjust Assembly - Propane (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	859394SRV	1	Assembly, Insert, Propane, 8500, (Left)	
2	851182SRV	1	Assembly, Heat Box, Propane, Single Adjust	
4	851185SRV	1	Assembly Extension Adjusting Screw	
5	870030	1	Bearing, Screed Flight Screw	
6	870279	1	CSSH, 3/8-16 Shoulder Socket	
8	854447SRV	1	Round, .688 x 43.50, CRS	
12	988291	1	Assembly, Heat Box Cover, Single Adjusting	
13	302-6	22	Washer, Lock, 3/8	
14	100-6-24-16-8F	22	CSHH, 3/8-24 x 1.00, GR8, FT	
15	987396	1	Nut, Lock, Nylon, 7/8-9 UNC-2B	
16	851180LSRV	1	Guard, Screed Extension Hinge (Left)	
17	100-7-14-20-5	3	CSHH, 7/16-14 x 1.25, GR5	
18	200-7-14-5	3	Nut, Hex, 7/16-14, GR5	
19	851600-1	A/R	Extension Burner Pipe	

EXTENSION SINGLE ADJUST ASSEMBLY - PROPANE (RIGHT)

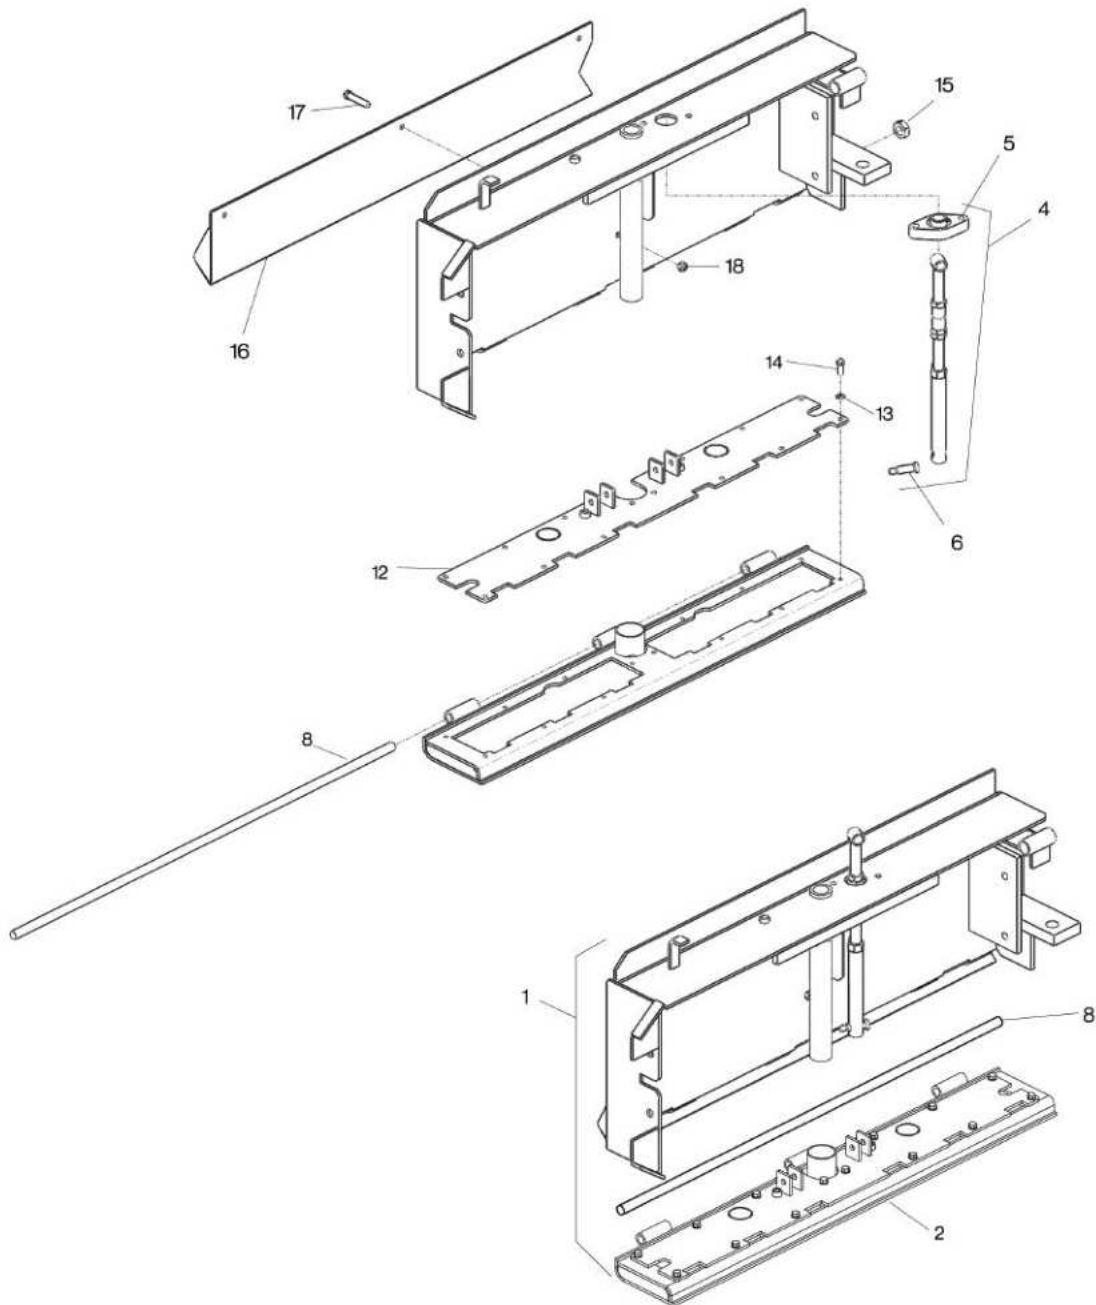


Figure 7-27 Extension Single Adjust Assembly - Propane (Right)

Extension Single Adjust Assembly - Propane (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	859395SRV	1	Assembly, Insert, Propane, 8500 (Right)	
2	851182SRV	1	Assembly, Heat Box, Propane, Single Adjusting	
4	851185SRV	1	Assembly, Extension Adjusting Screw	
5	870030	1	Bearing, Screed Flight Screw	
6	870279	1	CSSH, 3/8-16 Shoulder Socket	
8	854447	1	Round, .688 x 43.50, CRS	
12	988291	1	Assembly, Heat Box Cover, Single Adjusting	
13	302-6	22	Washer, Lock, 3/8	
14	100-6-24-16-8F	22	CSHH, 3/8-24 x 1.00, GR8, FT	
15	987396	1	Nut, Lock, Nylon, 7/8-9 UNC-2B	
16	851180RSRV	1	Guard, Screed Extension Hinge (Right)	
17	100-7-14-20-5	3	CSHH, 7/16-14 x 1.25, GR5	
18	200-7-14-5	3	Nut, Hex, 7/16-14, GR5	
19	851600-1	A/R	Extension Burner Pipe	

EXTENSION DOUBLE ADJUST ASSEMBLY - PROPANE (LEFT)

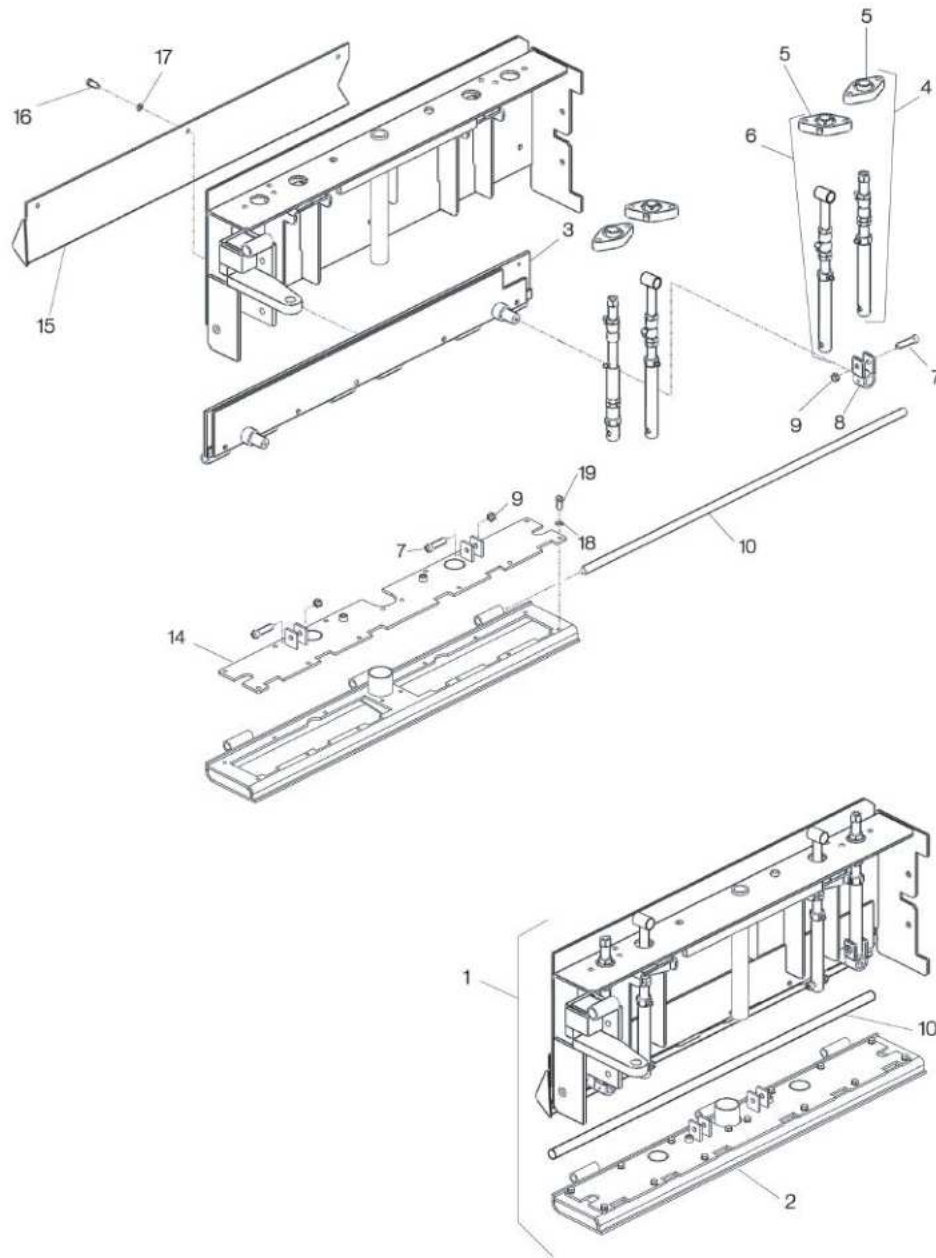


Figure 7-28 Extension Double Adjust Assembly - Propane (Left)

Extension Double Adjust Assembly - Propane (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	983409-1SRV	1	Assembly, Insert, Propane (Left)	Without Slope
2	988318SRV	1	Assembly, Heat Box, Propane, 4 Adjust	
3	1002735SRV	1	Assembly, Hinge	
4	985556SRV	1	Assembly, Slide Adjust	
5	870030	4	Bearing, Screed Flight Screw	
6	851185SRV	1	Assembly, Extension Adjusting Screw	
7	870279	4	CSSH, 3/8-16 Shoulder Socket	
8	1002715SRV	1	Adjuster Mount	
9	204-6-16-5	4	Nut, Lock, Stover 3/8-16, GR5	
10	854447SRV	1	Round, .688 x 43.50, CRS	
14	988292SRV	1	Assembly, Heat Box Cover, 4 Adjust	
15	851180LSRV	1	Guard, Screed Extension Hinge (Left)	
16	100-6-16-32-5	3	CSHH, 3/8-16 x 2.00, GR5	
17	302-6	3	Washer, Lock, 3/8	
18	302-4	22	Washer, Lock, 1/4	
19	100-4-20-16-5F	22	CSHH, 1/4-20 x 1.00, GR5, FT	
20	854571SRV	A/R	Pipe, Screed Extension Burner	

EXTENSION DOUBLE ADJUST ASSEMBLY - PROPANE (RIGHT)

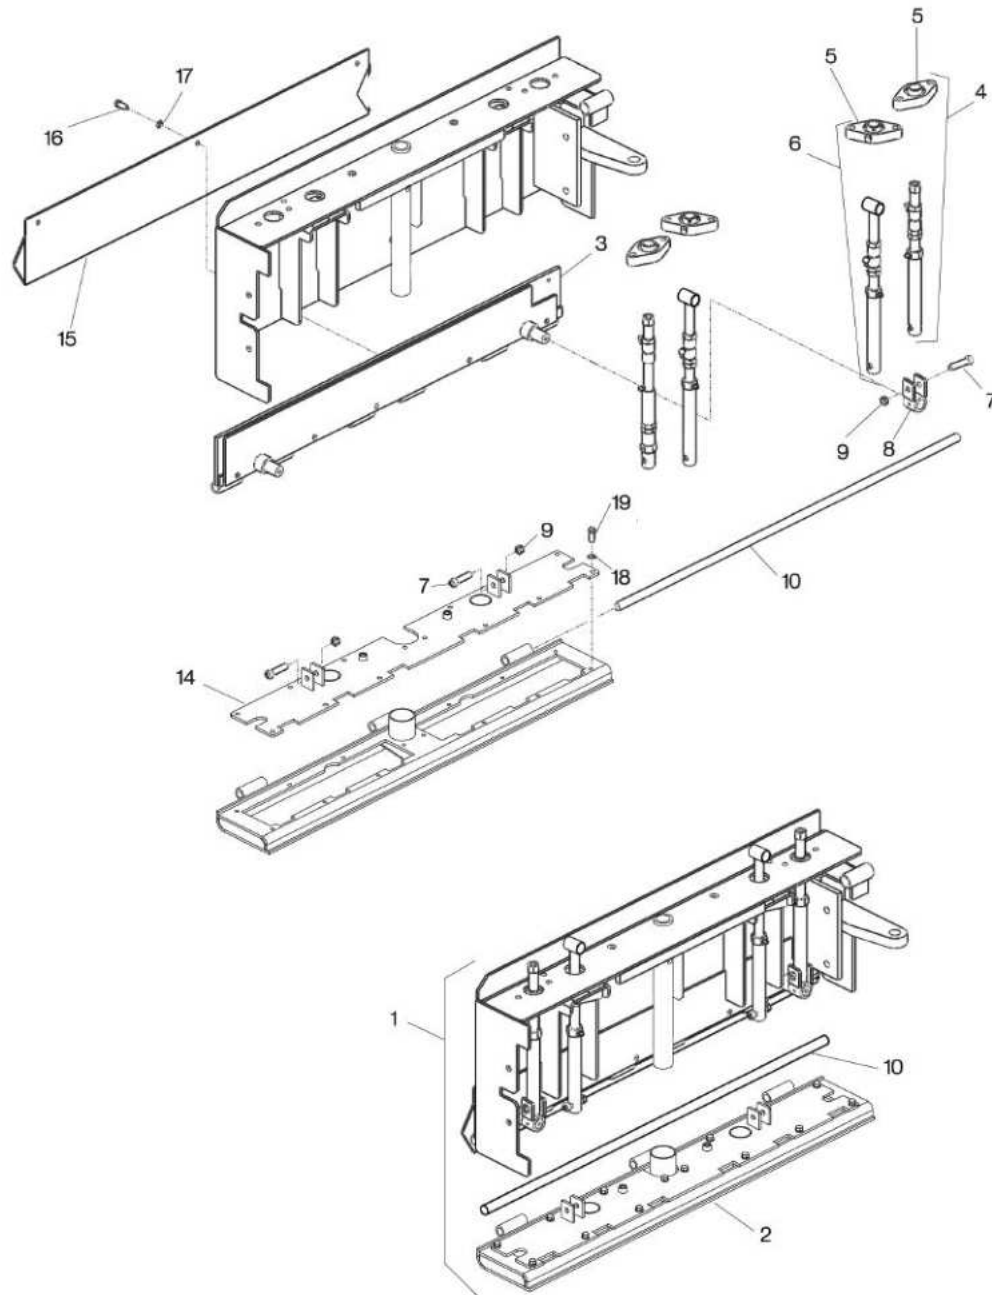


Figure 7-29 Extension Double Adjust Assembly - Propane (Right)

Extension Double Adjust Assembly - Propane (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	983410-1SRV	1	Assembly, Insert, Propane (Right)	Without Slope
2	988318SRV	1	Assembly, Heat Box, Propane, 4 Adjust	
3	1002736SRV	1	Assembly, Hinge	
4	985556SRV	1	Assembly, Slide Adjust	
5	870030	4	Bearing, Screed Flight Screw	
6	851185SRV	1	Assembly, Extension Adjusting Screw	
7	870279	4	CSSH, 3/8-16 Shoulder Socket	
8	1002715SRV	1	Adjuster Mount	
9	204-6-16-5	4	Nut, Lock, Stover, 3/8-16, GR5	
10	854447SRV	1	Round, .688 x 43.50, CRS	
14	988292SRV	1	Assembly, Heat Box Cover, 4 Adjust	
15	851180RSRV	1	Guard, Screed Extension Hinge (Right)	
16	100-6-16-32-5	3	CSHH, 3/8-16 x 2.00, GR5	
17	302-6	3	Washer, Lock, 3/8	
18	302-4	22	Washer, Lock, 1/4	
19	100-4-20-16-5F	22	CSHH, 1/4-20 x 1.00, GR5, FT	
20	854571SRV	A/R	Pipe, Screed Extension Burner	

SCREED FRAME NON-SLOPING - ELECTRIC

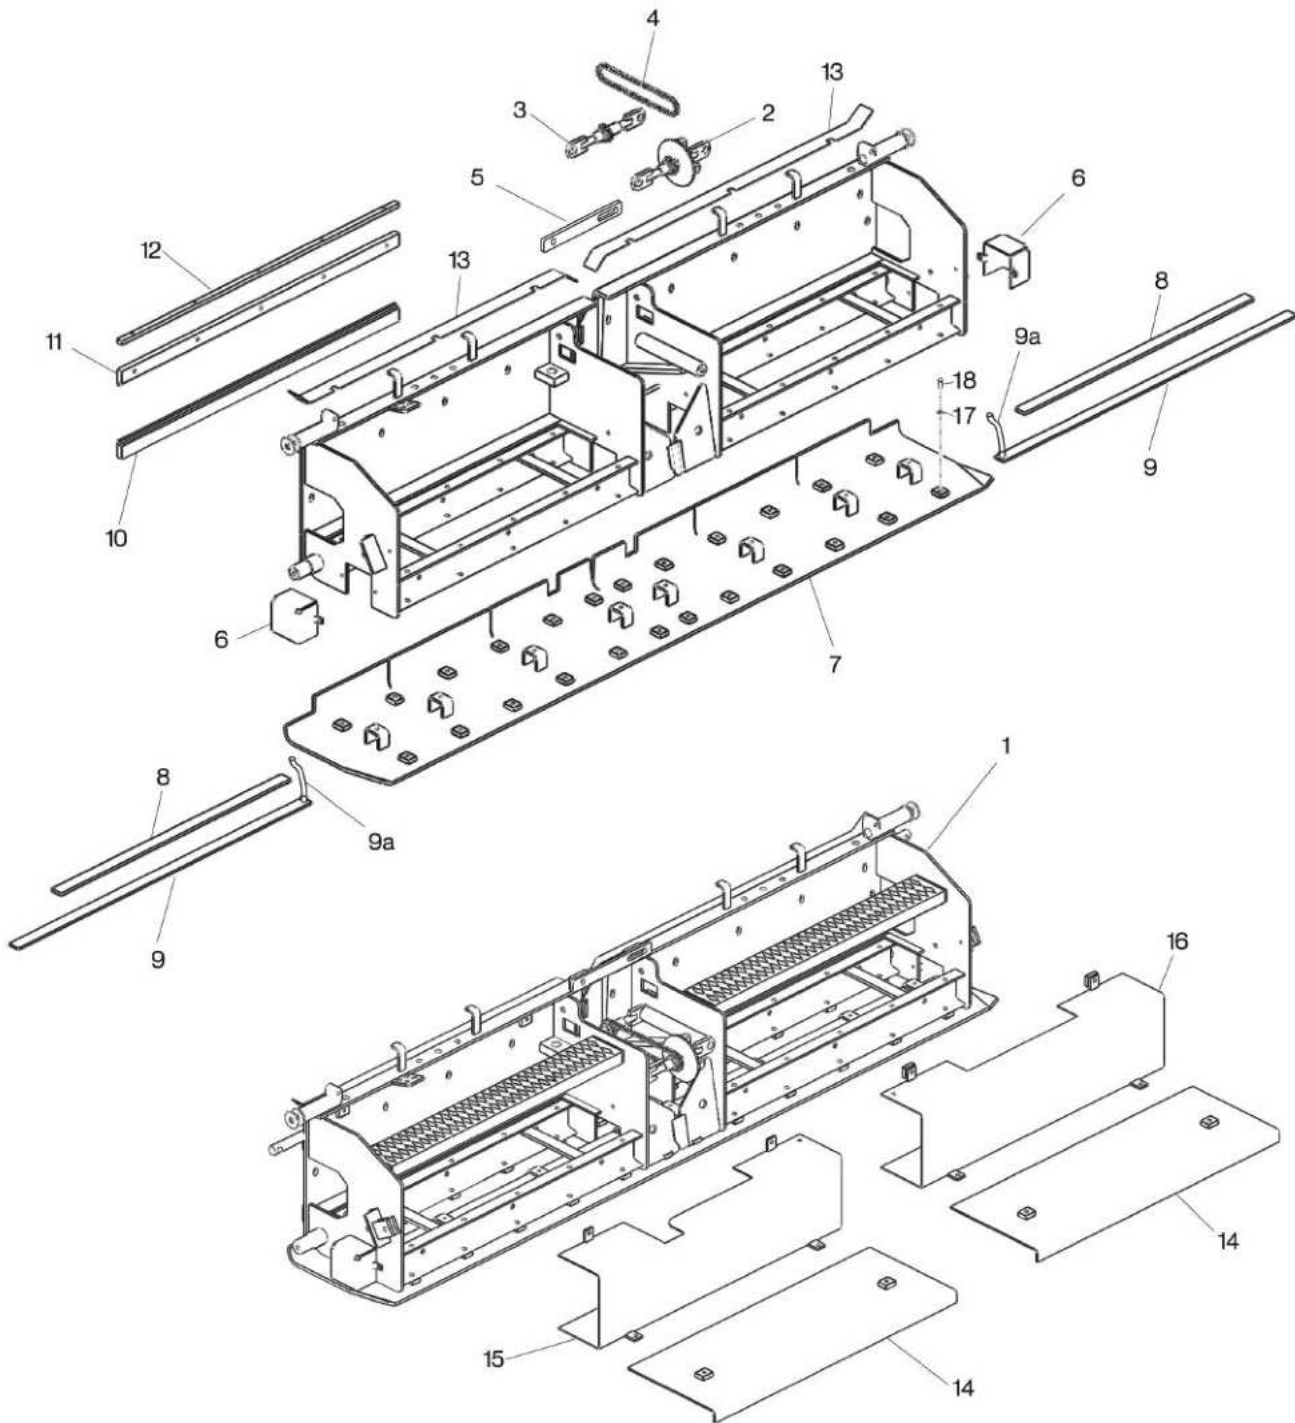


Figure 7-30 Screed Frame Non-Sloping - Electric

Screed Frame Non-Sloping - Electric

Item No.	Part Number	Qty.	Description	Remarks
1	989377SRV	1	Group, Screed Base 8500 Series Electric	Includes item 14, 15, 16
2	870182	1	Assembly, Crown & Valley, Rear	
3	870172	1	Assembly, Crown & Valley, Front	
4	870190	1	Chain, Roller, 40 x 52 Pitch	
5	988376	1	Locking Bar, Crown And Valley	
6	985124	2	Cover, Elements, Screed Base	
7	987216SRV	1	Assembly, Wear Plate, Electric	
8	985121	2	Bar, .375 x 1.50 x 42	
9	987886SRV	2	Element, Heater, Screed, 46"	
10	855783	1	Bottom Rail, 8500 Screed Extension	
11	855784	1	Top Rail, 8500 Screed Extension	
12	988556	1	Bar Jack, Screed Slide	
13	855562	1	Bar, .125 x 2.00 x 44.50, Notches	RH or (Left)
14	851201SRV	2	Cover, Screed Plate Access	
15	851204SRV	1	Cover, Screed Extension Cylinder	
16	851203SRV	1	Cover, Screed Extension Cylinder	
17	302-6	24	Washer, Lock, 3/8	
18	100-6-24-16-5F	24	CSHH, 3/8-24 x 1.00, GR5, FT	

EXTENSION SINGLE ADJUST ASSEMBLY - ELECTRIC (LEFT)

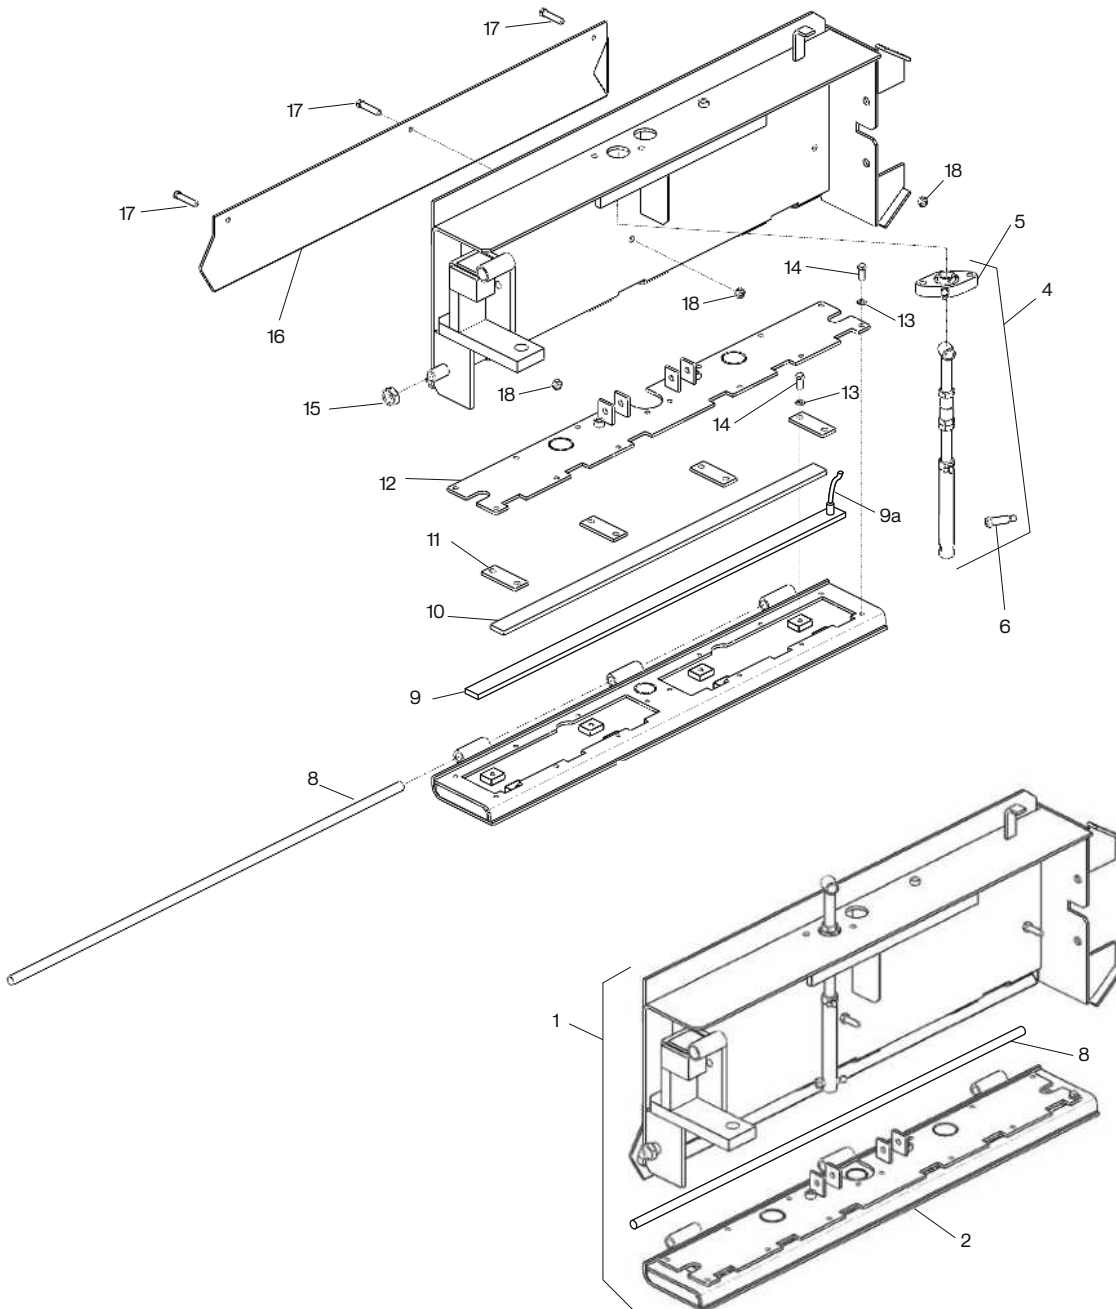


Figure 7-31 Extension Single Adjust Assembly - Electric (Left)

Extension Single Adjust Assembly - Electric (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	985561SRV	1	Assembly, Insert, Electric, 8500 (Left)	
2	987872SRV	1	Assembly, Heat Box, Electric, Single Adjust	
4	851185SRV	1	Assembly, Extension Adjust Screw	
5	870030	1	Bearing, Screed Flight Screw	
6	870279	1	CSSH, 3/8-16 Shoulder Socket	
8	854447SRV	1	Round, .688 x 43.50, CRS	
9	987890SRV	1	Element, Heater, Screed, 40"	
10	985120	1	Bar, .250 x 1.50 x 36	
11	985123	4	Clamp, Element, Screed Extension	
12	988291	1	Assembly, Heat Box Cover, Single Adjust	
13	302-6	22	Washer, Lock, 3/8	
14	100-6-24-16-8F	22	CSHH, 3/8-24 x 1.00, GR8, FT	
15	987396	1	Nut, Nylon Lock, 7/8-9 UNC-2B	
16	851180LSRV	1	Guard, Screed Extension Hinge (Left)	
17	100-5-18-20-5	3	CSHH, 5/16-14 x 1.25, GR5	
18	200-5-18-5	3	Nut, Hex, 5/16-14, GR5	

EXTENSION SINGLE ADJUST ASSEMBLY - ELECTRIC (RIGHT)

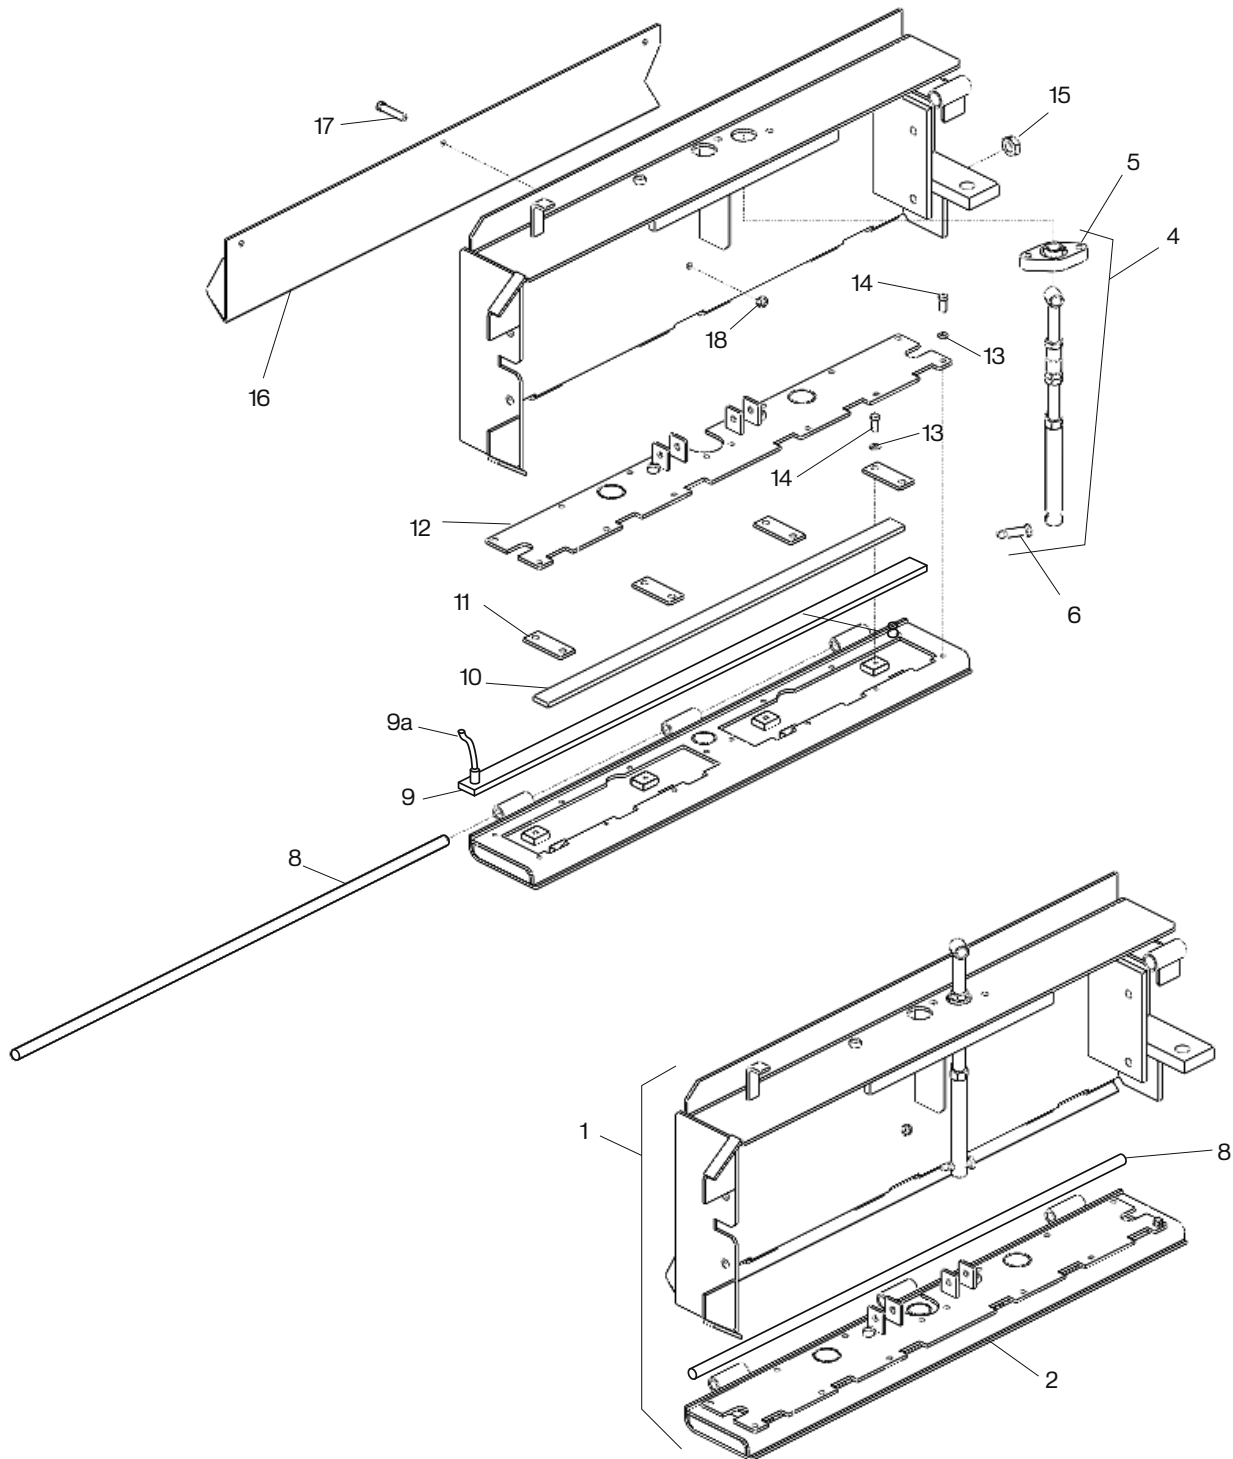


Figure 7-32 Extension Single Adjust Assembly - Electric (Right)

Extension Single Adjust Assembly - Electric (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	985562SRV	1	Assembly, Insert, Electric, 8500 (Right)	
2	987872SRV	1	Assembly, Heat Box, Electric, Single Adjust	
4	851185SRV	1	Assembly, Extension Adjust Screw	
5	870030	1	Bearing, Screed Flight Screw	
6	870279	1	CSSH, 3/8-16 Shoulder Socket	
8	854447	1	Round, .688 x 43.50, CRS	
9	987890SRV	1	Element, Heater, Screed, 40"	
10	985120	1	Bar, .250 x 1.50 x 36	
11	985123	4	Clamp, Element, Screed Extension	
12	988291	1	Assembly, Heat Box Cover, Single Adjust	
13	302-6	22	Washer, Lock, 3/8	
14	100-6-24-16-8F	22	CSHH, 3/8-24 x 1.00, GR8, FT	
15	987396	1	Nut, Nylon Lock, 7/8-9 UNC-2B	
16	851180RSRV	1	Guard, Screed Extension Hinge (Right)	
17	100-5-18-20-5	3	CSHH, 5/16-14 x 1.25, GR5	
18	200-5-18-5	3	Nut, Hex, 5/16-14	

EXTENSION DOUBLE ADJUST ASSEMBLY - ELECTRIC (LEFT)

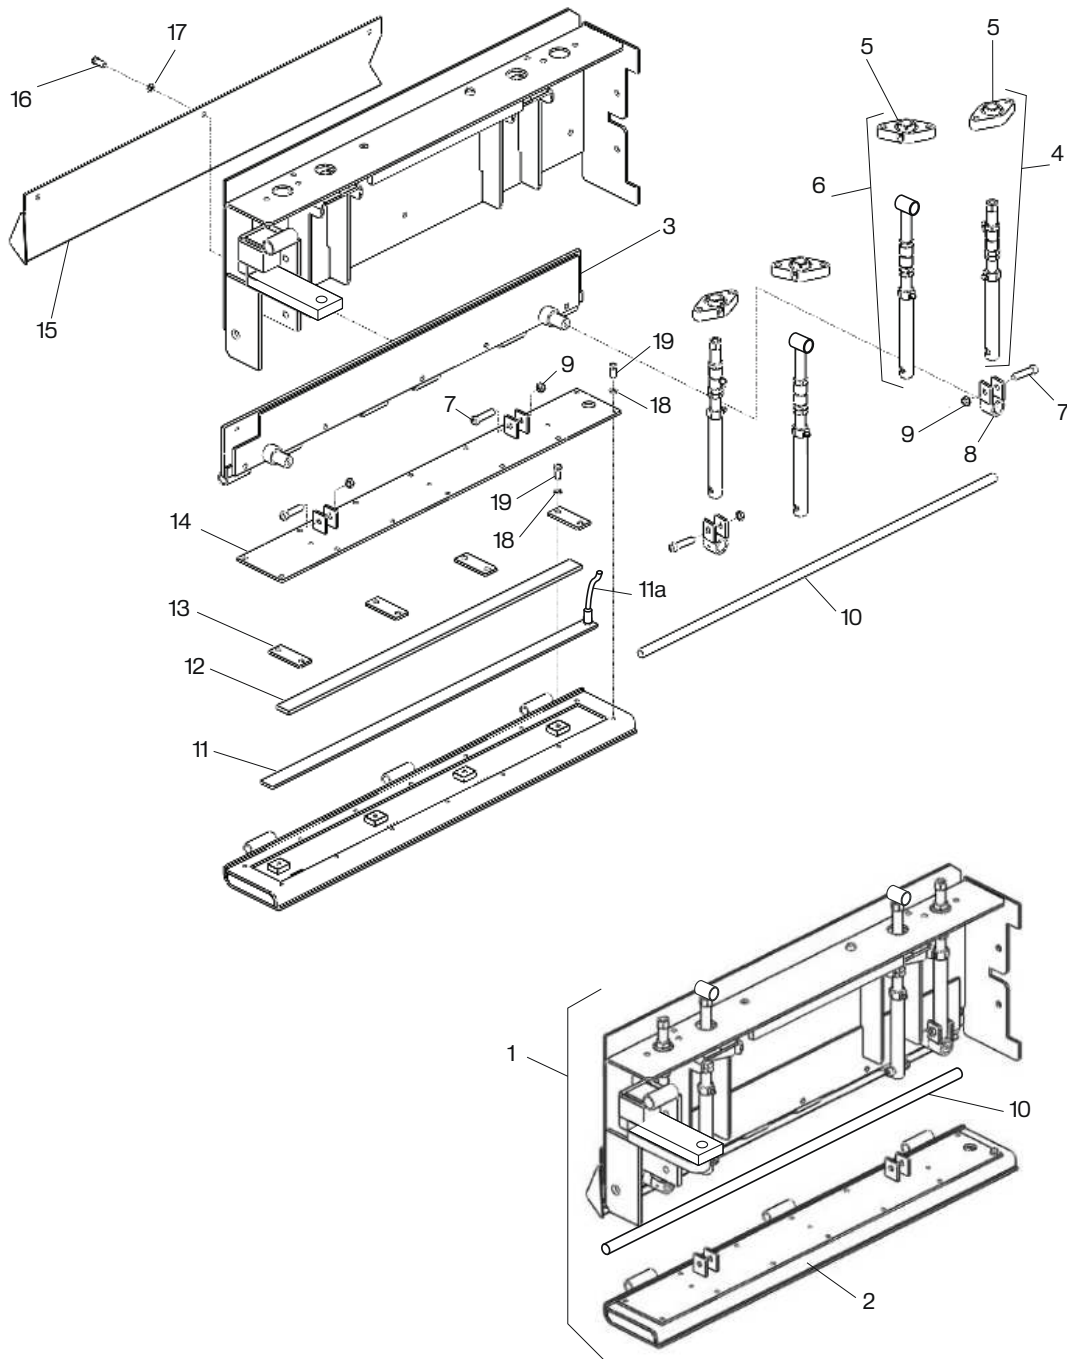


Figure 7-33 Extension Double Adjust Assembly - Electric (Left)

Extension Double Adjust Assembly - Electric (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	984305-1SRV	1	Assembly, Insert, Electric (Left)	Without Slope
2	988319SRV	1	Assembly, Heat Box, Electric, 4 Adjust	
3	1002735SRV	1	Hinge Assembly	
4	985556SRV	1	Assembly, Slide Adjust	
5	870030	4	Bearing, Screed Flight Screw	
6	851185SRV	1	Assembly, Extension Adjust Screw	
7	870279	4	CSSH, 3/8-16 Shoulder Socket	
8	1002715SRV	1	Adjuster Mount	
9	204-6-16-5	4	Nut, Lock, Stover, 3/8-16, GR5	
10	854447SRV	1	Round, .688 x 43.50, CRS	
11	987890SRV	1	Element, Heater, Screed, 40"	
12	985120	1	Bar, .250 x 1.50 x 36	
13	985123	4	Clamp, Element, Screed Extension	
14	988292SRV	1	Assembly, Heat Box Cover, 4 Adjust	
15	851180LSRV	1	Guard, Screed Extension Hinge (Left)	
16	100-6-16-32-5	3	CSHH, 3/8-16 x 2.00, GR5	
17	302-6	3	Washer, Lock, 3/8	
18	302-4	22	Washer, Lock, 1/4	
19	100-4-20-16-5F	22	CSHH, 1/4-20 x 1.00, GR5, FT	

EXTENSION DOUBLE ADJUST ASSEMBLY - ELECTRIC (RIGHT)

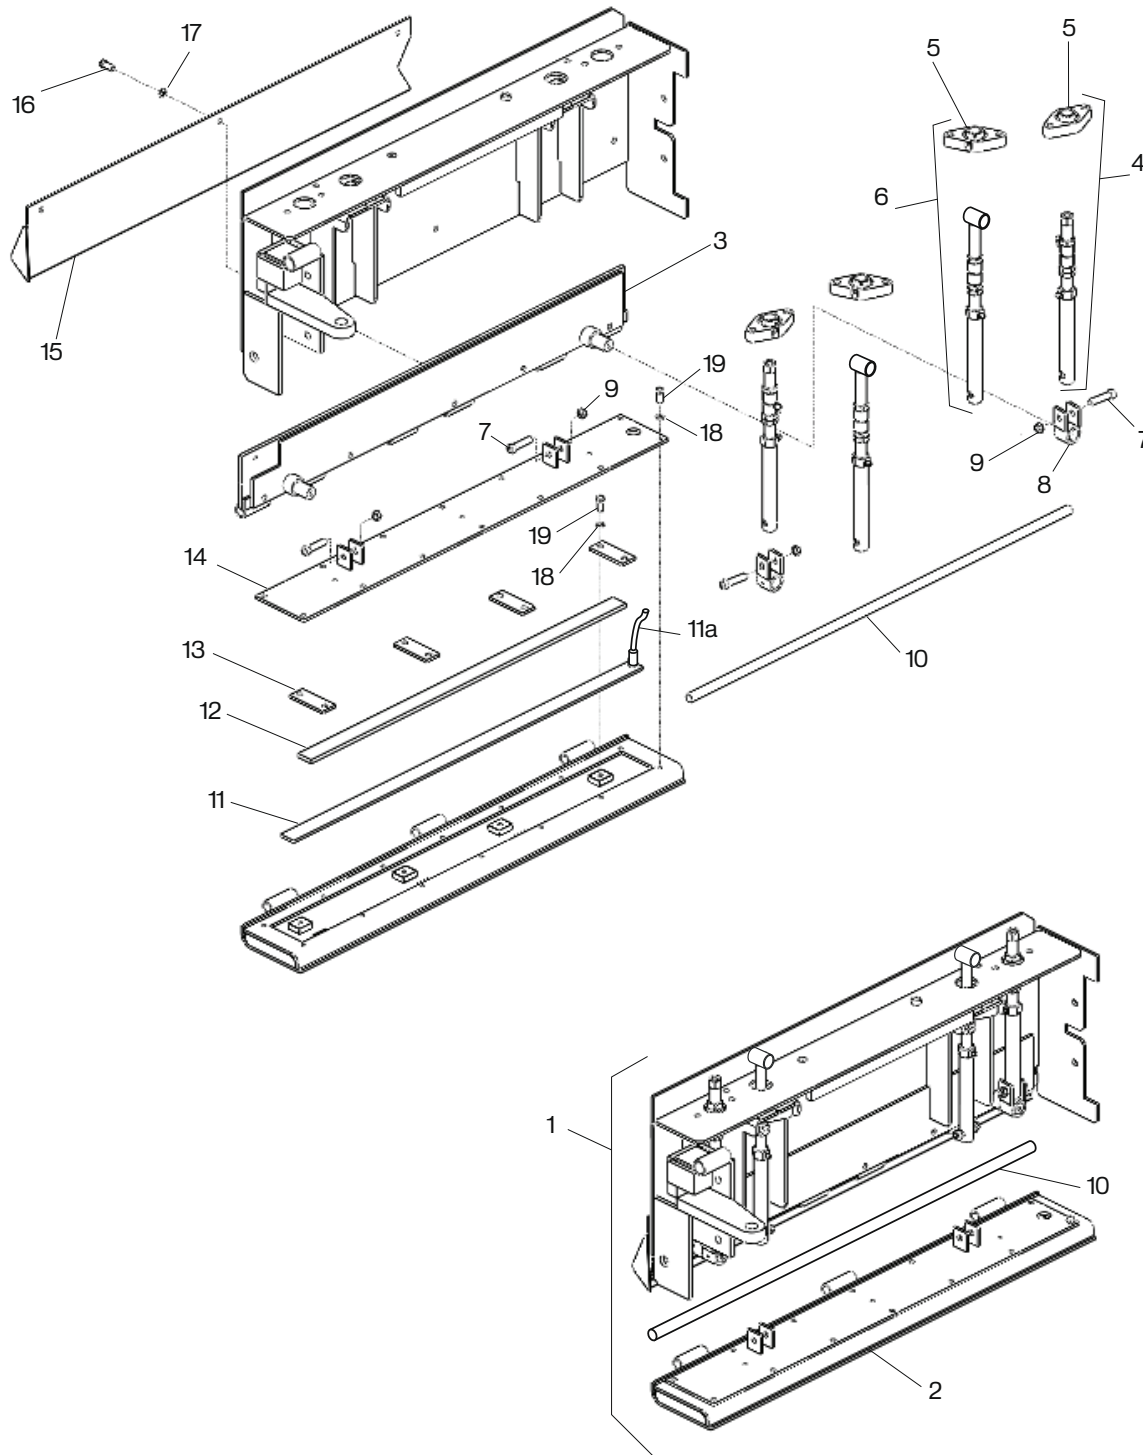


Figure 7-34 Extension Double Adjust Assembly - Electric (Right)

Extension Double Adjust Assembly - Electric (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	984306-1SRV	1	Assembly, Insert, Electric (Right)	Without Slope
2	988319SRV	1	Assembly, Heat Box, Electric, 4 Adjust	
3	1002736SRV	1	Hinge Assembly	
4	985556SRV	1	Assembly, Slide Adjust	
5	870030	4	Bearing, Screed Flight Screw	
6	851185SRV	1	Assembly, Extension Adjust Screw	
7	870279	4	CSSH, 3/8-16 Shoulder Socket	
8	1002715SRV	1	Adjuster Mount	
9	204-6-16-5	4	Nut, Lock, Stover, 3/8-16, GR5	
10	854447SRV	1	Round, .688 x 43.50, CRS	
11	987890SRV	1	Element, Heater, Screed, 40"	
12	985120	1	Bar, .250 x 1.50 x 36	
13	985123	4	Clamp, Element, Screed Extension	
14	988292SRV	1	Assembly, Heat Box Cover, 4 Adjust	
15	851180RSRV	1	Guard, Screed Extension Hinge (Right)	
16	100-6-16-32-5	3	CSHH, 3/8-16 x 2.00, GR5	
17	302-6	3	Washer, Lock, 3/8	
18	302-4	22	Washer, Lock, 1/4	
19	100-4-20-16-5F	22	CSHH, 1/4-20 x 1.00, GR5, FT	

ENDGATE ASSEMBLY (LEFT)

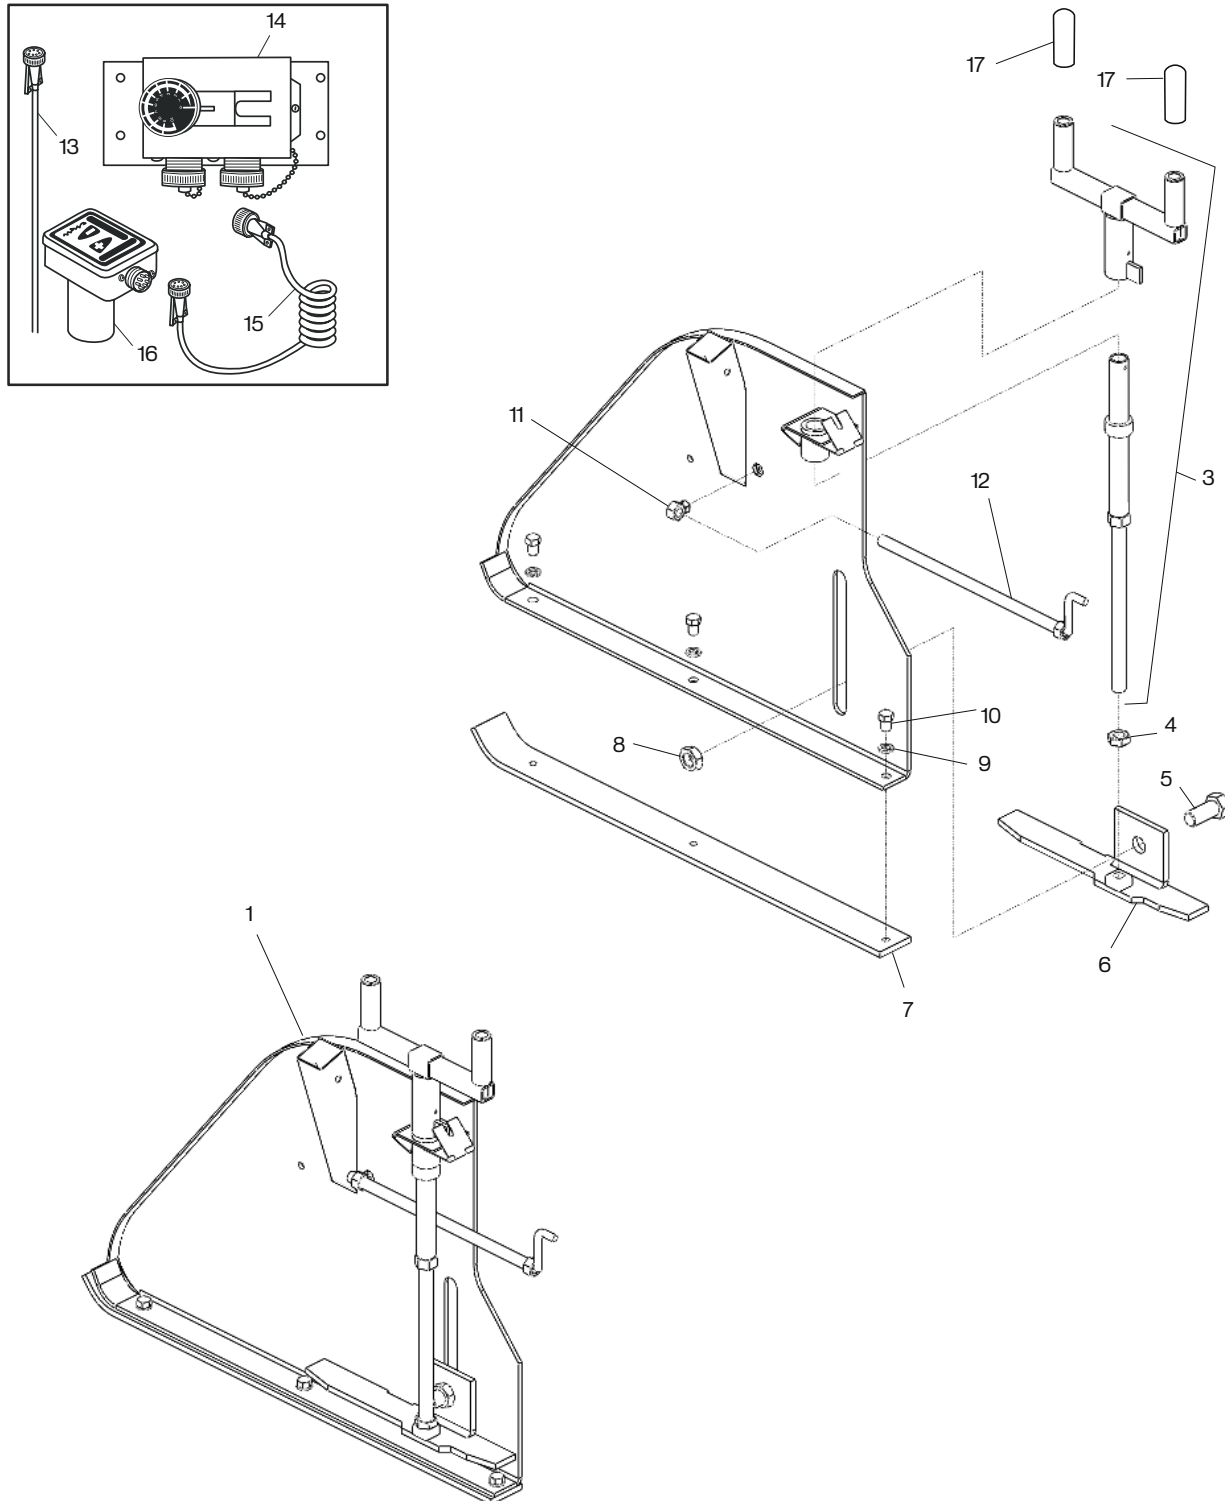


Figure 7-35 Endgate Assembly (Left)

Endgate Assembly (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	983308SRV	1	Assembly, Jointer, 8515 (Left)	
3	890092SRV	1	Assembly, Depth Screw, Screed	
4	202-12-10-5	1	Nut, Hex, Jam 3/4-10, GR5	
5	100-14-9-32-5F	1	CSHH, 7/8-9 x 2.00, GR5, FT	
6	890132LSRV	1	Bracket, Depth Screw Control (Left)	
7	982963SRV	1	Bar, End Gate Skid 8515	
8	987396	1	Nut, Nylon Lock. 7/8-9 UNC-2B	
9	302-8	3	Washer, Lock, 1/2	
10	100-8-13-12-5F	3	CSHH, 1/2-13 x .75, GR5, FT	
11	890070	1	Assembly, Adjusting Swivel Nut	
12	890081SRV	1	Assembly, Tilt Screw, Jointer	
13	982796	1	Cable, Power, Ultrasonic	
14	982795	1	Remote Pod, Ultra Sonic	
15	983050	1	Coil Cord, 6s/6s 1.5 to 7.5 FT	
16	982794	1	Sensor, Ultra Sonic	
17	870276	2	Hand Grip, Flight/Depth Screw	

ENDGATE ASSEMBLY (RIGHT)

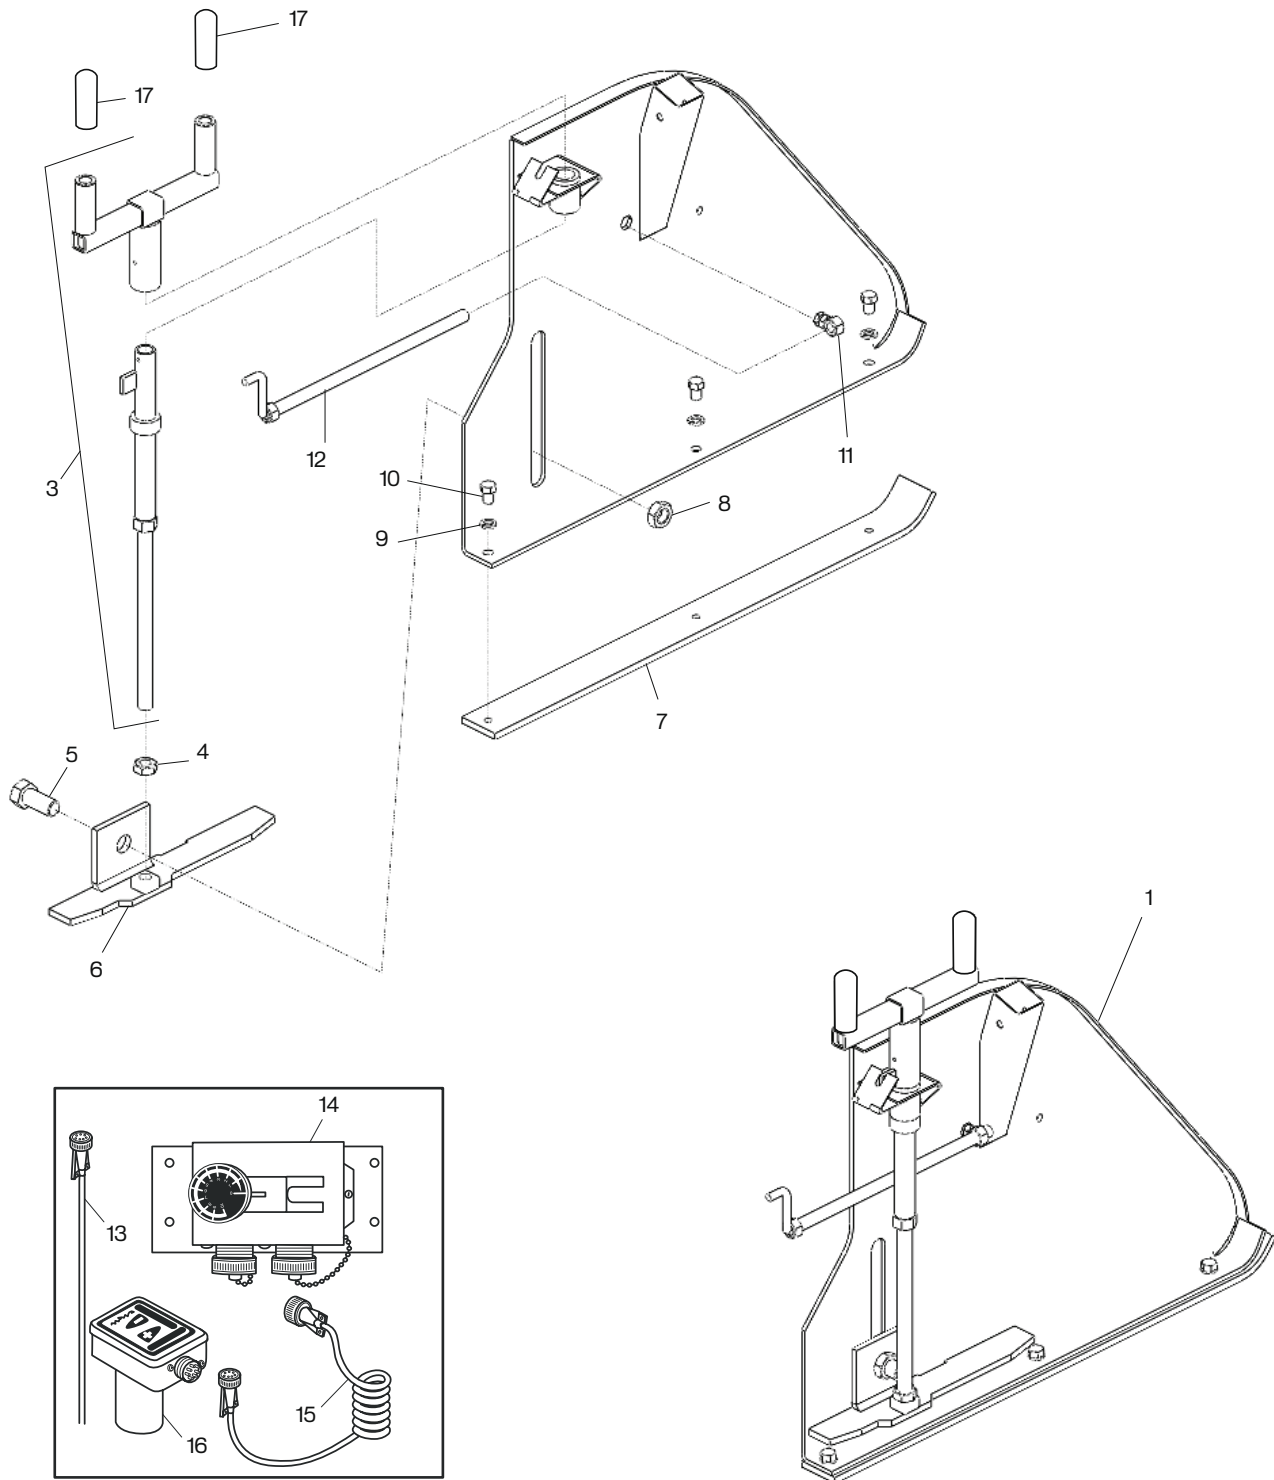


Figure 7-36 Endgate Assembly (Right)

Endgate Assembly (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	983309SRV	1	Assembly, Jointer, 8515 (Right)	
3	890092SRV	1	Assembly, Depth Screw, Screed	
4	202-12-10-5	1	Nut, Hex Jam, 3/4-10, GR5	
5	100-14-9-32-5F	1	CSHH, 7/8-9 x 2.00, GR5, FT	
6	890132RSRV	1	Bracket, Depth Screw Control (Right)	
7	982963SRV	1	Wear Plate, End Gate, 8515	
8	987396	1	Nut, Nylon Lock, 7/8-9 UNC-2B	
9	302-8	3	Washer, Lock, 1/2	
10	100-8-13-12-5F	3	CSHH, 1/2-13 x .75, GR5, FT	
11	890070	1	Assembly, Adjusting Swivel Nut	
12	890081SRV	1	Assembly, Tilt Screw, Jointer	
13	982796	1	Cable, Power, Ultrasonic	
14	982795	1	Remote Pod, Ultra Sonic	
15	983050	1	Coil Cord, 6s/6s 1.5 to 7.5 FT	
16	982794	1	Sensor, Ultra Sonic	
17	870276	2	Hand Grip, Flight/Depth Screw	
REF	1000397	A/R	Element, Heating, 570W, 240V, 13"	Option
REF	1000893	A/R	Element, Heating, 970W, 240V, 24.75"	Option

SCREED PULL ARM ASSEMBLY (LEFT)

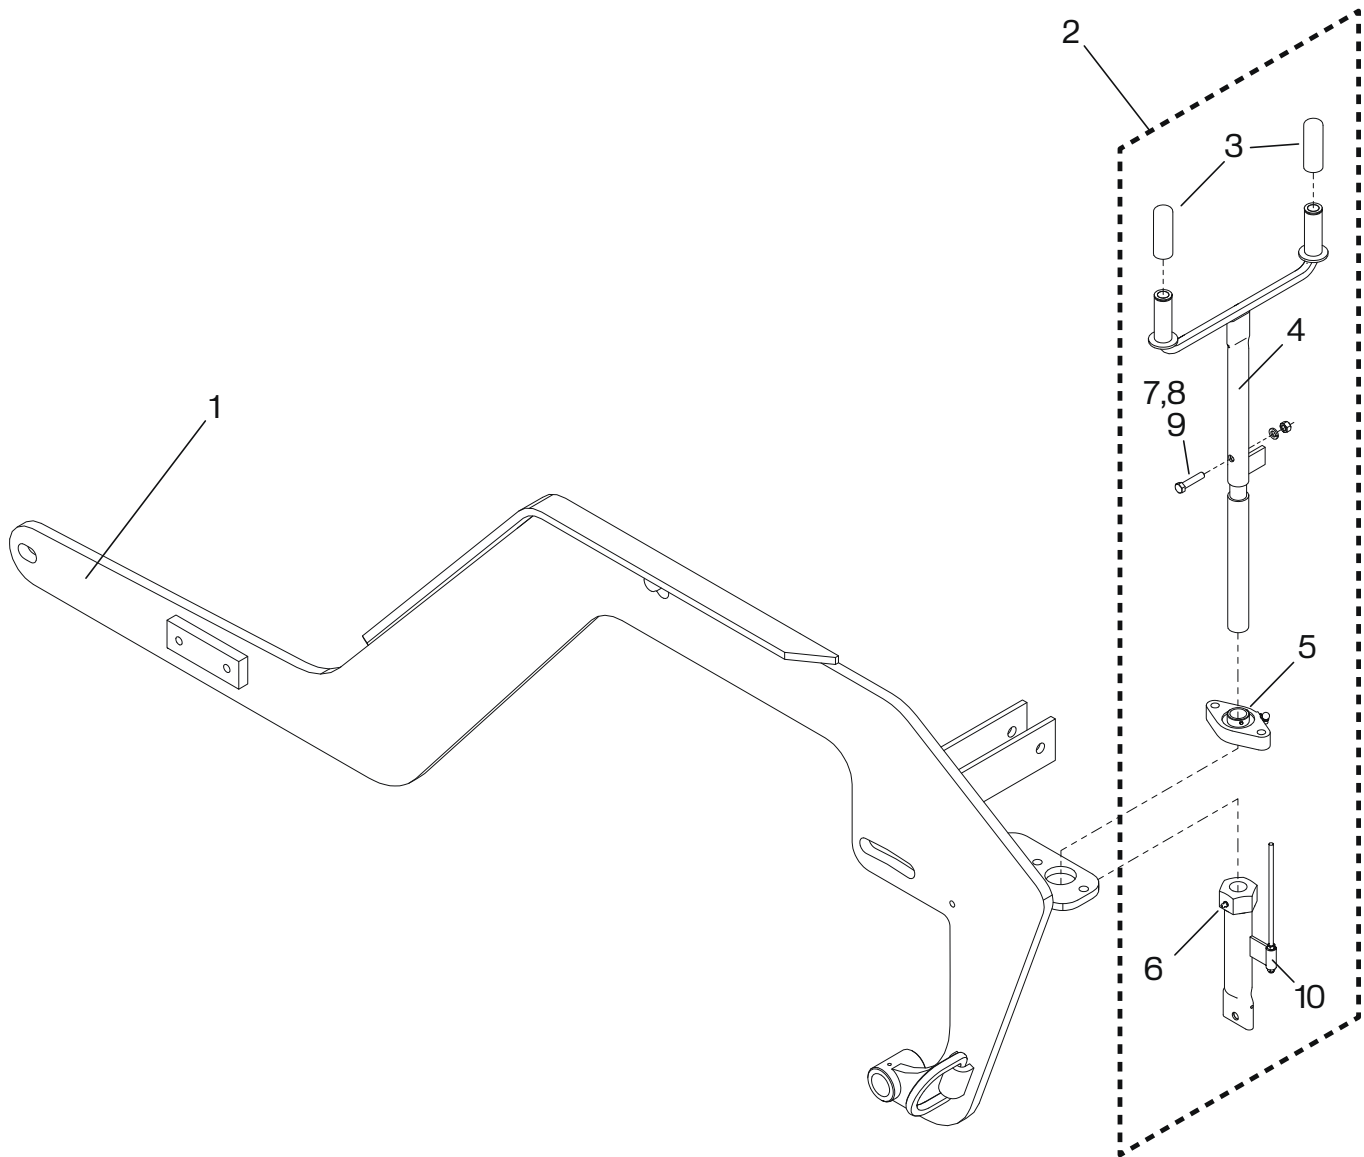


Figure 7-37 Screed Pull Arm Assembly (Left)

Screed Pull Arm Assembly (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	1000758SRV	1	Assembly, Screed Arm (Left)	
2	1002728SRV	1	Assembly, Flight Screw w/Height Rod	Includes 2 - 10
3	870276	2	Hand Grip, Drive Lever	
4	859365	1	Sub-Assembly, Flight Screw	
5	870030	1	Mount, Bearing	
6	140610	1	Fitting, Lube, Straight, 1/4-28	
7	100-6-16-28-5	1	CSHH, 3/8-16 x 1.75, GR5	
8	302-6	1	Washer, Lock, 3/8	
9	200-6-16-5	1	Nut, Hex, 3/8-16	
10	855582SRV	1	Assembly, Depth Rod, Flight Screw	
REF	851370SRV	1	Assembly, Flight Screw	Does Not Include Item 10

SCREED PULL ARM ASSEMBLY (RIGHT)

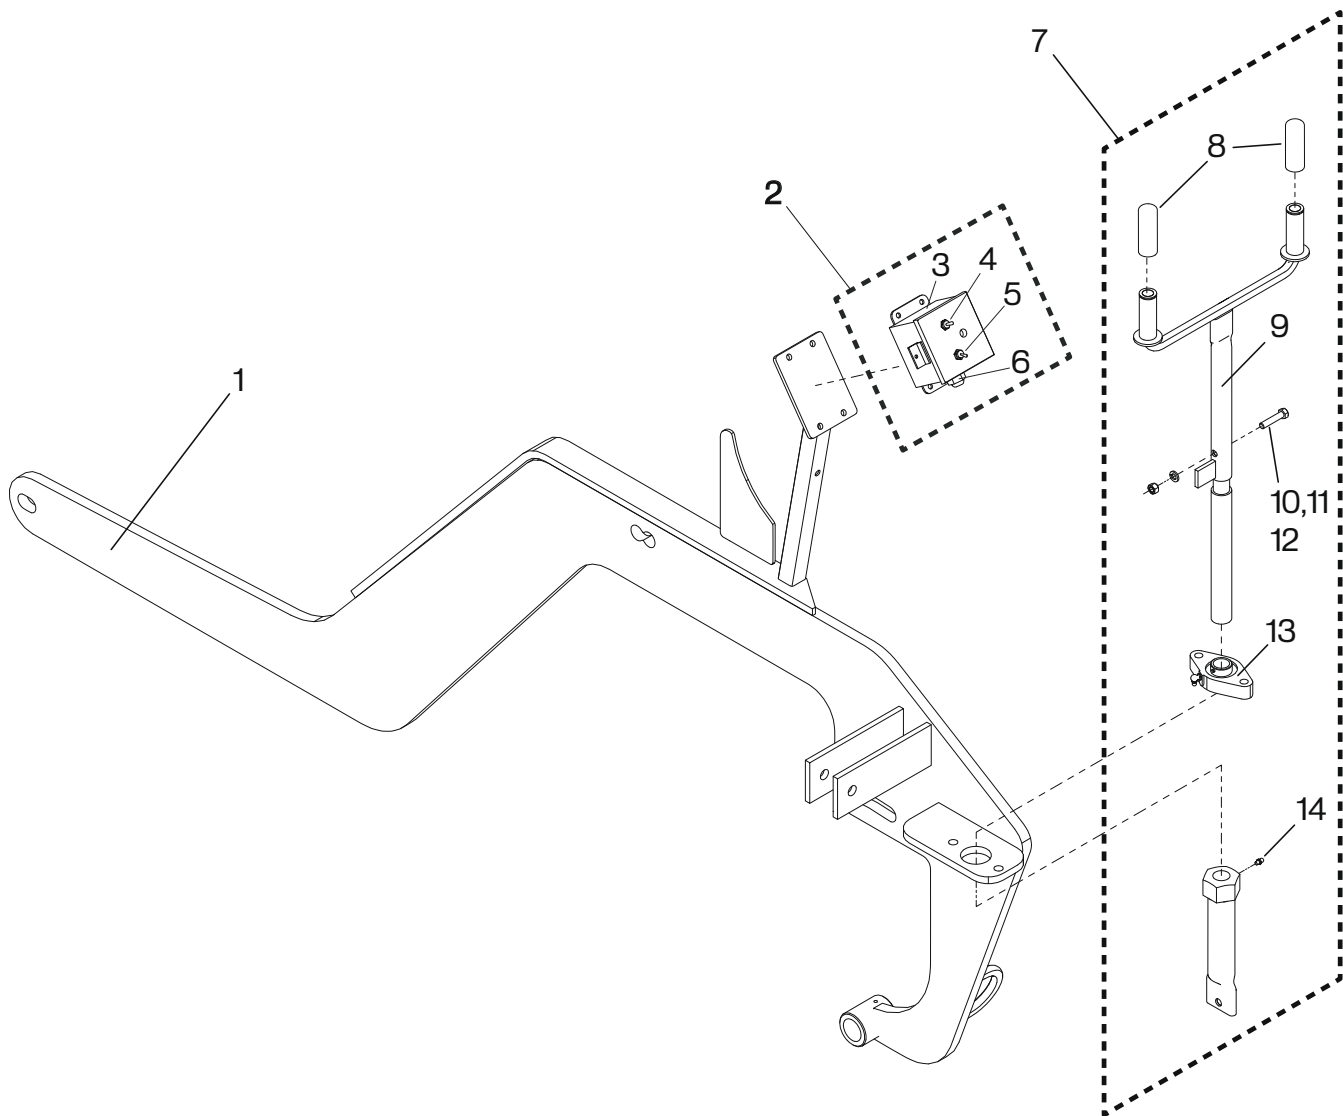


Figure 7-38 Screed Pull Arm Assembly (Right)

Screed Pull Arm Assembly (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	982743RSRV	1	Assembly, Screed Arm (Right)	
2	1002728SRV	1	Assembly, Flight Screw w/Height Rod	Includes 2 - 10
3	870276	2	Hand Grip, Drive Lever	
4	859365	1	Sub-Assembly, Flight Screw	
5	870030	1	Mount, Bearing	
6	140610	1	Fitting, Lube, Straight, 1/4-28	
7	100-6-16-28-5	1	CSHH, 3/8-16 x 1.75, GR5	
8	302-6	1	Washer, Lock, 3/8	
9	200-6-16-5	1	Nut, Hex, 3/8-16	
10	855582SRV	1	Assembly, Depth Rod, Flight Screw	
REF	851370SRV	1	Assembly, Flight Screw	Does Not Include Item 10

CITRUS TANK & HEAT CONTROL BOX

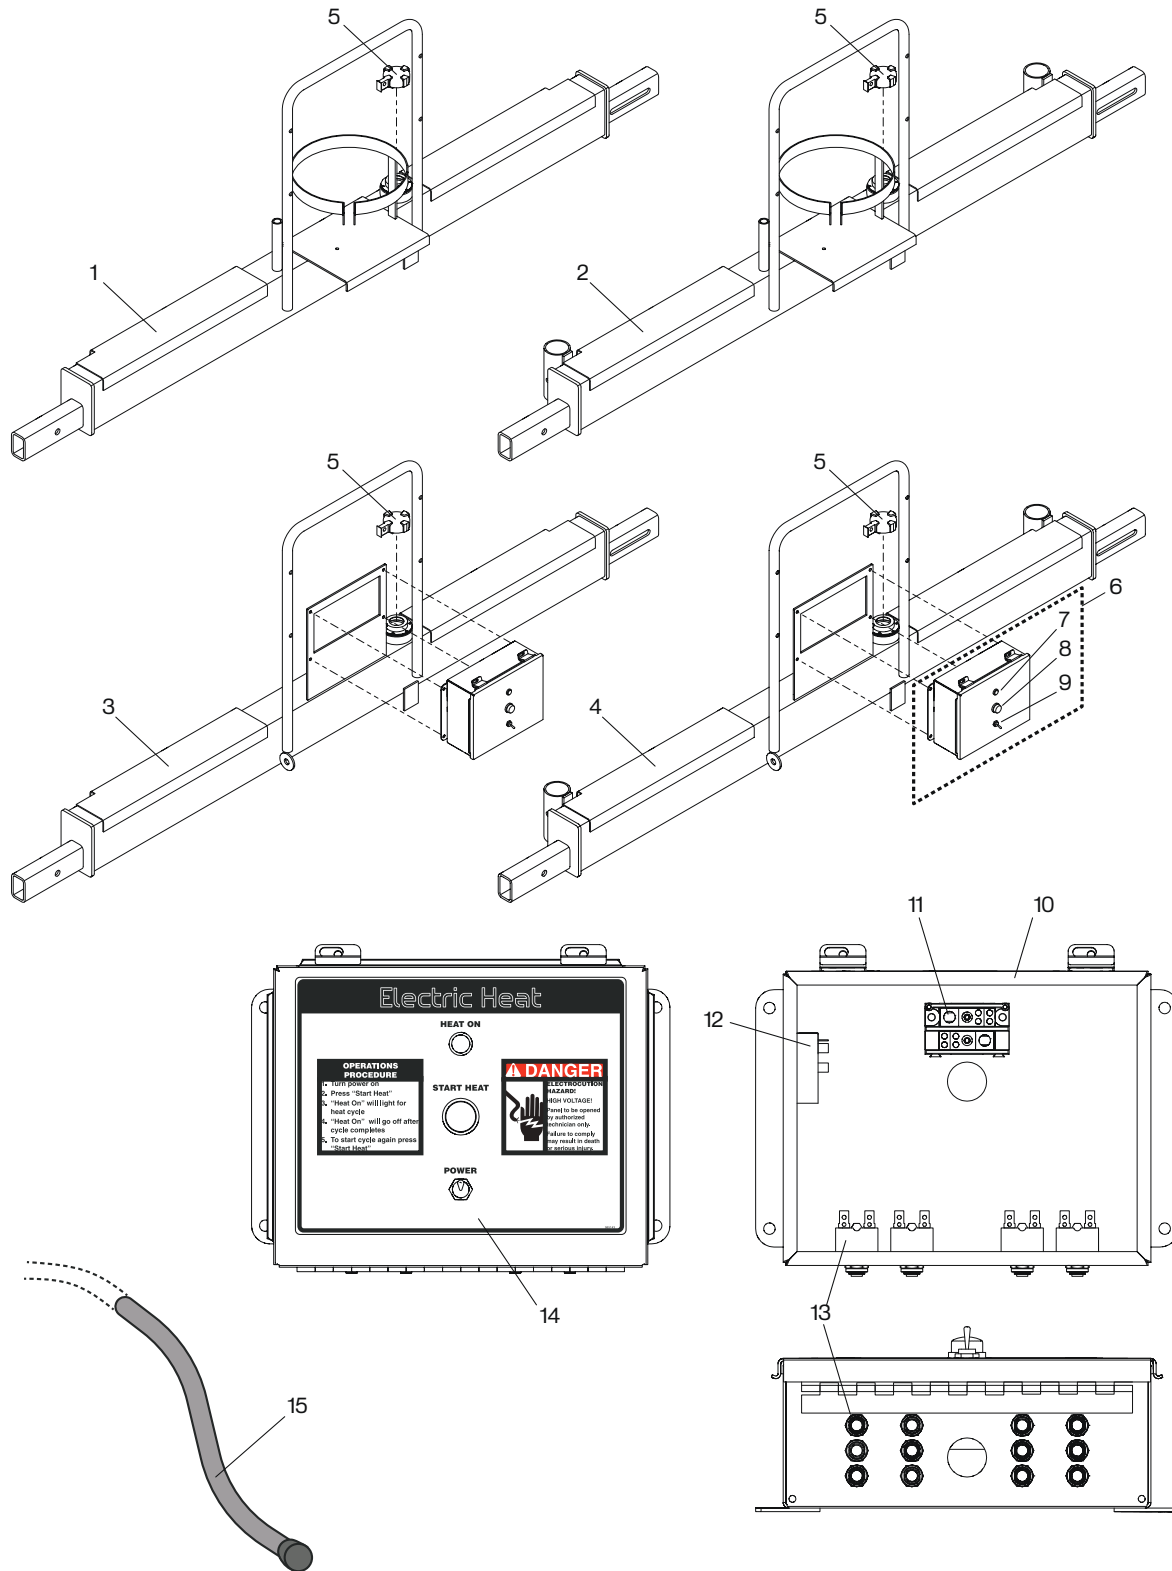


Figure 7-39 Citrus Tank & Heat Control Box

Citrus Tank & Heat Control Box

Item No.	Part Number	Qty.	Description	Remarks
1	988223SRV	1	Assembly, Citrus Tank HD LP	Includes Item 5
2	1008355SRV	1	Assembly, Citrus, Tank LD LP	Optional, Includes Item 5
3	988224SRV	1	Assembly, Citrus Tank HD Electric	Includes Item 5
4	1008356SRV	1	Assembly, Citrus, Tank LD Electric	Optional, Includes Item 5
5	140030FL	1	Cap, Fuel Tank, Lockable	
REF	140030GK	1	Strainer & Gasket Kit	Not Shown, Use with 5
6	1010397	1	Assembly, Electric Heat Control	
7	31983	1	Light, Red, Dash, .500 Hole	
8	982249	1	Switch, Push Button	
9	851391	1	Switch, Toggle, SPST, 2-POS	
10	1010397-01	1	Enclosure, Electric Heat w/Holes	
11	985138-04	1	Block, Terminal	
12	985142	1	Timer, Electric, .06 - 60 minute	
13	1009228	12	Circuit Breaker, 10A	
14	985143	1	Decal, Electric Heat	
15	985138-03	1	Power Cord, Bulkhead to Control Box	

VIBRATOR ASSEMBLY (LEFT)

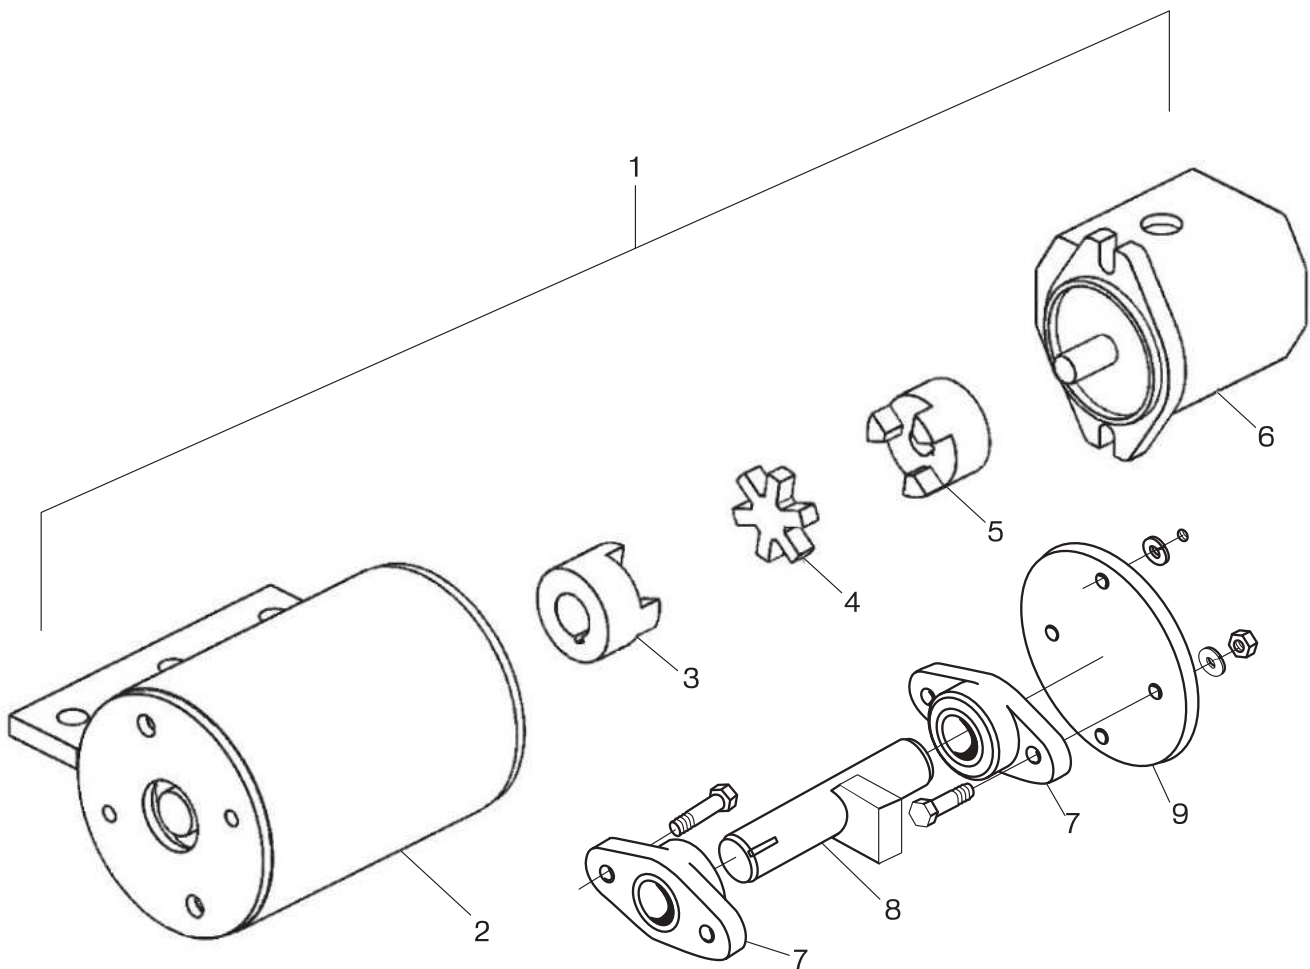


Figure 7-40 Vibrator Assembly (Left)

Vibrator Assembly (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	982965L	1	Assembly, Vibrator (Left)	
2	982965L-1	1	Vibrator Housing (Left)	
3	880030	1	Coupling Half, 1.00, Vibrator Shaft	
4	280040	1	Insert, 3-Jaw Coupling	
5	280030	1	Coupling Half, Tack Pump Motor	
6	983405	1	Hydraulic Motor, Screed Vibrator	
7	250150	2	Bearing, Conveyor Pulley/Vibrator Shaft	
8	880062	1	Shaft, Vibrator Eccentric	
9	880071	1	Plate, Vibrator Housing	
REF	982965RSRV	1	Assembly, Vibrator (Right)	
REF	982965R-1	1	Vibrator Housing (Right)	

WALK BOARD ASSEMBLY

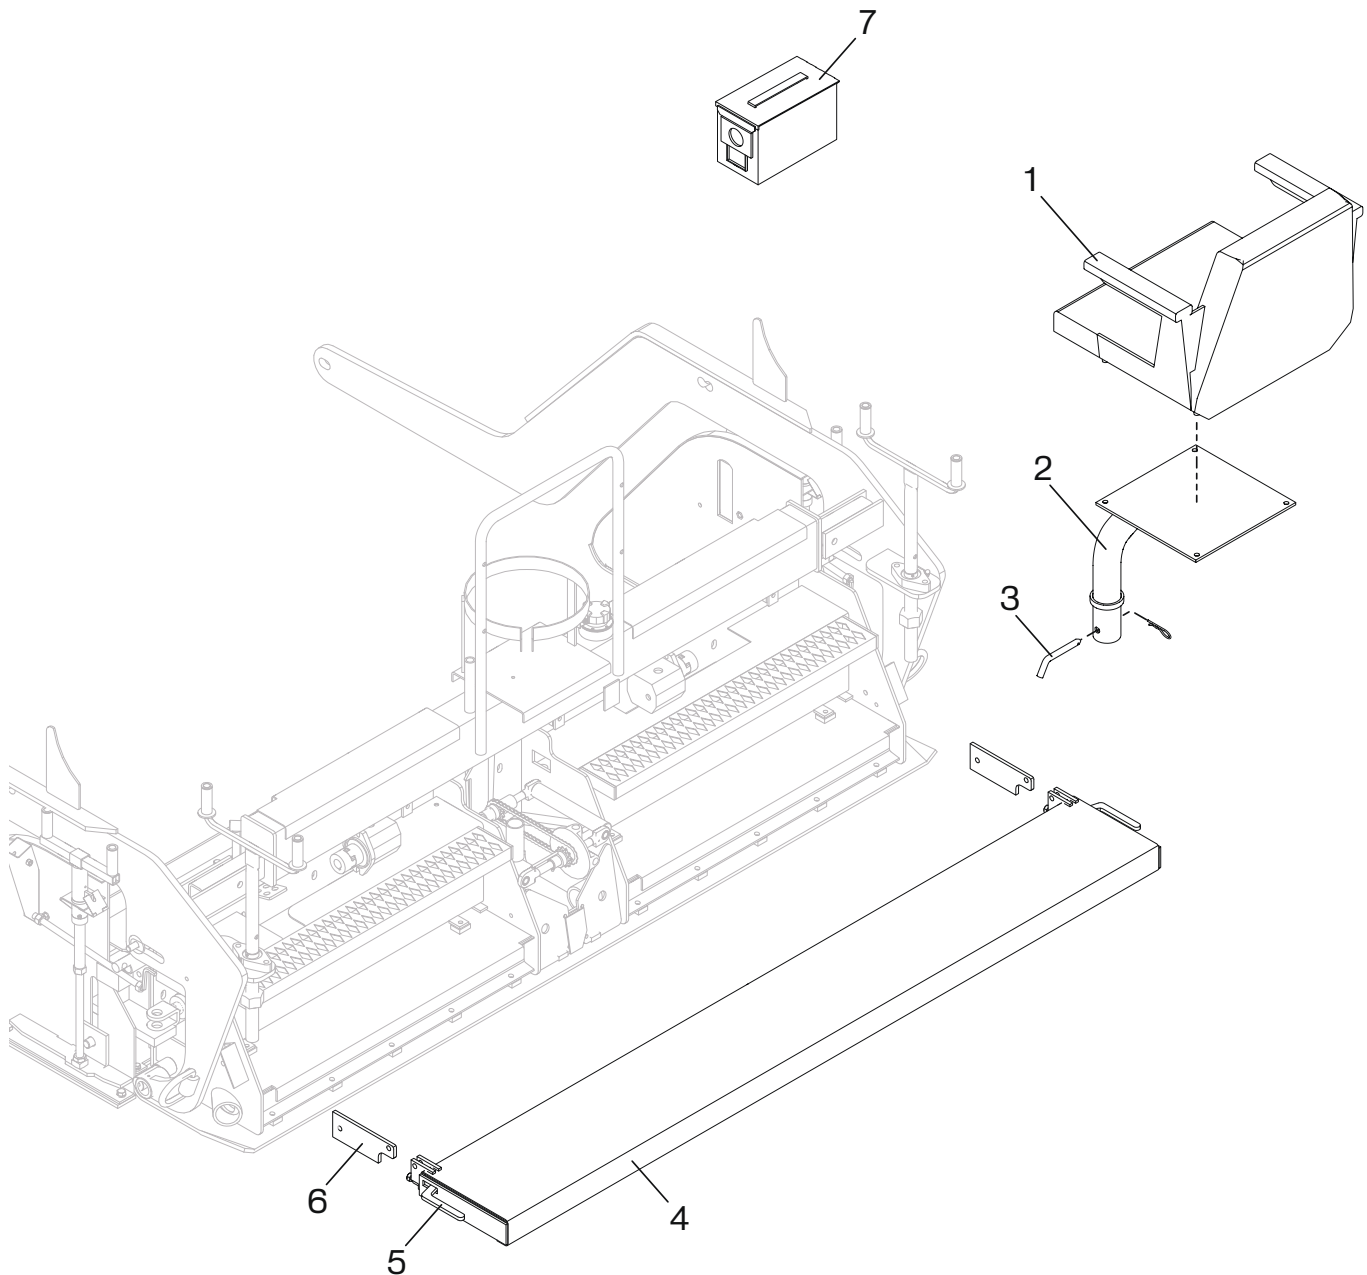


Figure 7-41 Walk Board Assembly

Walk Board Assembly

Item No.	Part Number	Qty.	Description	Remarks
1	360010	1	Assembly, Seat w /Armrest, White	
2	988640SRV	1	Assembly, New Style Seat Post, Short	
3	987056SRV	1	Assembly, Walk Board, Long	Includes item 4
4	985163	2	Plate, Walkboard Hinge	
5	985549	2	Latch, Walkboard	
6	851169	1	Tool Box	
7	72836	1	Pin, .50 x 3.00 w/Cotter Hairpin	
REF	852470	1	Wrench, Flat Ratchet, 13/16 x 15/16	Not Shown
REF	920235	A/R	Umbrella	Option, Not Shown

SLIDE PLATE ASSEMBLY

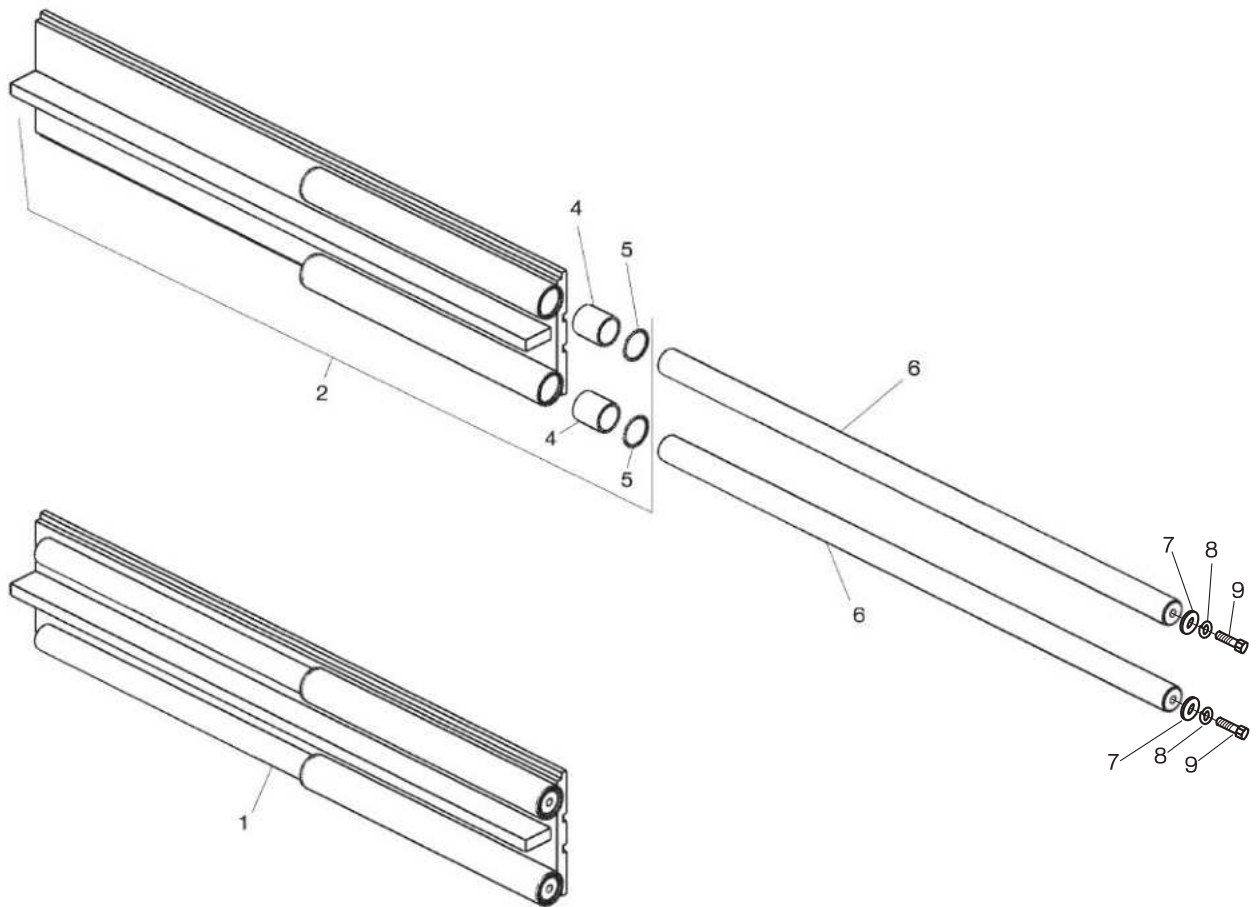


Figure 7-42 Slide Plate Assembly

Slide Plate Assembly

Item No.	Part Number	Qty.	Description	Remarks
1	1002186	1	Assembly, Slide Plate, w/Chrome Rods	
2	1002181	1	Assembly, Slide Plate	
4	988588	4	Bushing	
5	851256	4	Snap Ring	
6	988601	2	Chrome Rod	
7	300-8	4	Washer, Flat, SAE,1/2	
8	302-8	4	Washer, Lock, 1/2	
9	100-8-20-24-5	4	CSHH, 1/2-20 x 1.50, GR5	

SCREED MISCELLANEOUS COMPONENTS

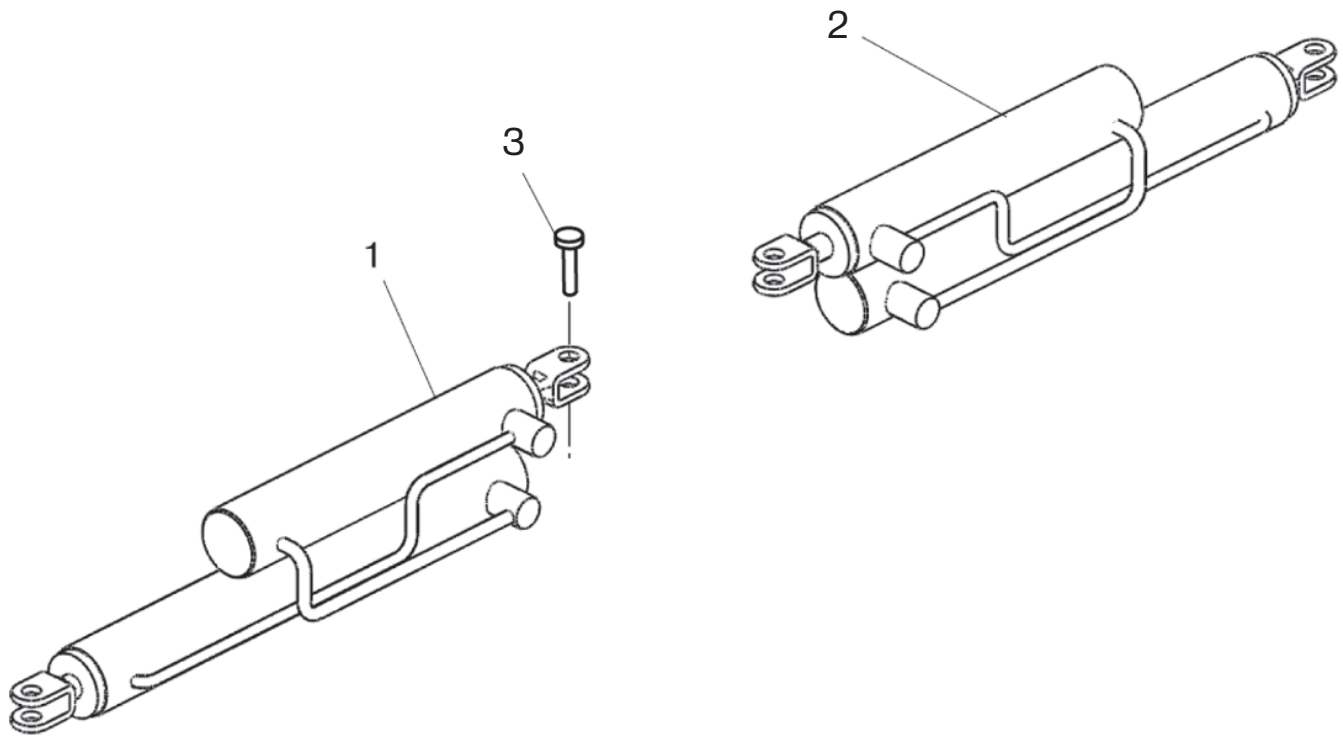


Figure 7-43 Screed Miscellaneous Components

Screed Miscellaneous Components

Item No.	Part Number	Qty.	Description	Remarks
1	851191	1	Cylinder, Hydraulic, 2.00 x 12.00/30.00 x 1.25	LH, Non Sloping Screed
REF	851191-01	1	Seal Kit, Cylinder, Hydraulic	Not Shown
2	851192	1	Cylinder, Hydraulic, 2.00 x 12.00/30.00 x 1.25	RH, Non Sloping Screed
REF	851191-01	1	Seal Kit, Cylinder, Hydraulic	Not Shown
3	210060	2	Pin, Cylinder	

GENERATOR

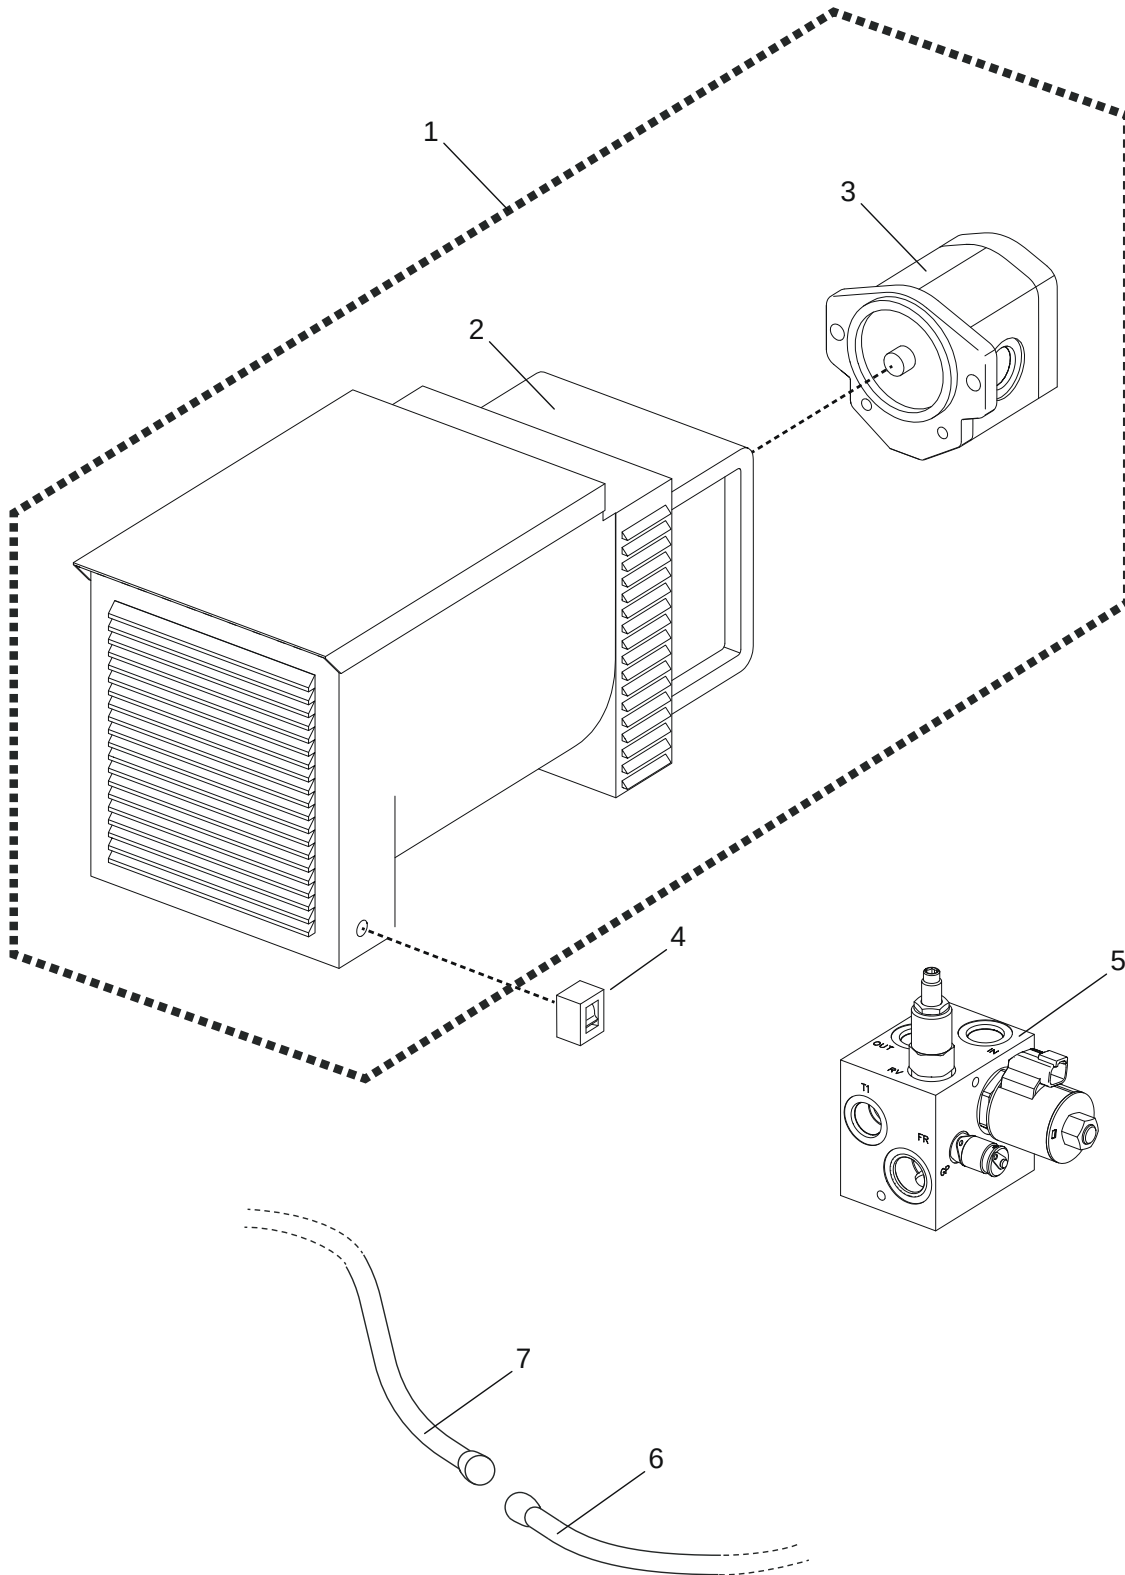


Figure 7-44 Generator

Generator

Item No.	Part Number	Qty.	Description	Remarks
1	987893SRV	1	Assembly, Hydraulic Generator	
2	988176SRV	1	Generator	
3	986994SRV	1	Motor, Hydraulic, Generator Driver	
4	985880	1	Breaker, Main	
5	1012235	1	Manifold, Generator, w/Flow Control	
6	1007253	1	Harness, Generator Control Box To Bulkhead	
7	985138-03	1	Power Cord, Bulkhead to Control Box	
REF	986658	1	Capacitor, Generator, 40 uF	Not Shown
REF	1011838	1	Capacitor, Generator, 35 uF	Not Shown
REF	1002148	1	Capacitor, Generator, 30 uF	Not Shown
REF	1002147	1	Capacitor, Generator, 25 uF	Not Shown
REF	1002146	1	Capacitor, Generator, 20 uF	Not Shown
REF	987894SRV	1	Coupling Assembly, Motor To Generator, 28 mm	Not Shown
REF	1002454	1	Coupling Half, 3 Jaw, 24 mm	Not Shown

POWER CROWN (OPTION)

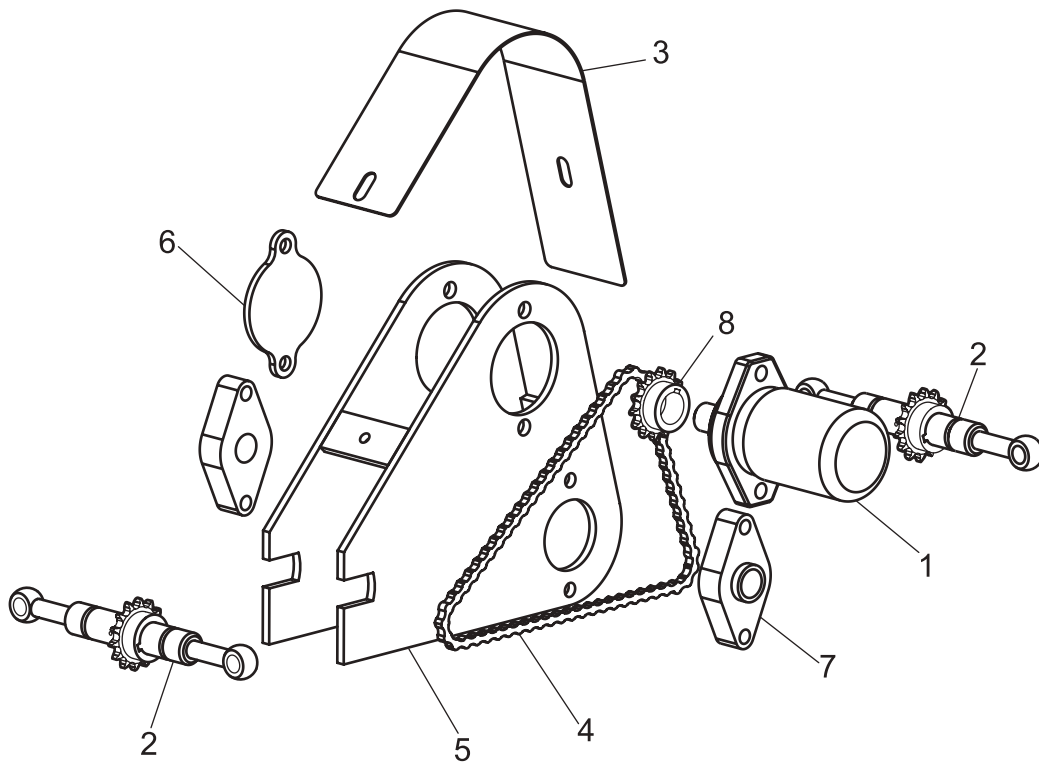



Figure 7-45 Power Crown (Option)

Power Crown (Option)


Item No.	Part Number	Qty.	Description	Remarks
1	986640	1	Motor, Power Crown	
2	986637SRV	2	Assembly, Crown Adjustment	Both Left and Right
2a	986636	1	Rod Extension (Right)	
2b	986650	1	Rod Extension (Left)	
3	986643	1	Cover, Power Crown	
4	986639SRV	1	Chain Turnbuckle	
5	986645	1	Power Crown Support	
6	986644	1	Motor Mount Cover	
7	986657	1	Bearing	
8	986641	1	Sprocket	

STRIKE OFFS AND EXTENSIONS (OPTION)

STRIKE OFF PLATE OPTIONS

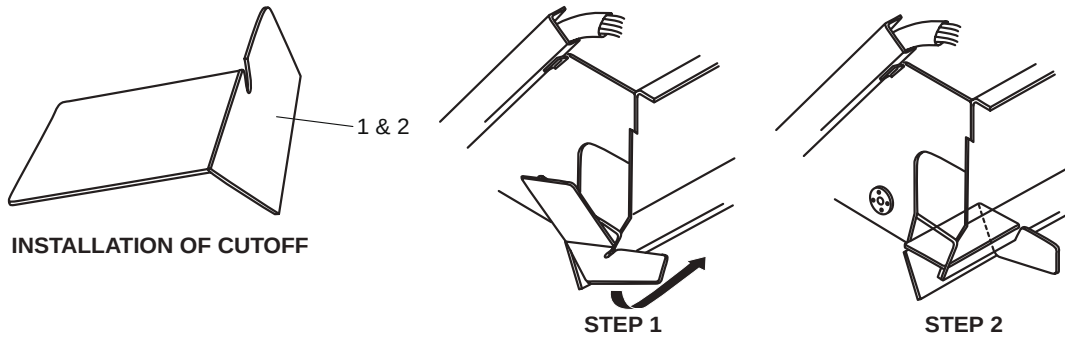

ROLL-UP CURB ATTACHMENT - 24"

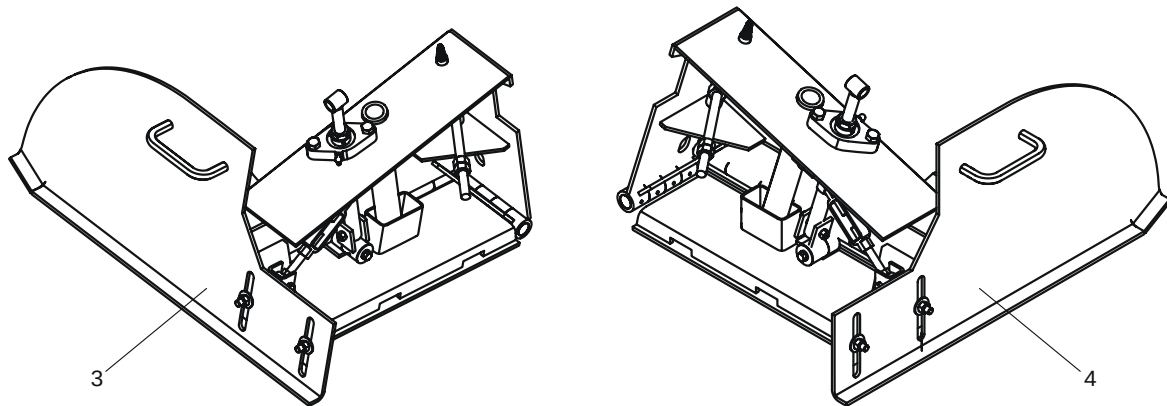

EXTENSION - 6"

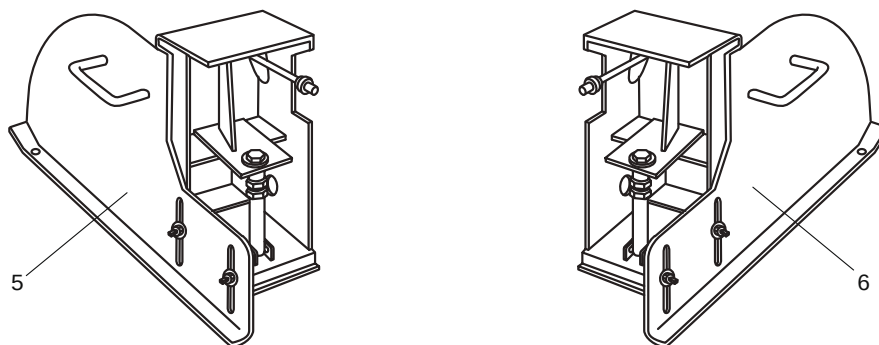


Figure 7-46 Strike Offs & Extension - Option

Strike Offs And Extensions (Option)

Item No.	Part Number	Qty.	Description	Remarks
1	860091LSRV	A/R	Strike Off, 12" (Left)	
2	860091RSRV	A/R	Strike Off, 12" (Right)	
REF	860095LSRV	A/R	Strike Off, 24" (Left)	Not Shown
REF	860095RSRV	A/R	Strike Off, 24" (Right)	Not Shown
3	851636LSRV	A/R	Roll Up Curb Attachment, 24" (Left)	Standard
4	851636RSRV	A/R	Roll Up Curb Attachment, 24" (Right)	Standard
REF	851635LSRV	A/R	Roll Up Curb Attachment, 12" (Left)	Not Shown
REF	851635RSRV	A/R	Roll Up Curb Attachment, 12" (Right)	Not Shown
5	851634LSRV	A/R	Extension, 6" (Left)	
6	851634RSRV	A/R	Extension, 6" (Right)	

PAVER LEVELING CONTROL TOPCON P-32 (OPTION)

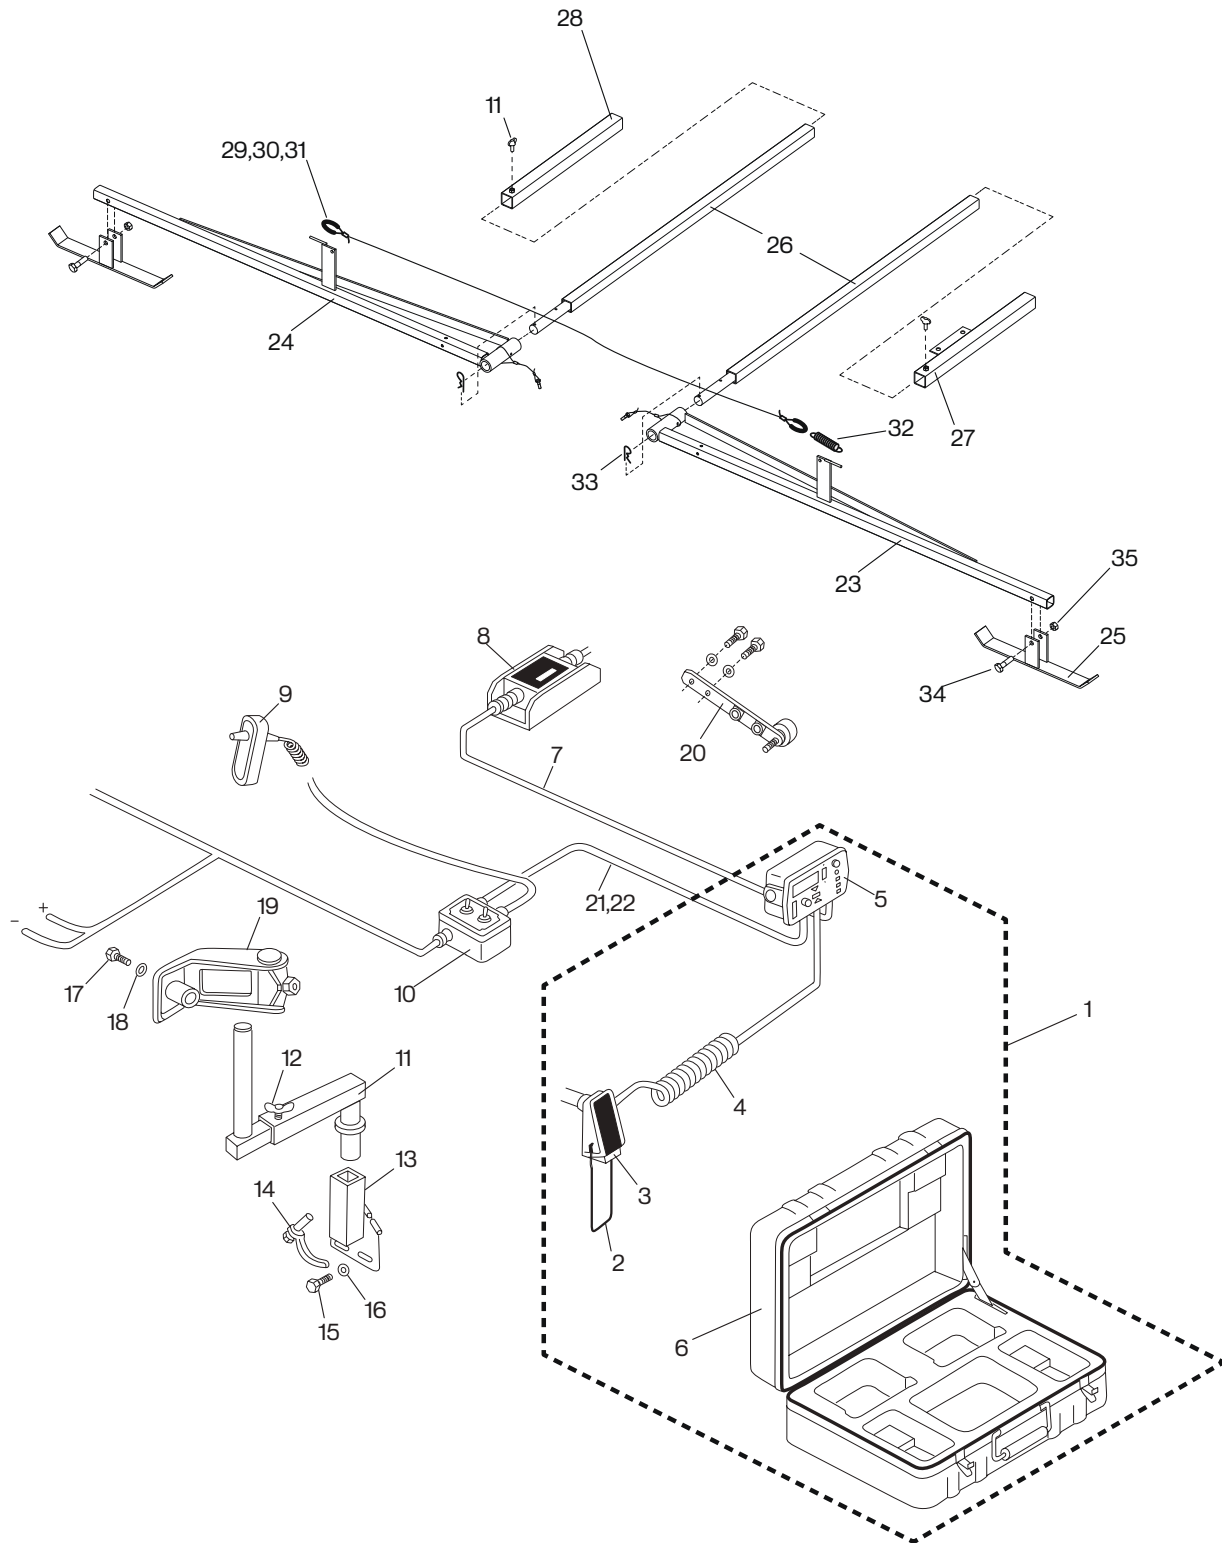


Figure 7-47 Paper Leveling Control TopCon P-32 (Option)

Paver Leveling Control TOPCON P-32 (Option)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1014915		Option, Topcon, 9-32, Dual	Includes 1 - 21
1	1010499	1	Kit, Topcon 9-32	Includes 2 - 6
2	1010499-07	2	Assembly Temp. Bail w/Sleeves	
3	1010499-06	2	TSD Sonic Tracker II	
4	1010499-04	2	Coil Cord, 15 FT CA to Tracker	
5	1010499-08	2	TSD 3 Connector SS Paver Box	
6	1010499-03	1	Case, GC-35 Paver Control Box	
7	1010499-10	2	Slope Cable 8 Ft.	
8	1010499-09	2	Slope Sensor	
9	986609	2	Coiled Cord, Remote	
10	985866	2	Assembly, AM Module & Cable	
11	9090-1125SRV	2	Bracket, Z Arm, TopCon	
12	920070	A/R	Thumb Screw, 3/8-16 x 1.00	
13	851575SRV	2	Pivot Mount, TopCon/Spectra Physics	
14	300060	2	Handle, Bolt, 5/8-11	
15	100-10-11-20-5F	4	CSHH, 5/8-11 x 1.25, GR5, FT	
16	300-10	4	Washer, Flat, SAE, 5/8	
17	100-12-10-64-5	2	CSHH, 3/4-10 x 4.00, GR5	
18	300-12	2	Washer, Flat, SAE, 3/4	
19	851578	2	Bracket, Sonic Tracker	
20	1010499-05	2	Assembly, CB Bracket	
21	983416-01	2	Cable, Junction Box to Control Box	
GRP	1014914		Option, Topcon, P-32 Dual Grade	Not Shown, Includes 1 - 22
22	983416-01	2	Cable, Junction Box to Control Box	(In Addition to Item 21)
23	851247SRV	1	Arm, Skid Support (Rear)	
24	851248SRV	1	Arm, Skid Support (Front)	
24	851249SRV	2	Skid	
26	851242SRV	2	Bar, Adjustable Slide	
27	851241SRV	2	Housing, Rear Slide Bar	
28	851243SRV	2	Housing, Front Slide Bar	
29	981981	2	Aluminum Cable Sleeve .0625	
30	1013865	2	Thimble, Cable, .063	
31	851246	1	Cable 1.0625	
32	851245	1	Spring, Tension	
33	870307	2	Hair Pin Clip, Clevis Pin	
34	100-10-11-40-5	2	CSHH, 5/8-11 x 2.50, GR5	
35	204-10-11-5	2	Nut, Lock, Stover, 5/8-11, GR5	

TRUCK HITCH ASSEMBLY (OPTION)

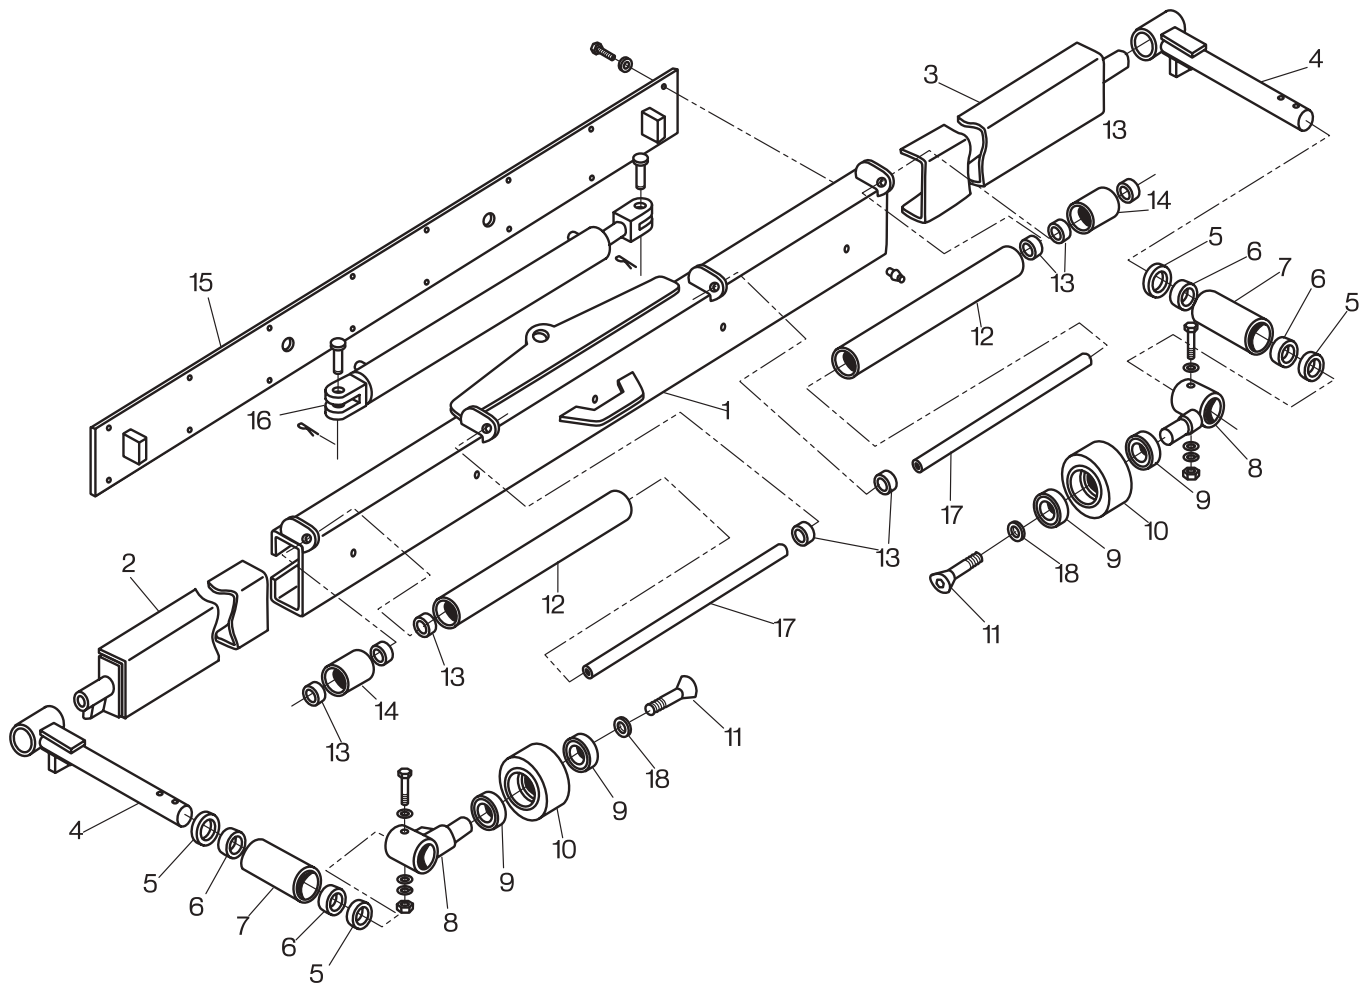


Figure 7-48 Truck Hitch Assembly (Option)

Truck Hitch Assembly (Option)

Item No.	Part Number	Qty.	Description	Remarks
REF	1000253SRV	1	Assembly, Truck Hitch	Not Shown
1	930015	1	Support, Pivot Bar	
2	930020SRV	1	Arm Extension (Right)	
3	930025SRV	1	Arm Extension (Left)	
4	930030SRV	2	Arm, Assembly, Truck Hitch Wheel Pivot	
5	620400	4	Collar, Lock	
6	810070	4	Bushing, 2.00 ID x 2.50 OD x 2.50	
7	930040	2	Roller	
8	930045SRV	2	Assembly, Axle, Guide Wheel	
9	930050	2	Bearing, Truck Hitch Roller	
10	930055	2	Guide Wheel, Truck Hitch	
11	100-8-13-32-5	2	CSHH, 1/2-13 x 2.00, GR5	
12	810102	2	Push Roller, Truck Wheel	
13	810110	8	Bearing, Push Roller (1.25)	
14	930060	2	Roller Extension, Bumper	
15	930065	1	Cover, Back Panel	
16	930070	1	Cylinder, Arm Extension	
REF	930070-01	1	Seal Kit	Not Shown
REF	852250	1	Valve Truck Hitch	Not Shown
17	930075	2	Shaft, Bumper Roller	
18	851112	2	Washer, Counter Sunk, 1/2	
REF	984399	1	Hose Kit 8515 Truck Hitch	Not Shown
REF	852250	1	Selector Valve, Conveyor	Not Shown

815HD SERIES SCREED 8515 NON-SLOPING OVERVIEW

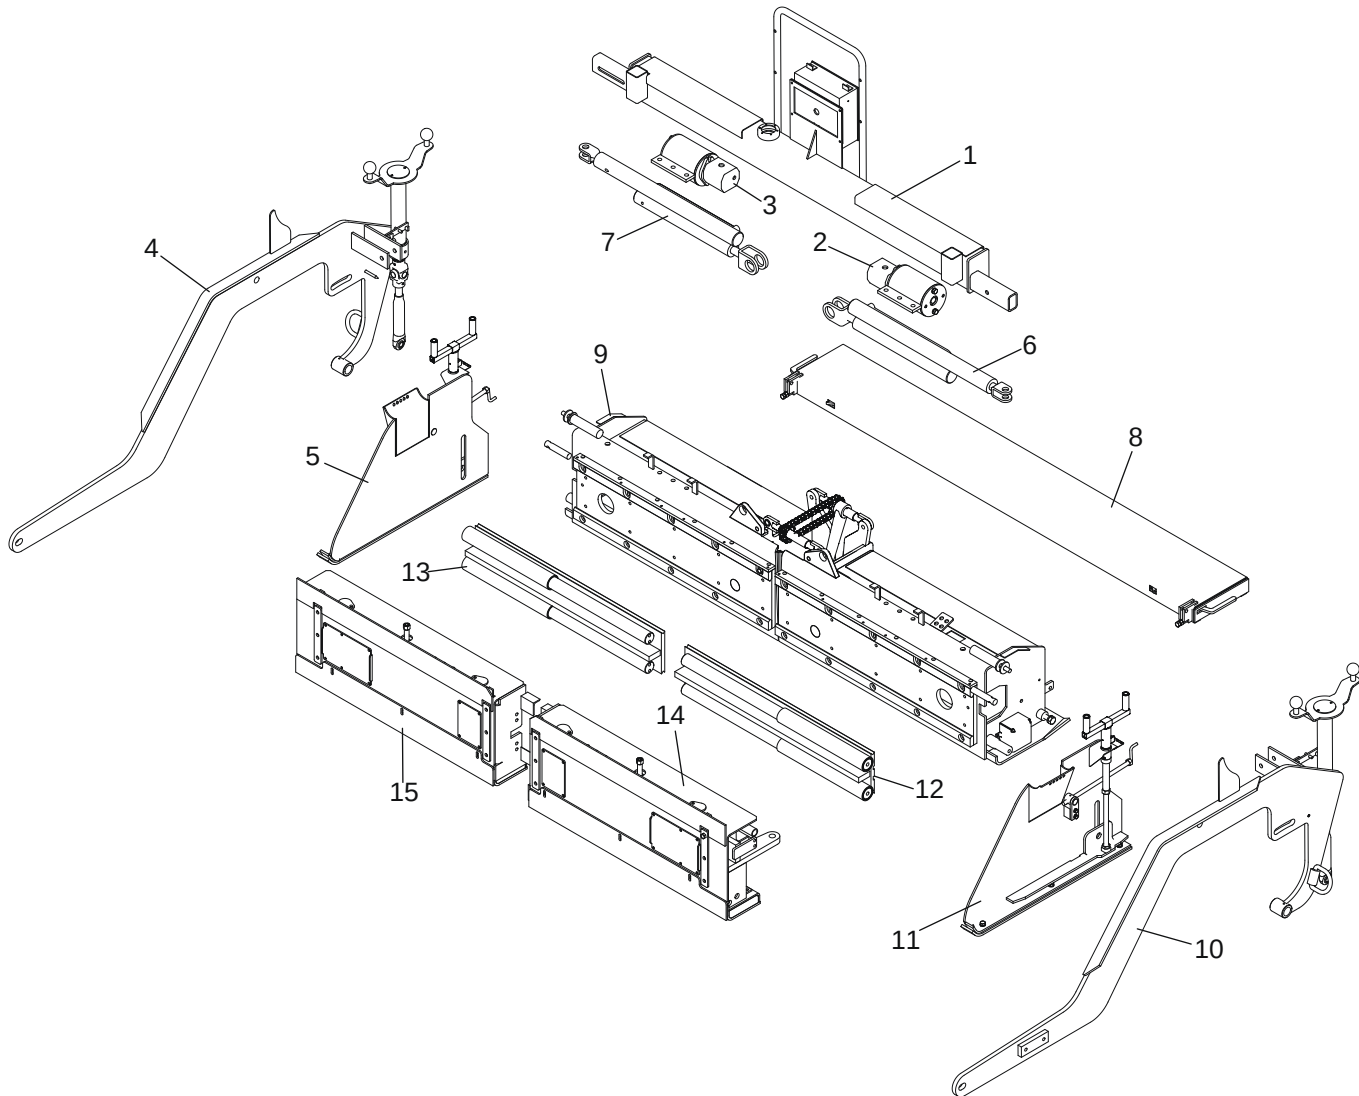


Figure 7-49 815HD Series Screed - 8515 Non-Sloping Figure List

815HD Series Screed Non-Sloping Overview

Item No.	Ref. Figure	Description	Remarks
1	7-60	Screed Citrus Tank and Electric Heat Control Box	
2	7-51	Screed Vibrator Assembly (Left)	
3	7-51	Screed Vibrator Assembly (Right)	
4	7-59	Screed Pull Arm (Right)	
5	7-57	Screed Endgate Assembly (Right)	
6	7-61	Screed Miscellaneous Components	
7	7-61	Screed Miscellaneous Components	
8	7-52	Screed Walk Board Assembly	
9	7-50	Screed Frame Non-Sloping	
10	7-58	Screed Pull Arm (Left)	
11	7-56	Screed Endgate Assembly (Left)	
12	7-53	Screed Slide Plate Assembly	
13	7-53	Screed Slide Plate Assembly	
14	7-54	Screed Extension Assembly (Left)	
15	7-55	Screed Extension Assembly (Right)	

815HD SERIES SCREED FRAME NON-SLOPING

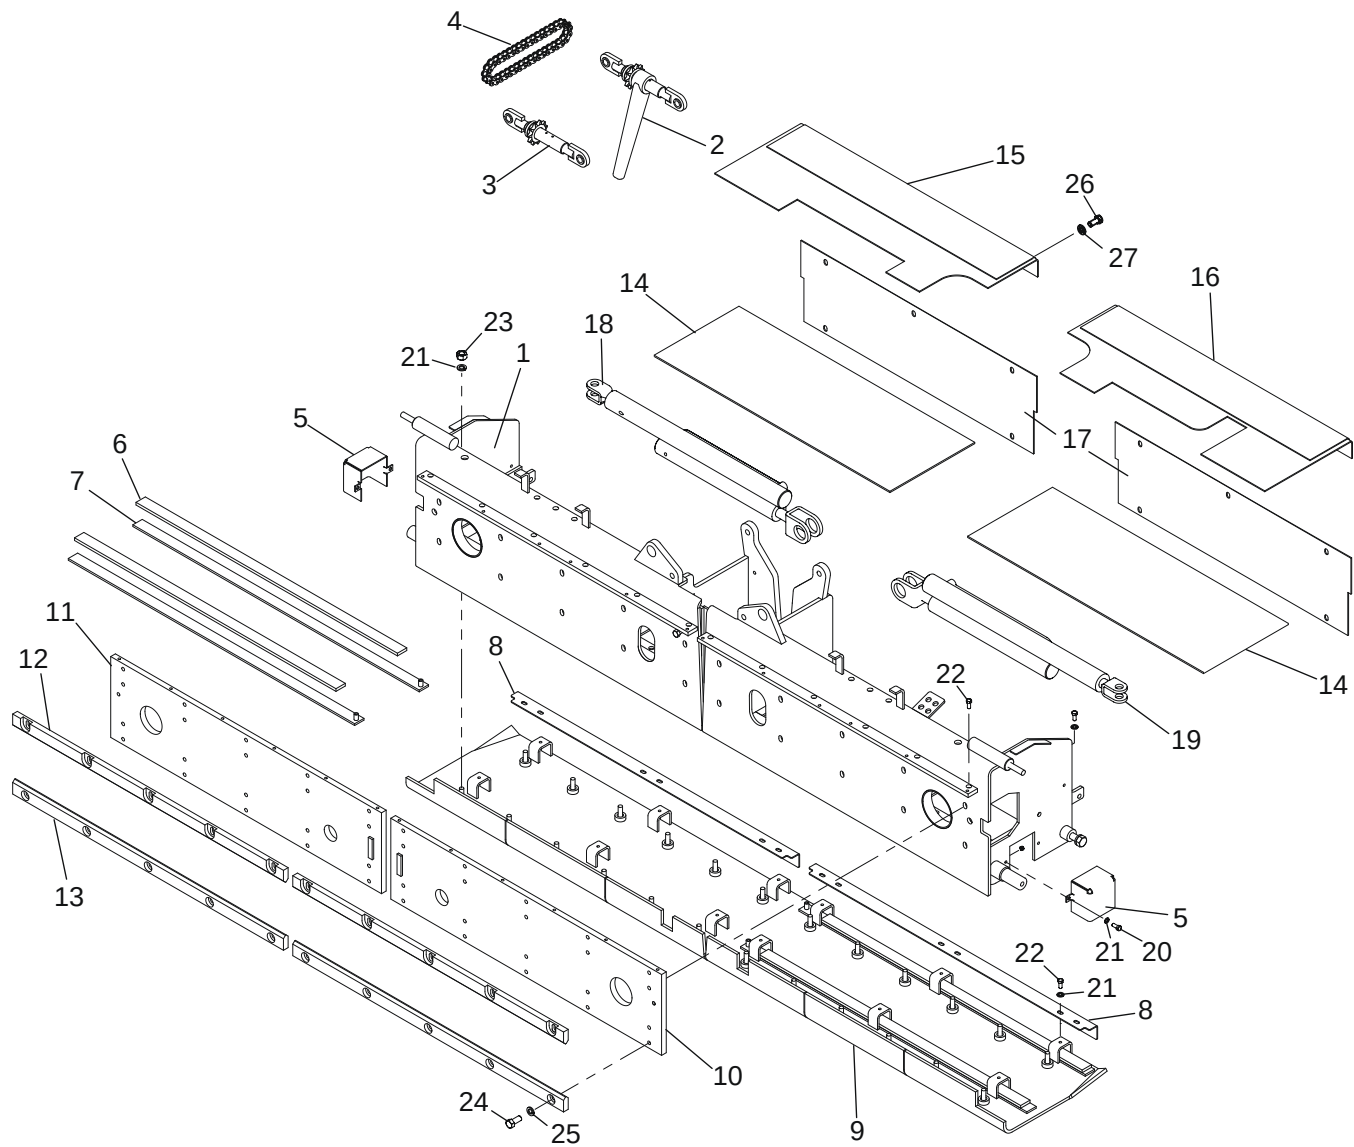


Figure 7-50 815HD Series Screed Non-Sloping

815HD Series Screed Frame Non-Sloping

Item No.	Part Number	Qty.	Description	Remarks
1	1007195	1	Group, Screed Frame, 815HD	
2	983157	1	Assembly, Turnbuckle W/Ratchet	
3	980182	1	Assembly, Crown & Valley, Rear	
4	1008047	1	Chain, Roller, 60H X 39 Pitches	
REF	853411	1	Link, Master, #60 Chain	
5	985125	2	Cover, Elements, Screed Base	
6	985121	4	Bar, Element Hold Down	
7	1007275SRV	4	Element, Heater, 46", 1000W	
8	1007002	2	Cover, Rear Elements	
9	1007089SRV	1	Wearplate, 3/8" Wear Plate With Studs	Not Include 9, 10, 11. 24, 25
10	1008663	1	Weldment, Rail Mount (Left)	
11	1008662	1	Weldment, Rail Mount (Right)	
12	1006425	2	Bar, V-Groove Top Rail	
13	1006426	2	Bar, V-Groove Bottom Rail	
14	985149	2	Cover, Screed Elements	
15	1008758	1	Assembly, Upper Screed Cover (Right)	
16	1008757	1	Assembly, Upper Screed Cover (Left)	
17	1007000	1	Cover, Screed Lower (Left/Right)	
18	981710R	1	Cylinder, Hydraulic, 2.00 x 2.00 x 42.00 x 1.25	
19	981710L	1	Cylinder, Hydraulic, 2.00 x 2.00 x 42.00 x 1.25	
20	100-5-18-8-5F	4	CSHH, 5/16-18 x .50, GR5, FT	
21	302-5	34	Washer, Lock, 5/16	
22	100-5-18-24-5	18	CSHH, 5/16-18 x 1.50, GR5	
23	200-8-13-5	36	Nut, Hex, 1/2-13	
24	100-7-14-16-5F	20	CSHH, 7/16-14 x 1.00, GR5, FT	
25	302-7	20	Washer, Lock, 7/16	
26	100-8-13-32-5	12	CSHH, 1/2-13 x 2.00, GR5	
27	302-8	12	Washer, Lock, 1/2	

815HD SERIES VIBRATOR ASSEMBLY

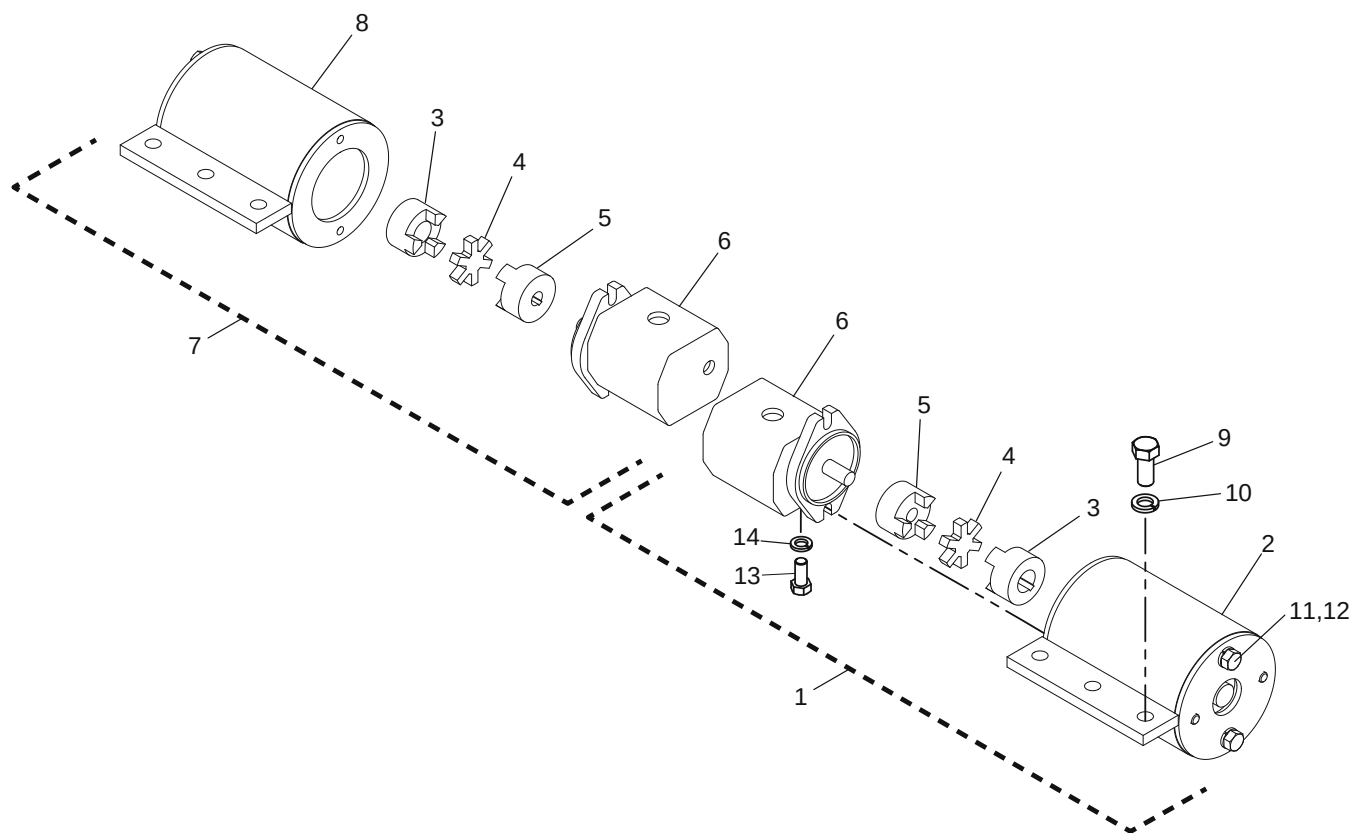


Figure 7-51 815HD Series Vibrator Assembly

815HD Series Vibrator Assembly

Item No.	Part Number	Qty.	Description	Remarks
1	982965LSRV	1	Assembly, Vibrator (Left)	
2	982965L-1	1	Housing, Vibrator (Left)	
3	880030	1	Coupling Half, 3 Jaw, 1"	
4	280040	1	Insert, 3-Jaw Coupling	
5	280030	1	Coupling Half, 3 Jaw, 5/8"	
6	983405	1	Motor, Hydraulic, Gear, 1.17 Cir, "A"	
7	982965RSRV	1	Assembly, Vibrator (Right)	
8	982965R-1	1	Housing, Vibrator (Right)	
9	100-10-11-16-5F	3	CSHH, 5/8-11 x 1.00, GR5, FT	
10	302-10	3	Washer, Lock, 5/8	
11	100-5-18-12-5F	2	CSHH, 5/16-18 x .75, GR5, FT	
12	302-5	2	Washer, Lock, 5/16	
13	100-8-13-16-5F	2	CSHH, .1/2-13 x 1.00, GR5, FT	
14	302-8	2	Washer, Lock, 1/2	

815HD SERIES WALK BOARD ASSEMBLY

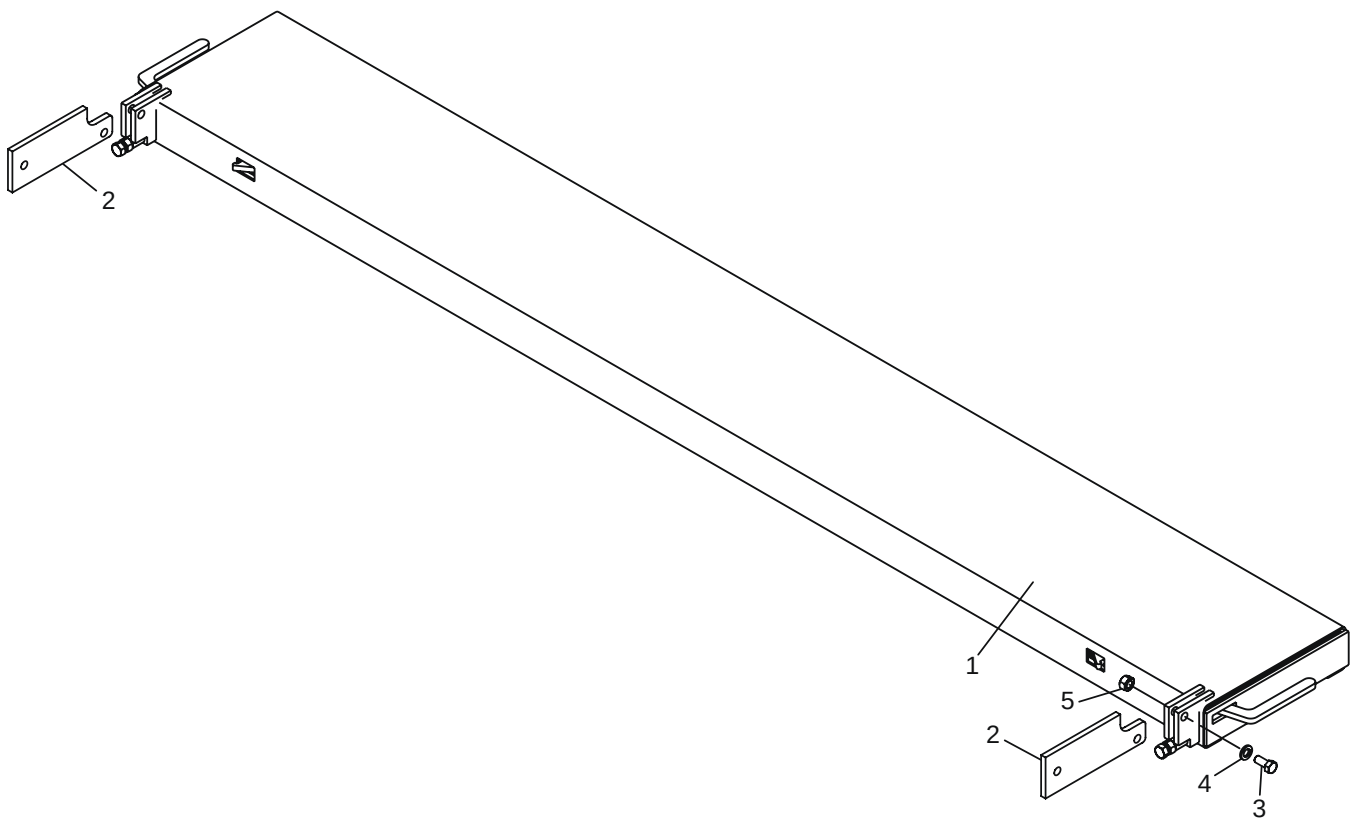


Figure 7-52 815HD Series Walk Board Assembly

815HD Series Walk Board Assembly

Item No.	Part Number	Qty.	Description	Remarks
1	987056SRV	1	Assembly, Walkboard - Long	
2	985163	2	Plate, Walkboard Hinge	
3	100-8-13-20-5F	2	CSHH, 1/2-13 X 1.25, GR5, FT	
4	302-8	2	Washer, Lock, 1/2	
5	200-8-13-5	2	Nut, Hex, 1/2-13, GR5	
6	985549	2	Latch, Walkboard	
REF	250170	2	Spring, Extension	Use with Item 6

815HD SERIES SLIDE PLATE ASSEMBLY

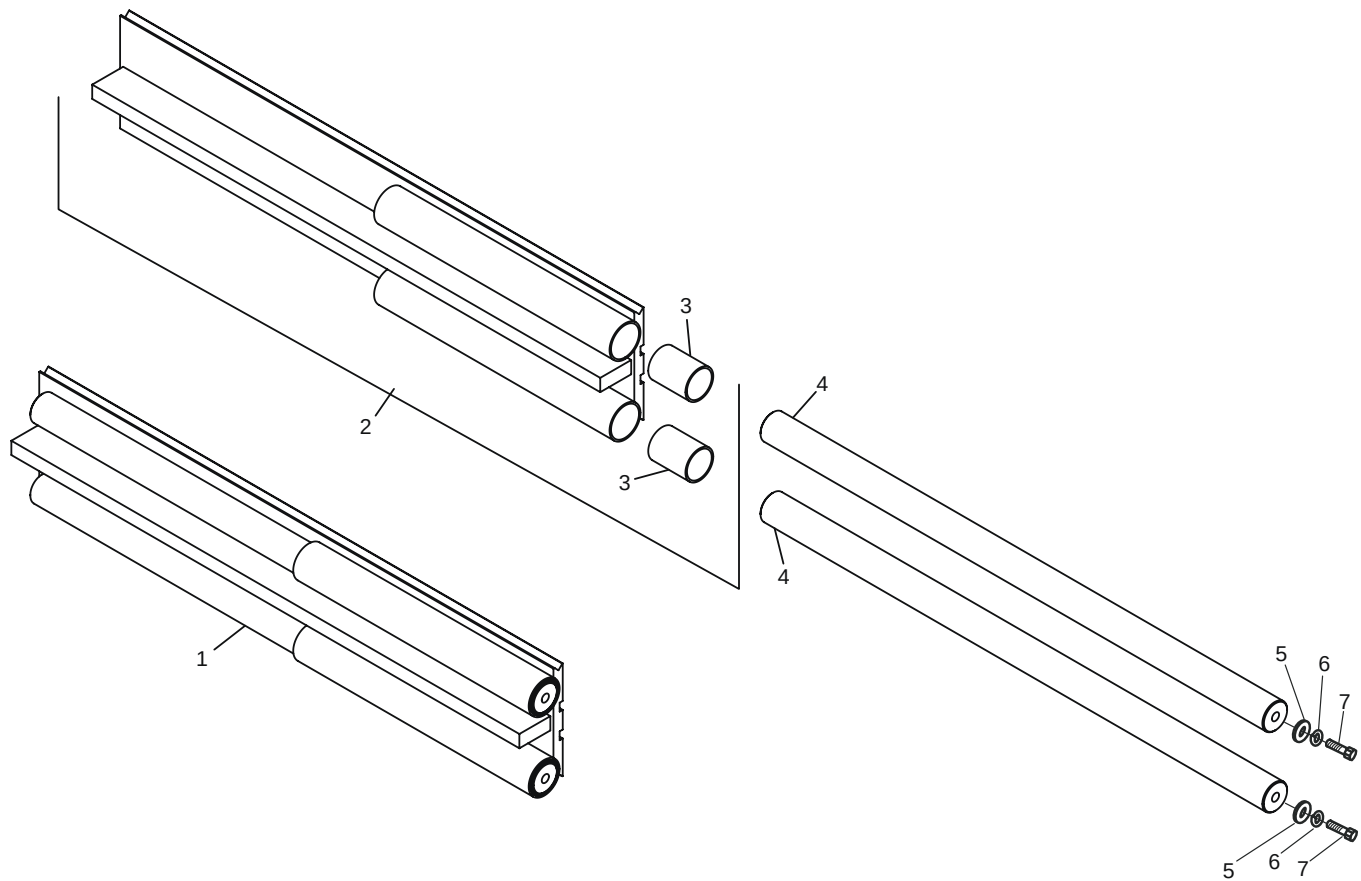


Figure 7-53 815HD Series Slide Plate Assembly

815HD Series Slide Plate Assembly

Item No.	Part Number	Qty.	Description	Remarks
1	1006416	1	Assembly, Slide w/Shfts, HD	
2	1006445	1	Assembly, Slide w/o Shafts	
3	1006417	4	Bushing, Fiber, 2.25 OD / 2.00 ID	
4	1006415	2	Shaft, Screed Extension, Chromed, HD	
5	300-8	4	Washer, Flat, SAE, 1/2	
6	302-8	4	Washer, Lock, 1/2	
7	100-8-20-28-5	4	CSHH, 1/2-20 x 1.75, GR5	

815HD SERIES EXTENSION ASSEMBLY (LEFT)

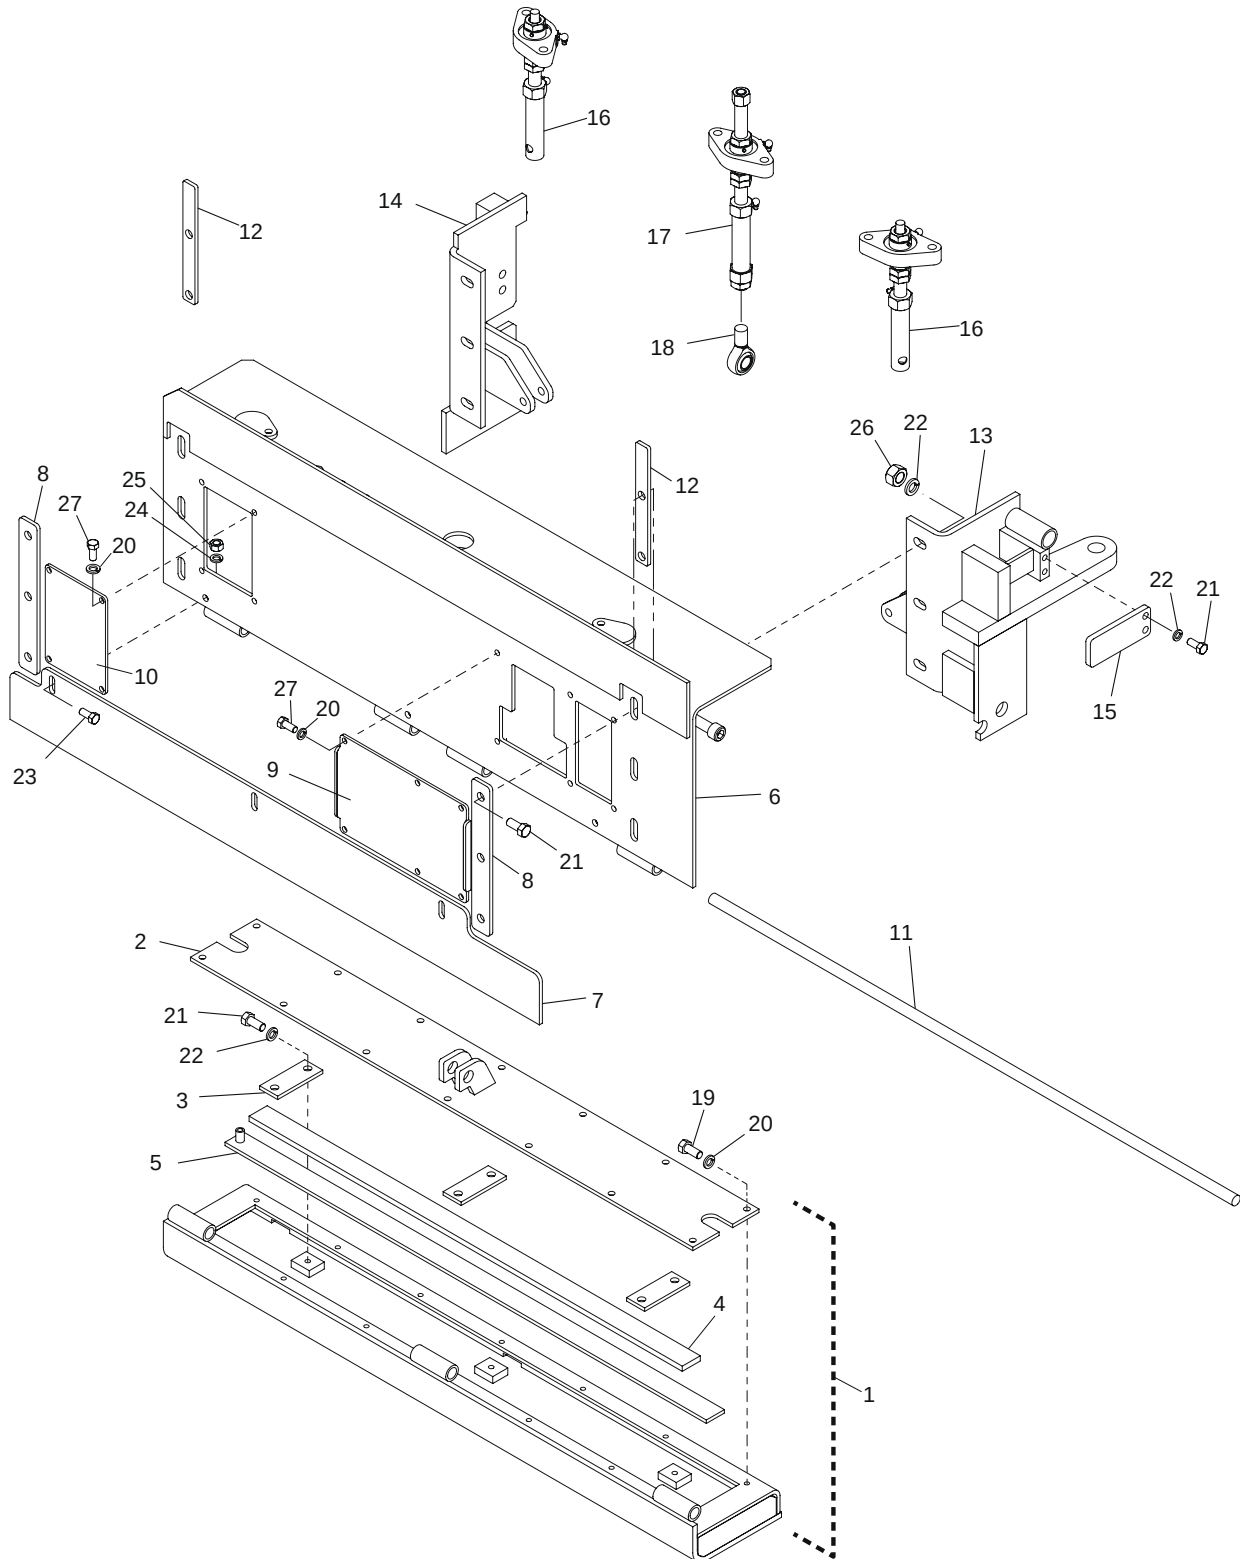


Figure 7-54 815HD Series Extension Assembly (Left)

815HD Series Extension Assembly (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	1006380SRV	1	Assembly, Extension Heatbox	Not Include 4, 5
2	1008665	1	Weldment, Heatbox Cover	
3	985123	3	Clamp, Element, Screed Extension	
4	985120	1	Bar, .25 x 1.5 x 36	
5	987890SRV	1	Element, Heater, Screed, 41"	
6	1006378SRV	1	Assembly, Screed Extension, Slope (Left)	Includes all items
7	1006400	1	Plate, Extension Strikeoff	
8	1006395	2	Bar, Vertical Lift	
9	1008664	1	Weldment, Extension Vibrator Cover	
10	1006398	1	Plate, Extension Access Cover	
11	854447SRV	1	Round, .688 x 43.50 CRS	
12	1006397	2	Bar, Vertical Lift Gauge	
13	1007096	1	Assembly, Outer Extension Mount (Left)	
14	1007097	1	Assembly, Inner, Extension Mount (Left)	
15	1006536	1	Plate, Endgate Bracket w/Holes	
16	1006390	2	Assembly, Vertical Lift Adjust	
17	1006401	1	Assembly, AOA Adjuster	
18	1000947	1	Ball Joint, .750, Male	
19	100-5-18-40-5	14	CSHH, 5/16-18 x 2.50, GR5	
20	302-5	24	Washer, Lock, 5/16	
21	100-6-16-16-5F	14	CSHH, 3/8-16 x 1.00, GR5, FT	
22	302-6	14	Washer, Lock, 3/8	
23	100-7-14-20-5	3	CSHH, 7/16-14 x 1.50, GR5	
24	302-7	3	Washer, Lock, 7/16	
25	200-7-14-5	3	Nut, Hex, 7/16-14, GR5	
26	200-6-16-5	6	Nut, Hex, 3/8-16, GR5	
27	100-5-18-12-5F	10	CSHH, 5/16-18 x .75, GR5, FT	
28	870030	3	Bearing, Screed Flight Screw	

815HD SERIES EXTENSION ASSEMBLY (RIGHT)

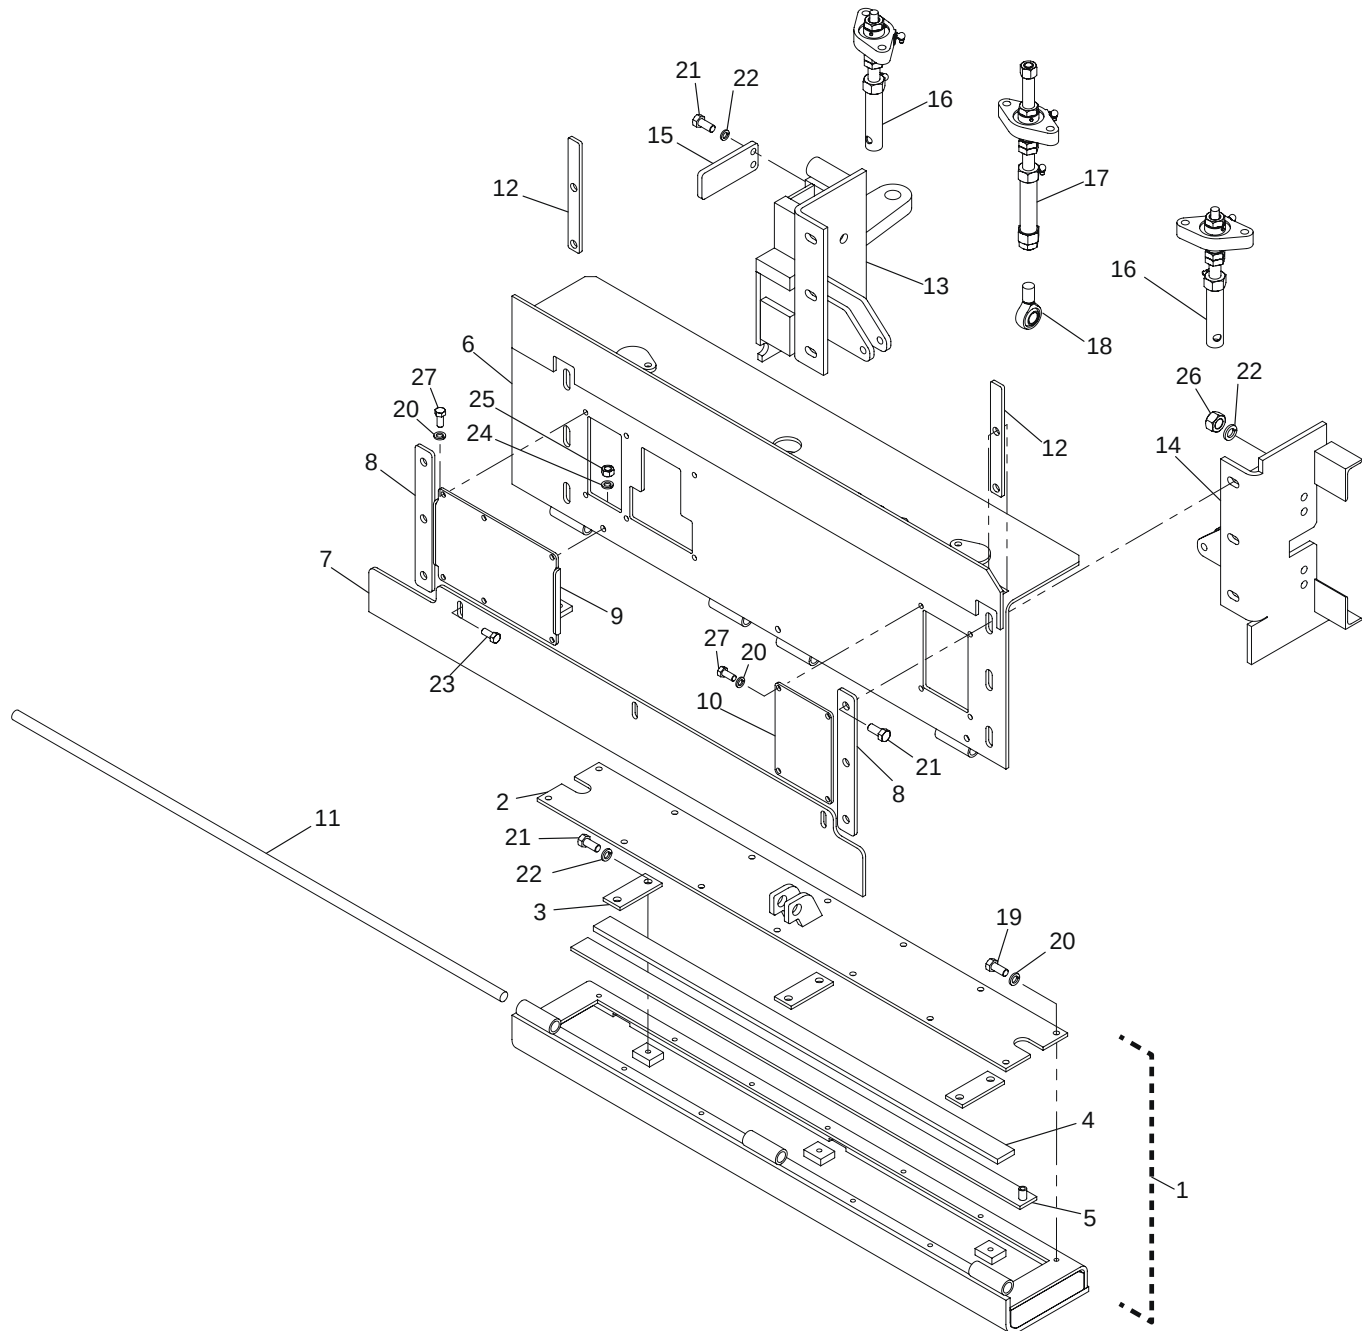


Figure 7-55 815HD Series Extension Assembly (Right)

815HD Series Extension Assembly (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	1006380SRV	1	Assembly, Extension Heatbox	Not Include 4, 5
2	1008665	1	Weldment, Heatbox Cover	
3	985123	3	Clamp, Element, Screed Extension	
4	985120	1	Bar, .25 x 1.5 x 36	
5	987890SRV	1	Element, Heater, Screed, 41"	
6	1006379SRV	1	Assembly, Screed Extension, Slope (Right)	Includes all items
7	1006400	1	Plate, Extension Strikeoff	
8	1006395	2	Bar, Vertical Lift	
9	1008664	1	Weldment, Extension Vibrator Cover	
10	1006398	1	Plate, Extension Access Cover	
11	854447SRV	1	Round, .688 x 43.50 CRS	
12	1006398	2	Bar, Vertical Lift Gauge	
13	1007098	1	Assembly, Outer Extension Mount (Right)	
14	1007099	1	Assembly, Inner, Extension Mount (Right)	
15	1006536	1	Plate, Endgate Bracket w/Holes	
16	1006390	2	Assembly, Vertical Lift Adjust	
17	1006401	1	Assembly, AOA Adjuster	
18	1000947	1	Ball Joint, .750, Male	
19	100-5-18-40-5	14	CSHH, 5/16-18 x 2.50, GR5	
20	302-5	24	Washer, Lock, 5/16	
21	100-6-16-16-5F	14	CSHH, 3/8-16 x 1.00, GR5, FT	
22	302-6	14	Washer, Lock, 3/8	
23	100-7-14-20-5	3	CSHH, 7/16-14 x 1.50, GR5	
24	302-7	3	Washer, Lock, 7/16	
25	200-7-14-5	3	Nut, Hex, 7/16-14, GR5	
26	200-6-16-5	6	Nut, Hex, 3/8-16, GR5	
27	100-5-18-12-5F	10	CSHH, 5/16-18 x .75, GR5, FT	
28	870030	3	Bearing, Screed Flight Screw	

815HD SERIES ENDGATE ASSEMBLY (LEFT)

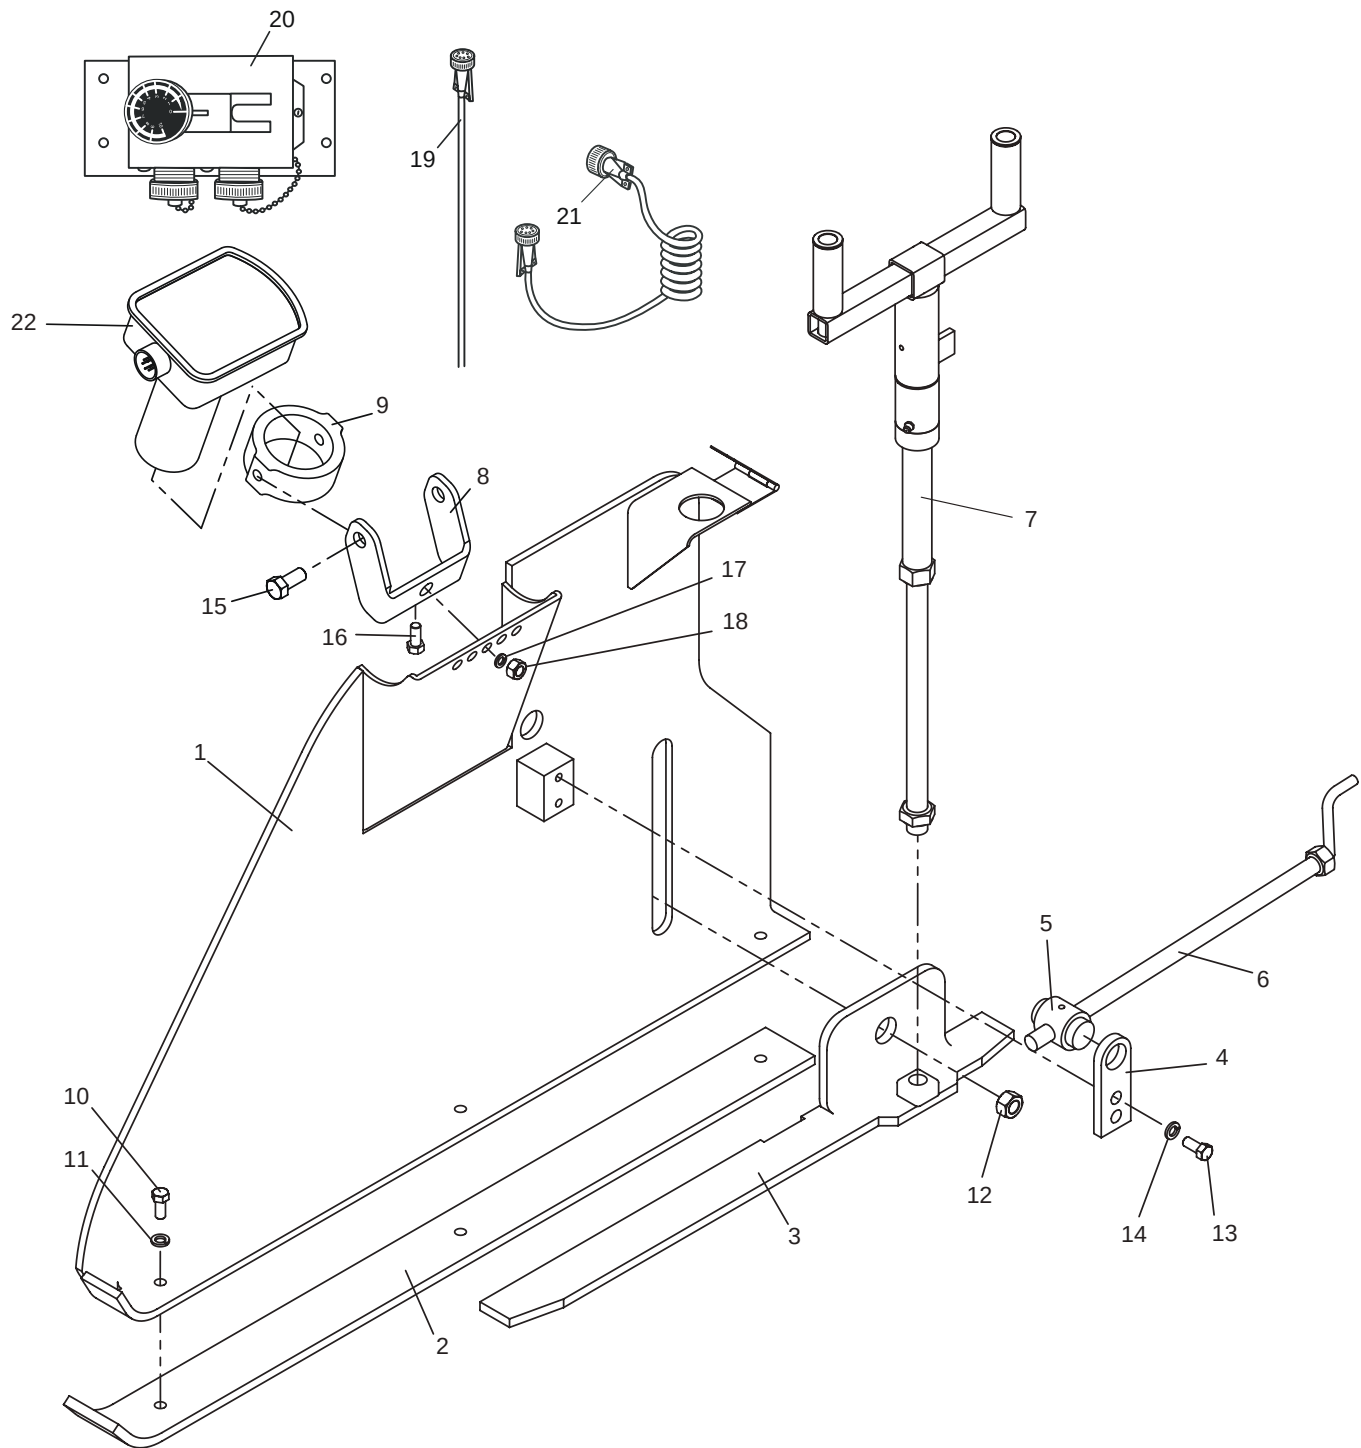


Figure 7-56 815HD Series Endgate Assembly (Left)

815HD Series Endgate Assembly (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	1006443SRV	1	Assembly, Endgate, HD (Left)	Does Not Include items 8 - 11
2	1006442	1	Plate, Endgate	
3	1006571	1	Bracket, Depth Screw Bottom Mount (Left)	
4	980458	1	Bar, Tilt Screw Hold Down	
5	980457	1	Shaft, Tilt Screw Swivel	
6	890081SRV	1	Assembly, Tilt Screw, Endgate	
7	890092SRV	1	Assembly, Depth Screw, Endgate	
8	1006451	1	Bracket, Sonic Sensor	
9	1008905	1	Mount, Sonic Sensor	
10	980550	1	Cable, Power, Ultrasonic	
11	980540	1	Sensor, Ultrasonic, Sauer	
12	100-8-13-16-5F	3	CSHH, 1/2-13 x 1.00, GR5, FT	
13	302-8	3	Washer, Lock, 1/2	
14	204-14-14-8	1	Nut, Lock, Stover, 7/8-14, GR8	
15	100-6-16-16-5F	2	CSHH, 3/8-16 x 1.00, GR5, FT	
16	302-6	2	Washer, Lock, 3/8	
17	100-5-18-8-5F	2	CSHH, 5/16-18 x .50, GR5, FT	
18	100-7-14-12-5F	1	CSHH, 7/16-14 x .75, GR5, FT	
19	982769SRV	1	Cable, Power, Ultrasonic	
20	982795	1	Remote Pod, Ultrasonic	
21	983050	1	Coil Cord, 6s/6s, 1.50 Ft. to 7.50 Ft.	
22	982794	1	Sensor, Ulstrsonic	

815HD SERIES ENDGATE ASSEMBLY (RIGHT)

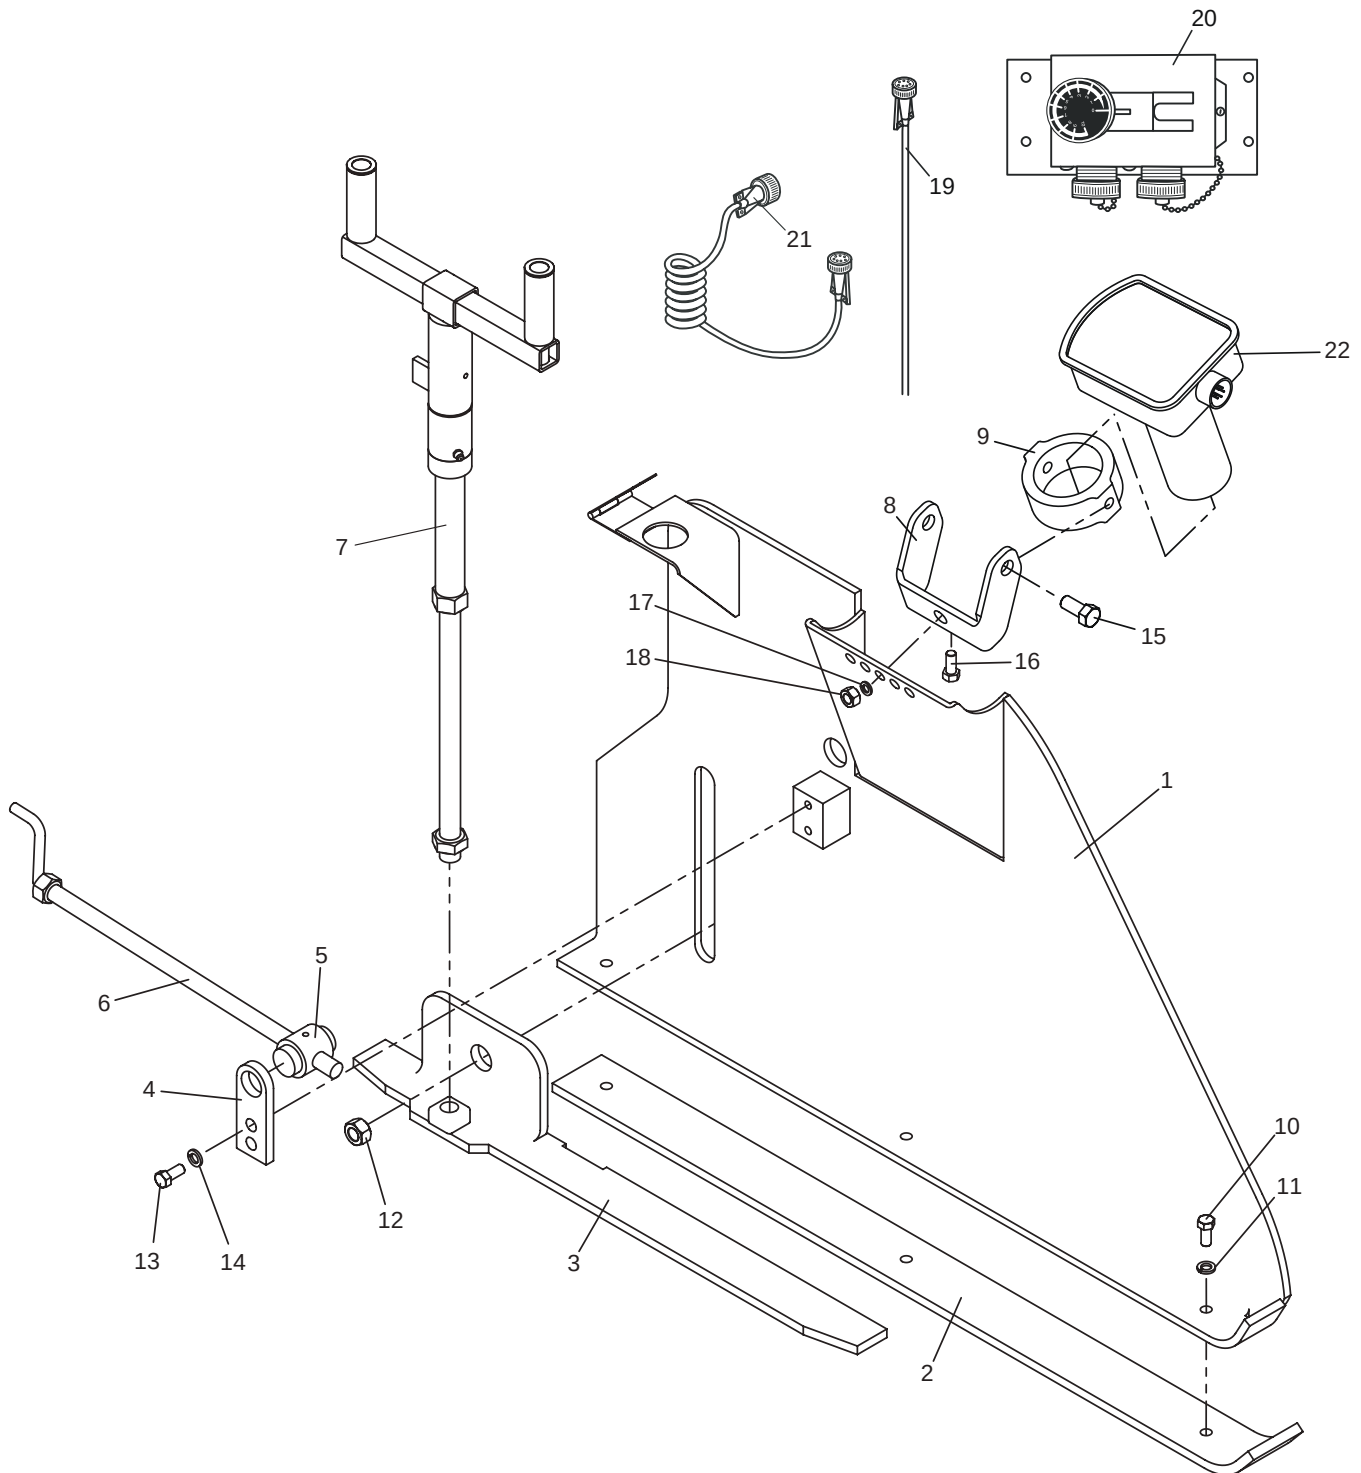


Figure 7-57 815HD Series Endgate Assembly (Right)

815HD Series Endgate Assembly (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	1006560SRV	1	Assembly, Endgate, HD Right)	Does Not Include items 8 - 11
2	1006442	1	Plate, Endgate	
3	1006452	1	Bracket, Depth Screw Bottom Mount Right)	
4	980458	1	Bar, Tilt Screw Hold Down	
5	980457	1	Shaft, Tilt Screw Swivel	
6	890081SRV	1	Assembly, Tilt Screw, Endgate	
7	890092SRV	1	Assembly, Depth Screw, Endgate	
8	1006451	1	Bracket, Sonic Sensor	
9	1008905	1	Mount, Sonic Sensor	
10	980550	1	Cable, Power, Ultrasonic	
11	980540	1	Sensor, Ultrasonic, Sauer	
12	100-8-13-16-5F	3	CSHH, 1/2-13 x 1.00, GR5, FT	
13	302-8	3	Washer, Lock, 1/2	
14	204-14-14-8	1	Nut, Lock, Stover, 7/8-14, GR8	
15	100-6-16-16-5F	2	CSHH, 3/8-16 x 1.00, GR5, FT	
16	302-6	2	Washer, Lock, 3/8	
17	100-5-18-8-5F	2	CSHH, 5/16-18 x .50, GR5, FT	
18	100-7-14-12-5F	1	CSHH, 7/16-14 x .75, GR5, FT	
19	982769SRV	1	Cable, Power, Ultrasonic	
20	982795	1	Remote Pod, Ultrasonic	
21	983050	1	Coil Cord, 6s/6s, 1.50 Ft. to 7.50 Ft.	
22	982794	1	Sensor, Ulstrsonic	

815HD SERIES SCREED PULL ARM ASSEMBLY (LEFT)

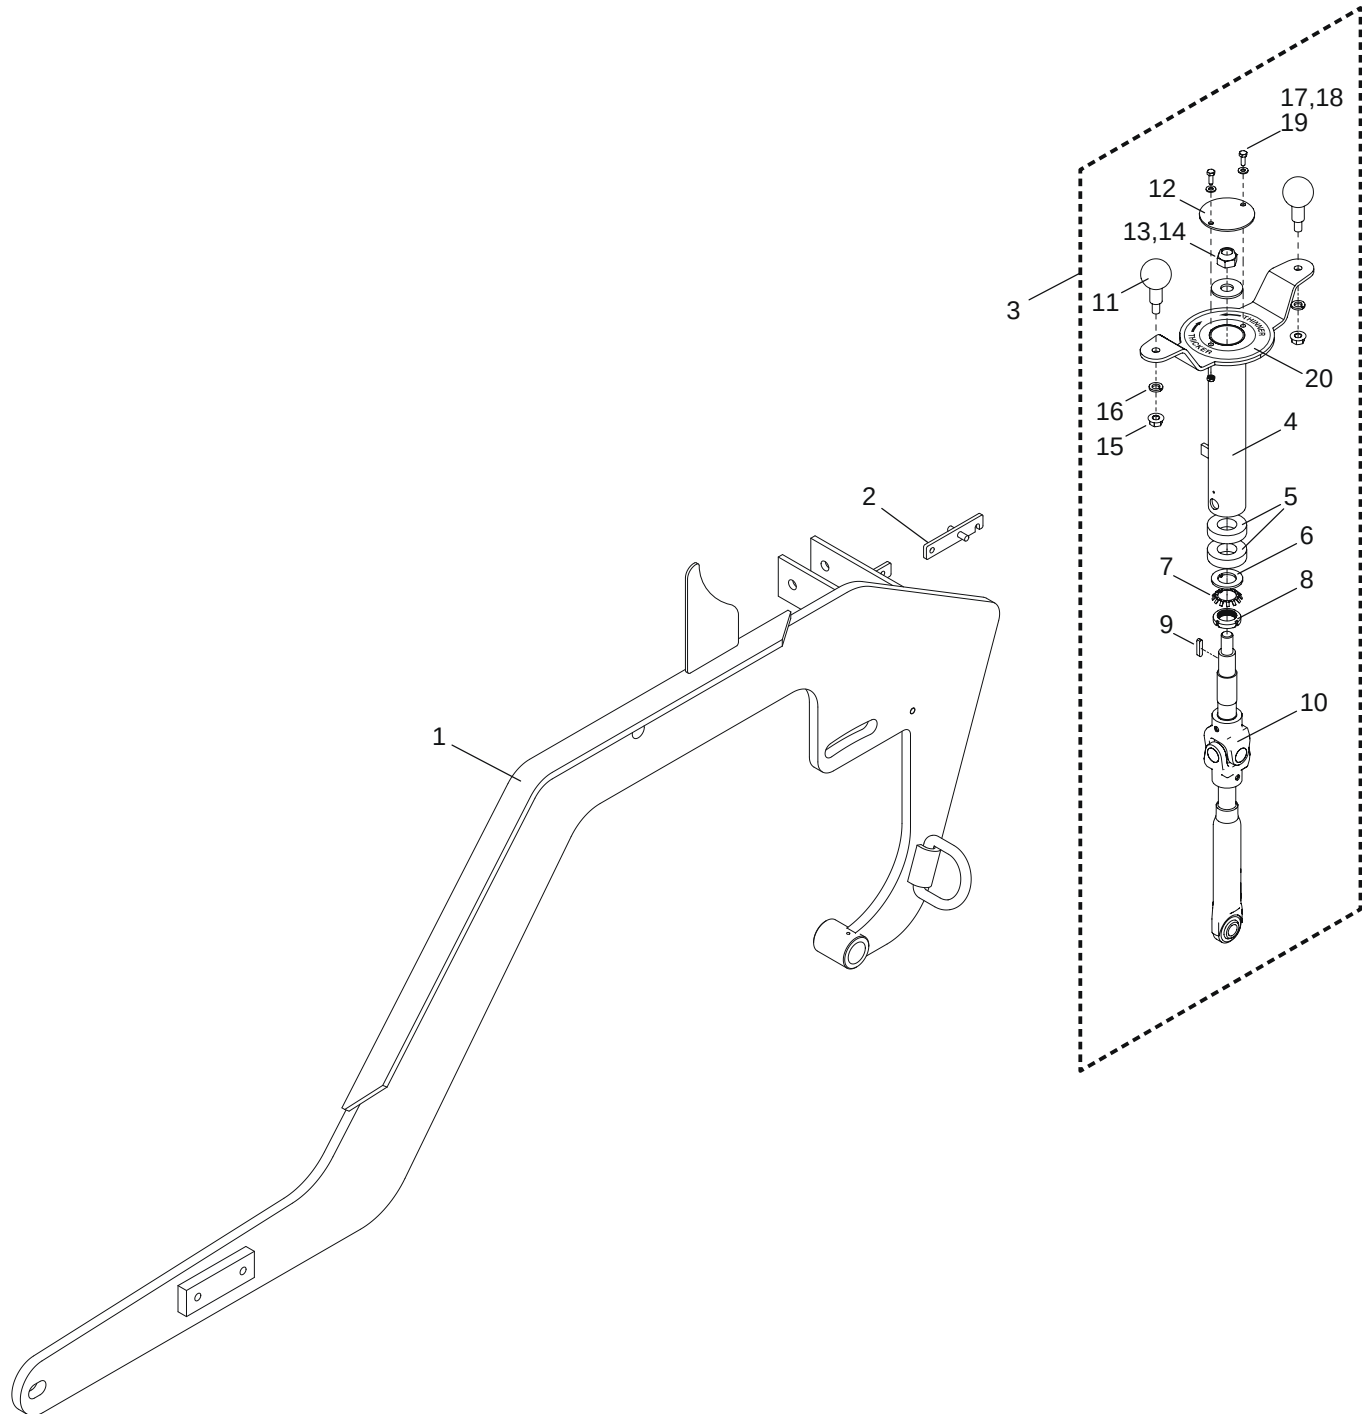


Figure 7-58 815HD Series Screed Pull Arm Assembly (Left)

815HD Series Screed Pull Arm Assembly (Left)

Item No.	Part Number	Qty.	Description	Remarks
1	1008703	1	Assembly, Screed Arm, 8510 (Left)	
2	851375SRV	1	Lock Arm, Flight Screw	
3	1011374SRV	1	Assembly, Thickness	
4	1011375	1	Weldment, Thickness Adjuster Handle	
5	810110	2	Bearing Roller, 1-1/4"	
6	20931333	1	Washer, 13/16	
7	95200978	1	Washer, Lock, Thin Series	
8	95200879	1	Nut, Lock	
9	1011309	1	Key, .25 x .25 x 1.25	
10	1011373	1	Assembly, Lower Thickness Adjuster	
11	981574	2	Knob, Revolving Ball, M12x1.75	
12	1006434	1	Cap, Adjuster Handle	
13	95998936	1	Locknut, PTORQ, 3/4-16	
14	301-12	1	Washer, Flat, 3/4	
15	200-M12-1.75-8.8	2	Nut, Hex, M12x1.75, C 8.8	
16	302-M12	2	Washer, Lock, M12	
17	100-4-20-12-5F	2	CSHH, 1/4-20 x .75, GR5, FT	
18	300-4	2	Washer, Flat, SAE, 1/4	
19	200-4-20-5	2	Nut, Hex, 1/4-20, GR5	
20	1007677-01	1	Decal, Thicker/Thinner	

815HD SERIES SCREED PULL ARM ASSEMBLY (RIGHT)

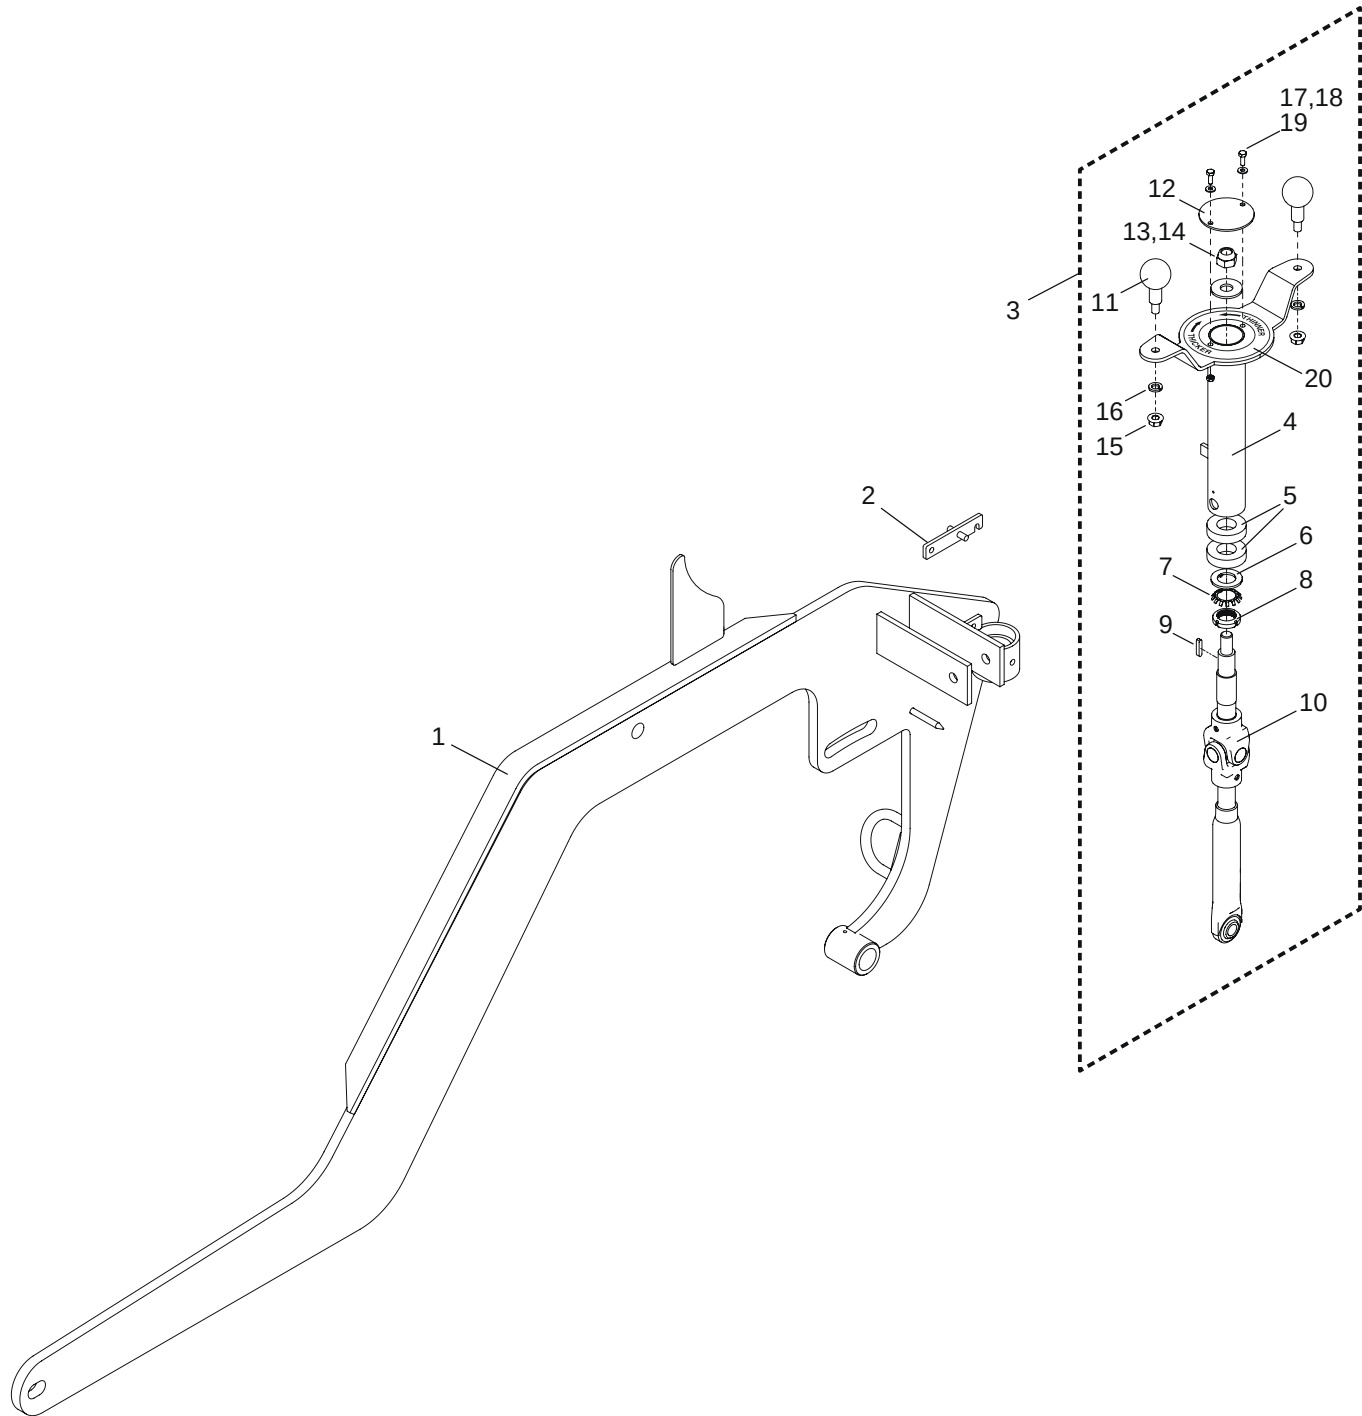


Figure 7-59 815HD Series Screed Pull Arm Assembly (Right)

815HD Series Screed Pull Arm Assembly (Right)

Item No.	Part Number	Qty.	Description	Remarks
1	1008704	1	Assembly, Screed Arm, 8510 (Right)	
2	851373SRV	1	Lock Arm, Flight Screw	
3	1011374SRV	1	Assembly, Thickness	
4	1011375	1	Weldment, Thickness Adjuster Handle	
5	810110	2	Bearing Roller, 1-1/4"	
6	20931333	1	Washer, 13/16	
7	95200978	1	Washer, Lock, Thin Series	
8	95200879	1	Nut, Lock	
9	1011309	1	Key, .25 x .25 x 1.25	
10	1011373	1	Assembly, Lower Thickness Adjuster	
11	981574	2	Knob, Revolving Ball, M12x1.75	
12	1006434	1	Cap, Adjuster Handle	
13	95998936	1	Locknut, PTORQ, 3/4-16	
14	301-12	1	Washer, Flat, 3/4	
15	200-M12-1.75-8.8	2	Nut, Hex, M12x1.75, C 8.8	
16	302-M12	2	Washer, Lock, M12	
17	100-4-20-12-5F	2	CSHH, 1/4-20 x .75, GR5, FT	
18	300-4	2	Washer, Flat, SAE, 1/4	
19	200-4-20-5	2	Nut, Hex, 1/4-20, GR5	
20	1007677-01	1	Decal, Thicker/Thinner	

815HD SERIES CITRUS TANK & HEAT CONTROL BOX

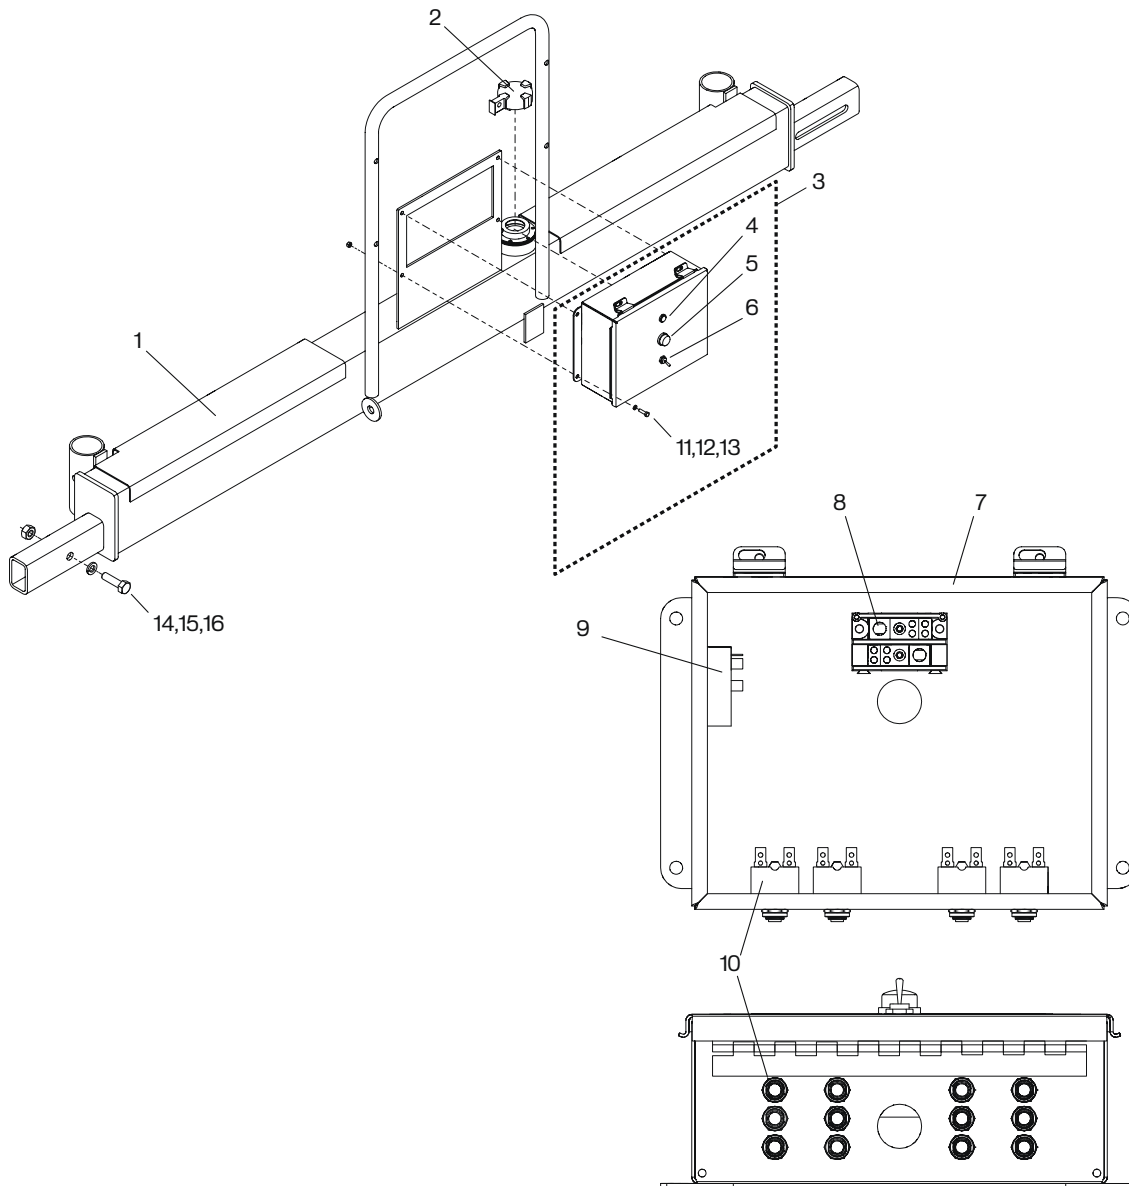


Figure 7-60 815HD Series Citrus Tank & Heat Control Box

815HD Series Screed Citrus Tank & Heat Control Box

Item No.	Part Number	Qty.	Description	Remarks
1	1008862SRV	1	Assembly, Screed, Citrus, Tank, Electric	Includes Item 3
2	140030FL	1	Cap, Fuel Tank, Lockable	
REF	140030GK	1	Strainer & Gasket Kit	Not Shown
3	1010397	1	Assembly, Electric Heat Control	
4	31983	1	Light, Red, Dash, .500 Hole	
5	982249	1	Switch, Push Button	
6	851391	1	Switch, Toggle, SPST, 2-Position	
7	1010397-01	1	Enclosure, Electric Heat w/Holes	
8	985138-04	1	Block, Terminal	
9	985142	1	Timer, Electric, .06 - 60 minute	
10	1009228	12	Circuit Breaker, 10A	
11	985143	1	Decal, Electric Heat	
12	100-5-18-8-5F	4	CSHH, 5/16-18 x .50, GR5, FT	
13	302-5	4	Washer, Lock, 5/16	
14	200-5-18-5	4	Nut, Hex, 5/16-18, GR5	
15	100-10-11-56-5	2	CSHH, 5/8-11 x 3.50, GR5	
16	302-10	2	Washer, Lock, 5/8	
17	200-10-11-5	2	Nut, Hex, 5/8-11, GR5	

815HD SERIES SCREED OPTIONAL COMPONENTS

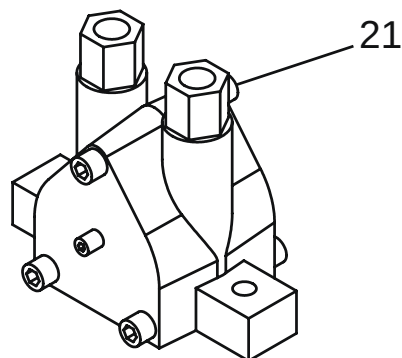
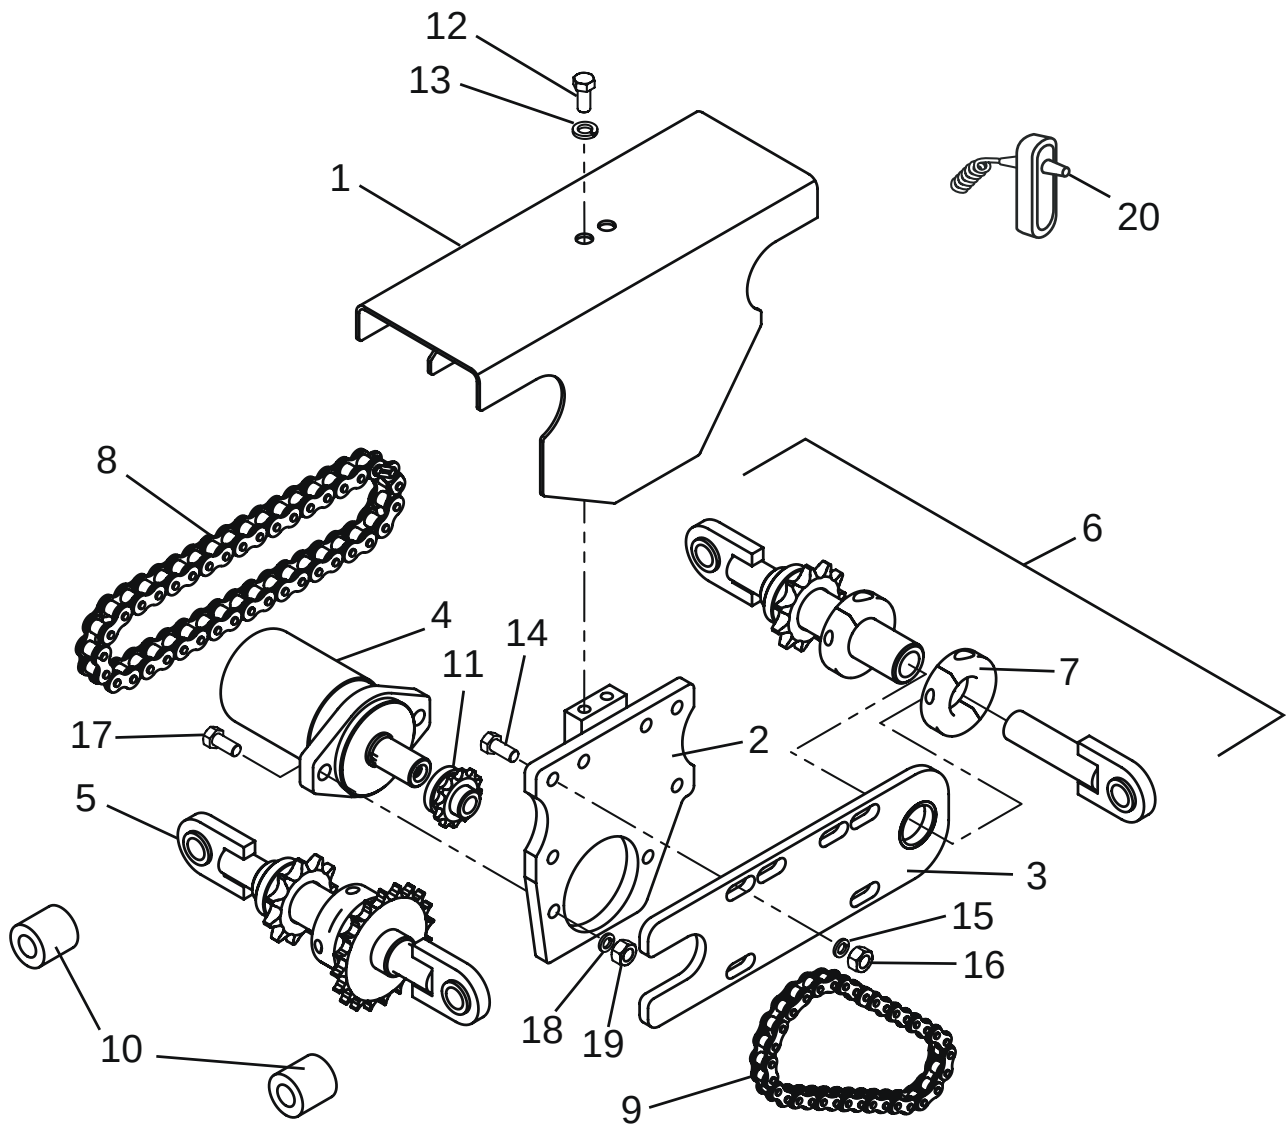


Figure 7-61 815HD Series Screed Optional Components

815HD Series Screed Optional Components

Item No.	Part Number	Qty.	Description	Remarks
1	1008168	1	Cover, Power Crown	
2	1008667	1	Weldment, Power Crown Center	
3	1008600	1	Plate, Power Crown Adjuster	Does not include Bushing
REF	1000960	1	Bushing, Composite, Power Crown	
4	986640	1	Motor, Hydraulic, Danfoss	
5	1008668SRV	1	Assembly, Crown And Valley Front	
6	980182	1	Assembly, Crown & Valley, Rear	Does not include item # 7
7	1000798	2	Collar, Power Crown Locking	
8	1008047	1	Chain, Roller, 60H x 39 Pitches	
9	1000958	1	Chain, Roller, 50 x 18	
10	1006419	2	Spacer, Crown Mount	
11	1000799	1	Sprocket, #50 Roller Chain	
12	100-6-16-16-5F	2	CSHH, 3/8-16 x 1.00, GR5, FT	
13	302-6	2	Washer, Lock, 3/8	
14	100-8-13-16-5F	6	CSHH, 1/2-13 x 1.00, GR5, FT	
15	302-8	6	Washer, Lock, 1/2	
16	200-8-13-5	6	Nut, Hex, 1/2-13, GR5	
17	100-8-13-20-5F	2	CSHH, 1/2-13 x 1.25, GR5, FT	
18	302-8	2	Washer, Lock, 1/2	
19	200-8-13-5	2	Nut, Hex, 1/2-13, GR5	
REF	920238-3	A/R	Cover, 3/4" Condulet	
REF	920238-2	A/R	Condulet, 3/4" Aluminum	
REF	920238-4	A/R	Gasket, Condulet Box, 3/4"	
REF	920238-5	A/R	Aluminum Plug, 3/4" Condulet	
REF	3400DI	A/R	Water Tight Connection, 3/4" X 3/4"	
20	72884	A/R	Switch, Toggle, SPST, 2-Position, MOM	
21	1000059	2	Vibrator, Hydraulic	

HD HEATED ENDGATE ASSEMBLY - OPTION (1 OF 3)

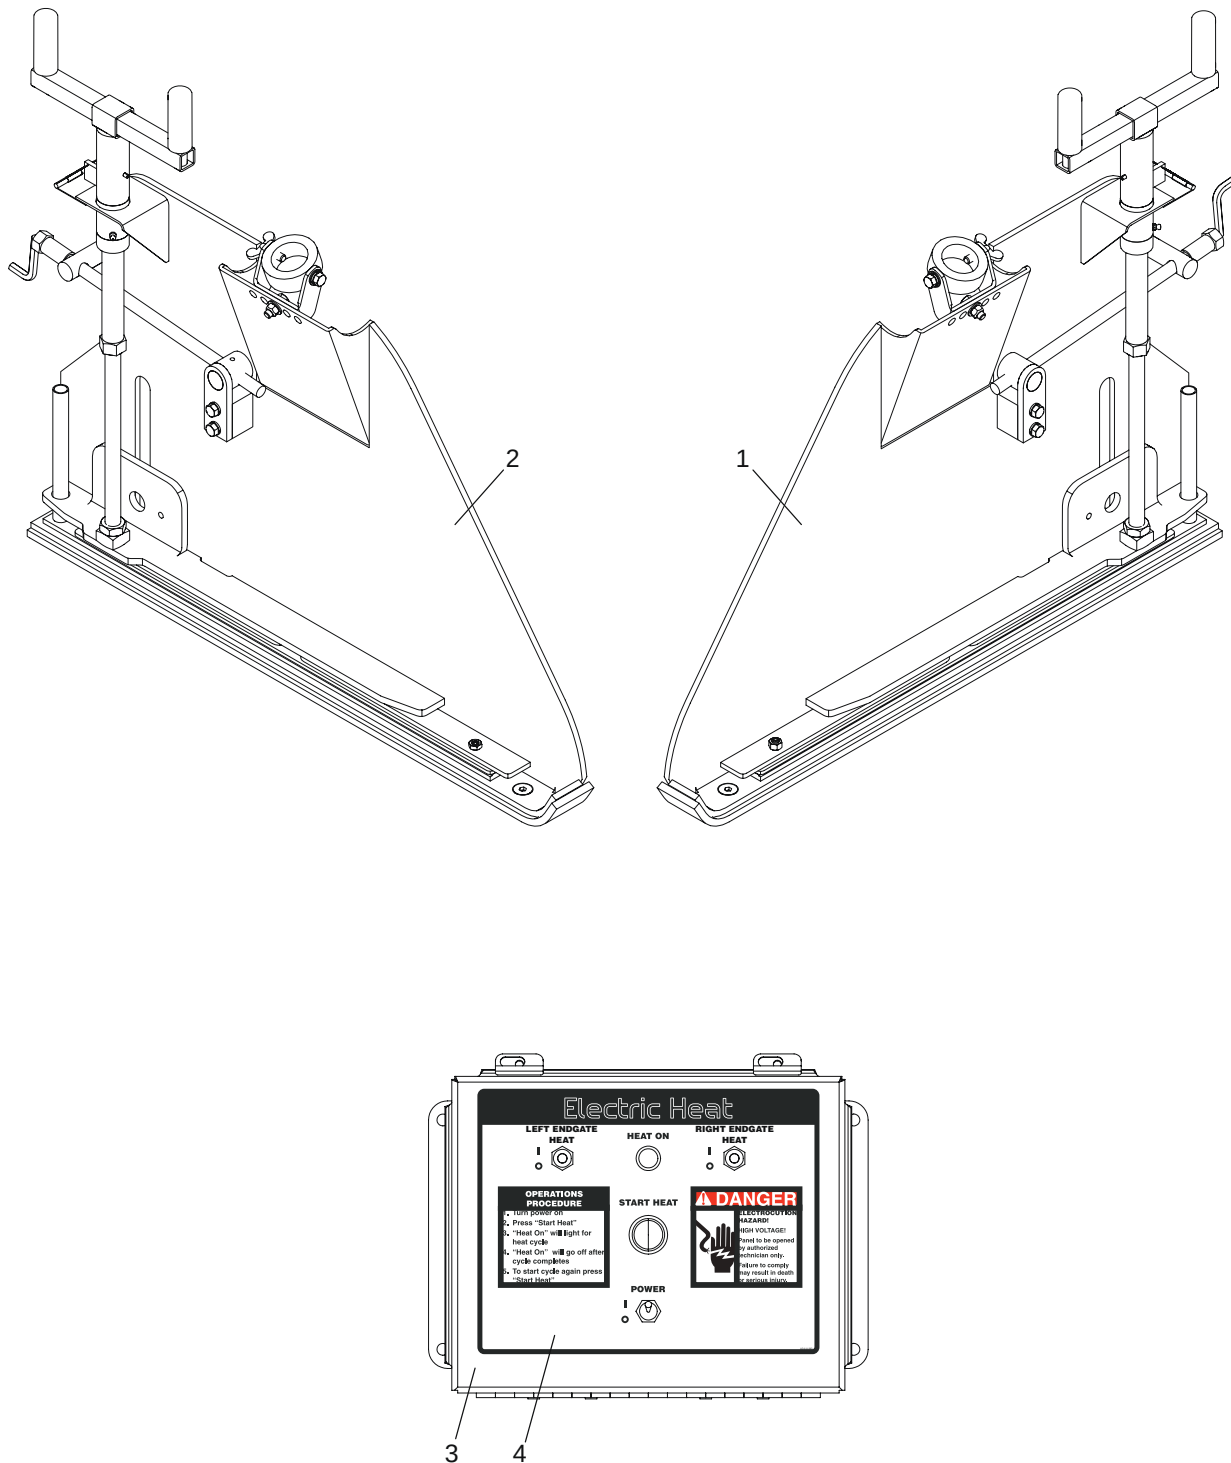


Figure 7-62 HD Heated Endgate Assembly - Option (1 of 3)

HD Heated Endgate Assembly (1 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1011211SRV		Option, HD Heated Endgates	
1	1011143SRV	1	Assembly, Heated HD Endgate (Left)	See Figure 7-63
2	1011144SRV	1	Assembly, Heated HD Endgate (Right)	See Figure 7-64
3	1011311	1	Assembly, Electric Heat Control	See Figure 7-68
4	1011180	1	Decal, Electric Heat	See Figure 7-68
5	1011315	1	Kit, Extension Element Hose/Wiring	Not Shown
REF	1011315-01	2	Hose, 8LOLA, Lock On, 300 PSI, Black, 40"	Not Shown
REF	1011315-02	2	Hose, 8LOLA, Lock On, 300 PSI, Black, 50"	Not Shown
REF	1010528	6	Fitting, 8LOC - 8RFJX90	Not Shown
REF	983199	2	Connector, 2-Pin, Plug, DT06-2S Deutsch	Not Shown
REF	983198	2	Socket, 2-Pin, DT04-2P Deutsch	Not Shown
REF	982448	4	Terminal, Socket, Deutsch, 14-16 AWG	Not Shown
REF	983209	2	Wedge, Socket, 2P Deutsch	Not Shown
REF	983208	2	Connector, Wedge, Plug, 2P Deutsch	Not Shown
REF	982456	4	Pin, Deutsch, 14-16 AWG	Not Shown

HD HEATED ENDGATE ASSEMBLY - OPTION (2 OF 3)

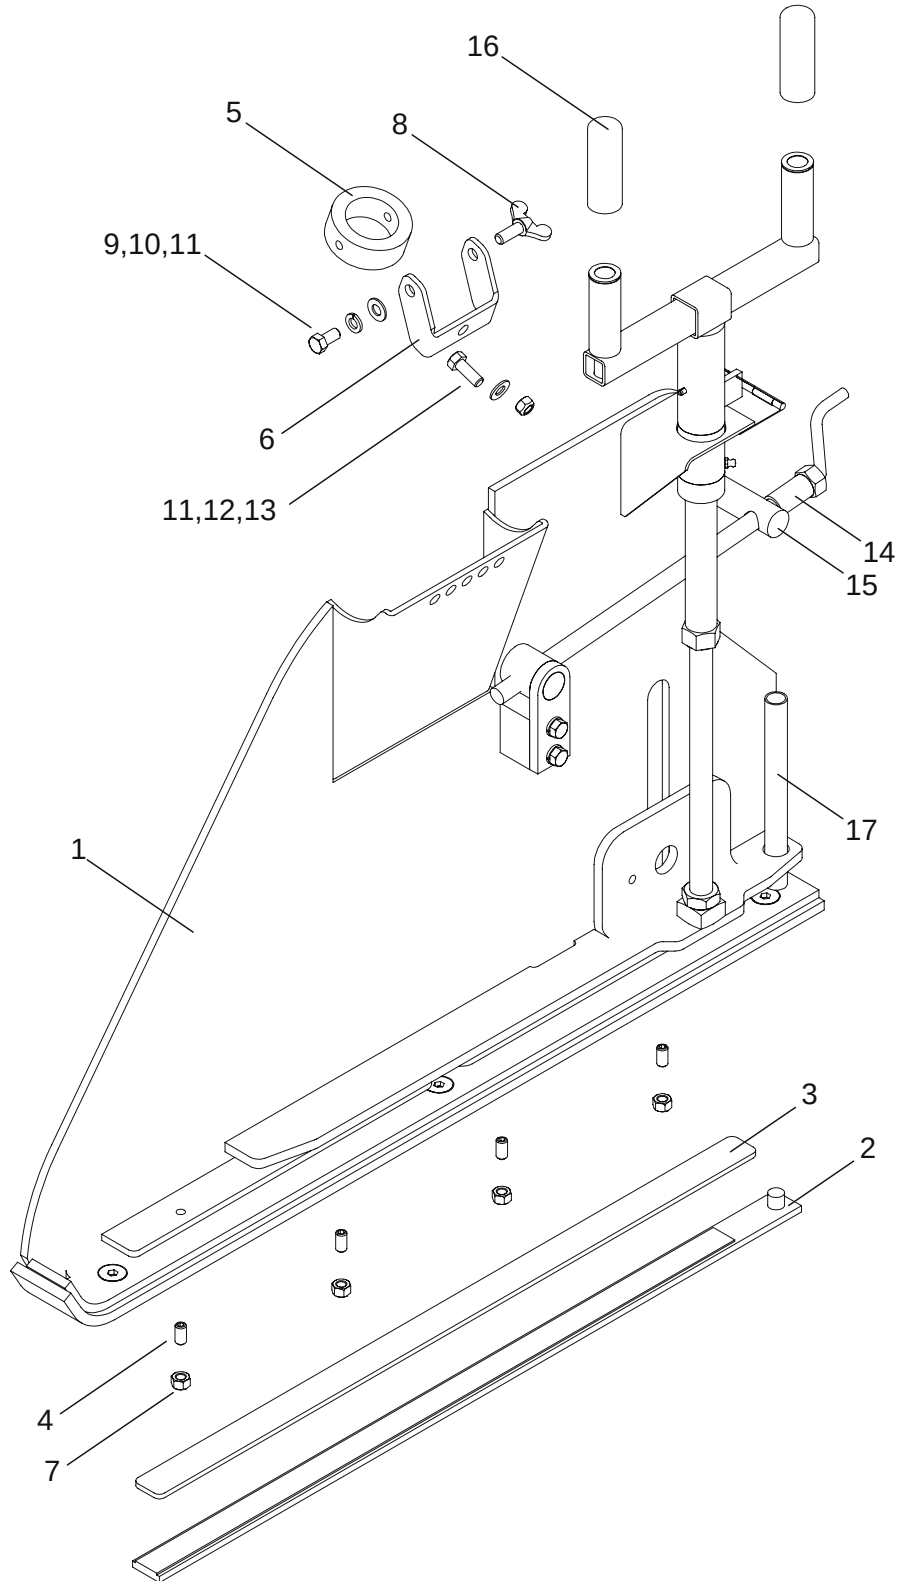


Figure 7-63 HD Heated Endgate Assembly - Option (2 of 3)

Heated Endgate Assembly - Option (2 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1011143SRV		Assembly, Heated HD Endgate (Left)	
1	1011148	1	Assembly, Heated HD Endgate (Left)	
2	1011158	1	Element, Heating, 500W/220V, 30" Long	
3	1011155	1	Bar, Element, Backup	
4	113-6-16-12	4	Set Screw, Hex Socket, Cup, 3/8-16 x .75	
5	1008905	1	Mount, Sonic Sensor	
6	1006451	1	Bracket, Sonic Sensor	
7	200-6-16-5	4	Nut, Hex, 3/8-16, GR5	
8	920070	1	Screw, Wing, 3/8-16 x 1.00	
9	100-6-16-12-5F	1	CSHH, 3/8-16 x .75, GR5, FT	
10	302-6	1	Washer, Lock, 3/8	
11	300-6	2	Washer, Flat, 3/8	
12	100-6-16-16-5F	1	CSHH, 3/8-16 x 1.00, GR5, FT	
13	204-6-16-5	1	Nut, Lock, Stover, 3/8-16, GR5	
14	1011235	1	Tube, Endgate Adjustment Spacer	
15	855579	1	Shaft, Endgate Mount	
16	870276	2	Hand Grip, Driver Lever	
17	1011491	1	Tube, Element, Wire Routing	

HD HEATED ENDGATE ASSEMBLY - OPTION (3 OF 3)

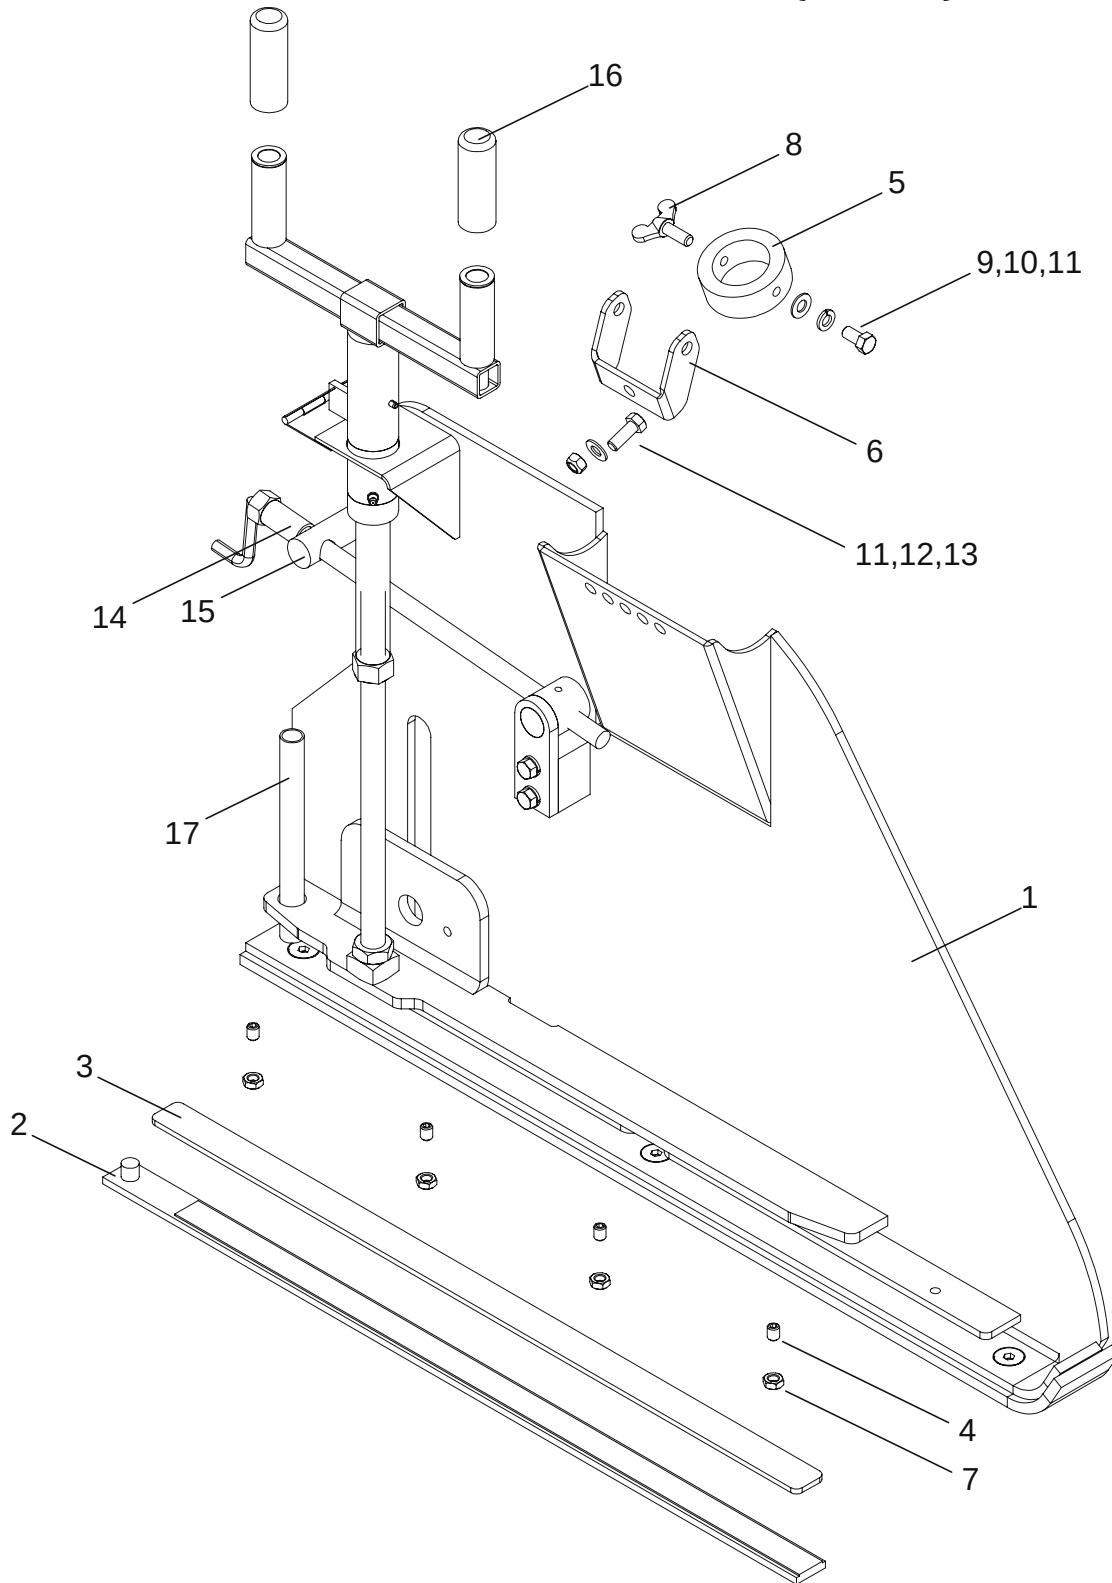


Figure 7-64 HD Heated Endgate Assembly - Option (3 of 3)

HD Heated Endgate Assembly - Option (3 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1011144SRV		Assembly, Heated HD Endgate (Right)	
1	1011149	1	Assembly, Heated HD Endgate (Right)	
2	1011158	1	Element, Heating, 500W/220V, 30" Long	
3	1011155	1	Bar, Element, Backup	
4	113-6-16-12	4	Set Screw, Hex Socket, Cup, 3/8-16 x .75	
5	1008905	1	Mount, Sonic Sensor	
6	1006451	1	Bracket, Sonic Sensor	
7	200-6-16-5	4	Nut, Hex, 3/8-16, GR5	
8	920070	1	Screw, Wing, 3/8-16 x 1.00	
9	100-6-16-12-5F	1	CSHH, 3/8-16 x .75, GR5, FT	
10	302-6	1	Washer, Lock, 3/8	
11	300-6	2	Washer, Flat, 3/8	
12	100-6-16-16-5F	1	CSHH, 3/8-16 x 1.00, GR5, FT	
13	204-6-16-5	1	Nut, Lock, Stover, 3/8-16, GR5	
14	1011235	1	Tube, Endgate Adjustment Spacer	
15	855579	1	Shaft, Endgate Mount	
16	870276	2	Hand Grip, Driver Lever	
17	1011491	1	Tube, Element, Wire Routing	

HD HEATED LEEBOY EDGE ENDGATE ASSEMBLY - OPTION (1 OF 3)

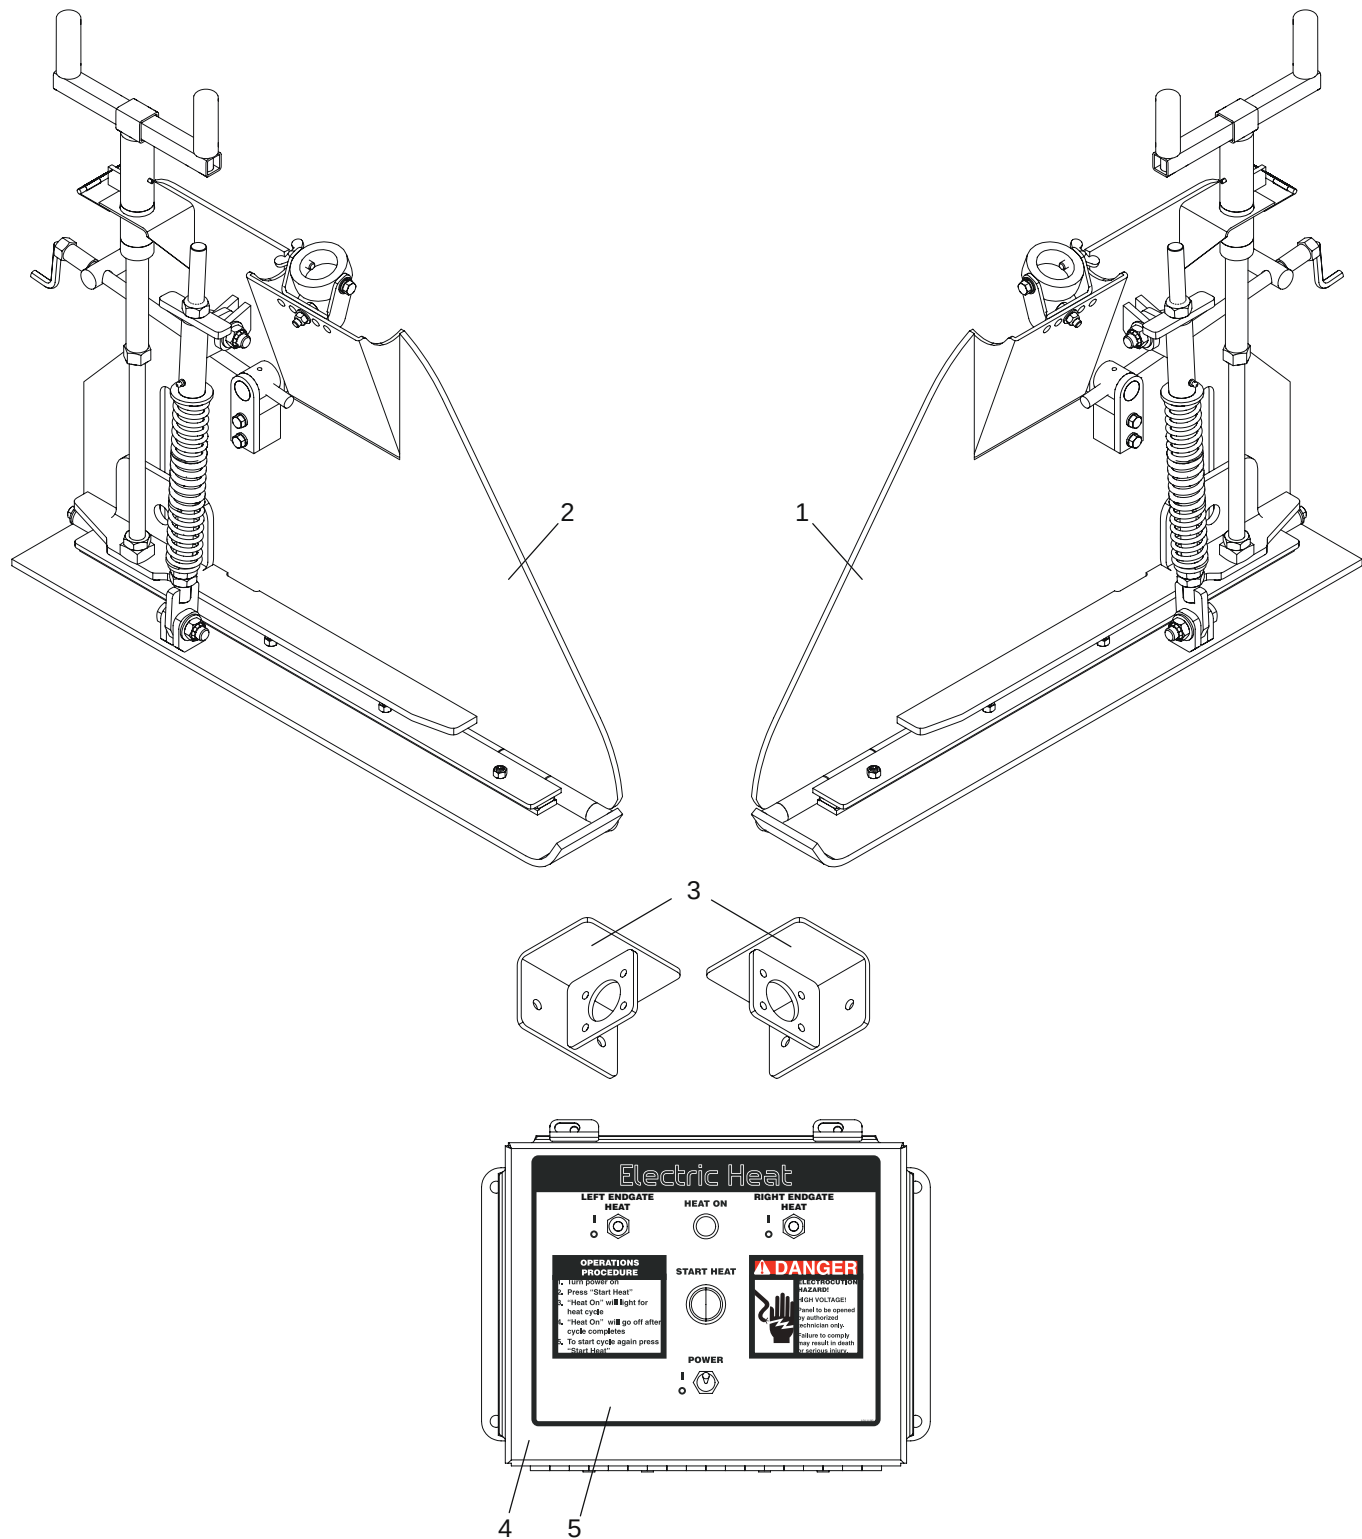


Figure 7-65 HD Heated Edge Endgate Assembly - Option (1 of 3)

HD Heated Edge Endgate Assembly - Option (1 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1011312SRV		Option, HD Heated Endgates and LeeBoy Edge	
1	1011187SRV	1	Assembly, Heated LeeBoy Edge HD Endgate (Left)	See Figure 7-66
2	1011156SRV	1	Assembly, Heated LeeBoy Edge HD Endgate (Right)	See Figure 7-67
3	1011239	2	Weldment, Bulkhead Mount, Heated Endgates	
4	1011311	1	Assembly, Electric Heat Control	See Figure 7-68
5	1011180	1	Decal, Electric Heat	See Figure 7-68
6	1011315	1	Kit, Extension Element Hose/Wiring	Not Shown
REF	1011315-01	2	Hose, 8LOLA, Lock On, 300 PSI, Black, 40"	Not Shown
REF	1011315-02	2	Hose, 8LOLA, Lock On, 300 PSI, Black, 50"	Not Shown
REF	1010528	6	Fitting, 8LOC - 8RFJX90	Not Shown
REF	983199	2	Connector, 2-Pin, Plug, DT06-2S Deutsch	Not Shown
REF	983198	2	Socket, 2-Pin, DT04-2P Deutsch	Not Shown
REF	982448	4	Terminal, Socket, Deutsch, 14-16 AWG	Not Shown
REF	983209	2	Wedge, Socket, 2P Deutsch	Not Shown
REF	983208	2	Connector, Wedge, Plug, 2P Deutsch	Not Shown
REF	982456	4	Pin, Deutsch, 14-16 AWG	Not Shown

HD HEATED LEEBOY EDGE ENDGATE ASSEMBLY - OPTION (2 OF 3)

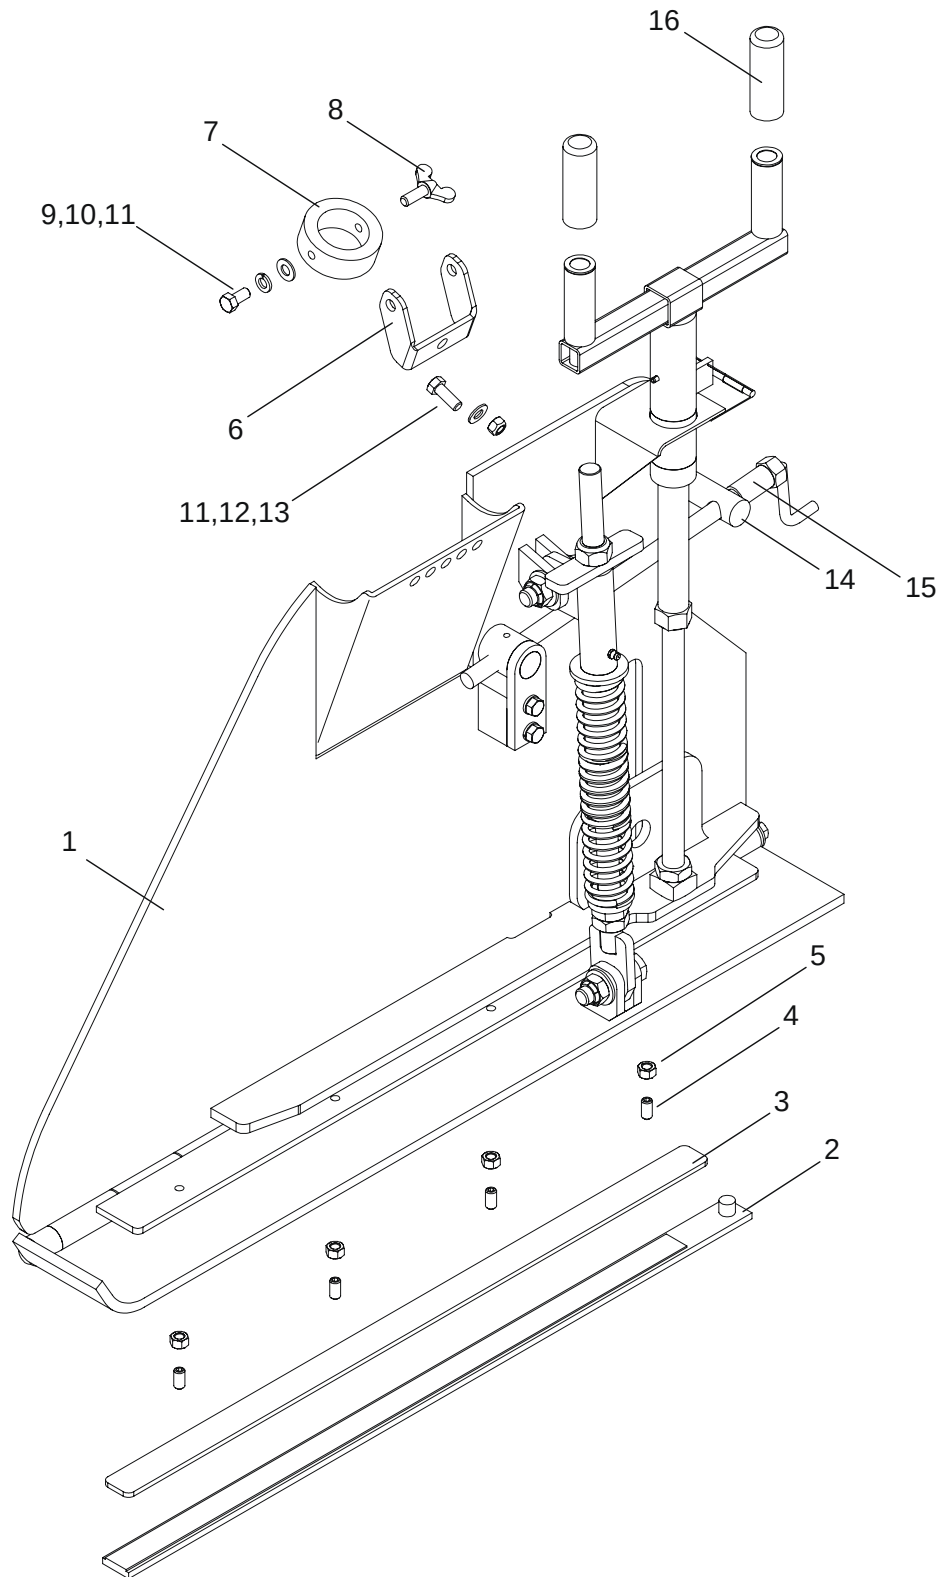


Figure 7-66 HD Heated Edge Endgate Assembly - Option (2 of 3)

HD Heated Edge Endgate Assembly - Option (2 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1011187SRV	1	Assembly, Heated LeeBoy Edge HD Endgate (Left)	
1	1011188	1	Assembly, Heated Edge Endgate (Left)	
2	1011158	1	Element, Heating, 500W/220V, 30" Long	
3	1011155	1	Bar, Element, Backup	
4	113-6-16-12	4	Set Screw, Hex Socket, Cup, 3/8-16 x .75	
5	200-6-16-5	4	Nut, Hex, 3/8-16, GR5	
6	1006451	1	Bracket, Sonic Sensor	
7	1008905	1	Mount, Sonic Sensor	
8	920070	1	Screw, Wing, 3/8-16 x 1.00	
9	100-6-16-12-5F	1	CSHH, 3/8-16 x .75, GR5, FT	
10	302-6	1	Washer, Lock, 3/8	
11	300-6	2	Washer, Flat, 3/8	
12	100-6-16-16-5F	1	CSHH, 3/8-16 x 1.00, GR5, FT	
13	204-6-16-5	1	Nut, Lock, Stover, 3/8-16, GR5	
14	855579	1	Shaft, Endgate Mount	
15	1011235	1	Tube, Endgate Adjustment Spacer	
16	870276	2	Hand Grip, Driver Lever	

HD HEATED LEEBOY EDGE ENDGATE ASSEMBLY - OPTION (3 OF 3)

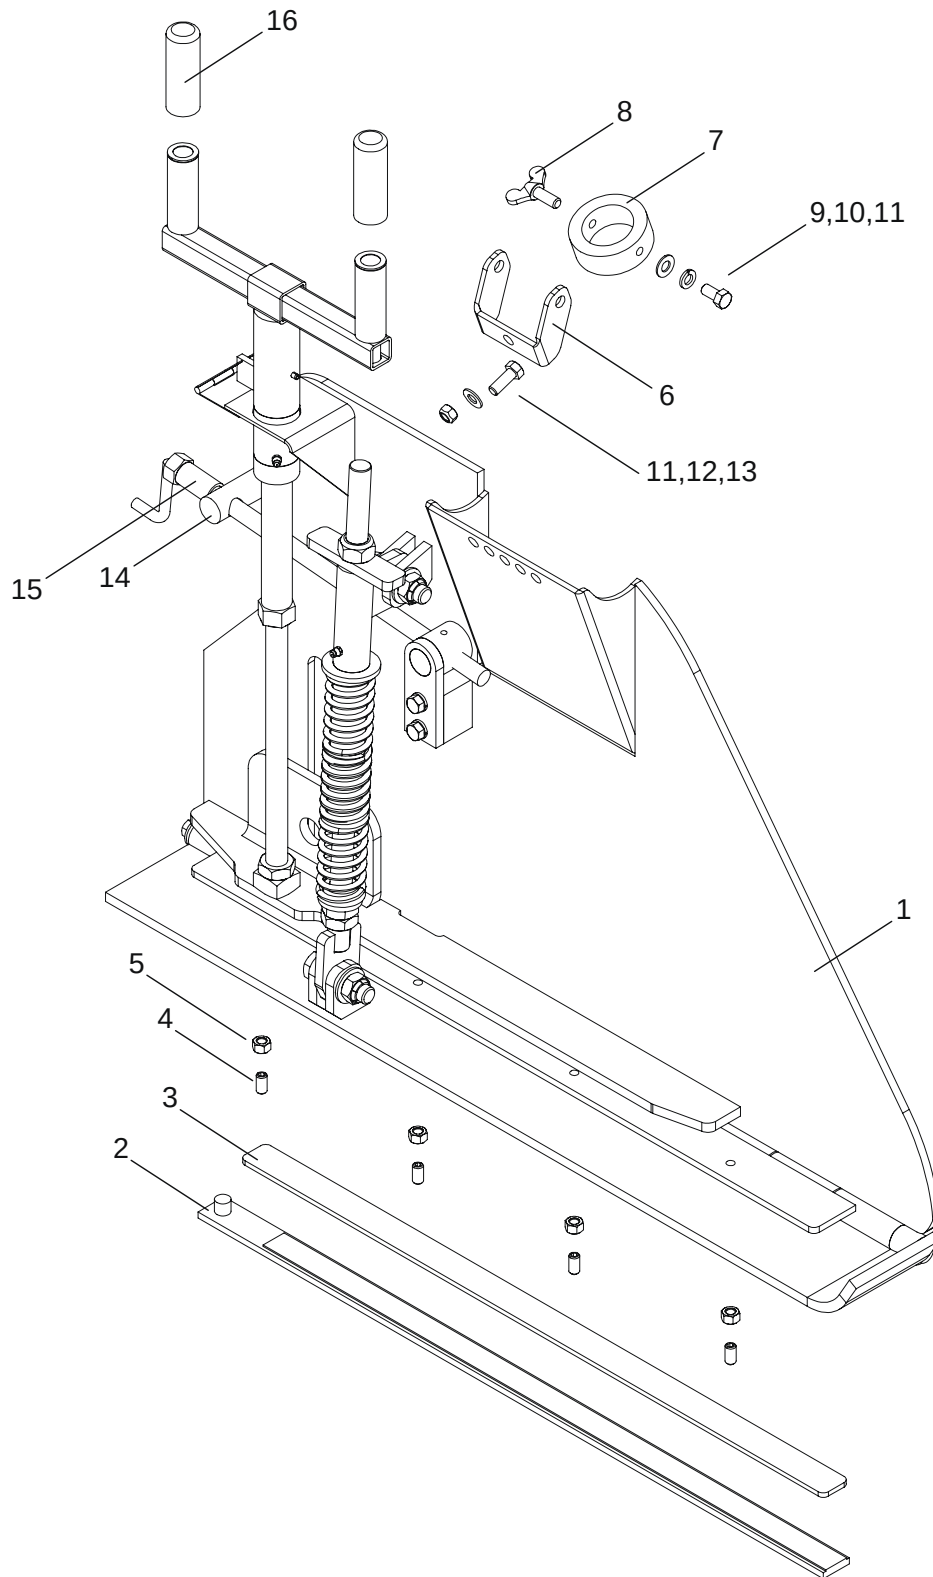


Figure 7-67 HD Heated Edge Endgate Assembly - Option (3 of 3)

HD Heated Edge Endgate Assembly - Option (3 of 3)

Item No.	Part Number	Qty.	Description	Remarks
GRP	1011156SRV	1	Assembly, Heated LeeBoy Edge Endgate (Right)	
1	1011146	1	Assembly, Heated Edge Endgate (Right)	
2	1011158	1	Element, Heating, 500W/220V, 30" Long	
3	1011155	1	Bar, Element, Backup	
4	113-6-16-12	4	Set Screw, Hex Socket, Cup, 3/8-16 x .75	
5	200-6-16-5	4	Nut, Hex, 3/8-16, GR5	
6	1006451	1	Bracket, Sonic Sensor	
7	1008905	1	Mount, Sonic Sensor	
8	920070	1	Screw, Wing, 3/8-16 x 1.00	
9	100-6-16-12-5F	1	CSHH, 3/8-16 x .75, GR5, FT	
10	302-6	1	Washer, Lock, 3/8	
11	300-6	2	Washer, Flat, 3/8	
12	100-6-16-16-5F	1	CSHH, 3/8-16 x 1.00, GR5, FT	
13	204-6-16-5	1	Nut, Lock, Stover, 3/8-16, GR5	
14	855579	1	Shaft, Endgate Mount	
15	1011235	1	Tube, Endgate Adjustment Spacer	
16	870276	2	Hand Grip, Driver Lever	

HD HEATED ENDGATE ASSEMBLY - OPTION

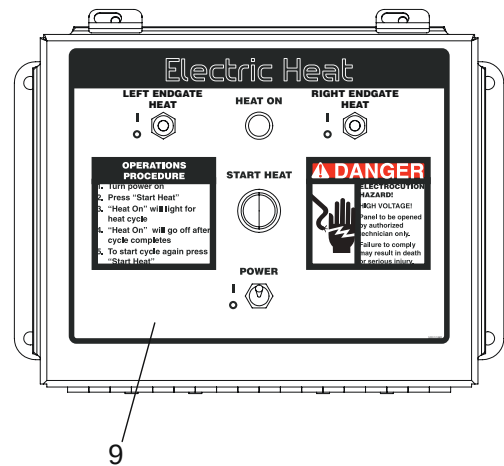
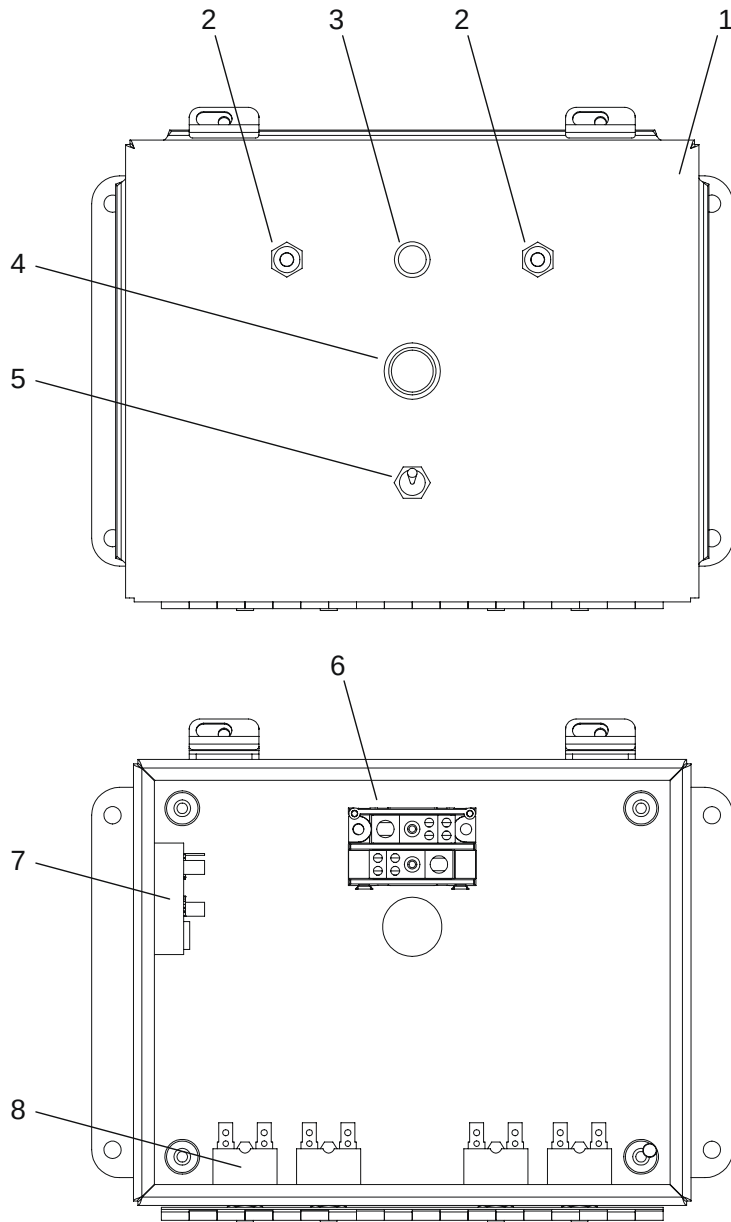


Figure 7-68 HD Heated Endgate Assembly- Option

HD Heated Endgate Assembly - Option

Item No.	Part Number	Qty.	Description	Remarks
GRP	1011311		Assembly, Electric Heat Control	
1	1011311-01	1	Enclosure, Electric Heat and Heated Endgates	
2	72086	2	Switch, Toggle, DPDT, 2-Position	
3	31983	1	Light, Red, Dash, .50 Hole	
4	982249	1	Switch, Push Button	
5	851391	1	Switch, Toggle, SPST, 2 -Position	
6	985138-04	1	Block, Terminal	
7	985142	1	Timer, Electric, .06 - 60 Minute	
8	1009228	12	Circuit Breaker, 10A	
9	1011180	1	Decal, Electric Heat	

ALPHABETICAL PARTS INDEX

Description	Part Number	Item No.	Page No.
Adapter, #8 Female x #10 Male	851161-A	5	7-57
Adapter, Elbow, 90°, -4 JIC / -4 NPTF	71822	5	7-41
Adapter, Elbow, 90°, -6 JIC/-6 NPTF	2500-6-6	REF	7-37
Adapter, Hose to Pipe (90°)	230069	12	7-41
Adapter, Hydraulic Hose	10/8/2404	13	7-7
Adapter, POL	230030	2	7-41
Adapter, Reducer, Pipe, -12 / -8	12/8/5406	21	7-7
Adaptor 9/16-18 UNF-2B (Left) X 4 JIC Male	1009358	23	7-41
Adjuster Mount	1002715SRV	8	7-71
Adjuster Mount	1002715SRV	8	7-73
Adjuster Mount	1002715SRV	8	7-81
Adjuster Mount	1002715SRV	8	7-83
Alternator	1009253-21	14	7-33
Aluminum Cable Sleeve .0625	981981	26	7-109
Aluminum Plug, 3/4" Condulet	920238-5	REF	7-137
Arm Extension (Left)	930025SRV	3	7-111
Arm Extension (Right)	930020SRV	2	7-111
Arm, Assembly, Truck Hitch Wheel Pivot	930030SRV	4	7-111
Arm, Automatic Conveyor Switch	900060-1	37	7-13
Arm, Skid Support (Front)	851248SRV	21	7-109
Arm, Skid Support (Rear)	851247SRV	20	7-109
Assembly Extension Adjusting Screw	851185SRV	4	7-67
Assembly Temp. Bail w/Sleeves	1010499-07	1	7-109
Assembly, Adjusting Swivel Nut	890070	11	7-85
Assembly, Adjusting Swivel Nut	890070	11	7-87
Assembly, Air Breather	1010255	1	7-33
Assembly, AM Module & Cable	985866	9	7-109
Assembly, AOA Adjuster	1006401	17	7-123
Assembly, AOA Adjuster	1006401	17	7-125
Assembly, Auger Motor Cover, 8515	981685	1	7-21
Assembly, Auger, 8515 (Left)	981692L	19	7-21
Assembly, Auger, 8515 (Right)	981692R	20	7-21
Assembly, Axle, Guide Wheel	930045SRV	8	7-111
Assembly, Beacon Light Post	989469SRV	5	7-43
Assembly, Beacon Light Post	989469SRV	5	7-47
Assembly, Bed, 8500 Conveyor	851627SRV	REF	7-13
Assembly, CB Bracket	1010499-05	18	7-109

Description	Part Number	Item No.	Page No.
Assembly, Citrus Tank HD Electric	988224SRV	3	7-93
Assembly, Citrus Tank HD LP	988223SRV	1	7-93
Assembly, Citrus, Tank LD Electric	1008356SRV	4	7-93
Assembly, Citrus, Tank LD LP	1008355SRV	2	7-93
Assembly, Control Box Slide	1014830	20	7-55
Assembly, Control Box, Kubota	1013633	GRP	7-59
Assembly, Control Box, Kubota	1013633	GRP	7-61
Assembly, Controls, Right Side, Low Deck	1011981	1	7-53
Assembly, Conveyor Chain	851117ASRV	12	7-13
Assembly, Conveyor, Complete	851626SRV	REF	7-13
Assembly, Crown & Valley, Front	870172	3	7-65
Assembly, Crown & Valley, Front	870172	3	7-75
Assembly, Crown & Valley, Rear	870182	2	7-65
Assembly, Crown & Valley, Rear	870182	2	7-75
Assembly, Crown & Valley, Rear	980182	6	7-137
Assembly, Crown & Valley, Rear	980182	3	7-115
Assembly, Crown Adjustment	986637SRV	2	7-105
Assembly, Crown And Valley Front	1008668	5	7-137
Assembly, Depth Rod, Flight Screw	855582SRV	10	7-89
Assembly, Depth Rod, Flight Screw	855582SRV	10	7-91
Assembly, Depth Screw, Endgate	890092SRV	7	7-127
Assembly, Depth Screw, Endgate	890092SRV	7	7-129
Assembly, Depth Screw, Screed	890092SRV	3	7-85
Assembly, Depth Screw, Screed	890092SRV	3	7-87
Assembly, Drive Plate	1002676-02	1	7-35
Assembly, Electric Heat Control	1010397	6	7-93
Assembly, Electric Heat Control	1010397	3	7-135
Assembly, Electric Heat Control	1011311	3	7-139
Assembly, Electric Heat Control	1011311	4	7-145
Assembly, Electric Heat Control	1011311	GRP	7-151
Assembly, Electric Steer Box	853836SRV	16	7-51
Assembly, Electric Steer Box	853836SRV	14	7-53
Assembly, Endgate, HD (Left)	1006443SRV	1	7-127
Assembly, Endgate, HD Right)	1006560SRV	1	7-129
Assembly, Extension Adjust Screw	851185SRV	4	7-77
Assembly, Extension Adjust Screw	851185SRV	4	7-79
Assembly, Extension Adjust Screw	851185SRV	6	7-81
Assembly, Extension Adjust Screw	851185SRV	6	7-83
Assembly, Extension Adjusting Screw	851185SRV	4	7-69
Assembly, Extension Adjusting Screw	851185SRV	6	7-71

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Assembly, Extension Adjusting Screw	851185SRV	6	7-73
Assembly, Extension Heatbox	1006380SRV	1	7-123
Assembly, Extension Heatbox	1006380SRV	1	7-125
Assembly, Flight Screw	851370SRV	REF	7-89
Assembly, Flight Screw	851370SRV	REF	7-91
Assembly, Flight Screw w/Height Rod	1002728SRV	2	7-89
Assembly, Flight Screw w/Height Rod	1002728SRV	2	7-91
Assembly, Guide Bar	920032SRV	22	7-17
Assembly, Heat Box Cover, 4 Adjust	988292SRV	14	7-71
Assembly, Heat Box Cover, 4 Adjust	988292SRV	14	7-73
Assembly, Heat Box Cover, 4 Adjust	988292SRV	14	7-81
Assembly, Heat Box Cover, 4 Adjust	988292SRV	14	7-83
Assembly, Heat Box Cover, Single Adjust	988291	12	7-77
Assembly, Heat Box Cover, Single Adjust	988291	12	7-79
Assembly, Heat Box Cover, Single Adjusting	988291	12	7-67
Assembly, Heat Box Cover, Single Adjusting	988291	12	7-69
Assembly, Heat Box, Electric, 4 Adjust	988319SRV	2	7-81
Assembly, Heat Box, Electric, 4 Adjust	988319SRV	2	7-83
Assembly, Heat Box, Electric, Single Adjust	987872SRV	2	7-77
Assembly, Heat Box, Electric, Single Adjust	987872SRV	2	7-79
Assembly, Heat Box, Propane, 4 Adjust	988318SRV	2	7-71
Assembly, Heat Box, Propane, 4 Adjust	988318SRV	2	7-73
Assembly, Heat Box, Propane, Single Adjust	851182SRV	2	7-67
Assembly, Heat Box, Propane, Single Adjusting	851182SRV	2	7-69
Assembly, Heated Edge Endgate (Left)	1011188	1	7-147
Assembly, Heated Edge Endgate (Right)	1011146	1	7-149
Assembly, Heated HD Endgate (Left)	1011143	1	7-139
Assembly, Heated HD Endgate (Left)	1011143	GRP	7-141
Assembly, Heated HD Endgate (Left)	1011148	1	7-141
Assembly, Heated HD Endgate (Right)	1011144	2	7-139
Assembly, Heated HD Endgate (Right)	1011144	GRP	7-143
Assembly, Heated HD Endgate (Right)	1011149	1	7-143
Assembly, Heated LeeBoy Edge Endgate (Right)	1011156SRV	GRP	7-149
Assembly, Heated LeeBoy Edge HD Endgate (Left)	1011187	1	7-145
Assembly, Heated LeeBoy Edge HD Endgate (Left)	1011187SRV	GRP	7-147
Assembly, Heated LeeBoy Edge HD Endgate (Right)	1011156	2	7-145
Assembly, Hinge	1002735	3	7-71
Assembly, Hinge	1002736	3	7-73
Assembly, Hose, Track Tensioner (Right)	8550B	14	7-7
Assembly, Hydraulic Generator	987893SRV	1	7-103

Description	Part Number	Item No.	Page No.
Assembly, Inner, Extension Mount (Left)	1007097	14	7-123
Assembly, Inner, Extension Mount (Right)	1007099	14	7-125
Assembly, Insert, Electric (Left)	984305-1SRV	1	7-81
Assembly, Insert, Electric (Right)	984306-1SRV	1	7-83
Assembly, Insert, Electric, 8500 (Left)	985561SRV	1	7-77
Assembly, Insert, Electric, 8500 (Right)	985562SRV	1	7-79
Assembly, Insert, Propane (Left)	983409-1SRV	1	7-71
Assembly, Insert, Propane (Right)	983410-1SRV	1	7-73
Assembly, Insert, Propane, 8500 (Right)	859395SRV	1	7-69
Assembly, Insert, Propane, 8500, (Left)	859394SRV	1	7-67
Assembly, Jointer, 8515 (Left)	983308SRV	1	7-85
Assembly, Jointer, 8515 (Right)	983309SRV	1	7-87
Assembly, Link, Valve Lever	901010	7	7-57
Assembly, Lower Control Arms	1012044	16	7-43
Assembly, Lower Thickness Adjuster	1011373	10	7-131
Assembly, Lower Thickness Adjuster	1011373	10	7-133
Assembly, New Style Seat Post, Short	988640SRV	2	7-97
Assembly, Outer Extension Mount (Left)	1007096	13	7-123
Assembly, Outer Extension Mount (Right)	1007098	13	7-125
Assembly, Push Roller, Swivel	984283SRV	39	7-7
Assembly, Radiator/Cooler, Kubota	988673-13	1	7-31
Assembly, Right Side Controls, High Deck	1011979	1	7-51
Assembly, Roller, Push Bar, w/Bearings / Shaft	980032	36	7-7
Assembly, Screed Arm (Left)	1000758SRV	1	7-89
Assembly, Screed Arm (Right)	982743RSRV	1	7-91
Assembly, Screed Arm, 8510 (Left)	1008703	1	7-131
Assembly, Screed Arm, 8510 (Right)	1008704	1	7-133
Assembly, Screed Arm, 8515 (Left)	984897SRV	REF	7-39
Assembly, Screed Arm, 8515 (Right)	984896SRV	2	7-39
Assembly, Screed Extension, Slope (Left)	1006378SRV	6	7-123
Assembly, Screed Extension, Slope (Right)	1006379SRV	6	7-125
Assembly, Screed, Citrus, Tank, Electric	1008862SRV	1	7-135
Assembly, Seat w /Armrest, White	360010	1	7-97
Assembly, Side Access Door (Right)	1011030	23	7-43
Assembly, Side Access Door (Right)	1011030	22	7-47
Assembly, Side Wing, 8515 (Left)	980702SRV	2	7-17
Assembly, Side Wing, 8515 (Right)	980703SRV	1	7-17
Assembly, Slide Adjust	985556SRV	4	7-71
Assembly, Slide Adjust	985556SRV	4	7-73
Assembly, Slide Adjust	985556SRV	4	7-81

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Assembly, Slide Adjust	985556SRV	4	7-83
Assembly, Slide Plate	1002181	2	7-99
Assembly, Slide Plate, w/Chrome Rods	1002186	1	7-99
Assembly, Slide w/o Shafts	1006445	2	7-121
Assembly, Slide w/Shafts, HD	1006416	1	7-121
Assembly, Spacer Auger Shaft	982945	11	7-21
Assembly, Tank Fuel	1009361	7	7-25
Assembly, Tank Hydraulic	1015300	5	7-25
Assembly, Tee, Electronic Steer	984343SRV	14	7-51
Assembly, Tee, Electronic Steer	984343SRV	12	7-53
Assembly, Tee, Electronic Steer	984343SRV	4	7-55
Assembly, Thickness	1011374SRV	3	7-131
Assembly, Thickness	1011374SRV	3	7-133
Assembly, Tilt Screw, Endgate	890081SRV	6	7-127
Assembly, Tilt Screw, Endgate	890081SRV	6	7-129
Assembly, Tilt Screw, Jointer	890081SRV	12	7-85
Assembly, Tilt Screw, Jointer	890081SRV	12	7-87
Assembly, Track, One Side	983166	REF	7-11
Assembly, Track, One Side, w/Poly Pads	851101P	1	7-7
Assembly, Truck Hitch	1000253SRV	REF	7-111
Assembly, Tube, Conveyor Front Chain Guide	851123	29	7-13
Assembly, Tube, Conveyor Rear Drive	851651	32	7-13
Assembly, Turnbuckle W/Ratchet	983157	2	7-115
Assembly, Upper Screed Cover (Left)	1008757	16	7-115
Assembly, Upper Screed Cover (Right)	1008758	15	7-115
Assembly, Valve, 9 Section w/Float	851161	10	7-55
Assembly, Valve, 9 Section w/Float	851161	GRP	7-57
Assembly, Vertical Lift Adjust	1006390	16	7-123
Assembly, Vertical Lift Adjust	1006390	16	7-125
Assembly, Vibrator (Left)	982965L	1	7-95
Assembly, Vibrator (Left)	982965LSRV	1	7-117
Assembly, Vibrator (Right)	982965RSRV	REF	7-95
Assembly, Vibrator (Right)	982965RSRV	7	7-117
Assembly, Walk Board, Long	987056SRV	3	7-97
Assembly, Walkboard - Long	987056SRV	1	7-119
Assembly, Wear Plate, Electric	987216SRV	7	7-75
Auger End Mount, 8000/8500 (Left)	1011441*	9	7-21
Auger End Mount, 8000/8500 (Right)	1011441	8	7-21
Auger Flight, 12", 8515 (Left)	981700L	16	7-21
Auger Flight, 12", 8515 (Right)	981700R	15	7-21

Description	Part Number	Item No.	Page No.
Auger Shaft w/Sprocket, Spacer & Bearing	981691	10	7-21
Ball Joint, .750, Male	1000947	18	7-123
Ball Joint, .750, Male	1000947	18	7-125
Ball Valve, On/Off, 1/4	20926564	8	7-55
Bar Jack, Screed Slide	988556	12	7-65
Bar Jack, Screed Slide	988556	12	7-75
Bar, .125 x 1.50 x 9.50	853595	31	7-17
Bar, .125 x 2.00 x 44.50, Notches	855562	13	7-65
Bar, .125 x 2.00 x 44.50, Notches	855562	13	7-75
Bar, .25 x 1.5 x 36	985120	4	7-123
Bar, .25 x 1.5 x 36	985120	4	7-125
Bar, .250 x 1.50 x 36	985120	10	7-77
Bar, .250 x 1.50 x 36	985120	10	7-79
Bar, .250 x 1.50 x 36	985120	12	7-81
Bar, .250 x 1.50 x 36	985120	12	7-83
Bar, .250 x 2.00 x 7.00	853593SRV	28	7-23
Bar, .375 x 1.50 x 42	985121	8	7-75
Bar, 7 GA x 2.00 x 3.25 w/Holes	988226SRV	25	7-43
Bar, 7 GA x 2.00 x 3.25 w/Holes	988226SRV	24	7-47
Bar, Adjustable Slide	851242SRV	23	7-109
Bar, Cable Mount, Left Hand Drive	1014844	2	7-55
Bar, Conveyor Flight Bar (Quick Change)	851118A	18	7-13
Bar, Element Hold Down	985121	6	7-115
Bar, Element, Backup	1011155	3	7-141
Bar, Element, Backup	1011155	3	7-143
Bar, Element, Backup	1011155	3	7-147
Bar, Element, Backup	1011155	3	7-149
Bar, End Gate Skid 8515	982963SRV	7	7-85
Bar, Guide (Outer)	920041SRV	23	7-17
Bar, Tilt Screw Hold Down	980458	4	7-127
Bar, Tilt Screw Hold Down	980458	4	7-129
Bar, Vertical Lift	1006395	8	7-123
Bar, Vertical Lift	1006395	8	7-125
Bar, Vertical Lift Gauge	1006397	12	7-123
Bar, Vertical Lift Gauge	1006398	12	7-125
Bar, V-Groove Bottom Rail	1006426	13	7-115
Bar, V-Groove Top Rail	1006425	12	7-115
Battery, 12V, 1125 CCA, Group 31	Purchase Locally	REF	7-43
Battery, 12V, 1125 CCA, Group 31	Purchase Locally	REF	7-47
Bearing	986657	7	7-105

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Bearing Roller, 1-1/4"	810110	5	7-131
Bearing Roller, 1-1/4"	810110	5	7-133
Bearing, Auger, Axle, Idler	850130	35	7-7
Bearing, Auger, Axle, Idler	850130	7	7-13
Bearing, Auger, Axle, Idler	850130	12	7-21
Bearing, Conveyor Pulley/Vibrator Shaft	250150	7	7-95
Bearing, Push Roller (1.25)	810110	13	7-111
Bearing, Screed Flight Screw	870030	5	7-67
Bearing, Screed Flight Screw	870030	5	7-69
Bearing, Screed Flight Screw	870030	5	7-71
Bearing, Screed Flight Screw	870030	5	7-73
Bearing, Screed Flight Screw	870030	5	7-77
Bearing, Screed Flight Screw	870030	5	7-79
Bearing, Screed Flight Screw	870030	5	7-81
Bearing, Screed Flight Screw	870030	5	7-83
Bearing, Screed Flight Screw	870030	28	7-123
Bearing, Screed Flight Screw	870030	28	7-125
Bearing, Truck Hitch Roller	930050	9	7-111
Belly Pan (Left)	851127LSRV	15	7-13
Belly Pan (Right)	851127RSRV	16	7-13
Belt, Fan	1009253-20	13	7-33
Block Link	850080A	14	7-13
Block, Terminal	985138-04	11	7-93
Block, Terminal	985138-04	8	7-135
Block, Terminal	985138-04	6	7-151
Body, Regulator, LPG	230100-A	4	7-41
Bolt, Conveyor Drive Chain Adjuster	851148SRV	2	7-23
Bottom Rail, 8500 Screed Extension	855783	10	7-65
Bottom Rail, 8500 Screed Extension	855783	10	7-75
Bottom Tank	988049	16	7-17
Bracket, Alternator	1009253-31	15	7-33
Bracket, Depth Screw Bottom Mount (Left)	1006571	3	7-127
Bracket, Depth Screw Bottom Mount Right)	1006452	3	7-129
Bracket, Depth Screw Control (Left)	890132LSRV	6	7-85
Bracket, Depth Screw Control (Right)	890132RSRV	6	7-87
Bracket, ECU Mounting	1009253-01	11	7-35
Bracket, Electrical Connector	985672	REF	7-103
Bracket, Grade Control	855568	21	7-39
Bracket, Harness	1009253-29	9	7-35
Bracket, Mounting	1013314	13	7-43

Description	Part Number	Item No.	Page No.
Bracket, Mounting	1013314	13	7-47
Bracket, Radiator Support	1009384-18	11	7-31
Bracket, Recovery Bottle	1009384-08	4	7-31
Bracket, Relay Mount	36086	3	7-61
Bracket, Screed Lift Lock	1007673	9	7-55
Bracket, Sonic Sensor	1006451	8	7-127
Bracket, Sonic Sensor	1006451	8	7-129
Bracket, Sonic Sensor	1006451	6	7-141
Bracket, Sonic Sensor	1006451	6	7-143
Bracket, Sonic Sensor	1006451	6	7-147
Bracket, Sonic Sensor	1006451	6	7-149
Bracket, Sonic Tracker	851578	17	7-109
Bracket, Z Arm, Topcon	9090-1125SRV	10	7-109
Breaker, Main	985880	5	7-103
Breather, Track Tensioner Cylinder	851644	12	7-7
Breather, Track Tensioner Cylinder	851644	26	7-11
Burner Nozzle, Ignitor	1008652SRV	19	7-41
Burner Nozzle, Screed Extension	1008654SRV	20	7-41
Burner, Screed Extension	982504	17	7-41
Bushing	988588	4	7-99
Bushing, 2.00 ID x 2.50 OD x 2.50	810070	41	7-7
Bushing, 2.00 ID x 2.50 OD x 2.50	810070	7	7-21
Bushing, 2.00 ID x 2.50 OD x 2.50	810070	6	7-111
Bushing, Composite, Power Crown	1000960	REF	7-137
Bushing, Fiber, 2.25 OD / 2.00 ID	1006417	3	7-121
Bushing, Track Link, Short	851460	26	7-7
Cable 1.0625	851246	28	7-109
Cable Junction Box to Control Box	983416-01	5	7-109
Cable, Battery	986804	REF	7-43
Cable, Battery	5804	REF	7-43
Cable, Battery	986804	REF	7-47
Cable, Battery	5804	REF	7-47
Cable, Height Locator .188 x 90 w/5.00" Stroke	851520	9	7-39
Cable, Power, Ultrasonic	982796	13	7-85
Cable, Power, Ultrasonic	982796	13	7-87
Cable, Power, Ultrasonic	982769	19	7-127
Cable, Power, Ultrasonic	982769	19	7-129
Cable, Power, Ultrasonic	980550	10	7-127
Cable, Power, Ultrasonic	980550	10	7-129
Cable, Push/Pull, 104" x 3" Stroke	920120	12	7-51

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Cable, Push/Pull, 136" x 3" Stroke	920136	13	7-51
Cable, Push/Pull, 136" x 3" Stroke	920136	11	7-53
Cable, Push/Pull, 136" x 3" Stroke	920136	13	7-55
Cap, Adjuster Handle	1006434	12	7-131
Cap, Adjuster Handle	1006434	12	7-133
Cap, Fuel Tank, Lockable	140030FL	9	7-25
Cap, Fuel Tank, Lockable	140030FL	5	7-93
Cap, Fuel Tank, Lockable	140030FL	2	7-135
Cap, Hydraulic Tank, Lockable	140030HL	1	7-25
Cap, Radiator, 13.5 PSI, 2.25 Neck	1002184-04	2	7-31
Capacitor, Generator, 20 uF	1002146	REF	7-103
Capacitor, Generator, 25 uF	1002147	REF	7-103
Capacitor, Generator, 30 uF	1002148	REF	7-103
Capacitor, Generator, 40 uF	986658	REF	7-103
Case, GC-35 Paver Control Box	1010499-03	19	7-109
Cast Handle, Right Hand Control	920210	3	7-51
Cast Handle, Right Hand Control	920210	4	7-53
Cast Handle, Right Hand Drive, HD	920210-02	4	7-51
Center Shield, Conveyor Rear	840162	9	7-17
Chain Cover, 8515	981688SRV	2	7-21
Chain Guard, Conveyor Drive (Left)	854532SRV	8	7-23
Chain Guard, Conveyor Drive (Right)	853572SRV	REF	7-23
Chain Rail, Track Drive	851102	2	7-7
Chain Rail, Track Drive, Heavy Duty	983166-03	REF	7-11
Chain Turnbuckle	986639SRV	4	7-105
Chain, Auger Drive	985815	36	7-21
Chain, Conveyor Drive (#80)	851121	23	7-13
Chain, Conveyor Drive (#80)	851121	4	7-23
Chain, Roller, 40 x 52 Pitch	870190	4	7-65
Chain, Roller, 40 x 52 Pitch	870190	4	7-75
Chain, Roller, 50 x 18	1000958	9	7-137
Chain, Roller, 60H X 39 Pitches	1008047	4	7-115
Chain, Roller, 60H x 39 Pitches	1008047	8	7-137
Chrome Rod	988601	6	7-99
Circuit Breaker, 10A	986546	2	7-61
Circuit Breaker, 10A	1009228	13	7-93
Circuit Breaker, 10A	1009228	10	7-135
Circuit Breaker, 10A	1009228	8	7-151
Clamp, Auger 12"	981683	13	7-21
Clamp, Element, Screed Extension	985123	11	7-77

Description	Part Number	Item No.	Page No.
Clamp, Element, Screed Extension	985123	11	7-79
Clamp, Element, Screed Extension	985123	13	7-81
Clamp, Element, Screed Extension	985123	13	7-83
Clamp, Element, Screed Extension	985123	3	7-123
Clamp, Element, Screed Extension	985123	3	7-125
Clamp, Hopper Front Flashing	985062SRV	13	7-17
Clamp, Hose, #60	35567	3	7-33
Clevis, .188 x .250	851213	8	7-39
Clevis, 1/4-28	350050	10	7-51
Clevis, 1/4-28	350050	7	7-53
Clevis, 1/4-28	350050	11	7-55
Coil Cord, 15 FT CA to Tracker	1010499-04	3	7-109
Coil Cord, 6s/6s 1.5 to 7.5 FT	983050	15	7-85
Coil Cord, 6s/6s 1.5 to 7.5 FT	983050	15	7-87
Coil Cord, 6s/6s, 1.50 Ft. to 7.50 Ft.	983050	21	7-127
Coil Cord, 6s/6s, 1.50 Ft. to 7.50 Ft.	983050	21	7-129
Coil, Control Bypass H-1 Pump	986519-01	REF	7-29
Coiled Cord, Remote	986609	8	7-109
Collar, Auger End Mount	851645	6	7-21
Collar, Lock	620400	5	7-111
Collar, Power Crown Locking	1000798	7	7-137
Condulet, 3/4" Aluminum	920238-2	REF	7-137
Connector, 03-Pin, Panel Mount, DT04-3P	1010657	6	7-61
Connector, 03-Pin, Plug w/120 Ohm	989179	7	7-61
Connector, 21-Pin, Receptacle, HDP	1002564	11	7-61
Connector, 29-Pin, HDP24-24-29PE-L15	1011851	10	7-61
Connector, 2-Pin, Plug, DT06-2S Deutsch	983199	REF	7-139
Connector, 2-Pin, Plug, DT06-2S Deutsch	983199	REF	7-145
Connector, 31-Pin, Receptacle, HD34-24-31	981916	8	7-61
Connector, Nut, 24 Shell	981916-01	9	7-61
Connector, Sealed, Tower, 2-Pin	35193	REF	7-39
Connector, Wedge, Plug, 2P Deutsch	983208	REF	7-139
Connector, Wedge, Plug, 2P Deutsch	983208	REF	7-145
Controller, 50 DIN, Plus One	1012975	5	7-29
Conveyor Mounting Plate w/Bearing	851483SRV	4	7-13
Cord, 4 FT , Electronic Steering	851548-04	8	7-29
Cotter Pin, .188 x 2.00 Long	80338	9	7-23
Coupling Assembly, Motor To Generator, 28 mm	987894SRV	REF	7-103
Coupling Half, 1.00, Vibrator Shaft	880030	3	7-95
Coupling Half, 3 Jaw, 1"	880030	3	7-117

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Coupling Half, 3 Jaw, 24 mm	1002454	REF	7-103
Coupling Half, 3 Jaw, 5/8"	280030	5	7-117
Coupling Half, Tack Pump Motor	280030	5	7-95
Coupling, Drive Plate	1002676-03	2	7-35
Cover, 3/4" Condulet	920238-3	REF	7-137
Cover, Access Hole (Top)	987629	10	7-43
Cover, Access Hole (Top)	987629	10	7-47
Cover, Access Hole, (Right)	987633	21	7-43
Cover, Access Hole, (Right)	987633	20	7-47
Cover, Auger Support, 8515	981695SRV	14	7-21
Cover, Back Panel	930065	15	7-111
Cover, Center Engine, 8510	988117	20	7-43
Cover, Center Engine, 8510	988117	11	7-47
Cover, Elements, Screed Base	985124	6	7-75
Cover, Elements, Screed Base	985125	5	7-115
Cover, Power Crown	986643	3	7-105
Cover, Power Crown	1008168	1	7-137
Cover, Rear Elements	1007002	8	7-115
Cover, Screed Elements	985149	14	7-115
Cover, Screed Extension Cylinder	851204SRV	15	7-75
Cover, Screed Extension Cylinder	851203SRV	16	7-75
Cover, Screed Extension Cylinder (Left)	851204SRV	15	7-65
Cover, Screed Extension Cylinder (Right)	851203SRV	16	7-65
Cover, Screed Lower (Left/Right)	1007000	17	7-115
Cover, Screed Plate Access	851201SRV	14	7-65
Cover, Screed Plate Access	851201SRV	14	7-75
Cover, Top Con Hole	988126	24	7-43
Cover, Top Con Hole	988126	23	7-47
Cover, Valve Inlet, V20 Series w/Relief	910055	3	7-57
Cover, Valve Outlet V20 Series w/PB	910056	4	7-57
Cover, Vent, Top, T4F (Right)	1009351	26	7-43
Cover, Vent, Top, T4F (Right)	1009351	25	7-47
CSHH, 1/2-13 x 1.00, GR5, FT	100-8-13-16-5F	13	7-117
CSHH, 1/2-13 x 1.50, GR5	100-8-13-24-5	33	7-17
CSHH, 1/2-13 x .75, GR5, FT	100-8-13-12-5F	10	7-85
CSHH, 1/2-13 x .75, GR5, FT	100-8-13-12-5F	10	7-87
CSHH, 1/2-13 x 1.00, GR5, FT	100-8-13-16-5F	10	7-13
CSHH, 1/2-13 x 1.00, GR5, FT	100-8-13-16-5F	12	7-127
CSHH, 1/2-13 x 1.00, GR5, FT	100-8-13-16-5F	12	7-129
CSHH, 1/2-13 x 1.00, GR5, FT	100-8-13-16-5F	14	7-137

Description	Part Number	Item No.	Page No.
CSHH, 1/2-13 x 1.25, GR5, FT	100-8-13-20-5F	34	7-43
CSHH, 1/2-13 x 1.25, GR5, FT	100-8-13-20-5F	33	7-47
CSHH, 1/2-13 X 1.25, GR5, FT	100-8-13-20-5F	3	7-119
CSHH, 1/2-13 x 1.25, GR5, FT	100-8-13-20-5F	17	7-137
CSHH, 1/2-13 x 1.50, GR5	100-8-13-24-5	21	7-21
CSHH, 1/2-13 x 1.75, GR5	100-8-13-28-5	23	7-11
CSHH, 1/2-13 x 1.75, GR5	100-8-13-28-5	19	7-39
CSHH, 1/2-13 x 2.00, GR5	100-8-13-32-5	1	7-13
CSHH, 1/2-13 x 2.00, GR5	100-8-13-32-5	34	7-17
CSHH, 1/2-13 x 2.00, GR5	100-8-13-32-5	6	7-23
CSHH, 1/2-13 x 2.00, GR5	100-8-13-32-5	36	7-43
CSHH, 1/2-13 x 2.00, GR5	100-8-13-32-5	35	7-47
CSHH, 1/2-13 x 2.00, GR5	100-8-13-32-5	11	7-111
CSHH, 1/2-13 x 2.00, GR5	100-8-13-32-5	26	7-115
CSHH, 1/2-20 x 1.50, GR5	100-8-20-24-5	9	7-99
CSHH, 1/2-20 x 1.75, GR5	100-8-20-28-5	7	7-121
CSHH, 1/4-20 x .75, GR5, FT	100-4-20-12-5F	17	7-131
CSHH, 1/4-20 x .75, GR5, FT	100-4-20-12-5F	17	7-133
CSHH, 1/4-20 x 1.00, GR5, FT	100-4-20-16-5F	49	7-7
CSHH, 1/4-20 x 1.00, GR5, FT	100-4-20-16-5F	19	7-71
CSHH, 1/4-20 x 1.00, GR5, FT	100-4-20-16-5F	19	7-73
CSHH, 1/4-20 x 1.00, GR5, FT	100-4-20-16-5F	19	7-81
CSHH, 1/4-20 x 1.00, GR5, FT	100-4-20-16-5F	19	7-83
CSHH, 1/4-20 x 1.00, GR5, FT	100-4-20-16-5F	24	7-23
CSHH, 1/4-20 x 2.00, GR5	100-4-20-32-5	17	7-39
CSHH, 1-14 x 3.00, GR8	100-16-14-48-8	14	7-23
CSHH, 1-14 x 3.50 GR8	100-16-14-56-8	16	7-23
CSHH, 135mm, Track Pad Bolt	983166-06	REF	7-11
CSHH, 1-8 x 2.50, GR5	100-16-8-40-5	11	7-39
CSHH, 3/8-16 x .75, GR5, FT	100-6-16-12-5F	10	7-17
CSHH, 3/8-16 x .75, GR5, FT	100-6-16-12-5F	26	7-21
CSHH, 3/8-16 x .75, GR5, FT	100-6-16-12-5F	11	7-23
CSHH, 3/8-16 x .75, GR5, FT	100-6-16-12-5F	15	7-39
CSHH, 3/8-16 x .75, GR5, FT	100-6-16-12-5F	9	7-141
CSHH, 3/8-16 x .75, GR5, FT	100-6-16-12-5F	9	7-143
CSHH, 3/8-16 x .75, GR5, FT	100-6-16-12-5F	9	7-147
CSHH, 3/8-16 x .75, GR5, FT	100-6-16-12-5F	9	7-149
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	14	7-25
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	28	7-43
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	27	7-47

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	21	7-123
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	21	7-125
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	15	7-127
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	15	7-129
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	12	7-141
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	12	7-143
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	12	7-147
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	12	7-149
CSHH, 3/8-16 x 1.00, GR5, FT	100-6-16-16-5F	12	7-137
CSHH, 3/8-16 x 1.75, GR5	100-6-16-28-5	7	7-89
CSHH, 3/8-16 x 1.75, GR5	100-6-16-28-5	7	7-91
CSHH, 3/8-16 x 2.00, GR5	100-6-16-32-5	32	7-17
CSHH, 3/8-16 x 2.00, GR5	100-6-16-32-5	16	7-71
CSHH, 3/8-16 x 2.00, GR5	100-6-16-32-5	16	7-73
CSHH, 3/8-16 x 2.00, GR5	100-6-16-32-5	16	7-81
CSHH, 3/8-16 x 2.00, GR5	100-6-16-32-5	16	7-83
CSHH, 3/8-24 x 1.00, GR5	100-6-24-16-5	39	7-43
CSHH, 3/8-24 x 1.00, GR5	100-6-24-16-5	39	7-47
CSHH, 3/8-24 x 1.00, GR5, FT	100-6-24-16-5F	8	7-51
CSHH, 3/8-24 x 1.00, GR5, FT	100-6-24-16-5F	5	7-53
CSHH, 3/8-24 x 1.00, GR5, FT	100-6-24-16-5F	18	7-65
CSHH, 3/8-24 x 1.00, GR5, FT	100-6-24-16-5F	18	7-75
CSHH, 3/8-24 x 1.00, GR8, FT	100-6-24-16-8F	14	7-67
CSHH, 3/8-24 x 1.00, GR8, FT	100-6-24-16-8F	14	7-69
CSHH, 3/8-24 x 1.00, GR8, FT	100-6-24-16-8F	14	7-77
CSHH, 3/8-24 x 1.00, GR8, FT	100-6-24-16-8F	14	7-79
CSHH, 5/16-14 x 1.25, GR5	100-5-18-20-5	17	7-77
CSHH, 5/16-14 x 1.25, GR5	100-5-18-20-5	17	7-79
CSHH, 5/16-18 x .50, GR5, FT	100-5-18-8-5F	20	7-115
CSHH, 5/16-18 x .50, GR5, FT	100-5-18-8-5F	12	7-135
CSHH, 5/16-18 x .50, GR5, FT	100-5-18-8-5F	17	7-127
CSHH, 5/16-18 x .50, GR5, FT	100-5-18-8-5F	17	7-129
CSHH, 5/16-18 x .75, GR5, FT	100-5-18-12-5F	24	7-21
CSHH, 5/16-18 x .75, GR5, FT	100-5-18-12-5F	11	7-117
CSHH, 5/16-18 x .75, GR5, FT	100-5-18-12-5F	27	7-123
CSHH, 5/16-18 x .75, GR5, FT	100-5-18-12-5F	27	7-125
CSHH, 5/16-18 x 1.00, GR5, FT	100-5-18-16-5F	31	7-43
CSHH, 5/16-18 x 1.00, GR5, FT	100-5-18-16-5F	30	7-47
CSHH, 5/16-18 x 1.50, GR5	100-5-18-24-5	22	7-115
CSHH, 5/16-18 x 2.00, GR5	100-5-18-32-5	14	7-55

Description	Part Number	Item No.	Page No.
CSHH, 5/16-18 x 2.50, GR5	100-5-18-40-5	19	7-123
CSHH, 5/16-18 x 2.50, GR5	100-5-18-40-5	19	7-125
CSHH, 5/16-18 x 3.00, GR5	100-5-16-48-5	17	7-55
CSHH, 5/8-11 x 1.00, GR5, FT	100-10-11-16-5F	32A	7-13
CSHH, 5/8-11 x 1.00, GR5, FT	100-10-11-16-5F	9	7-117
CSHH, 5/8-11 x 1.25, GR5, FT	100-10-11-20-5F	24	7-13
CSHH, 5/8-11 x 1.25, GR5, FT	100-10-11-20-5F	14	7-109
CSHH, 5/8-11 x 1.25, GR8, FT	100-10-11-20-8F	15	7-11
CSHH, 5/8-11 x 1.25, GR8, FT	100-10-11-20-8F	REF	7-17
CSHH, 5/8-11 x 1.50, GR5	100-10-11-24-5F	35	7-17
CSHH, 5/8-11 x 1.50, GR5, FT	100-10-11-24-5F	28	7-21
CSHH, 5/8-11 x 1.50, GR5, FT	100-10-11-24-5F	18	7-23
CSHH, 5/8-11 x 2.00, GR5	100-10-11-32-5	29A	7-13
CSHH, 5/8-11 x 2.00, GR8	100-10-11-32-8	17	7-11
CSHH, 5/8-11 x 2.50, GR5	100-10-11-40-5	13	7-39
CSHH, 5/8-11 x 2.50, GR5	100-10-11-40-5	31	7-109
CSHH, 5/8-11 x 2.75, GR5	100-10-11-44-5	33	7-21
CSHH, 5/8-11 x 3.50, GR5	100-10-11-56-5	15	7-135
CSHH, 5/8-11 x 4.00, GR8	100-10-11-64-8	16	7-109
CSHH, 7/16-14 x .75, GR5, FT	100-7-14-12-5F	18	7-127
CSHH, 7/16-14 x .75, GR5, FT	100-7-14-12-5F	18	7-129
CSHH, 7/16-14 x 1.00, GR5, FT	100-7-14-16-5F	24	7-115
CSHH, 7/16-14 x 1.25, GR5	100-7-14-20-5	17	7-67
CSHH, 7/16-14 x 1.25, GR5	100-7-14-20-5	17	7-69
CSHH, 7/16-14 x 1.50, GR5	100-7-14-20-5	23	7-123
CSHH, 7/16-14 x 1.50, GR5	100-7-14-20-5	23	7-125
CSHH, 7/8-9 x 2.00, GR5, FT	100-14-9-32-5F	5	7-85
CSHH, 7/8-9 x 2.00, GR5, FT	100-14-9-32-5F	5	7-87
CSHH, M10x1.50 x 16mm	989272-50	31	7-7
CSHH, M10x1.50 x 30mm	989272-36	20	7-11
CSHH, M12x1.50 x 50mm	811330A	19	7-11
CSHH, M12x1.75 x 45mm, C8.8, FT	100-M12-1.75-45-8.8F	51	7-7
CSHH, M12x1.75 x 50mm, C8.8, FT	100-M12-1.75-50-8.8F	47	7-7
CSHH, M16x2 x 65mm, C8.8, FT	100-M16-2-65-8.8F	44	7-7
CSHH, Track Pad	811308	32	7-7
CSLS, M16x2 x 35mm	1008895	46	7-7
CSLS, M16x2 x 45mm	1008903	42	7-7
CSSH, 3/8-16 Shoulder Socket	870279	6	7-67
CSSH, 3/8-16 Shoulder Socket	870279	6	7-69
CSSH, 3/8-16 Shoulder Socket	870279	7	7-71

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
CSSH, 3/8-16 Shoulder Socket	870279	7	7-73
CSSH, 3/8-16 Shoulder Socket	870279	6	7-77
CSSH, 3/8-16 Shoulder Socket	870279	6	7-79
CSSH, 3/8-16 Shoulder Socket	870279	7	7-81
CSSH, 3/8-16 Shoulder Socket	870279	7	7-83
Cutoff (Left)	851153SRV	22	7-23
Cutoff (Right)	851154SRV	23	7-23
Cylinder, Arm Extension	930070	16	7-111
Cylinder, Hopper Lift	840020	18	7-17
Cylinder, Hydraulic, 2.00 x 12.00/30.00 x 1.25	851191	1	7-101
Cylinder, Hydraulic, 2.00 x 12.00/30.00 x 1.25	851192	2	7-101
Cylinder, Hydraulic, 2.00 x 2.00 x 42.00 x 1.25	981710R	18	7-115
Cylinder, Hydraulic, 2.00 x 2.00 x 42.00 x 1.25	981710L	19	7-115
Cylinder, Hydraulic, 2.00 x 8.00	610110	3	7-17
Cylinder, Hydraulic, Track Tensioner	811331	11	7-7
Cylinder, Hydraulic, Track Tensioner	811331	9	7-11
Decal, Control Panel, Fuse	1014681	20	7-61
Decal, Electric Heat	985143	14	7-93
Decal, Electric Heat	985143	11	7-135
Decal, Electric Heat	1011180	4	7-139
Decal, Electric Heat	1011180	5	7-145
Decal, Electric Heat	1011180	9	7-151
Decal, Height	851215	10	7-39
Decal, Info, Test Port	1014058	3	7-27
Decal, Operator Control Panel	1014594	13	7-59
Decal, Thicker/Thinner	1007677-01	20	7-131
Decal, Thicker/Thinner	1007677-01	20	7-133
Deflector, Left Side (High Deck)	850038LSRV	26	7-13
Deflector, Right Side (High Deck)	850038RSRV	REF	7-13
Display, PV480, T4F, 8510/8515 T4F	1013632	2	7-59
Door, Engine Access, T4F	1009349	3	7-43
Door, Engine Access, T4F	1009349	3	7-47
Drive Shaft, Conveyor	851116	8	7-13
Dual Joysticks, Control Box, Plus One	1008904SRV	4	7-29
Dual-Joystick Control Box, Plus One	1008904SRV	17	7-51
Dual-Joystick Control Box, Plus One	1008904SRV	REF	7-53
Ears, Pivot	851210SRV	5	7-39
ECU, Kubota	1009253-24	10	7-35
Elbow, Reducing	1009384-02	6	7-33
Element, Heater, 46", 1000W	1007275SRV	7	7-115

Description	Part Number	Item No.	Page No.
Element, Heater, Screed, 40"	987890SRV	9	7-77
Element, Heater, Screed, 40"	987890SRV	9	7-79
Element, Heater, Screed, 40"	987890SRV	11	7-81
Element, Heater, Screed, 40"	987890SRV	11	7-83
Element, Heater, Screed, 41"	987890SRV	5	7-123
Element, Heater, Screed, 41"	987890SRV	5	7-125
Element, Heater, Screed, 46"	987886SRV	9	7-75
Element, Heating, 500W/220V, 30" Long	1011158	2	7-141
Element, Heating, 500W/220V, 30" Long	1011158	2	7-143
Element, Heating, 500W/220V, 30" Long	1011158	2	7-147
Element, Heating, 500W/220V, 30" Long	1011158	2	7-149
Element, Heating, 570W, 240V, 13"	1000397	REF	7-87
Element, Heating, 970W, 240V, 24.75"	1000893	REF	7-87
Enclosure, Control Box w/Holes , 8510D	1013636	1	7-59
Enclosure, Control Box w/Holes , 8510D	1013636	1	7-61
Enclosure, Electric Heat and Heated Endgates	1011311-01	1	7-151
Enclosure, Electric Heat w/Holes	1010397-01	10	7-93
Enclosure, Electric Heat w/Holes	1010397-01	7	7-135
End Cap, Auger Shaft	851647	23	7-21
End, Motor End of Screw	851212	7	7-39
End, Rod End of Screw	851211	6	7-39
Engine, Kubota, T4F, 74HP, 8515	1014671	GRP	7-31
Engine, Kubota, T4F, 74HP, 8515	1014671	GRP	7-33
Engine, Kubota, T4F, 74HP, 8515	1014671	GRP	7-35
Extension Burner Pipe	851600-1	19	7-67
Extension Burner Pipe	851600-1	19	7-69
Extension, 12" Auger (Left)	985795	REF	7-21
Extension, 12" Auger (Right)	985796	REF	7-21
Extension, 6" (Left)	851634LSRV	5	7-107
Extension, 6" (Right)	851634RSRV	6	7-107
Extension, Front Bumper	852664	38	7-7
Extension, Screed Arm	851206SRV	1	7-39
Fan, Radiator	1009253-23	12	7-33
Fan, Radiator 8515	1009253-23	6	7-31
Filler Neck	140030FN	2	7-25
Filter, Air, Primary	1009253-17	REF	7-33
Filter, Air, Secondary	1009253-19	REF	7-33
Filter, Element, Charge/Return	290030	13	7-25
Filter, Fuel	1009253-18	REF	7-33
Filter, Fuel/Water Separator	1009253-19	REF	7-33

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Filter, Head, Charge/Return	290010	12	7-25
Filter, Oil	986537-03	7	7-33
Fitting Straight, 10MJ-08MB	10/8/6400	18	7-7
Fitting, 8LOC - 8RFJX90	1010528	REF	7-139
Fitting, 8LOC - 8RFJX90	1010528	REF	7-145
Fitting, 90° 06MJ-06MP, .078 Orifice	987909	23	7-39
Fitting, 90°, 10MJ-08MB	10/8/6801	17	7-7
Fitting, Lube, Straight, 1/4-28	104610	37	7-21
Fitting, Lube, Straight, 1/4-28	140610	6	7-89
Fitting, Lube, Straight, 1/4-28	140610	6	7-91
Fitting, Push Lok, -5 LOC/-6 RFJX	5LOC-6RFJX	REF	7-37
Fitting, Straight, 08MP-08MB	6401-8-8-O	20	7-7
Flashing, Center, Front Lip	985063SRV	28	7-17
Fuse Block, 18 Gang, ATC	685060	14	7-61
Fuse Holder	1009253-27	7	7-35
Fuse, 10A, ATC	36340	17	7-61
Fuse, 15A, ATC	36341	15	7-61
Fuse, 20A, ATC	36342	16	7-61
Fuse, 25A, ATC	36218	18	7-61
Fuse, 5A, ATC	36746	19	7-61
Gasket, Condulet Box, 3/4"	920238-4	REF	7-137
Gauge, LPG Pressure	230110	3	7-41
Generator	988176	2	7-103
Grating, Walkboard, Half	1014686	15	7-43
Grating, Walkboard, Half	1014686	15	7-47
Group, Screed Base 8500 Series Electric	989377SRV	1	7-75
Group, Screed Base 8500 Series Prop	1000251SRV	1	7-65
Group, Screed Frame, 815HD	1007195	1	7-115
Guard, Fan, Maintainer	1005365-23	7	7-31
Guard, Screed Extension Hinge (Left)	851180LSRV	16	7-67
Guard, Screed Extension Hinge (Left)	851180LSRV	15	7-71
Guard, Screed Extension Hinge (Left)	851180LSRV	16	7-77
Guard, Screed Extension Hinge (Left)	851180LSRV	15	7-81
Guard, Screed Extension Hinge (Right)	851180RSRV	16	7-69
Guard, Screed Extension Hinge (Right)	851180RSRV	15	7-73
Guard, Screed Extension Hinge (Right)	851180RSRV	16	7-79
Guard, Screed Extension Hinge (Right)	851180RSRV	15	7-83
Guide Wheel, Truck Hitch	930055	10	7-111
Hair Pin Clip, Clevis Pin	870307	30	7-109
Hair Pin Cotter, .094 x .250 x .500	37108	9	7-57

Description	Part Number	Item No.	Page No.
Hair Pin Cotter, .177	870307	10	7-7
Hair Pin Cotter, .177	870307	13	7-11
Hair Pin, Cotter, .177	870307	5	7-17
Half Link, Conveyor Chain w/Pin, Cotter	850215A	17	7-13
Hand Grip, Drive Lever	870276	3	7-89
Hand Grip, Drive Lever	870276	3	7-91
Hand Grip, Driver Lever	870276	16	7-141
Hand Grip, Driver Lever	870276	16	7-143
Hand Grip, Driver Lever	870276	16	7-147
Hand Grip, Driver Lever	870276	16	7-149
Hand Grip, Flight/Depth Screw	870276	17	7-85
Hand Grip, Flight/Depth Screw	870276	17	7-87
Handle & Nozzle, Fuel	920220	6	7-37
Handle Grip for Steering Box Handle	490010	REF	7-29
Handle, Bolt, 5/8-11	300060	13	7-109
Handle, Vertical, Hole .25	910060BSRV	6	7-57
Harness, Bulkhead To Generator	1007254	REF	7-103
Harness, Generator Control Box To Bulkhead	1007253	7	7-103
Harness, Plus One to Pumps	987133	6	7-29
Hinge Assembly	1002735SRV	3	7-81
Hinge Assembly	1002736SRV	3	7-83
Hinge, (2) Thru Holes	987639	4	7-43
Hinge, (2) Thru Holes	987639	4	7-47
Hinged Panel (Left)	840157SRV	20	7-17
Hinged Panel (Right)	840156SRV	21	7-17
Hold Down	802112SRV	8	7-17
Hood, Air Inlet, 3.75	1002917-29	2	7-33
Horn, Backup Alarm	160320	REF	7-29
Hose Clamp, 2.125 (Size 28)	230240	18	7-41
Hose Kit 8515 Truck Hitch	984399	REF	7-111
Hose Spraydown, 9 Ft., 5LOLA-JFJX-OPRN-48	1008060	3	7-37
Hose, 06, Low Pressure Push-On	38579	4	7-37
Hose, 8LOLA, Lock On, 300 PSI, Black, 40"	1011315-01	REF	7-139
Hose, 8LOLA, Lock On, 300 PSI, Black, 40"	1011315-01	REF	7-145
Hose, 8LOLA, Lock On, 300 PSI, Black, 50"	1011315-02	REF	7-139
Hose, 8LOLA, Lock On, 300 PSI, Black, 50"	1011315-02	REF	7-145
Hose, Ignitor Burner	230034	7	7-41
Hose, Ignitor Burner	230034	22	7-41
Hose, LPG Regulator to Tee	230032	6	7-41
Hose, Radiator, Lower	1001166-15	9	7-31

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Hose, Radiator, Upper	986537-21	8	7-31
Hose, Screed Extension Burner	230038	10	7-41
Hose, Screed Extension Burner	851225	13	7-41
Hose, Spraydown, 4 Ft., 5LOLOA-JFJX-OPEN-108	1008061	2	7-37
Housing, Front Slide Bar	851243SRV	25	7-109
Housing, Guide Bar (Inner)	920051SRV	24	7-17
Housing, Rear Slide Bar	851241SRV	24	7-109
Housing, Vibrator (Left)	982965L-1	2	7-117
Housing, Vibrator (Right)	982965R-1	8	7-117
Hydraulic Cylinder, Cutoff	910170	21	7-23
Hydraulic Cylinder, Screed Lift	851436SRV	12	7-23
Hydraulic Motor, Conveyor Main	1005803	21	7-13
Hydraulic Motor, Conveyor Main	1005803	4	7-21
Hydraulic Motor, Conveyor Main	1005803	1	7-23
Hydraulic Motor, Screed Vibrator	983405	6	7-95
Idler, Conveyor Chain Front	850120	28	7-13
Idler, Track Front	1001589	8	7-7
Idler, Track Front	983530	11	7-11
Insert, 3-Jaw Coupling	280040	4	7-95
Insert, 3-Jaw Coupling	280040	4	7-117
Isolator, Engine	986537-14	11	7-33
Isolator, Radiator, Upper Mount	1001166-57	3	7-31
Key, .25 x .25 x 1.25	1011309	9	7-131
Key, .25 x .25 x 1.25	1011309	9	7-133
Key, Ignition, Kubota, 300B, 635	982008-04	10	7-59
Key, Vandalism Lock	35560	27	7-43
Key, Vandalism Lock	35560	26	7-47
Kit, Extension Element Hose/Wiring	1011315	5	7-139
Kit, Extension Element Hose/Wiring	1011315	6	7-145
Kit, Pressure Test, Hydraulic	1013595	REF	7-27
Kit, Shaft, H-1 Pump	986519-03	REF	7-29
Kit, Spray Down Pump w/Cut Off	1011885	1	7-37
Kit, Track, Heavy Link	983166-05	REF	7-11
Kit, Viton O-Ring	986992-06	REF	7-103
Knob, Revolving Ball, M12x1.75	981574	11	7-131
Knob, Revolving Ball, M12x1.75	981574	11	7-133
Latch, Walkboard	985549	5	7-97
Latch, Walkboard	985549	6	7-119
Left Side SM	988116SRV	11	7-43
Lever Latch	980460	REF	7-43

Description	Part Number	Item No.	Page No.
Lever Latch	980460	REF	7-47
Light, Blue, Dash, .500 Hole	31986	7	7-59
Light, Green, Dash, .500 Hole	31985	6	7-59
Light, Indicator, White	1010500	11	7-59
Light, Red, Dash, .50 Hole	31983	3	7-151
Light, Red, Dash, .500 Hole	31983	7	7-93
Light, Red, Dash, .500 Hole	31983	4	7-135
Lighter, Cigarette, 12V	1011147	5	7-61
Link Kit, Track Repair	811312	25	7-7
Link w/Tab Conveyor Chain Inner	850080B	19	7-13
Link, Master	853411	REF	7-21
Link, Master w/Pins	850070A	13	7-13
Link, Master, #60 Chain	853411	REF	7-115
Linkage, Controls (Left)	1003119	6	7-55
Lock Arm, Flight Screw	851375SRV	2	7-131
Lock Arm, Flight Screw	851373SRV	2	7-133
Locking Bar, Crown And Valley	988376	5	7-65
Locking Bar, Crown And Valley	988376	5	7-75
Locknut, PTORQ, 3/4-16	95998936	13	7-131
Locknut, PTORQ, 3/4-16	95998936	13	7-133
LPG Tank, 20 lbs.	230010	1	7-41
Machine Screw, Phillips Head, #10-32 x 2.25	900076	39	7-13
Manifold, Generator	986992-05	REF	7-103
Manifold, Generator, w/Flow Control	1012235	6	7-103
Manifold, Side Wing	1011643	10	7-25
Manifold, Track Tensioner	851544	19	7-7
Micro Switch, Automatic	900050SRV	36	7-13
Motor Mount Cover	986644	6	7-105
Motor, Hydraulic, Danfoss	986640	4	7-137
Motor, Hydraulic, Drive, 2 Speed	811362	3	7-11
Motor, Hydraulic, Drive, 2-Speed	811362	22	7-7
Motor, Hydraulic, Gear, 1.17 Cir, "A"	983405	6	7-117
Motor, Hydraulic, Generator Driver	986994	3	7-103
Motor, Power Crown	986640	1	7-105
Mount, Bearing	870030	5	7-89
Mount, Bearing	870030	5	7-91
Mount, Conveyor Drive Motor	851149SRV	3	7-23
Mount, Engine, Front (Left)	986537-16	9	7-33
Mount, Engine, Front, (Right)	986537-17	10	7-33
Mount, Engine, Rear	988673-14	8	7-33

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Mount, Lower Radiator	1009384-12	10	7-31
Mount, Motor, 8515	981696	5	7-21
Mount, Pivot	851209SRV	3	7-39
Mount, Push Roller, Extended	1006286	REF	7-7
Mount, Sonic Sensor	1008905	9	7-127
Mount, Sonic Sensor	1008905	9	7-129
Mount, Sonic Sensor	1008905	5	7-141
Mount, Sonic Sensor	1008905	5	7-143
Mount, Sonic Sensor	1008905	7	7-147
Mount, Sonic Sensor	1008905	7	7-149
Mounting Plate 6" Electric Screw, (Left)	853585SRV	REF	7-39
Mounting Plate 6" Electric Screw, RH	853586SRV	22	7-39
Nozzle, Spraydown	901210A	REF	7-37
Nut, 18 Shell, Plastic	1002564-02	12	7-61
Nut, Hex Jam, 3/4-10, GR5	202-12-10-5	4	7-87
Nut, Hex, 1/2-13	200-8-13-5	23	7-115
Nut, Hex, 1/2-13, GR5	200-8-13-5	32	7-21
Nut, Hex, 1/2-13, GR5	200-8-13-5	7	7-23
Nut, Hex, 1/2-13, GR5	200-8-13-5	38	7-43
Nut, Hex, 1/2-13, GR5	200-8-13-5	38	7-47
Nut, Hex, 1/2-13, GR5	200-8-13-5	5	7-119
Nut, Hex, 1/2-13, GR5	200-8-13-5	16	7-137
Nut, Hex, 1/2-13, GR5	200-8-13-5	19	7-137
Nut, Hex, 1/4-20, GR5	200-4-20-5	19	7-131
Nut, Hex, 1/4-20, GR5	200-4-20-5	19	7-133
Nut, Hex, 3/8-16	200-6-16-5	9	7-89
Nut, Hex, 3/8-16	200-6-16-5	9	7-91
Nut, Hex, 3/8-16, GR5	200-6-16-5	26	7-123
Nut, Hex, 3/8-16, GR5	200-6-16-5	26	7-125
Nut, Hex, 3/8-16, GR5	200-6-16-5	7	7-141
Nut, Hex, 3/8-16, GR5	200-6-16-5	7	7-143
Nut, Hex, 3/8-16, GR5	200-6-16-5	5	7-147
Nut, Hex, 3/8-16, GR5	200-6-16-5	5	7-149
Nut, Hex, 5/16-14	200-5-18-5	18	7-79
Nut, Hex, 5/16-14, GR5	200-5-18-5	18	7-77
Nut, Hex, 5/16-18, GR5	200-5-18-5	7	7-51
Nut, Hex, 5/16-18, GR5	200-5-18-5	10	7-53
Nut, Hex, 5/16-18, GR5	200-5-18-5	REF	7-55
Nut, Hex, 5/16-18, GR5	200-5-18-5	16	7-55
Nut, Hex, 5/16-18, GR5	200-5-18-5	19	7-55

Description	Part Number	Item No.	Page No.
Nut, Hex, 5/16-18, GR5	200-5-18-5	14	7-135
Nut, Hex, 5/8-11, GR5	200-10-11-5	17	7-135
Nut, Hex, 7/16-14, GR5	200-7-14-5	18	7-67
Nut, Hex, 7/16-14, GR5	200-7-14-5	18	7-69
Nut, Hex, 7/16-14, GR5	200-7-14-5	25	7-123
Nut, Hex, 7/16-14, GR5	200-7-14-5	25	7-125
Nut, Hex, Heavy, 5/8-11, GR5	201-10-11-5	37	7-17
Nut, Hex, Jam 3/4-10, GR5	202-12-10-5	4	7-85
Nut, Hex, M12x1.75, C 8.8	200-M12-1.75-8.8	15	7-131
Nut, Hex, M12x1.75, C 8.8	200-M12-1.75-8.8	15	7-133
Nut, Lock	95200879	8	7-131
Nut, Lock	95200879	8	7-133
Nut, Lock Stover, 1-8, GR5	204-8-13-5	12	7-39
Nut, Lock, #10-32	900078	41	7-13
Nut, Lock, Nylon, 7/8-9 UNC-2B	987396	15	7-67
Nut, Lock, Nylon, 7/8-9 UNC-2B	987396	15	7-69
Nut, Lock, Stover 3/8-16, GR5	204-6-16-5	9	7-71
Nut, Lock, Stover, 1/2-13, GR5	204-8-13-5	20	7-39
Nut, Lock, Stover, 1/4-20, GR5	204-4-20-5	18	7-39
Nut, Lock, Stover, 3/8-16, GR5	204-6-16-5	40	7-17
Nut, Lock, Stover, 3/8-16, GR5	204-6-16-5	9	7-73
Nut, Lock, Stover, 3/8-16, GR5	204-6-16-5	9	7-81
Nut, Lock, Stover, 3/8-16, GR5	204-6-16-5	9	7-83
Nut, Lock, Stover, 3/8-16, GR5	204-6-16-5	13	7-141
Nut, Lock, Stover, 3/8-16, GR5	204-6-16-5	13	7-143
Nut, Lock, Stover, 3/8-16, GR5	204-6-16-5	13	7-147
Nut, Lock, Stover, 3/8-16, GR5	204-6-16-5	13	7-149
Nut, Lock, Stover, 5/8-11, GR5	204-10-11-5	34	7-21
Nut, Lock, Stover, 5/8-11, GR5	204-10-11-5	14	7-39
Nut, Lock, Stover, 5/8-11, GR5	204-10-11-5	32	7-109
Nut, Lock, Stover, 7/8-14, GR8	204-14-14-8	14	7-127
Nut, Lock, Stover, 7/8-14, GR8	204-14-14-8	14	7-129
Nut, Lock, Stover, 1-14, GR5	204-16-14-5	15	7-23
Nut, Nylon Lock, 7/8-9 UNC-2B	987396	15	7-77
Nut, Nylon Lock, 7/8-9 UNC-2B	987396	15	7-79
Nut, Nylon Lock, 7/8-9 UNC-2B	987396	8	7-87
Nut, Nylon Lock, 7/8-9 UNC-2B	987396	8	7-85
Nut, Plastic, H-1 Pump	986519-02	REF	7-29
Nut, Track Pad Cap Screw	811309	33	7-7
Option, HD Heated Endgates	1011211SRV	GRP	7-139

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Option, HD Heated Endgates and LeeBoy Edge	1011312SRV	GRP	7-145
O-Ring, Hydraulic Motor	811366	24	7-7
O-Ring, Hydraulic Motor	811366	22	7-11
O-Ring, Piggyback to Main	36808	3	7-29
Pin	851132	4	7-17
Pin, .50 x 3.00 w/Cotter Hairpin	72836	7	7-97
Pin, Clevis, .250 x .875	350080	11	7-51
Pin, Clevis, .250 x .875	350080	8	7-53
Pin, Clevis, .250 x .875	350080	12	7-55
Pin, Clevis, .250 x .875	350080	8	7-57
Pin, Cotter .094 x .375	900079	42	7-13
Pin, Cotter, .094 x .75	960019	REF	7-51
Pin, Cotter, .094 x .75	960019	REF	7-53
Pin, Cylinder	210060	3	7-101
Pin, Deutsch, 14-16 AWG	982456	REF	7-139
Pin, Deutsch, 14-16 AWG	982456	REF	7-145
Pin, Hydraulic Cylinder	240030	19	7-17
Pin, Hydraulic Cylinder	240030	20	7-23
Pin, Pivot Side Panel	854084SRV	14	7-17
Pin, Push Bar Swivel	810081SRV	40	7-7
Pin, Roll Pin (3/8 x 2.00)	851118-1	20	7-13
Pin, Track Link, Master, Heavy Duty	983166-04	REF	7-11
Pin, Track Link, Plain	811307	27	7-7
Pipe, Screed Burner, Med	851197-1	19	7-65
Pipe, Screed Extension Burner	854571SRV	20	7-71
Pipe, Screed Extension Burner	854571SRV	20	7-73
Pivot Mount, Topcon/Spectra Physics	851575SRV	12	7-109
Plate, 8000-8500, Cut Off Cylinder Mount	853497	27	7-23
Plate, Bracket, Common Test Port	1013805	1	7-27
Plate, Conveyor Flap Extension	853645SRV	19	7-43
Plate, Conveyor Flap Extension	853645SRV	19	7-47
Plate, Cover	980751	18	7-43
Plate, Cover	980751	18	7-47
Plate, Cut Off Cylinder Mount	851152	17	7-23
Plate, Cut Off Gusset	853596	29	7-23
Plate, Endgate	1006442	2	7-127
Plate, Endgate	1006442	2	7-129
Plate, Endgate Bracket w/Holes	1006536	15	7-123
Plate, Endgate Bracket w/Holes	1006536	15	7-125
Plate, Extension Access Cover	1006398	10	7-123

Description	Part Number	Item No.	Page No.
Plate, Extension Access Cover	1006398	10	7-125
Plate, Extension Strikeoff	1006400	7	7-123
Plate, Extension Strikeoff	1006400	7	7-125
Plate, Fuse Mounting	1009253-26	5	7-35
Plate, Mounting	1009253-30	4	7-35
Plate, Power Crown Adjuster	1008600	3	7-137
Plate, Side Wing Rubber Shield	854076-1	15A	7-17
Plate, Vibrator Housing	880071	9	7-95
Plate, Walkboard Hinge	985163	4	7-97
Plate, Walkboard Hinge	985163	2	7-119
Plate, Wear, 12" Auger, 8515	981699SRV	17	7-21
Potentiometer, Steering Box	851540	REF	7-29
Power Cord, Bulkhead to Control Box	985138-03	15	7-93
Power Cord, Bulkhead to Control Box	985138-03	8	7-103
Power Crown Support	986645	5	7-105
Pump, Hydraulic Single w/EDC (H-1 Pump)	986519	1	7-29
Pump, Hydraulic, 25.4 CC/19 CC	1013155	2	7-29
Push Roller, Truck Wheel	810102	12	7-111
Quick Disconnect Coupling	230084	21	7-41
Reel, w/Hose, Spraydown, .312 Diameter Hose	920200	5	7-37
Regulator, 0 - 60 PSI, LP	982515	REF	7-41
Regulator, Flow FR12-33A	986992-04	REF	7-103
Relay, 12VDC, SPDT, 40A, 5 Pin	36085	4	7-61
Relay, 12VDC, SPST, 100A, Heavy Duty	985751	8	7-35
Relay/Fuse Block	1009253-28	6	7-35
Relief Valve, Side Wing Manifold	910122-1	11	7-25
Remote Pod, Ultra Sonic	982795	14	7-85
Remote Pod, Ultra Sonic	982795	14	7-87
Remote Pod, Ultra Sonic	982795	20	7-127
Remote Pod, Ultra Sonic	982795	20	7-129
Remote, Electric Flight Screw	920238	24	7-39
Rod & Chain, Guide Bar	920061SRV	25	7-17
Rod Extension (Left)	986650	2b	7-105
Rod Extension (Right)	986636	2a	7-105
Rod, Control Handle Pivot, HD	988202	5	7-51
Rod, Control Handle Pivot, HD	988202	3	7-53
Rod, Conveyor, Switch Linkage	900075	38	7-13
Roll Up Curb Attachment, 12" (Left)	851635LSRV	REF	7-107
Roll Up Curb Attachment, 12" (Right)	851635RSRV	REF	7-107
Roll Up Curb Attachment, 24" (Left)	851636LSRV	3	7-107

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Roll Up Curb Attachment, 24" (Right)	851636RSRV	4	7-107
Roller	930040	7	7-111
Roller Extension, Bumper	930060	14	7-111
Roller, Conveyor Chain Guide, w/ Bearing	850162	31	7-13
Roller, Extension Bumper	980035	34	7-7
Round, .688 x 43.50 CRS	854447SRV	11	7-123
Round, .688 x 43.50 CRS	854447SRV	11	7-125
Round, .688 x 43.50, CRS	854447SRV	8	7-67
Round, .688 x 43.50, CRS	854447	8	7-69
Round, .688 x 43.50, CRS	854447SRV	10	7-71
Round, .688 x 43.50, CRS	854447SRV	10	7-73
Round, .688 x 43.50, CRS	854447SRV	8	7-77
Round, .688 x 43.50, CRS	854447	8	7-79
Round, .688 x 43.50, CRS	854447SRV	10	7-81
Round, .688 x 43.50, CRS	854447SRV	10	7-83
Rubber, Front Lip, Center	985058	27	7-17
Safety Prop, Hopper	987264SRV	17	7-17
Scraper, Conveyor	851128SRV	33	7-13
Screed, 8515 LP, 4 Adjusters Extensions	1004918	REF	7-65
Screw, Electric (6.00")	851518	4	7-39
Screw, Wing, 3/8-16 x 1.00	--	8	7-141
Screw, Wing, 3/8-16 x 1.00	--	8	7-143
Screw, Wing, 3/8-16 x 1.00	--	8	7-147
Screw, Wing, 3/8-16 x 1.00	--	8	7-149
Seal	REF	4	7-103
Seal Kit	811331-01	REF	7-11
Seal Kit	6231-01	REF	7-17
Seal Kit	930070-01	REF	7-111
Seal Kit, 2.00 Cylinder	6231-01	REF	7-23
Seal Kit, 2.50 Cylinder	910170-01	REF	7-23
Seal Kit, Cylinder, Hydraulic	851191-01	REF	7-101
Seal Kit, Cylinder, Hydraulic	851191-01	REF	7-101
Seal Kit, Hopper Wing	38549-01	REF	7-17
Seal Kit, Hydraulic Cylinder	811331-01	REF	7-7
Seal Kit, Hydraulic Motor	1001027-01	REF	7-13
Seal, Cable, 18-16 GA, Green	36166	REF	7-39
Seal, Hydraulic Motor/Pump	59941203	23	7-7
Seal, Hydraulic Motor/Pump	59941203	25	7-11
Selector Valve, Conveyor	852250	REF	7-111
Selector Valve, Vibrator	910080	7	7-55

Description	Part Number	Item No.	Page No.
Sending Unit, Fuel Tank	140040	8	7-25
Sensor, Ultra Sonic	982794	16	7-85
Sensor, Ultra Sonic	982794	16	7-87
Sensor, Ultra Sonic	982794	22	7-127
Sensor, Ultra Sonic	982794	22	7-129
Sensor, Ultra Sonic	980540	11	7-127
Sensor, Ultra Sonic	980540	11	7-129
Set Screw, 5/8-11 x 3.00, Square, Head	850170	35	7-13
Set Screw, Hex Socket, Cup, 3/8-16 x .75	113-6-16-12	4	7-141
Set Screw, Hex Socket, Cup, 3/8-16 x .75	113-6-16-12	4	7-143
Set Screw, Hex Socket, Cup, 3/8-16 x .75	113-6-16-12	4	7-147
Set Screw, Hex Socket, Cup, 3/8-16 x .75	113-6-16-12	4	7-149
Set Screw, Hex Socket, Oval, 5/16-18 x .75	126-5-18-12	6	7-51
Set Screw, Hex Socket, Oval, 5/16-18 x .75	126-5-18-12	9	7-53
Set Screw, Hex Socket, Oval, 5/16-18 x .75	126-5-18-12	REF	7-55
Shaft, Bumper Roller	930075	17	7-111
Shaft, Conveyor Front Idler	851124	30	7-13
Shaft, Endgate Mount	855579	15	7-141
Shaft, Endgate Mount	855579	15	7-143
Shaft, Endgate Mount	855579	14	7-147
Shaft, Endgate Mount	855579	14	7-149
Shaft, Push Bar Roller	980034	37	7-7
Shaft, Screed Extension, Chromed, HD	1006415	4	7-121
Shaft, Tilt Screw Swivel	980457	5	7-127
Shaft, Tilt Screw Swivel	980457	5	7-129
Shaft, Vibrator Eccentric	880062	8	7-95
Shield, 8500 Center Conv.	851133SRV	7	7-17
Shield, Corner Rubber	851147A	15	7-17
Shield, Front Hard Rubber	985057	12	7-17
Shield, Front Support	985669SRV	11	7-17
Side Wing Cylinder Bushing	930041	REF	7-17
Sight Gauge, Hydraulic Oil Temp/Level	500070	4	7-25
Skid	851249SRV	22	7-109
Sleeve, Rubber, Intake Reducer	1009253-25	4	7-33
Slope Cable 5 Foot	1010499-10	6	7-109
Slope Sensor	1010499-09	7	7-109
SMS Test Hose Assembly w/#4 Female JIC - 24"	1013588-24	REF	7-27
SMS Test Hose Assembly w/#4 Female JIC - 96"	1013588-96	REF	7-27
Snap Ring	851256	5	7-99
Snap Ring, Conveyor Drive Shaft	850040	9	7-13

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Snap Ring, Conveyor Drive Shaft	850040	27	7-13
Socket, 2-Pin, DT04-2P Deutsch	983198	REF	7-139
Socket, 2-Pin, DT04-2P Deutsch	983198	REF	7-145
Spacer, Crown Mount	1006419	10	7-137
Spacer, Track Link Bushing	811310	28	7-7
Spring, Extension	250170	REF	7-119
Spring, Tension	851245	29	7-109
Sprocket	986641	8	7-105
Sprocket, #50 Roller Chain	1000799	11	7-137
Sprocket, 800/8500 Auger	860030	3	7-21
Sprocket, Conveyor Drive Motor	851120	22	7-13
Sprocket, Conveyor Drive Motor	851120	5	7-23
Sprocket, Inner Drive C-188	850030	6	7-13
Sprocket, Outer Drive	851473	3	7-13
Sprocket, Outer Drive C-188	851474SRV	5	7-13
Sprocket, Track Drive	1006737	4	7-7
Sprocket, Track Drive, 17 Tooth	1009464	5	7-11
Starter, Kubota, 100A	1001166-03	3	7-35
Steering Box Wheel, Plus One	1000708	18	7-51
Steering Box Wheel, Plus One	1000708	REF	7-53
Steering Wheel, Control Box, Plus One	1000708	7	7-29
Stop Rubber, (Scraper)	410070	34	7-13
Strainer & Gasket Kit	140030GK	3	7-25
Strainer & Gasket Kit	140030GK	REF	7-93
Strainer & Gasket Kit	140030GK	REF	7-135
Strainer, Hydraulic Suction, 200 Mesh	36123	6	7-25
Strike Off, 12" (Left)	860091LSRV	1	7-107
Strike Off, 12" (Right)	860091RSRV	2	7-107
Strike Off, 24" (Left)	860095LSRV	REF	7-107
Strike Off, 24" (Right)	860095RSRV	REF	7-107
Strobe Light, Amber	1013231	6	7-43
Strobe Light, Amber	1013231	6	7-47
Sub-Assembly, Flight Screw	859365	4	7-89
Sub-Assembly, Flight Screw	859365	4	7-91
Support, Pivot Bar	930015	1	7-111
Switch, Battery Disconnect	SW29	14	7-43
Switch, Battery Disconnect	SW29	14	7-47
Switch, Emergency Stop, 1-NC	1010672	12	7-59
Switch, Ignition w/Heat St	39146-14	9	7-59
Switch, Limit SPDT	72026-01	REF	7-29

Description	Part Number	Item No.	Page No.
Switch, Push Button	982249	3	7-59
Switch, Push Button	982249	8	7-93
Switch, Push Button	982249	5	7-135
Switch, Push Button	982249	4	7-151
Switch, Toggle, Auto Conveyor	900030	5	7-59
Switch, Toggle, DPDT, 2-POS	72086	2	7-151
Switch, Toggle, SPDT, 3-POS	851090613	8	7-59
Switch, Toggle, SPST, 2 -POS	851391	5	7-151
Switch, Toggle, SPST, 2-POS	851391	4	7-59
Switch, Toggle, SPST, 2-POS	851391	9	7-93
Switch, Toggle, SPST, 2-POS	851391	6	7-135
Switch, Toggle, SPST, 2-POS	851391	REF	7-29
Switch, Toggle, SPST, 2-POS, MOM	72884	20	7-137
Tab, Conveyor Chain Weld On	851118-2	REF	7-13
Tail Piece, Bolt On	1003240	16	7-47
Tail Pipe, Tier 4, Kubota	1011364	12	7-35
Tank, Coolant Recovery, Kubota	986537-46	5	7-31
Tee, .250 Pipe	230080	8	7-41
Tee, .250 Street	230081	9	7-41
Terminal Block, 1- Gang	987982	13	7-61
Terminal, Sealed Connector, 16-14 GA, Female	36165	REF	7-39
Terminal, Socket, Deutsch, 14-16 AWG	982448	REF	7-139
Terminal, Socket, Deutsch, 14-16 AWG	982448	REF	7-145
Test Port, Hydraulic, To #4 JIC Bulkhead	1013583	2	7-27
Thimble, Cable, .063	1013865	27	7-109
Thumb Screw, 3/8-16 x 1.00	920070	26	7-17
Thumb Screw, 3/8-16 x 1.00	920070	15	7-51
Thumb Screw, 3/8-16 x 1.00	920070	13	7-53
Thumb Screw, 3/8-16 x 1.00	920070	5	7-55
Thumb Screw, 3/8-16 x 1.00	920070	11	7-109
Timer, Electric, .06 - 60 minute	985142	12	7-93
Timer, Electric, .06 - 60 minute	985142	9	7-135
Timer, Electric, .06 - 60 Minute	985142	7	7-151
Toeboard	988115	12	7-43
Toeboard	988189	12	7-47
Tool Box	851169	6	7-97
Top Rail, 8500 Screed Extension	855784	11	7-65
Top Rail, 8500 Screed Extension	855784	11	7-75
Torque Hub, 47.6:1, w/Brake	1008779	3	7-7
Torque Hub, 47.6:1, w/Brake	1008779	4	7-11

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
T-Pin, Casted Conveyor Chain	850100A	REF	7-13
Track, Drive Poly, Group, Comer	1009869	GRP	7-7
Track Pad, Cast	811304	16	7-7
Track Pad, Poly	851104	15	7-7
Track Pad, Poly, Heavy Duty	983166-02	REF	7-11
Track Roller, B/1	851566	6	7-7
Track Roller, B/1	851566	8	7-11
Track Roller, B/O	811326	7	7-7
Track Roller, B-1, Inner Flange	983588	14	7-11
Track, Rubber, Continuous	982585	12	7-11
TSD 3 Connector SS Paver Box	1010499-08	4	7-109
TSD Sonic Tracker II	1010499-06	2	7-109
Tube, Element, Wire Routing	1011491	17	7-141
Tube, Element, Wire Routing	1011491	17	7-143
Tube, Endgate Adjustment Spacer	1011235	14	7-141
Tube, Endgate Adjustment Spacer	1011235	14	7-143
Tube, Endgate Adjustment Spacer	1011235	15	7-147
Tube, Endgate Adjustment Spacer	1011235	15	7-149
Tube, Intake, Kubota	1009384-44	5	7-33
Umbrella	920235	REF	7-97
Under Carriage, 8515, Rubber (Left)	1009873	1	7-11
Under Carriage, 8515, Rubber (Right)	1009874	2	7-11
Valve Section w/Float, V20 Series	910054FLS	2	7-57
Valve Section, Spring Return	910054	1	7-57
Valve Truck Hitch	852250	REF	7-111
Valve, Cartridge SV16	986992-01	REF	7-103
Valve, Check	986992-07	REF	7-103
Valve, Check CV10	986992-03	REF	7-103
Valve, Relief RV-10	986992-02	REF	7-103
Valve, Selector (Cutoff)	1008544	11	7-41
Vibrator Housing (Left)	982965L-1	2	7-95
Vibrator Housing (Right)	982965R-1	REF	7-95
Vibrator, Hydraulic	1000059	21	7-137
Washer, 13/16	20931333	6	7-131
Washer, 13/16	20931333	6	7-133
Washer, Counter Sunk, .500	851112	2	7-13
Washer, Counter Sunk, 1/2	851112	18	7-111
Washer, Fender, 1/4 x 1	860036	26	7-23
Washer, Fender, 3/8 x 1.50	308-6-24	35	7-21
Washer, Flat, Fender, 3/8 x 1.50	308-6-24	16	7-39

Description	Part Number	Item No.	Page No.
Washer, Flat, M10	80474	30	7-7
Washer, Flat, SAE, 1	300-16	6	7-17
Washer, Flat, SAE, 1/2	300-8	48	7-7
Washer, Flat, SAE, 1/2	300-8	35	7-43
Washer, Flat, SAE, 1/2	300-8	34	7-47
Washer, Flat, SAE, 1/2	300-8	5	7-121
Washer, Flat, SAE, 1/4	300-4	50	7-7
Washer, Flat, SAE, 1/4	300-4	18	7-131
Washer, Flat, SAE, 1/4	300-4	18	7-133
Washer, Flat, SAE, 3/8	300-6	11	7-141
Washer, Flat, SAE, 3/8	300-6	11	7-143
Washer, Flat, SAE, 3/8	300-6	11	7-147
Washer, Flat, SAE, 3/8	300-6	11	7-149
Washer, Flat, SAE, 3/8	300-6	39	7-17
Washer, Flat, SAE, 3/8	300-6	30	7-43
Washer, Flat, SAE, 3/8	300-6	29	7-47
Washer, Flat, SAE, 5/16	300-5	33	7-43
Washer, Flat, SAE, 5/16	300-5	32	7-47
Washer, Flat, SAE, 5/8	81201	16	7-11
Washer, Flat, SAE, 5/8	300-10	15	7-109
Washer, Flat, SAE, 1/2	300-8	7	7-99
Washer, Flat, USS, 1/2	301-8	31	7-21
Washer, Flat, USS, 3/4	301-12	14	7-131
Washer, Flat, USS, 3/4	301-12	14	7-133
Washer, Flat, USS, 5/8	301-10	REF	7-17
Washer, Flat, USS, 5/8	301-10	30	7-21
Washer, Lock, #10	900077	40	7-13
Washer, Lock, .500	118-5	24	7-11
Washer, Lock, 1	302-16	13	7-23
Washer, Lock, 1/2	302-8	11	7-13
Washer, Lock, 1/2	302-8	38	7-17
Washer, Lock, 1/2	302-8	22	7-21
Washer, Lock, 1/2	302-8	37	7-43
Washer, Lock, 1/2	302-8	36	7-47
Washer, Lock, 1/2	302-8	9	7-85
Washer, Lock, 1/2	302-8	9	7-87
Washer, Lock, 1/2	302-8	8	7-99
Washer, Lock, 1/2	302-8	27	7-115
Washer, Lock, 1/2	302-8	6	7-121
Washer, Lock, 1/2	302-8	15	7-137

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Washer, Lock, 1/2	302-8	18	7-137
Washer, Lock, 1/2	302-8	14	7-117
Washer, Lock, 1/2	302-8	4	7-119
Washer, Lock, 1/2	302-8	13	7-127
Washer, Lock, 1/2	302-8	13	7-129
Washer, Lock, 1/4	302-4	25	7-23
Washer, Lock, 1/4	302-4	18	7-71
Washer, Lock, 1/4	302-4	18	7-73
Washer, Lock, 1/4	302-4	18	7-81
Washer, Lock, 1/4	302-4	18	7-83
Washer, Lock, 3/8	302-6	27	7-21
Washer, Lock, 3/8	302-6	10	7-23
Washer, Lock, 3/8	302-6	15	7-25
Washer, Lock, 3/8	302-6	29	7-43
Washer, Lock, 3/8	302-6	28	7-47
Washer, Lock, 3/8	302-6	9	7-51
Washer, Lock, 3/8	302-6	6	7-53
Washer, Lock, 3/8	302-6	17	7-65
Washer, Lock, 3/8	302-6	13	7-67
Washer, Lock, 3/8	302-6	13	7-69
Washer, Lock, 3/8	302-6	17	7-71
Washer, Lock, 3/8	302-6	17	7-73
Washer, Lock, 3/8	302-6	17	7-75
Washer, Lock, 3/8	302-6	13	7-77
Washer, Lock, 3/8	302-6	13	7-79
Washer, Lock, 3/8	302-6	17	7-81
Washer, Lock, 3/8	302-6	17	7-83
Washer, Lock, 3/8	302-6	8	7-89
Washer, Lock, 3/8	302-6	8	7-91
Washer, Lock, 3/8	302-6	22	7-123
Washer, Lock, 3/8	302-6	22	7-125
Washer, Lock, 3/8	302-6	16	7-127
Washer, Lock, 3/8	302-6	16	7-129
Washer, Lock, 3/8	302-6	13	7-137
Washer, Lock, 3/8	302-6	10	7-141
Washer, Lock, 3/8	302-6	10	7-143
Washer, Lock, 3/8	302-6	10	7-147
Washer, Lock, 3/8	302-6	10	7-149
Washer, Lock, 5/16	302-5	25	7-21
Washer, Lock, 5/16	302-5	32	7-43

Description	Part Number	Item No.	Page No.
Washer, Lock, 5/16	302-5	31	7-47
Washer, Lock, 5/16	302-5	15	7-55
Washer, Lock, 5/16	302-5	18	7-55
Washer, Lock, 5/16	302-5	21	7-115
Washer, Lock, 5/16	302-5	13	7-135
Washer, Lock, 5/16	302-5	12	7-117
Washer, Lock, 5/16	302-5	20	7-123
Washer, Lock, 5/16	302-5	20	7-125
Washer, Lock, 5/8	302-10	45	7-7
Washer, Lock, 5/8	302-10	25	7-13
Washer, Lock, 5/8	302-10	36	7-17
Washer, Lock, 5/8	302-10	29	7-21
Washer, Lock, 5/8	302-10	19	7-23
Washer, Lock, 5/8	302-10	10	7-117
Washer, Lock, 5/8	302-10	16	7-135
Washer, Lock, 7/16	302-7	25	7-115
Washer, Lock, 7/16	302-7	24	7-123
Washer, Lock, 7/16	302-7	24	7-125
Washer, Lock, Hi-Collar, 5/8	307-10	43	7-7
Washer, Lock, M10	320142	21	7-11
Washer, Lock, M12	811328	18	7-11
Washer, Lock, M12	302-M12	16	7-131
Washer, Lock, M12	302-M12	16	7-133
Washer, Lock, Thin Series	95200978	7	7-131
Washer, Lock, Thin Series	95200978	7	7-133
Washer, Track Chain Master Pin	811305	29	7-7
Water Tight Connection, 3/4" X 3/4"	3400DI	REF	7-137
Wear Plate, 8' Bullnose	981724SRV	7	7-65
Wear Plate, End Gate, 8515	982963SRV	7	7-87
Wearplate, 3/8" Wear Plate With Studs	1007089SRV	9	7-115
Wedge, Socket, 2P Deutsch	983209	REF	7-139
Wedge, Socket, 2P Deutsch	983209	REF	7-145
Weldment, Air Breather Mount	1011395	2	7-43
Weldment, Air Breather Mount	1011395	2	7-47
Weldment, Bulkhead Mount, Heated Endgates	1011239	3	7-145
Weldment, Controls, Right Side, Low Deck	1011980	2	7-53
Weldment, Cover, Kubota, T4F	1011483	1	7-43
Weldment, Cover, Kubota, T4F	1011483	1	7-47
Weldment, Cover, T4F (Right)	1010451	22	7-43
Weldment, Cover, T4F (Right)	1010451	21	7-47

Alphabetical Parts Index



Description	Part Number	Item No.	Page No.
Weldment, Engine Cover w/Deflectors (Left)	1010269	9	7-43
Weldment, Engine Cover w/Deflectors (Left)	1010269	9	7-47
Weldment, Extension Vibrator Cover	1008664	9	7-123
Weldment, Extension Vibrator Cover	1008664	9	7-125
Weldment, Heatbox Cover	1008665	2	7-123
Weldment, Heatbox Cover	1008665	2	7-125
Weldment, Left Side Controls	1014673	1	7-55
Weldment, Lip, Left, Front	1013153	30	7-17
Weldment, Lip, Right, Front	1013152	29	7-17
Weldment, Mount, LED Beacon	1013234	7	7-43
Weldment, Mount, LED Beacon	1013234	7	7-47
Weldment, Mount, Steering Box	853836L	3	7-55
Weldment, Power Crown Center	1008667	2	7-137
Weldment, Radiator Cap Cover	1010105	8	7-43
Weldment, Radiator Cap Cover	1010105	8	7-47
Weldment, Rail Mount (Left)	1008663	10	7-115
Weldment, Rail Mount (Right)	1008662	11	7-115
Weldment, Rear Engine Pan	1014240	17	7-43
Weldment, Rear Engine Pan	1014240	17	7-47
Weldment, Right Hand Control	1011978	2	7-51
Weldment, Thickness Adjuster Handle	1011375	4	7-131
Weldment, Thickness Adjuster Handle	1011375	4	7-133
Weldment, Undercarriage (Left)	1009465	7	7-11
Weldment, Undercarriage (Right)	1009466	6	7-11
Weldment, Undercarriage, Comer (Left)	1008789	REF	7-7
Weldment, Undercarriage, Comer (Right)	1008788	5	7-7
Yoke, Track Idler	811329ASRV	9	7-7
Yoke, Track Idler	811329ASRV	10	7-11

LeeBoy



VT LeeBoy

A company of VT Systems

500 Lincoln County Parkway Ext.

Lincolnton, North Carolina 28092

Phone: (704) 966-3300 - Fax Sales: (704) 483-5802

www.LeeBoy.com

1003095-074
Printed in the U.S.A.